


Manual Book

Ceiling Fan With Lights

Model No.: CFL-1028-LED-02

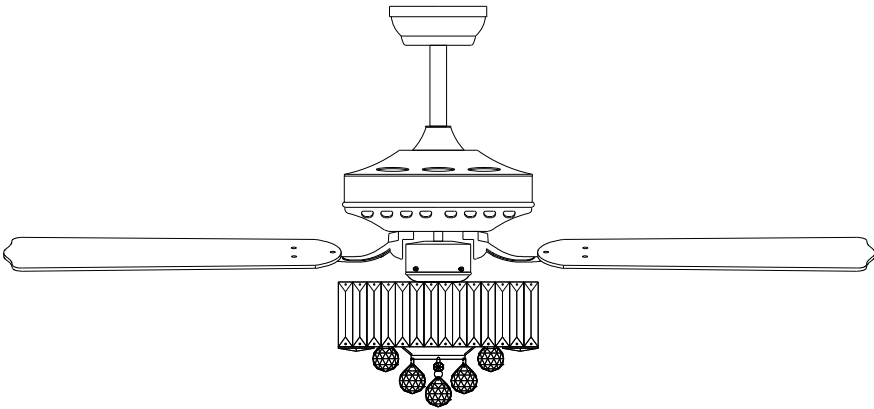

Scan for Installation Video

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably /supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). The fan must be turned off and the blades stopped before reversing the blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan lights may have different light shades and bulbs.
11. Use only our replacement parts. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:

To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked "acceptable for fan support".


To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation


Tools You Need




☒ Ladder

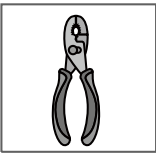

☒ Pliers

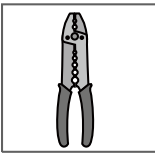

☒ Wire Strippers

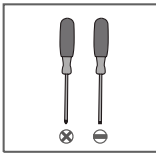

☒ Screwdrivers




☐ Power Drill
(optional)




☐ Drill Bit
(optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

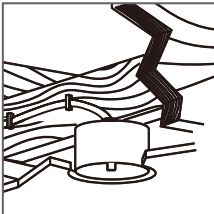

☒ Must be able to secure the fan to building structure or fan-rated outlet box

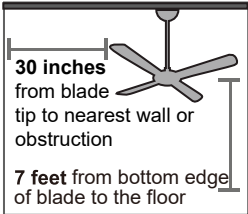

☒ Assess location



☒ Check the box to see the weight of the fan



☒ Not applicable for angled ceiling

 
Switch Selection

Note: Using a dimmer switch to control the fan may damage the fan. To reduce the risk of fire or electrical shock, do not use a dimmer switch to control the fan.

The recommended switches are as follows:




Recommended:




Single Pole Switch
(Not Included)



 
Not Recommended:




Dimmer Switch

 

Timer Switch

 



Fan Speed Control
Switch

 

Motion Sensor
Switch

 Packing List

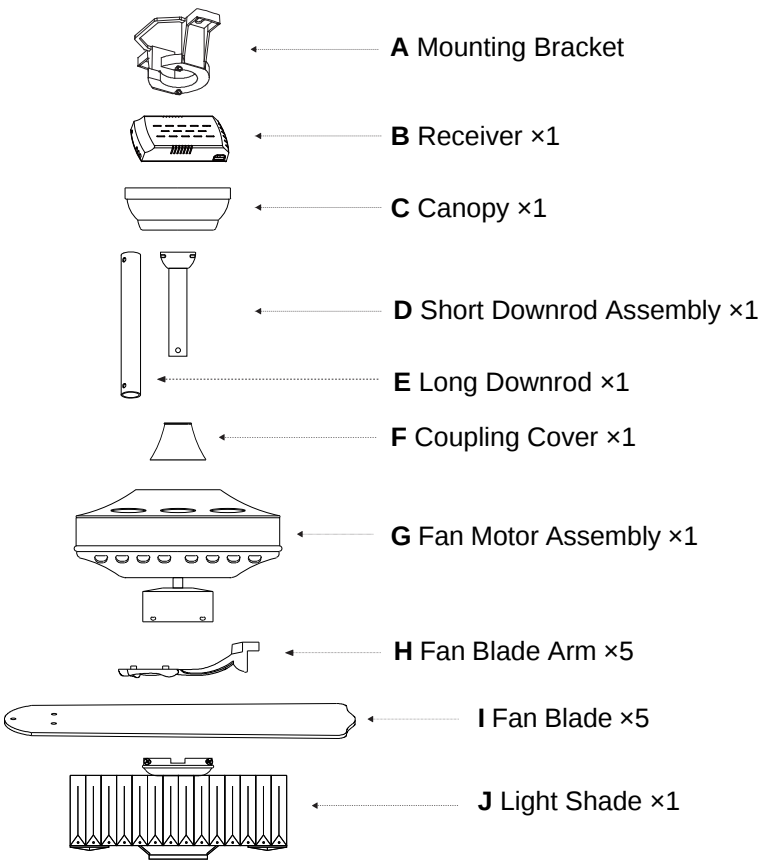

AA ×3  Wire Nut	BB ×2  Outlet Box Screw	CC ×2  Wood Screw	DD ×2  Washer	EE ×2  Anchor Bolt	FF ×10  Fan Blade Arm Screw
GG ×15  Fan Blade Screw & Washer	HH ×18  Staple Clip	II ×1  Hanging Clip	JJ ×19  Crystal	KK ×1  Gloves	LL ×1  Remote Control & Holder


Note: The listed quantity is for installation, extra hardware may be included.

Installation Instructions

1. Mount the Bracket (3 Options)



Option1. (For Outlet Box)

Secure the mounting bracket (A) to the outlet box with screws taken off from outlet box or screws (BB) and washers (DD) provided.

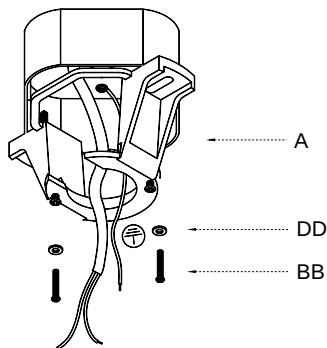






Option 2. (For Solid Wood Structure)

Mark and drill the screw holes (Use a 1/8" drill bit) on the solid wood structure. Mount the mounting bracket with wood screws (CC) and washers (DD).

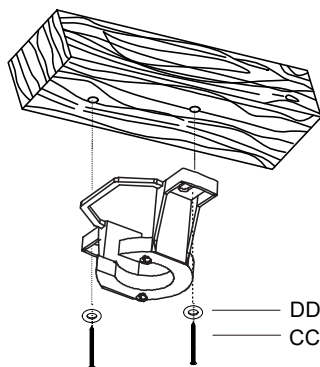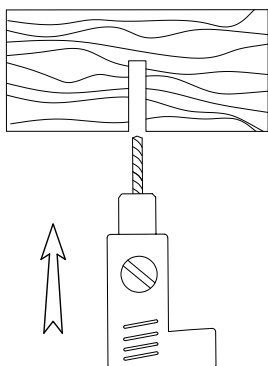

Option 3. (For Concrete Structure)

Mount the mounting bracket to the concrete structure with anchor bolt (EE).

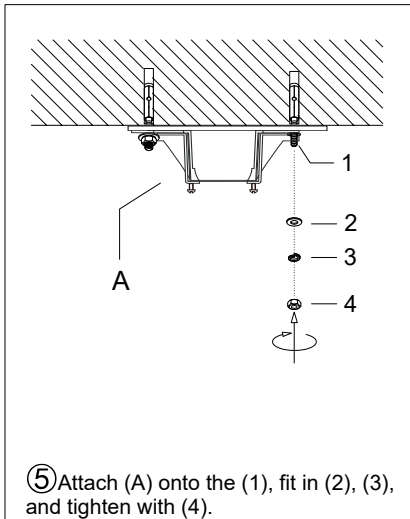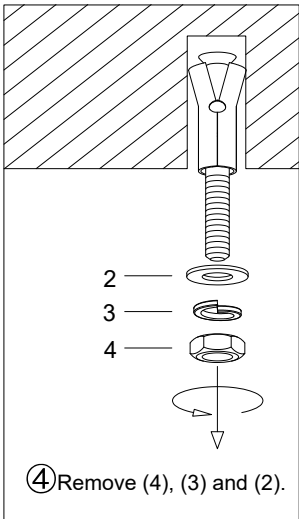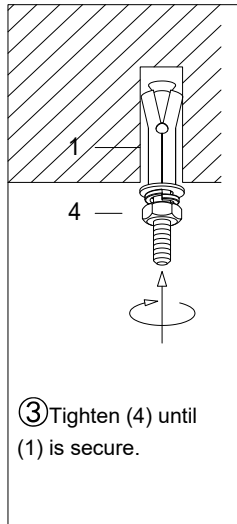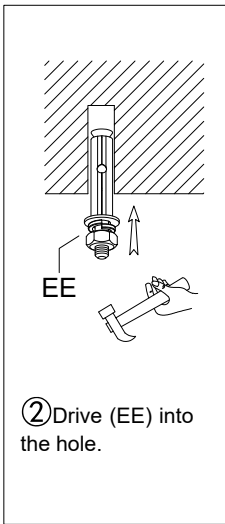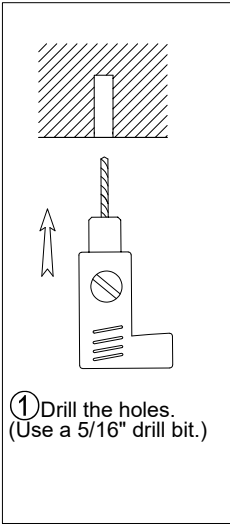


2. Installing the Fan Blade and Blade Arm

Step 1. Attach fan blades (I) onto the fan blade arms (H) with fan blade screws and washers (GG).


Note: Make sure to assemble the blades in sequence and fasten the screws with equal force.

Step 2. Attach the fan blade arm onto the fan motor with the fan blade arm screws (FF).

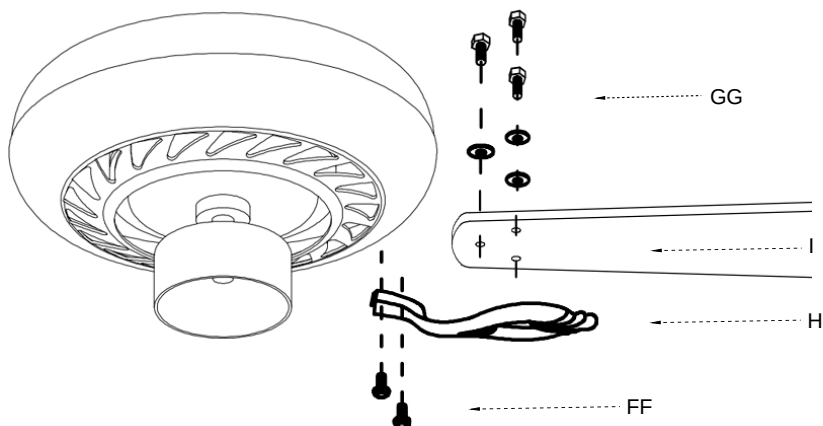

3. Assembling the Fan



Step 1. Assemble the Canopy and coupling cover, route wires from the fan through the downrod.

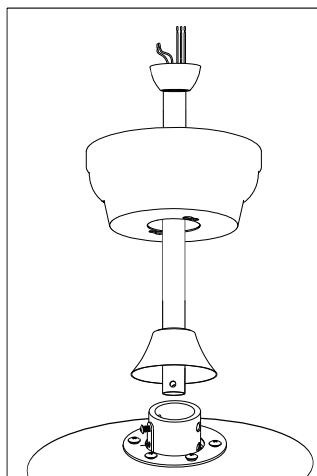


Step 2. Loosen the set screw from the yoke but do not take off.

Step 3. Align the holes at the bottom of the downrod with those in the yoke, insert the clevis pin and "R" pin.

Step 4. Tighten the set screws to secure the downrod.

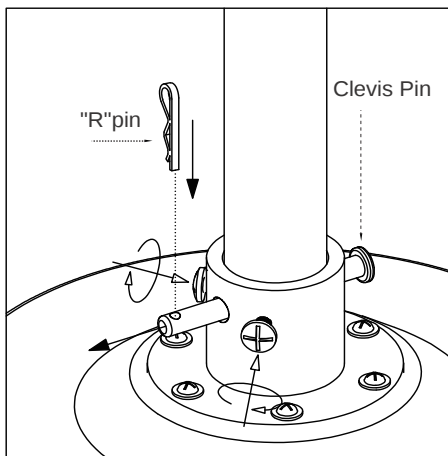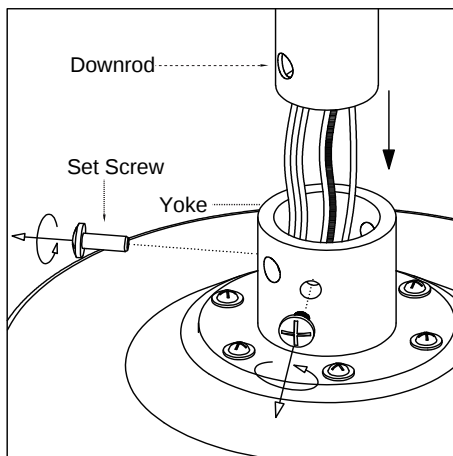


Step 5. Fit the coupling cover (F) onto the fan assembly.

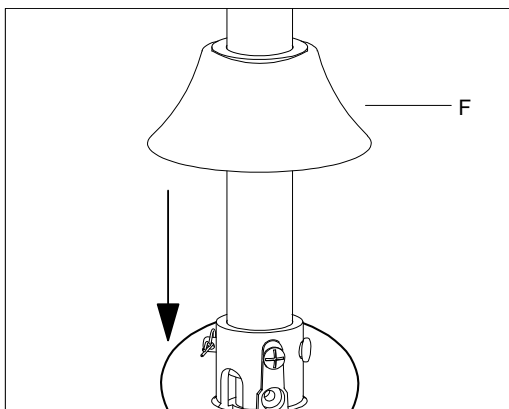

4. Hanging the Fan

Lift the downrod into the bracket. Rotate the downrod until the tab in the bracket is seated in the fixation slot in the downrod ball.

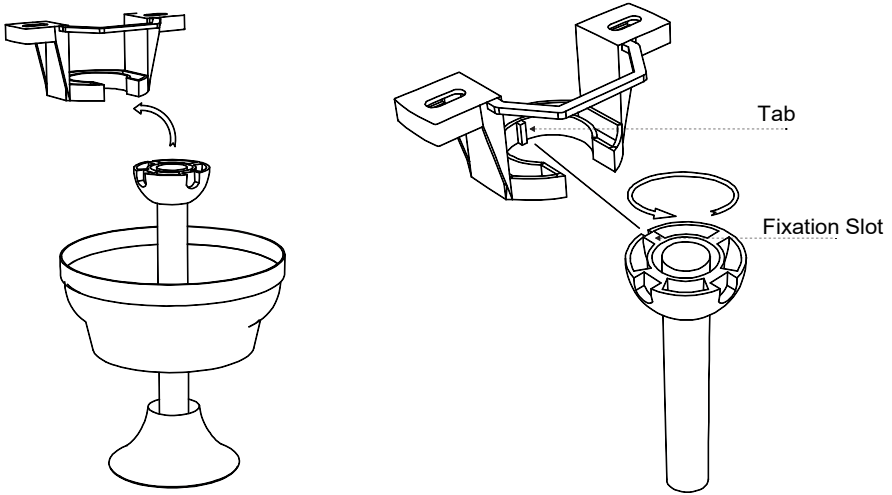


5. Connect the Wires

Step 1. Insert the receiver to the mounting bracket.

Step 2. Connect the wires and terminal between the fan assembly and the receiver.


Step 3. Connect the wires from the receiver to the house supply wires with wire nuts (AA) , ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white or blue) to neutral wire, and hot wire (black or brown) to the hot wire.

Step 4. Wrap the connection with electrical tape.

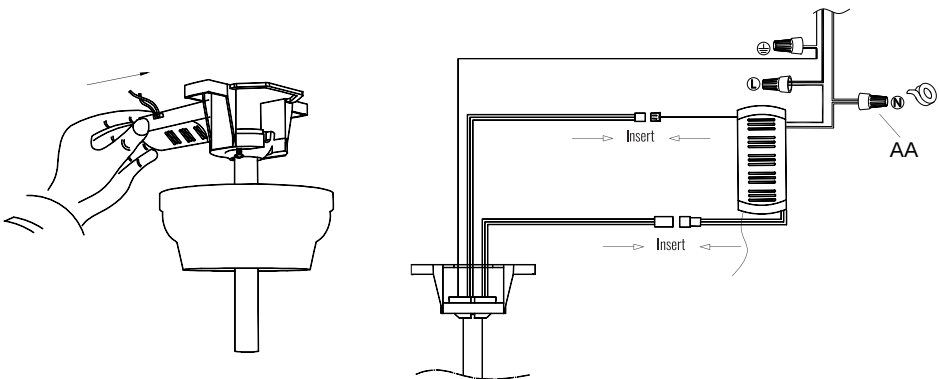


6. Attaching the Canopy

Slide the canopy up to the ceiling and attach it to the mounting bracket with the set screws provided.

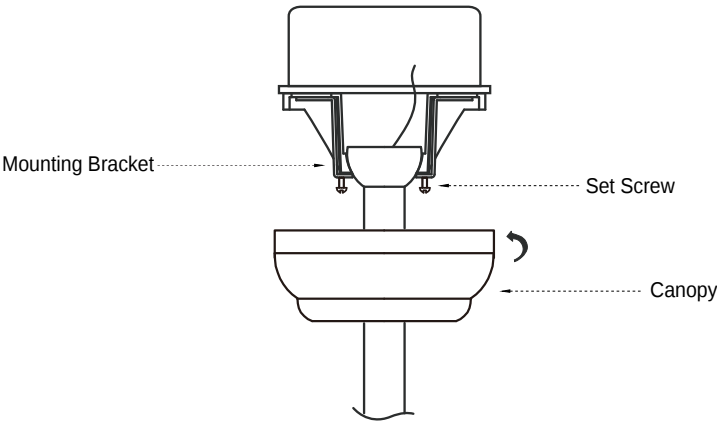

7. Connect the Light Wires

Connect light wires to motor wires.

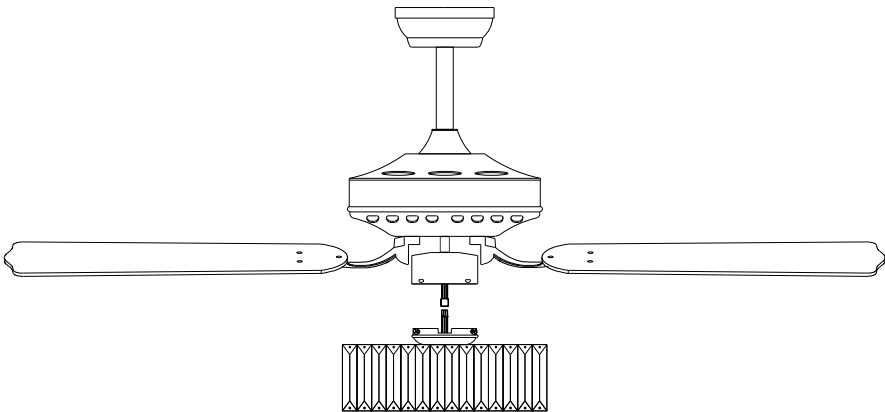


8. Install the Light Shade and Crystal Balls


Step 1. Take off screws from the light shade.

Step 2. Attach the light shade onto the fan motor assembly with screws taken off.

Step 3. Install crystal (JJ) with hanging clip (II) at the bottom of the middle of the light shade, and then Install crystals with staple clips (HH).

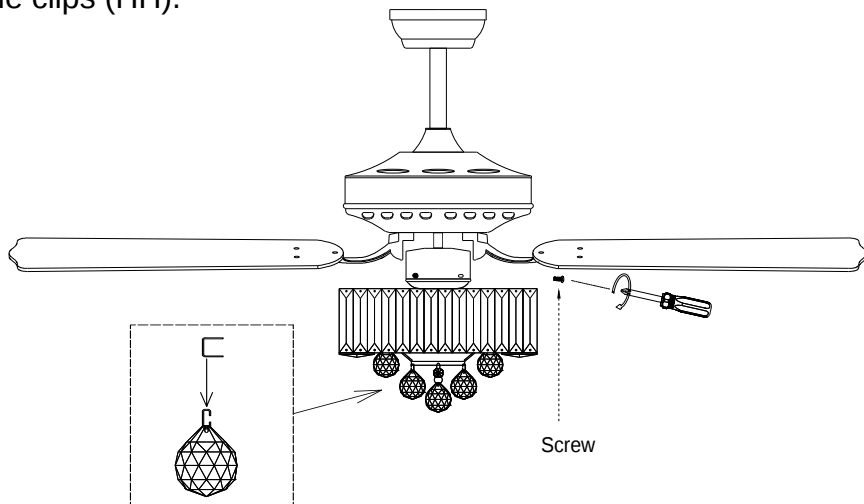

9. Install the Remote Holder

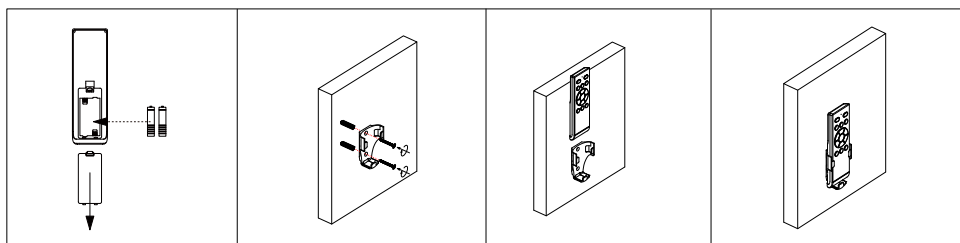

Step 1: Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included).

Step 2: Mark and drill screw holes in the wall, then insert the remote holder anchors.

Step 3: Use remote holder screws to fix the remote holder onto the wall.

Remote Control Instructions

		Turn off the fan and lights.
		Turn on/off the lights.
		Natural wind, fan speed will change automatically.
		"F" refers the fan rotates forward.
		"R" refers the fan rotates in reverse.
		1/2/3/4/5/6 for fan speeds.
		Turn off the fan.
		1H/2H/4H for timing the fan.
		REMOTE SIGNAL PAIRING: If the remote control loses signal with the fan, turn off the power from wall switch, then turn it on, immediately press and hold this button for around 3 seconds, after the fixture beeps or flashes, it's done.
NOTE: Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included).		

Trouble Shooting

1. Fan doesn't work

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check your power and switch to make sure it's powered on.

3. Noisy Operation

- Re-tighten all screws on the bracket, and fan blades (do not over tighten).
- Check to see if any of the blades are cracked. If so, replace all of the blades.

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again. (See "Remote Control Instructions")
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.