

LIGHTING

3 lights Pendant Lighting with braided lamp shade

NOTE:ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

■Specification

Voltage: 110-130V

Material: Metal

Lamp holder: E26

Bulb info: MAX 60W TYPE-A19

Fixtures Dimensions: 20in/510mm(D)*20in/510mm(H)

Installation Dimensions: 23.62~71.62in/600~18200mm(H)

Wire Length: 78in/1980mm

Usage: Indoor use only


■Easy Installation

1. Pass **Supply Wires** and **Ground Wire** through the **Fixture Loop** onto the **Fixture Nipple**. Hand tighten until snug. Tighten until snug.
2. Secure the **Crossbar** onto the **Outlet Box** with **Outlet Box Screws** (Non inclus).
3. Thread one **Hex Nut** onto top end of the **Nipple**.
4. Place one **Lock Washer** over the top end of the **Nipple** and then thread the **Nipple** into the center lock hole of the **Crossbar**.
5. Using pliers, thread the **Hex Nut** against the **crossbar** and hand tighten until snug. the Fixture according to your
6. Thread another **Hex Nut** onto the bottom end of the **Nipple**. hanging height. Nut. Hand tighten until snug.
7. Adjust the **Fixture Chain** to your desired length by removing the links if needed.
- * Please note that depends on chain material thickness, you might be required to use chain pliers to spread links open.
8. Pull the supply wires through the Fixture Chain alternating links. **And then pull the wires through the following components in turn: Canopy Lock Ring, Ceiling Canopy, Canopy Chain Loop, Lock Washer, and Nipple.**
9. Place Lock Washer over the end of the **Nipple** and thread the **Canopy Chain Loop** onto the end of the **Nipple**.
10. Using plier, thread the **Hex Nut** against the **Canopy Chain Loop** and tighten until snug.
11. Attach one end of the **Fixture Chain** onto the **Fixture Loop** and attach the another end of the **chain** onto the **Canopy Chain Loop** with the **Climbing Chain Loop**.
12. Using wire connectors not supplied connect the **House Ground Wire** to the **Fixture Ground Wire** connect the now Restore electricity Retain this sheet for future reference. **House White Wire** to the **Fixture Supply Wire White Ribbed Side** connect the **House Black or Red Wire** to the **Fixture Supply Wire Black or Smooth Side** Wrap each connection with approved electrical tape.
13. Push the **Ceiling Canopy** upward over the **Outlet Box**.
14. Thread the **Canopy Lock Ring** onto the **Canopy Chain Loop** and tighten until snug to secure the **Ceiling Canopy**.
15. Install Bulb (Non inclus) .


* **Install correct bulbs referring to fixture markings and or labels for maximum wattage. Your installation is completed now Restore electricity Retain this sheet for future reference.**

■Package Include

- | | |
|----------------------|-------------------------|
| 1x 72" Fixture Chain | 1x Socket Assembly |
| 1x Fixture Loop | 1x Crossbar with Screws |
| 1x Ceiling Canopy | 1x Canopy Chain Loop |
| 1x User Manual | |

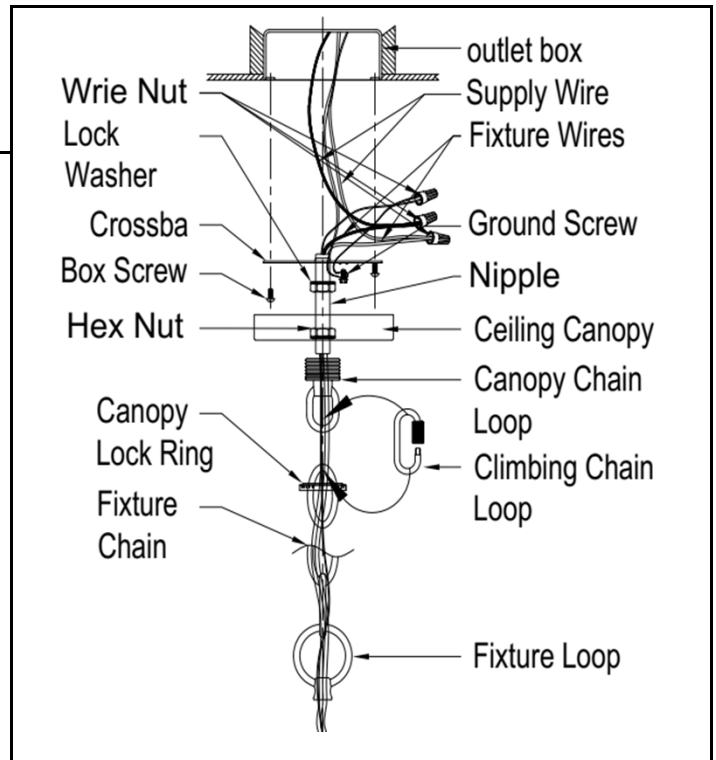

Wiring Instructions

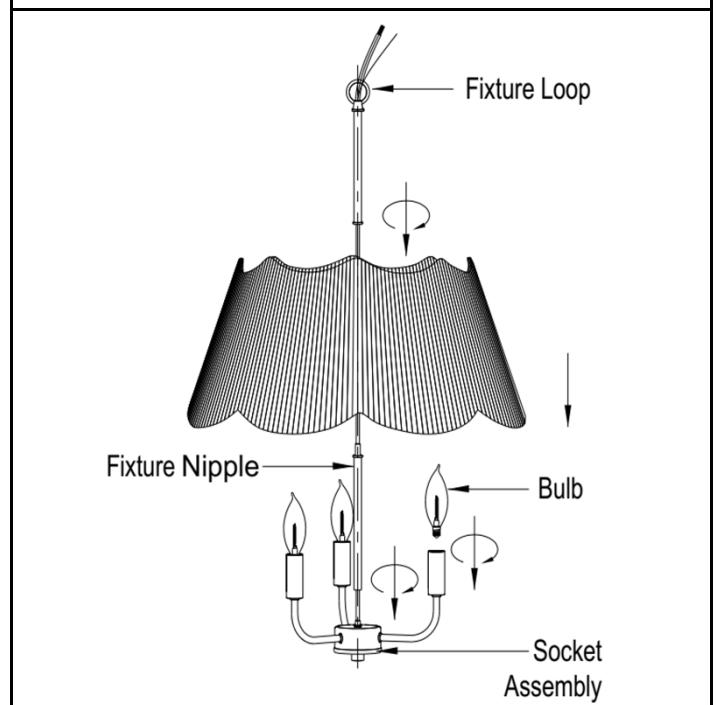

Fixture Installation