 


Assembly Instructions

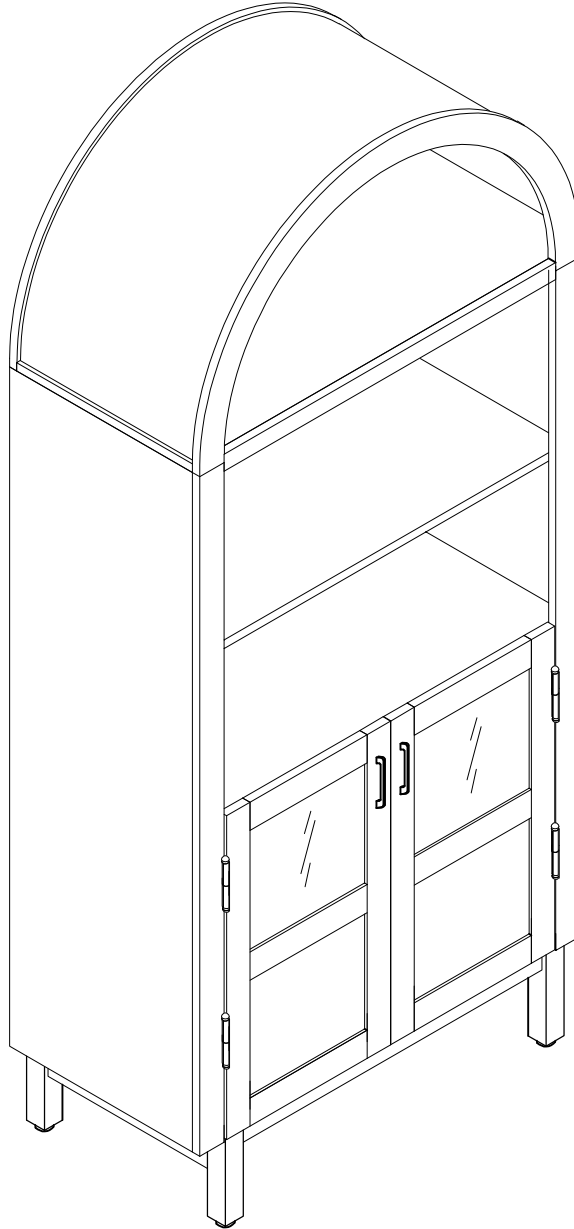

Dimensions(W x D x H)

78*40*178CM / 30.7*15.7*70 INCH

Important

Please read through instruction carefully
Before assembly and keep for future reference.

EN

Thank you for purchase on our products, please contact us if you have difficulty with assembly or need replacement parts. 24-hour customer service will be available to help you at any time.

You can contact the platform's email address and please include your username or order ID so that we can better assist you.

WARNING

 
Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

Important Tips and Maintenance




1. Keep children and animals away from working area as smaller parts may cause choking if swallowed.

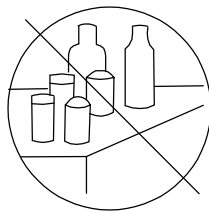


2. Never place liquids or anything damp upon furniture as it will mark. Ensure a coaster or running is beneath.



 
3. Never use ammonia based cleaning products as it will damage the finish.

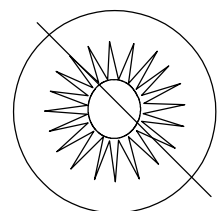

 
4. To avoid fading, keep furniture out of direct sunlight.

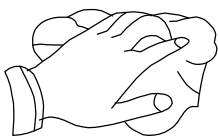

 5. Use a soft cloth (dry cloth) when wiping or cleaning surfaces.

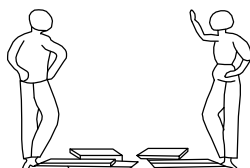

 6. Two person are required.

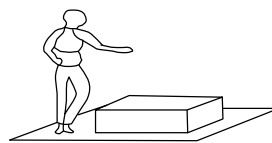


7. Lay a soft matt down to protect the furniture piece before and during assembly.

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

 QUICKFIT

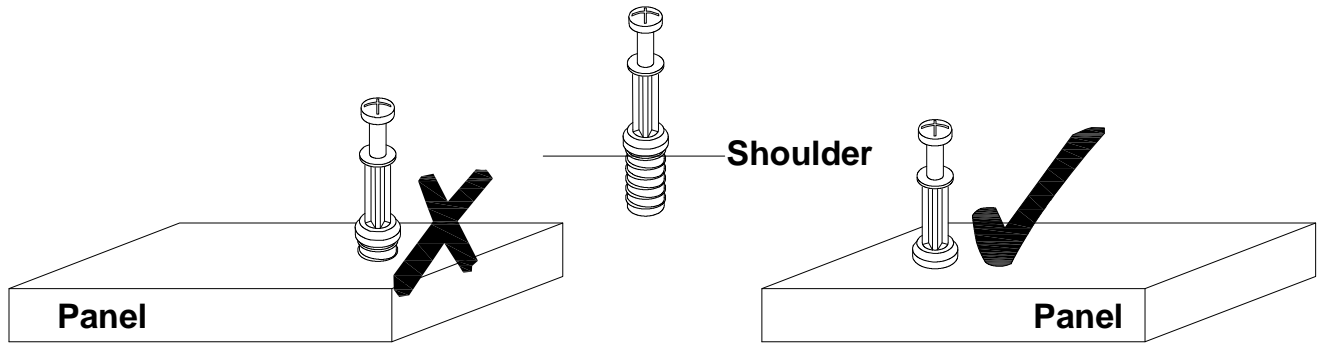

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

 
CAM LOCK

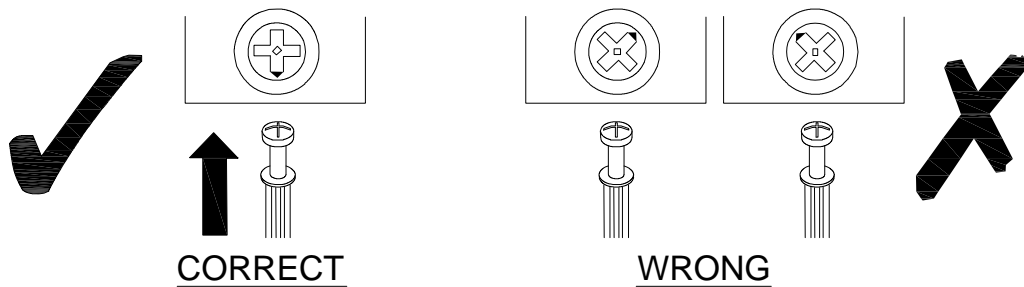

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

 Quickfit head should be in the centre of the cam lock when the two panels are joined.

 

 
 
 
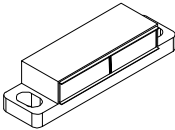 
 

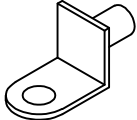 
 

 
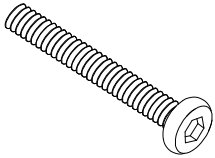 
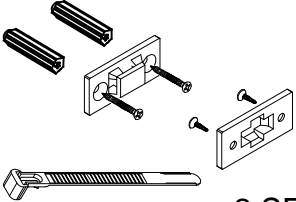 
Cam lock should be inserted before quickfit.

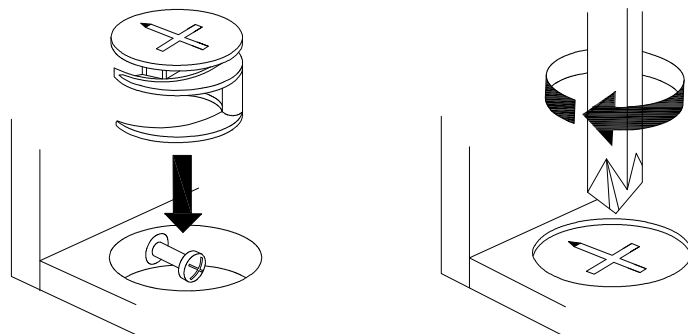

Turn cam lock clockwise to tighten.


Hardware List

Please check you have all the fittings part or tools are listed in below.

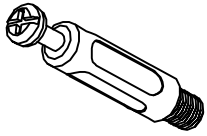
<p>A</p>  <p>6*35mm 66 PCS</p>	<p>B</p>  <p>15*12mm 66 PCS</p>	<p>C</p>  <p>Φ8*30mm 26 PCS</p>
<p>D</p>  <p>2 PCS</p>	<p>E</p>  <p>5/32"*15mm 4 PCS</p>	<p>F</p>  <p>1 PC</p>
<p>G</p>  <p>6*3*12mm 2 PCS</p>	<p>H</p>  <p>8*3*15mm 32 PCS</p>	<p>I</p>  <p>4 PCS</p>
<p>J</p>  <p>M6*20mm 4 PCS</p>	<p>K</p>  <p>8*4*30mm 4 PCS</p>	<p>L</p>  <p>4mm 1 PC</p>
<p>M</p>  <p>M6*45mm 10 PCS</p>	<p>O</p>  <p>2 SETS</p>	

Component Panels & part List

 
Please check you have all the panels are listed below.

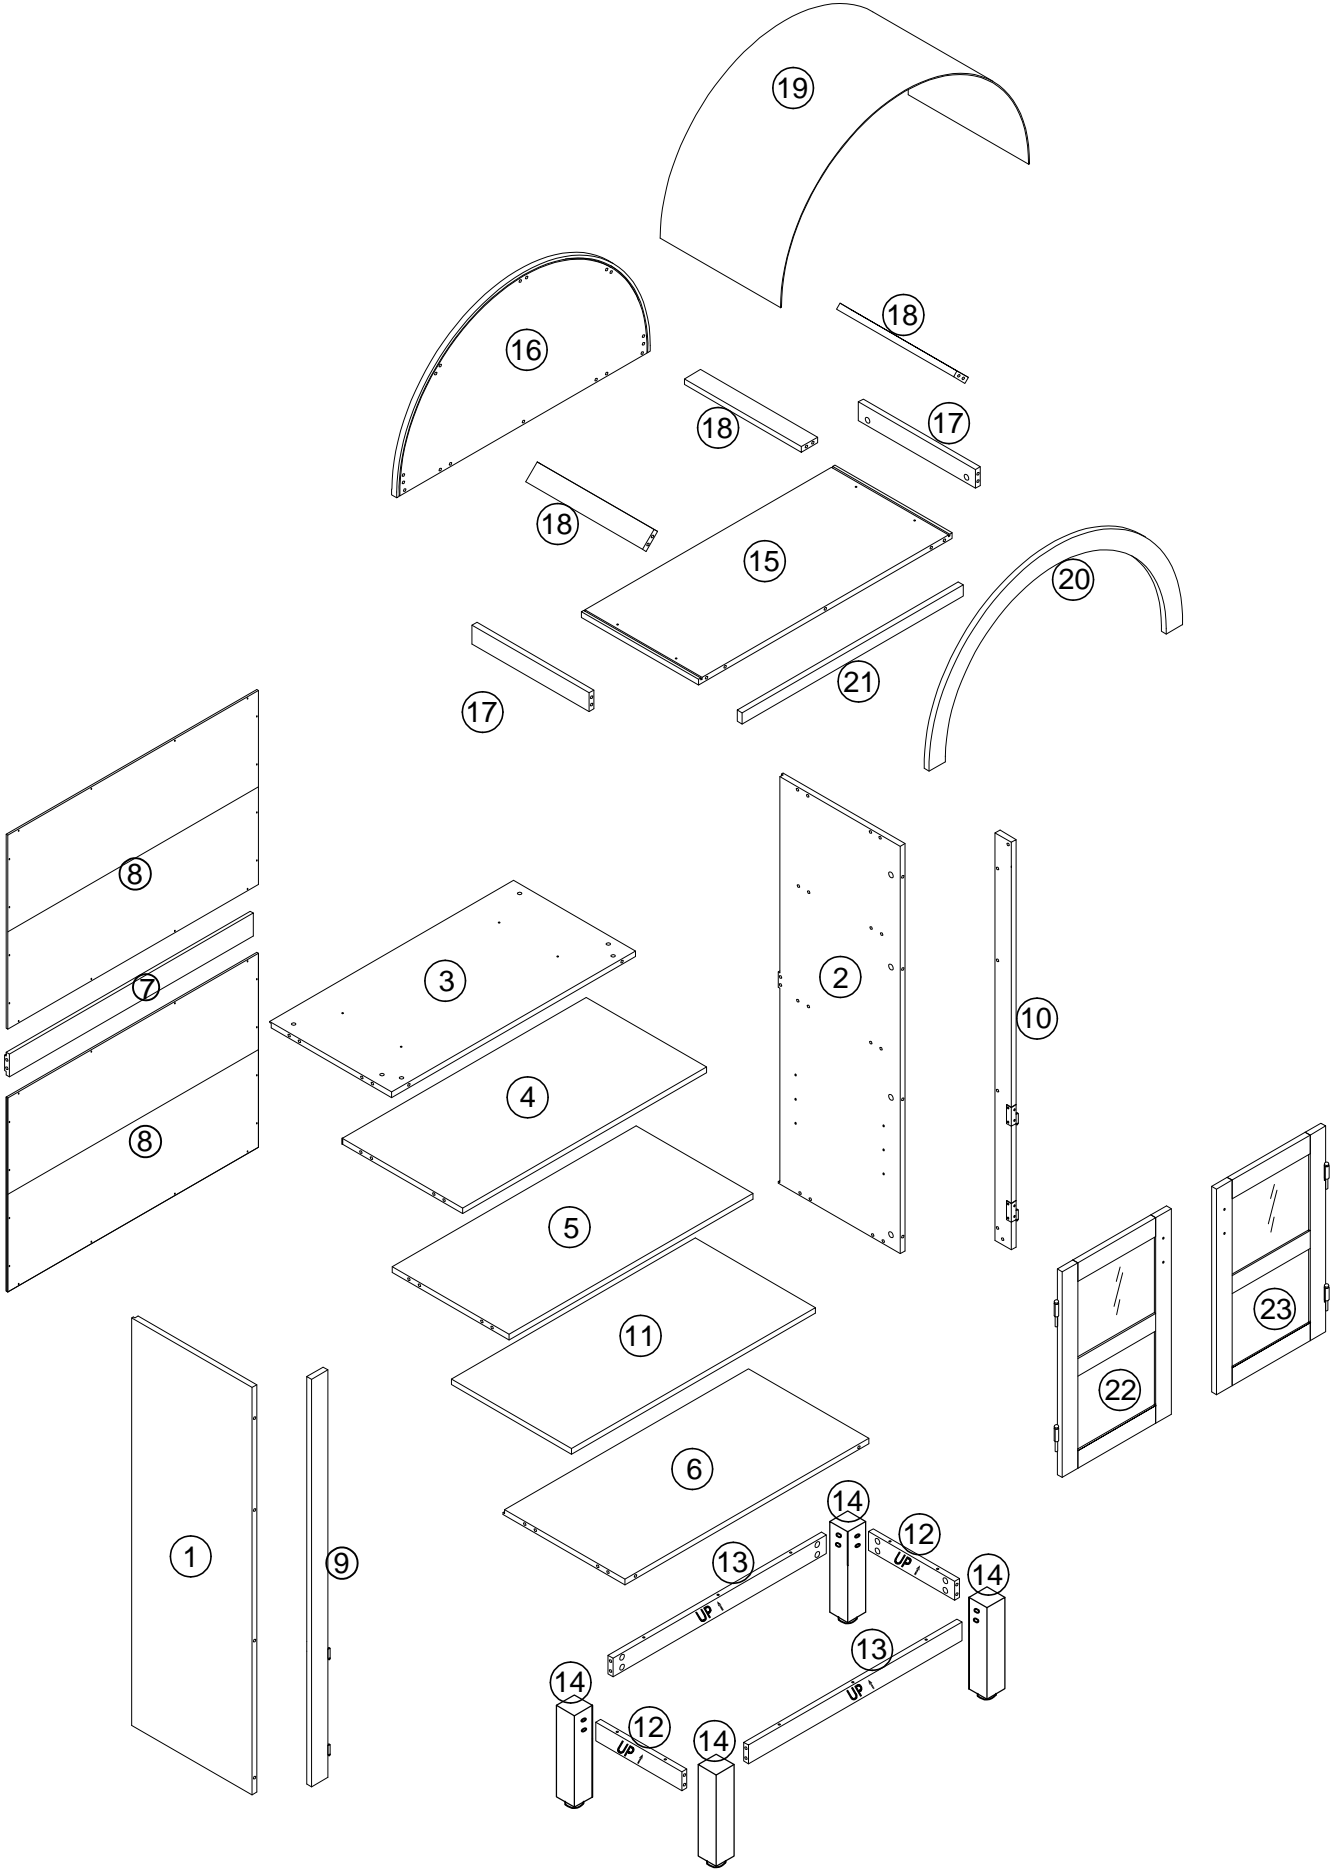

 
STEP 1 Insert quickfit screw(A) into plate 1 and 2 with a screwdriver as shown.

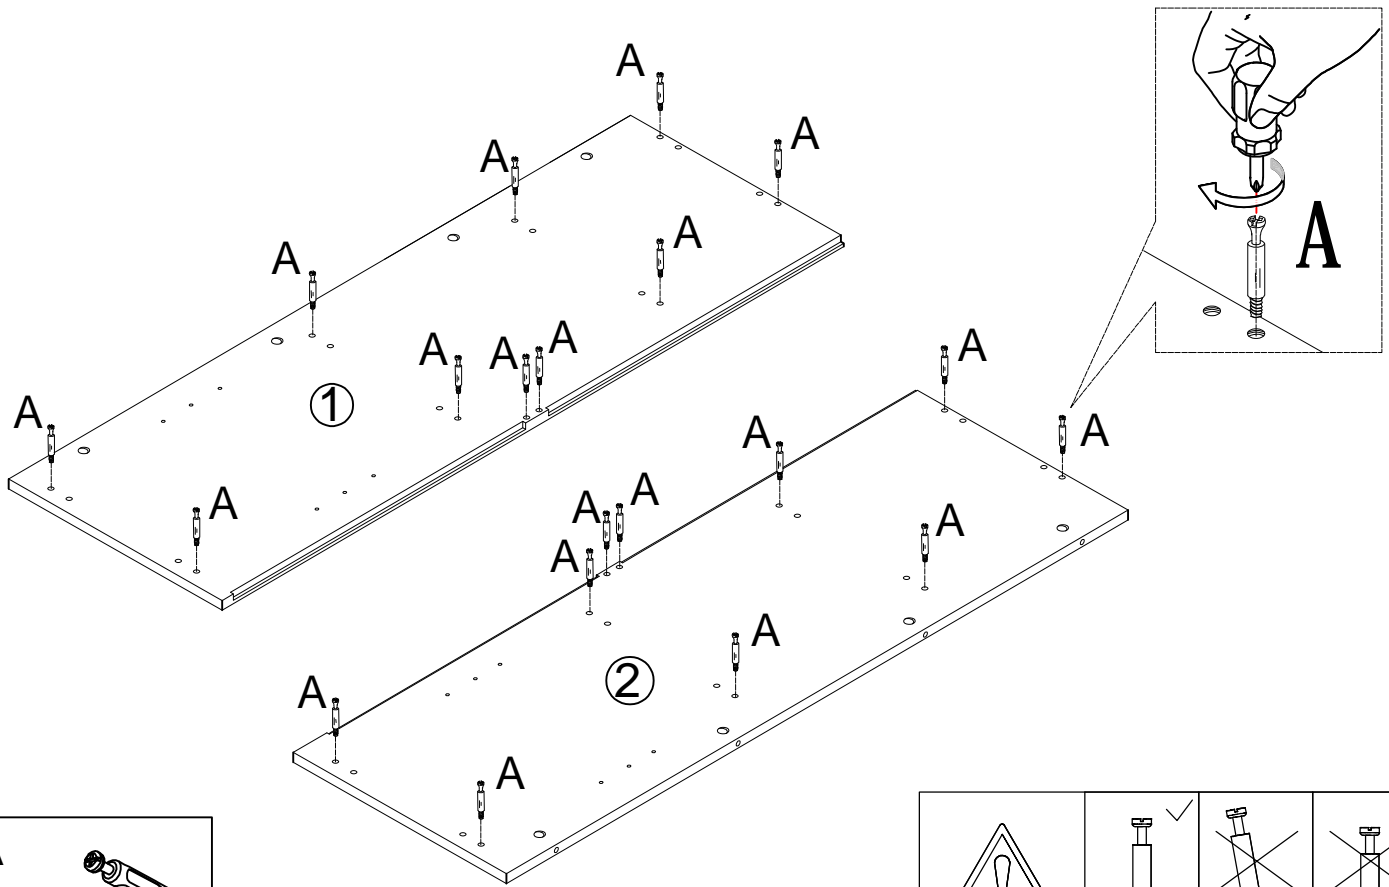

A 
20 PCS

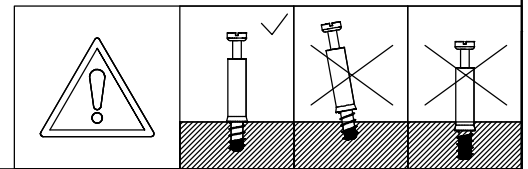 


 STEP 2 Connect plate 3, 4, 5, 6 and 7 with plate 1 together as shown. Pay attention to the "Front" sign. Insert wooden dowel(C) into plate 1, put cam lock(B) into plate 3, 4, 5, 6, 7 and turn clockwise to tighten as shown.

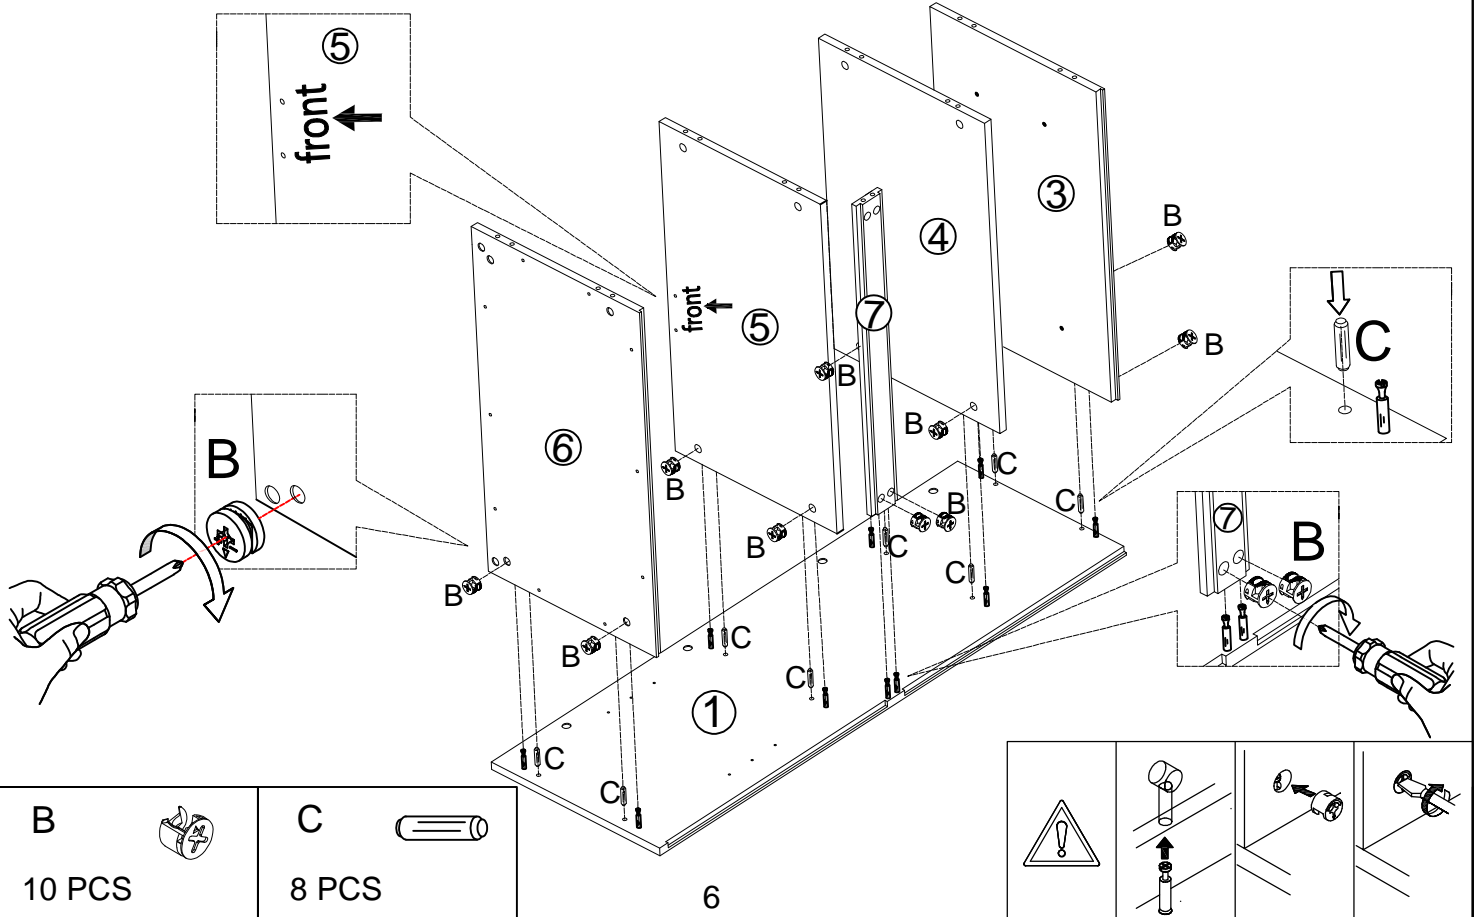


B 
10 PCS

 C 
8 PCS

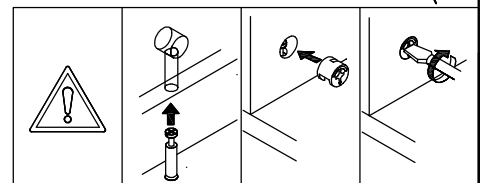

STEP 3


 
Connect plate 2 with plate 3, 4, 5, 6 and 7 together as shown. Insert wooden dowel(C) into plate 3, 4, 5, and 6, put cam lock(B) into plate 3, 4, 5, 6, 7 and turn clockwise to tighten as shown.

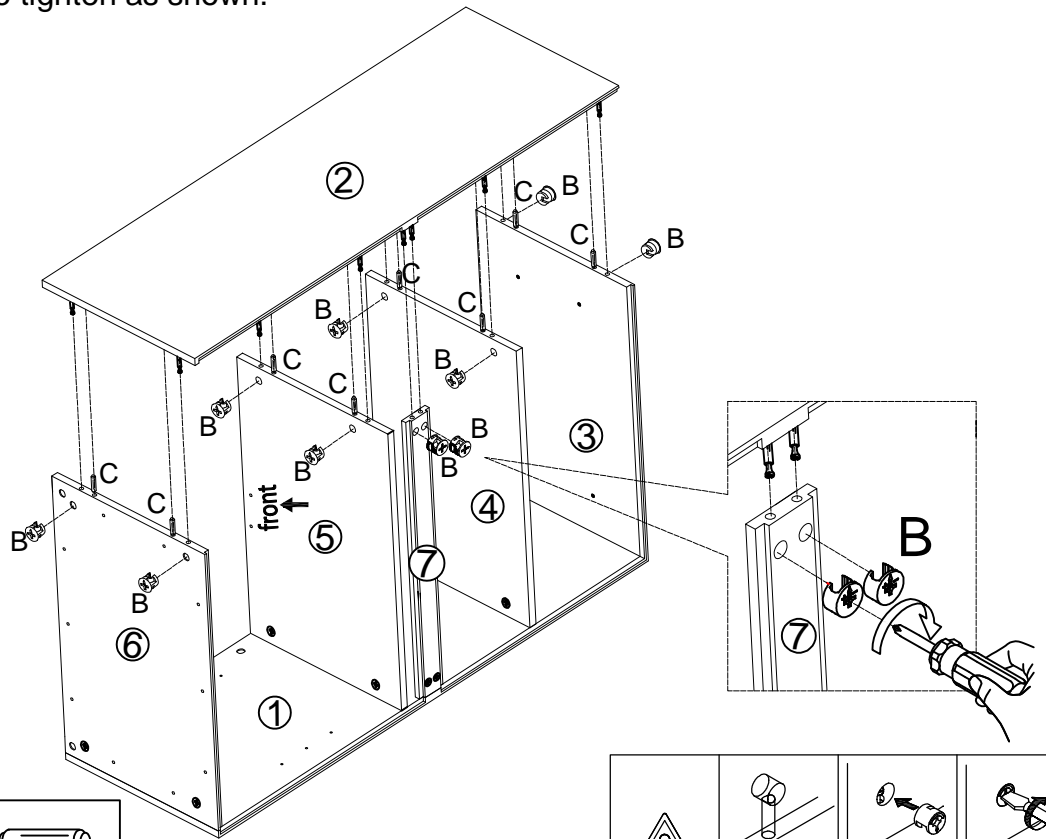

B
10 PCS




  C
8 PCS

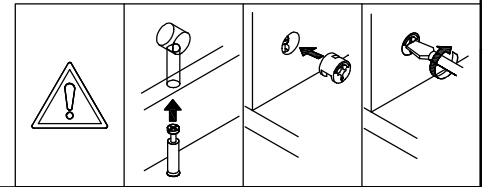

STEP 4


 
Fix back plate 8 to the cabinet using screw(H) as shown.

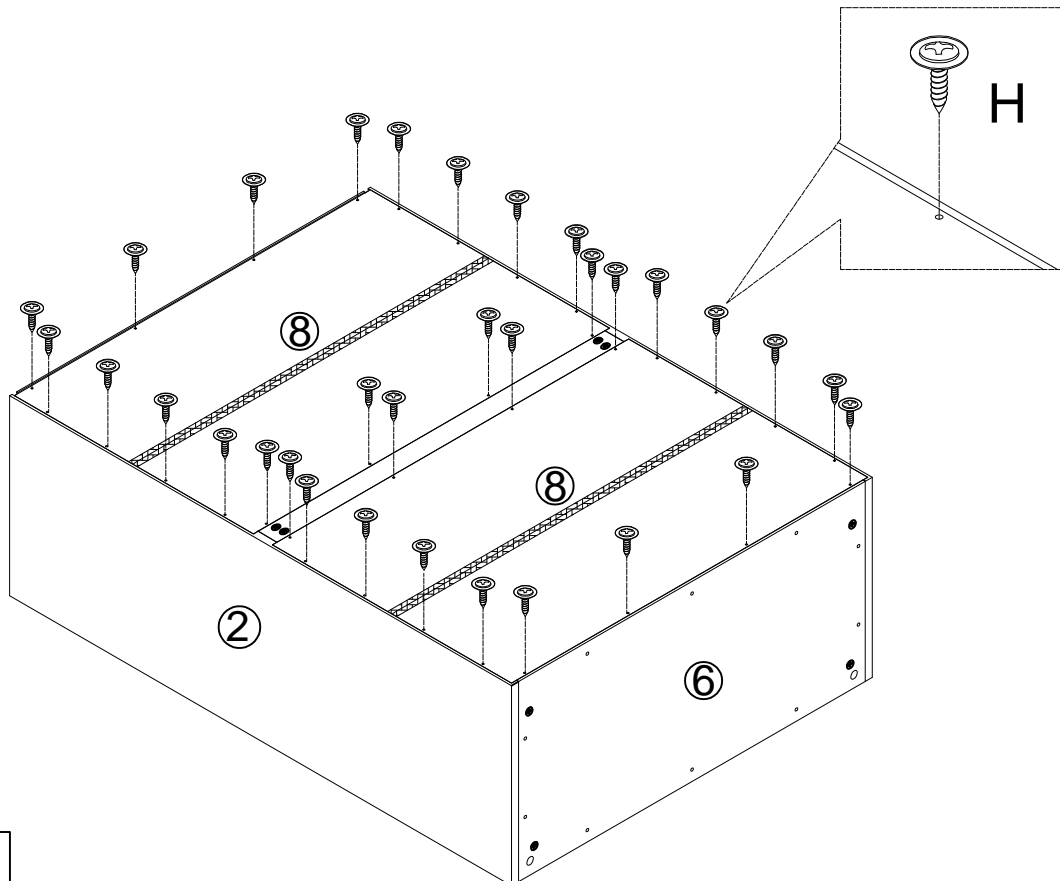



H
32 PCS



  
STEP 5 Insert quickfit screw(A) into plate 9 and 10 with a screwdriver as shown.

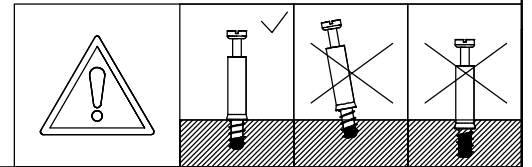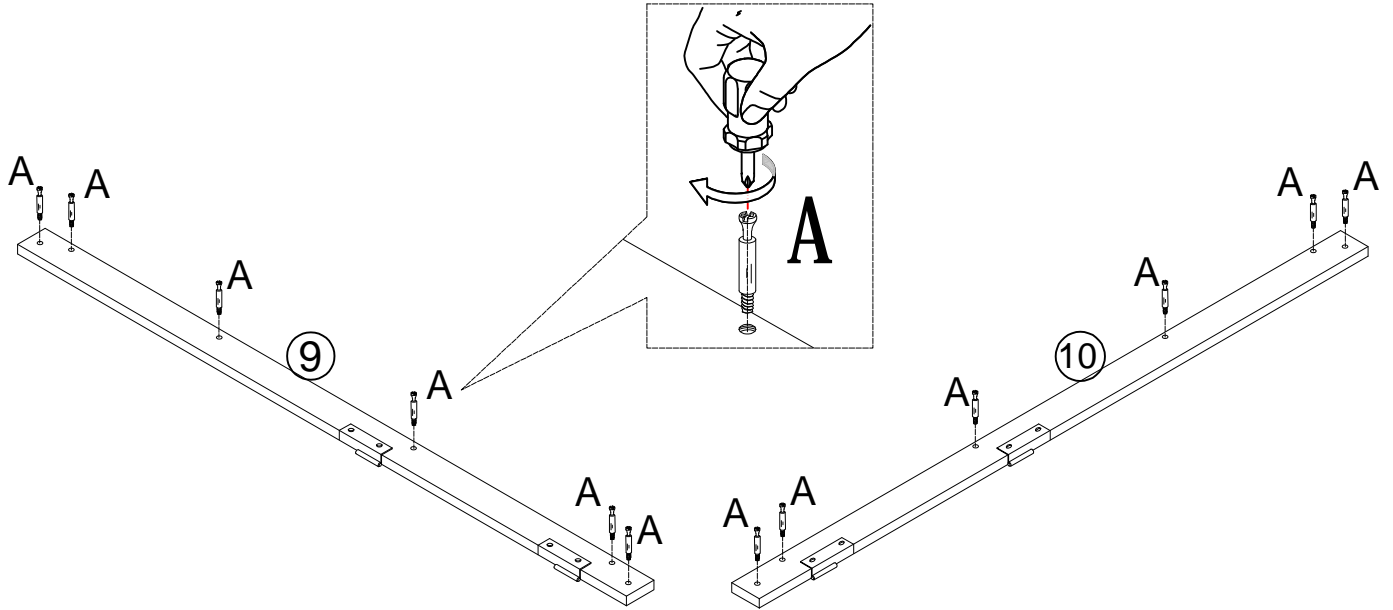

  
STEP 6 Connect plate 9 and 10 with plate 1, 2, 3 and 6 together as shown. Put cam lock(B) into plate 1, 2, 3, 6 and turn clockwise to tighten as shown.

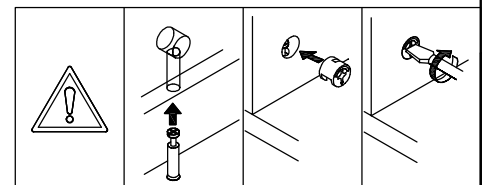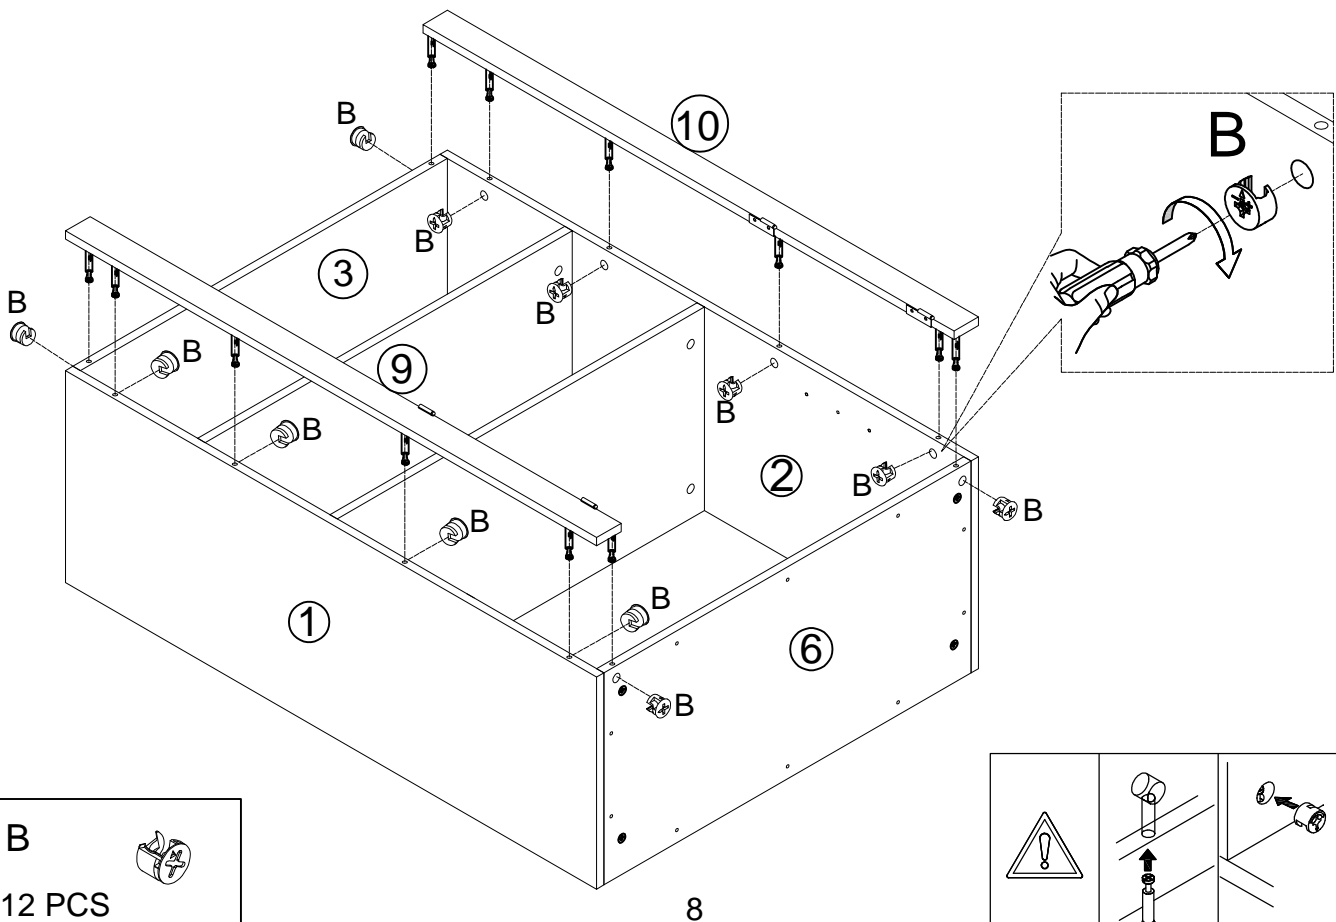

 
STEP 7 Insert quickfit screw(A) into leg 14 with a screwdriver. Connect leg 14 with plate 12 and 13 together as shown. Pay attention to the "UP" sign. Put cam lock(B) into plate 12, 13 and turn clockwise to tighten as shown.

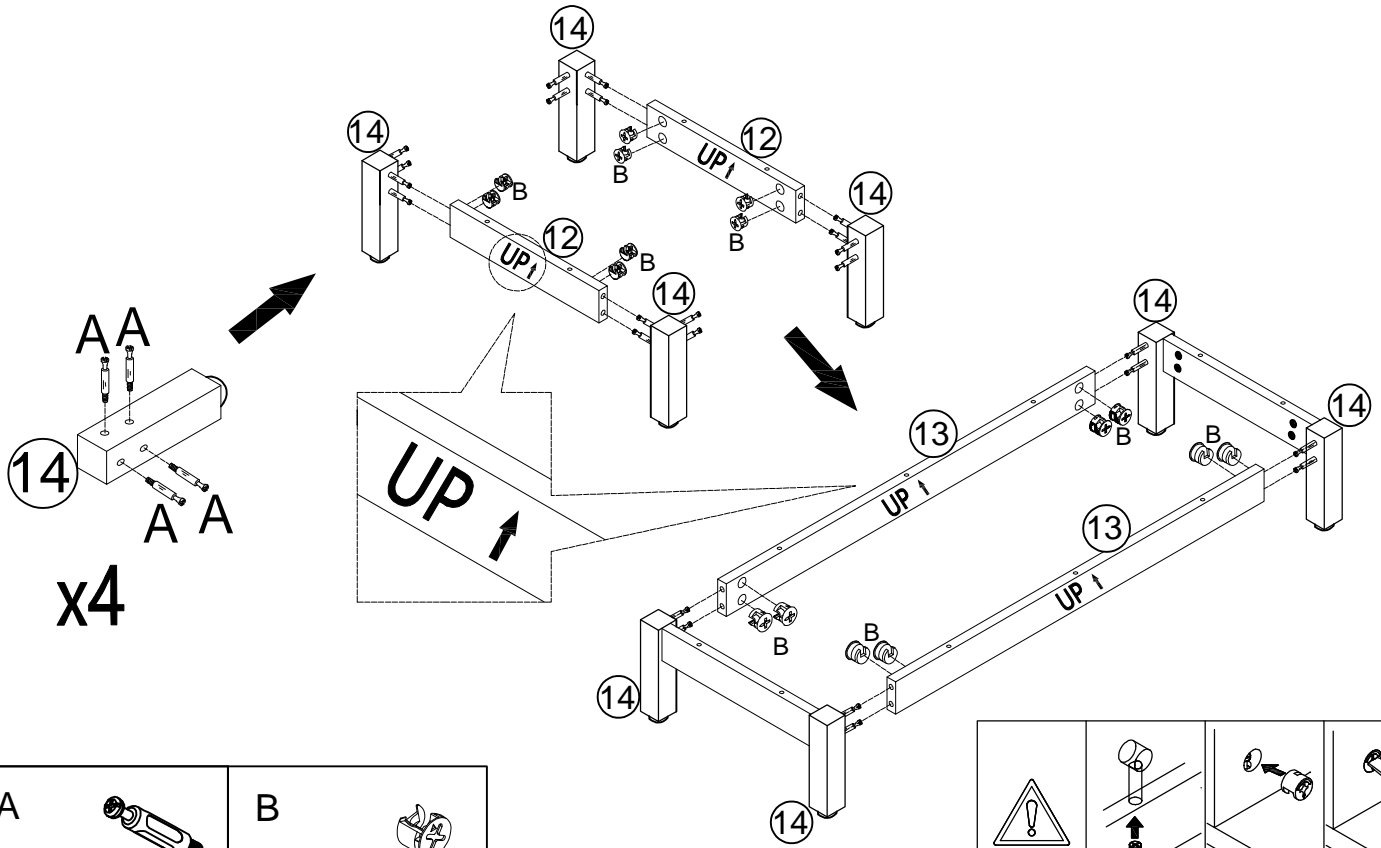

A	B
16 PCS	16 PCS

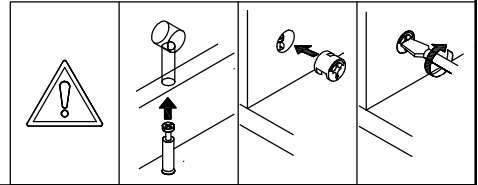 


 STEP 8 Attach assembled unit to plate 6 by using screw(M) and allen wrench(L) as shown.

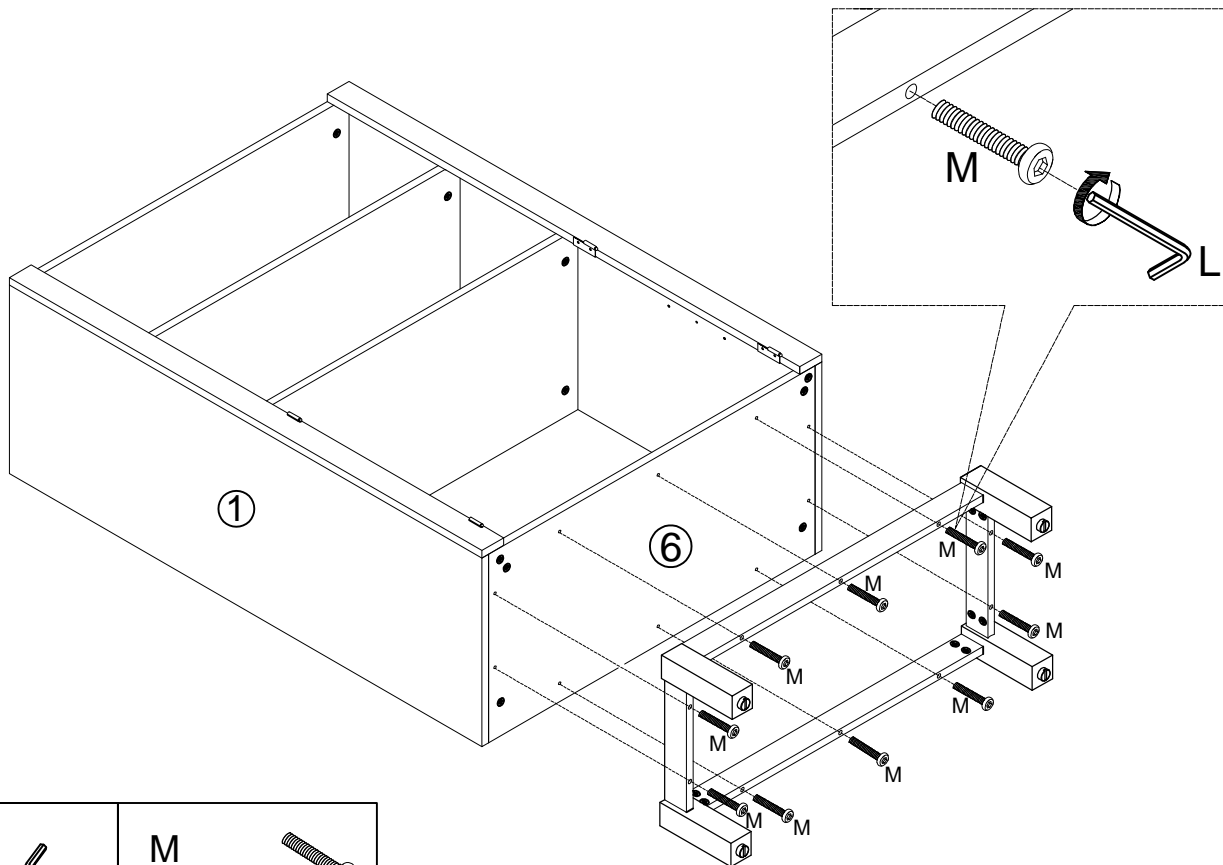

L	M
1 PCS	10 PCS

 STEP 9 Insert quickfit screw(A) into plate 16 with a screwdriver as shown. Insert wooden dowel(C) into plate 16 and Connect plate 17(x1), 18(x3) with plate 16 together. Put cam lock(B) into plate 17(x1), 18(x3) and turn clockwise to tighten as shown.

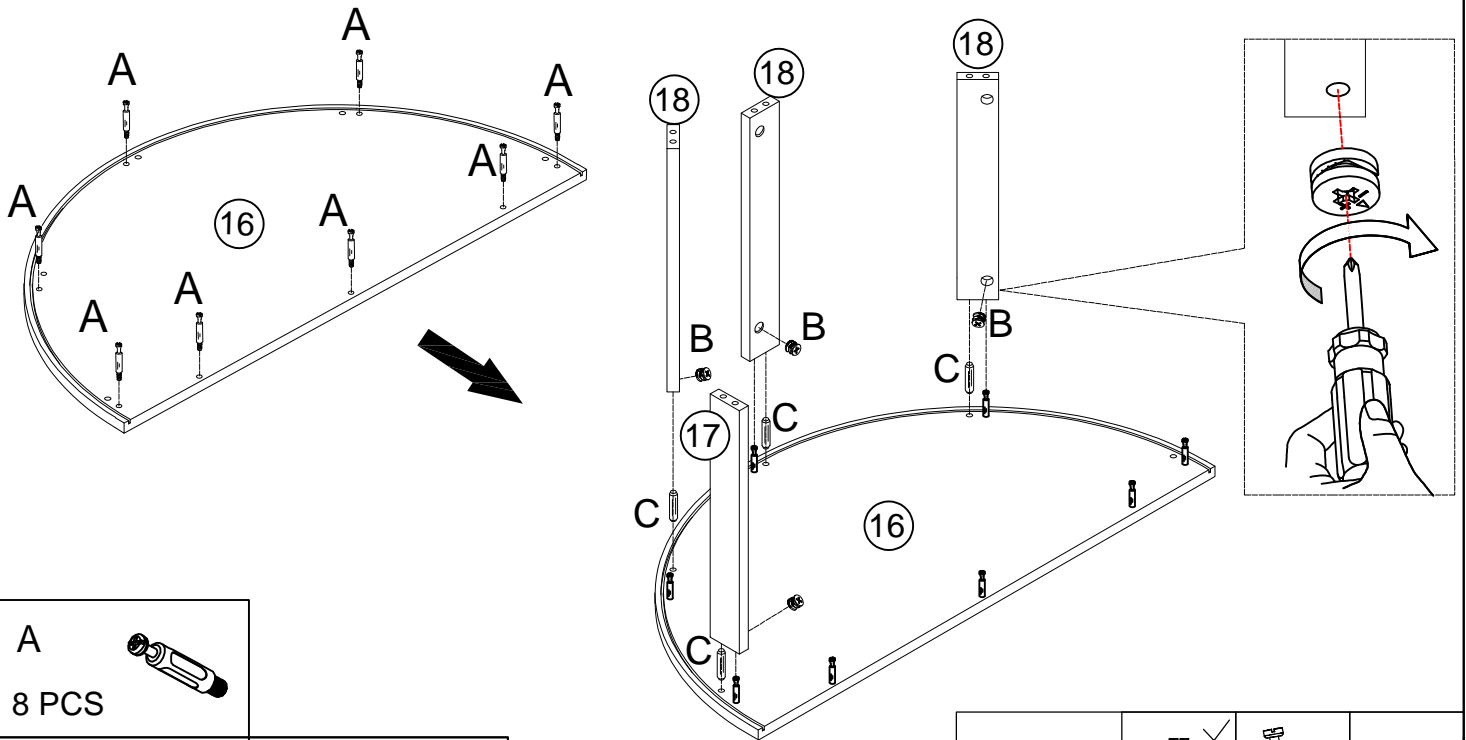


A
8 PCS

B
4 PCS


C
4 PCS

 STEP 10 Connect plate 15 with plate 16 together. Put cam lock(B) into plate 15 and turn clockwise to tighten as shown. Pay attention to the "UP" sign.

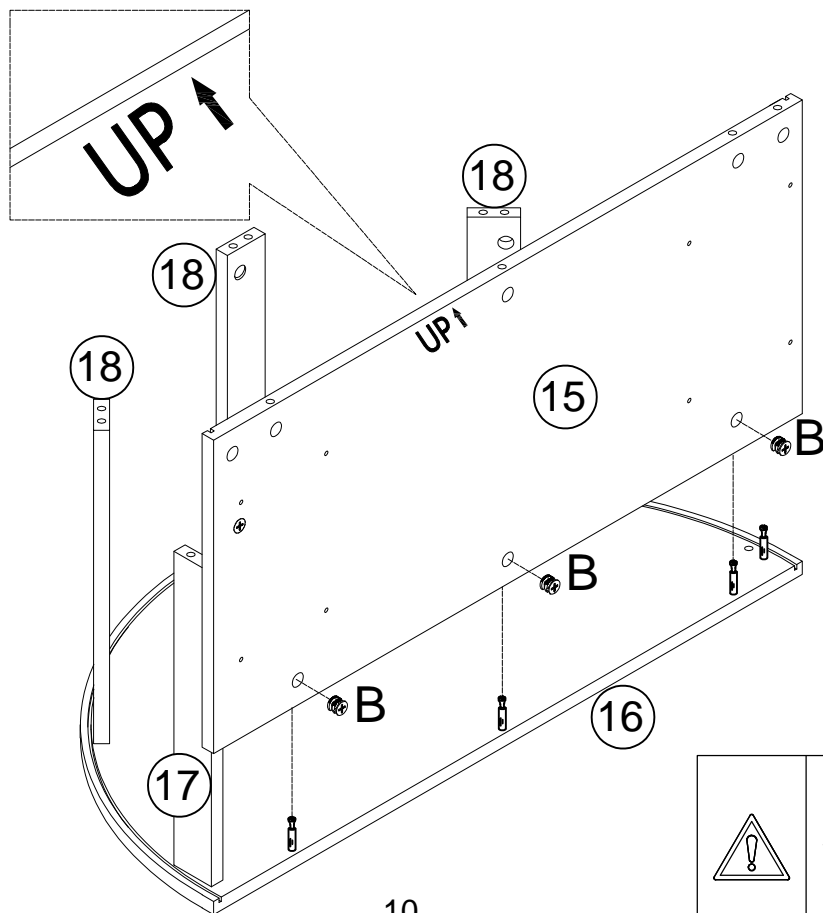

B
3 PCS

 
STEP 11 Fix plate 15 with plate 17 using screw(K) as shown.

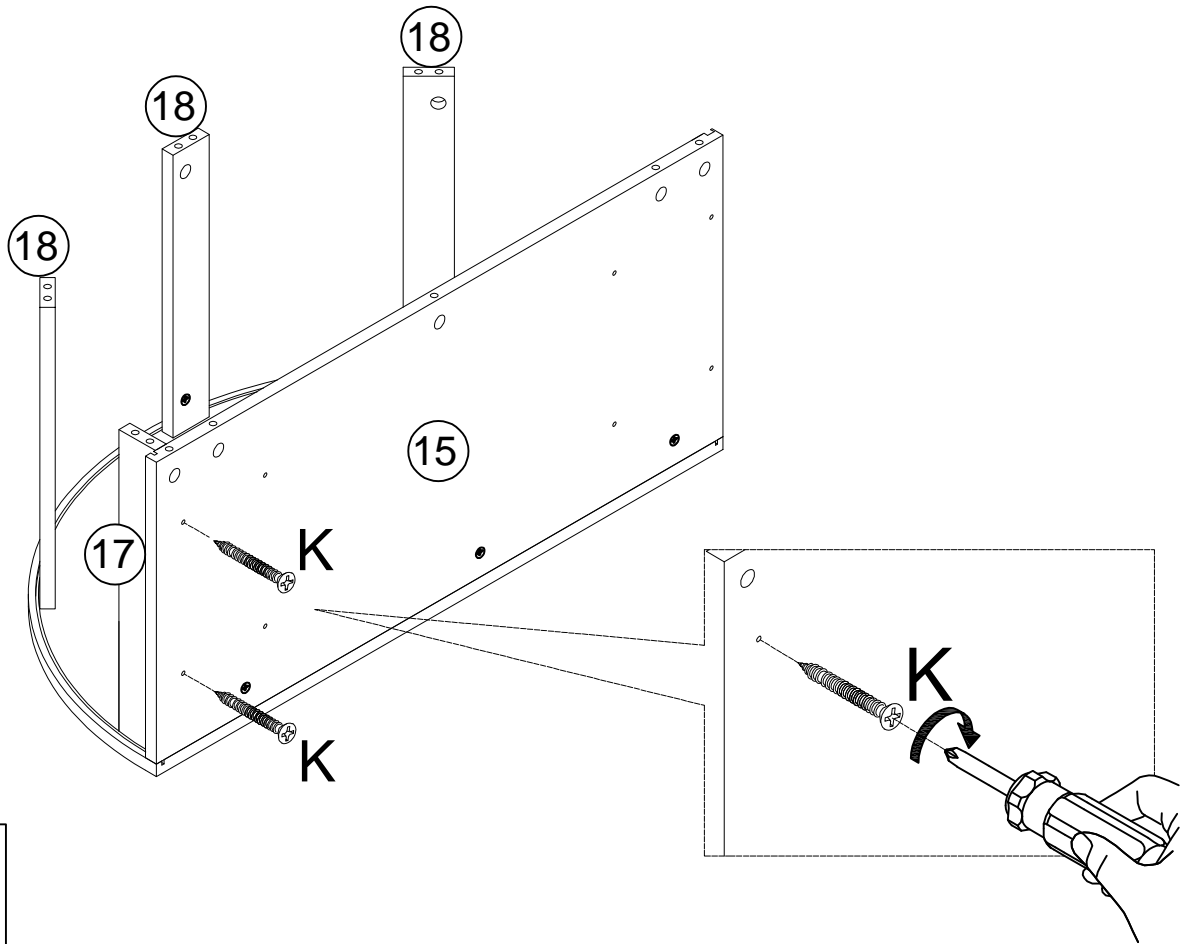


K
2 PCS



 
STEP 12 Slide plate 19 along grooves from left to right as shown.

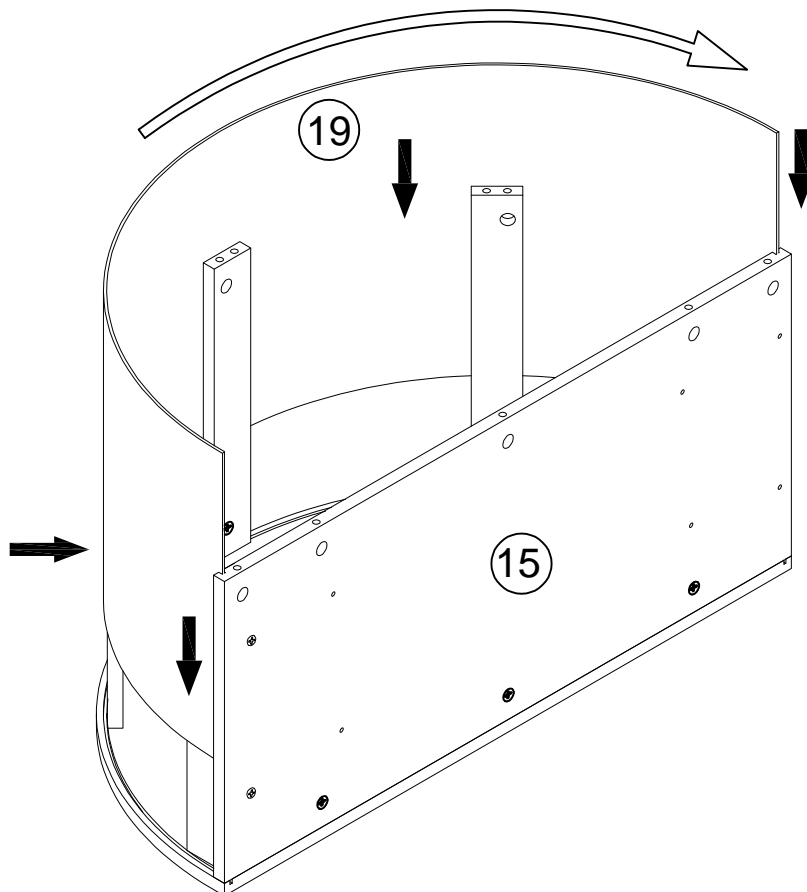

 
STEP 13 Insert wooden dowel(C) into plate 16 and Connect plate 17 with plate 16 together. Put cam lock(B) into plate 17 and turn clockwise to tighten as shown.

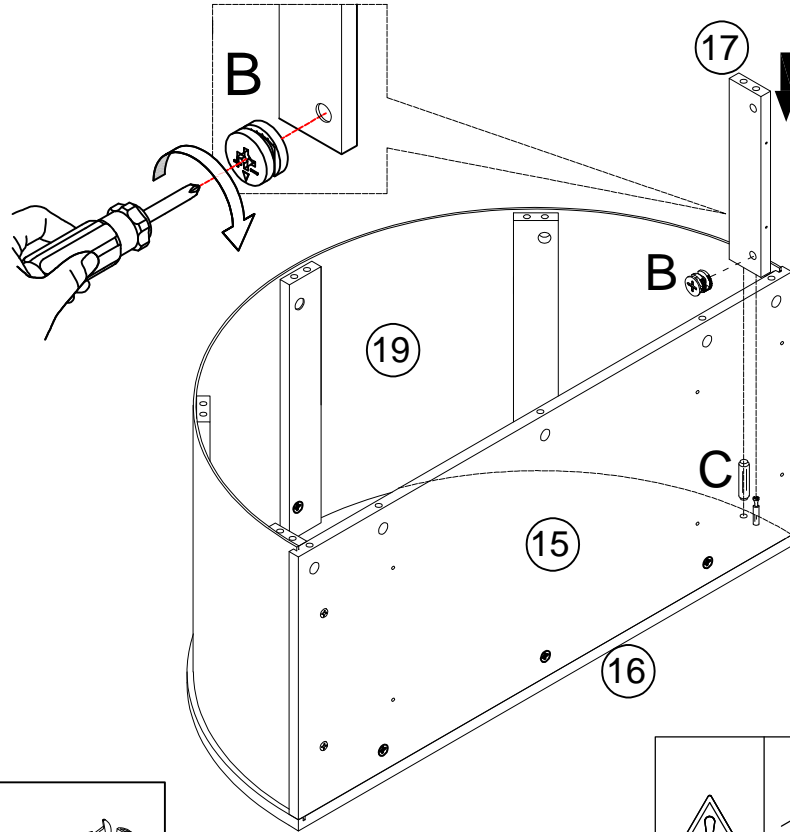


C
1 PCS

 


B
1 PCS

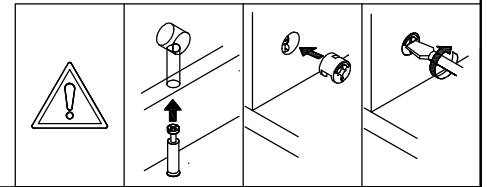 

 
STEP 14 Insert quickfit screw(A) into plate 20 and 21 with a screwdriver as shown.

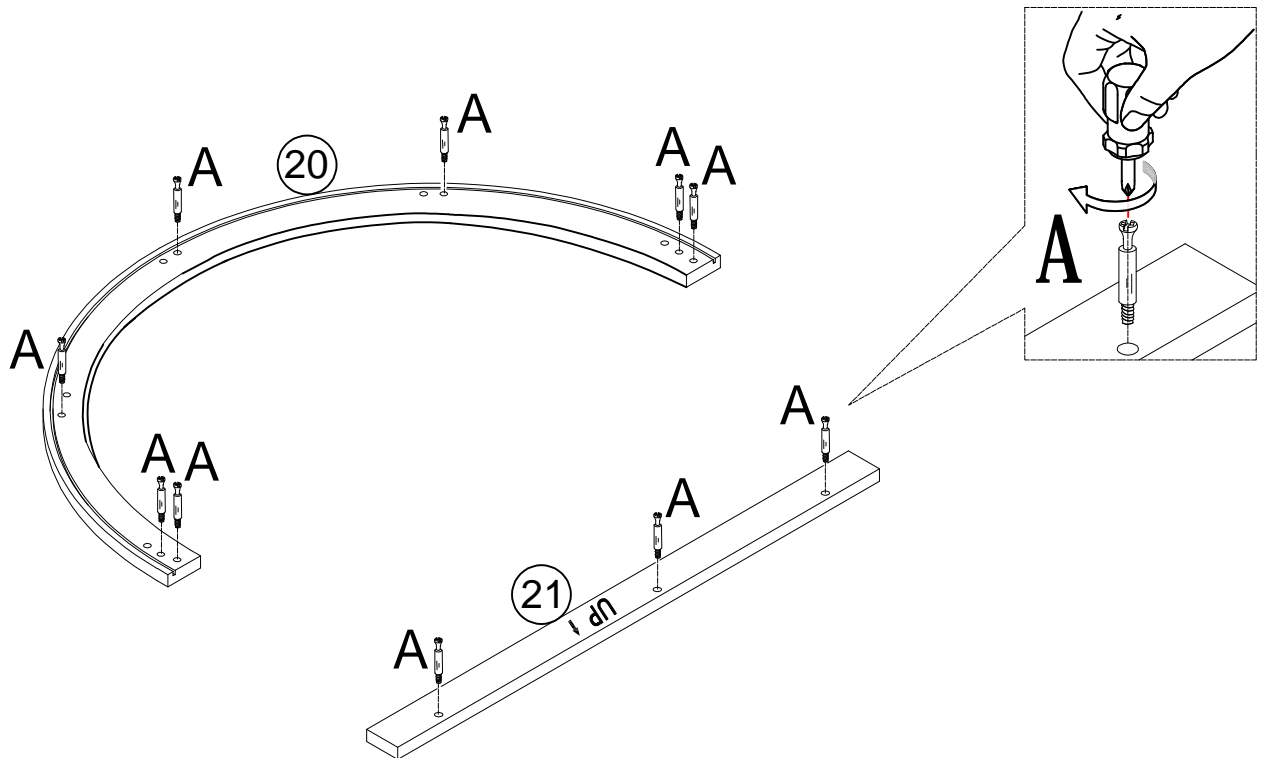


A
10 PCS

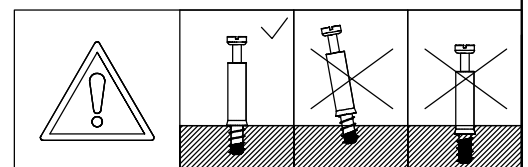 

 STEP 15 Pay attention to the "UP" sign. Attach plate 20 and 21 to assembled unit by using wooden dowel(C). Put cam lock(B) into connected plate and turn clockwise to tighten as shown.

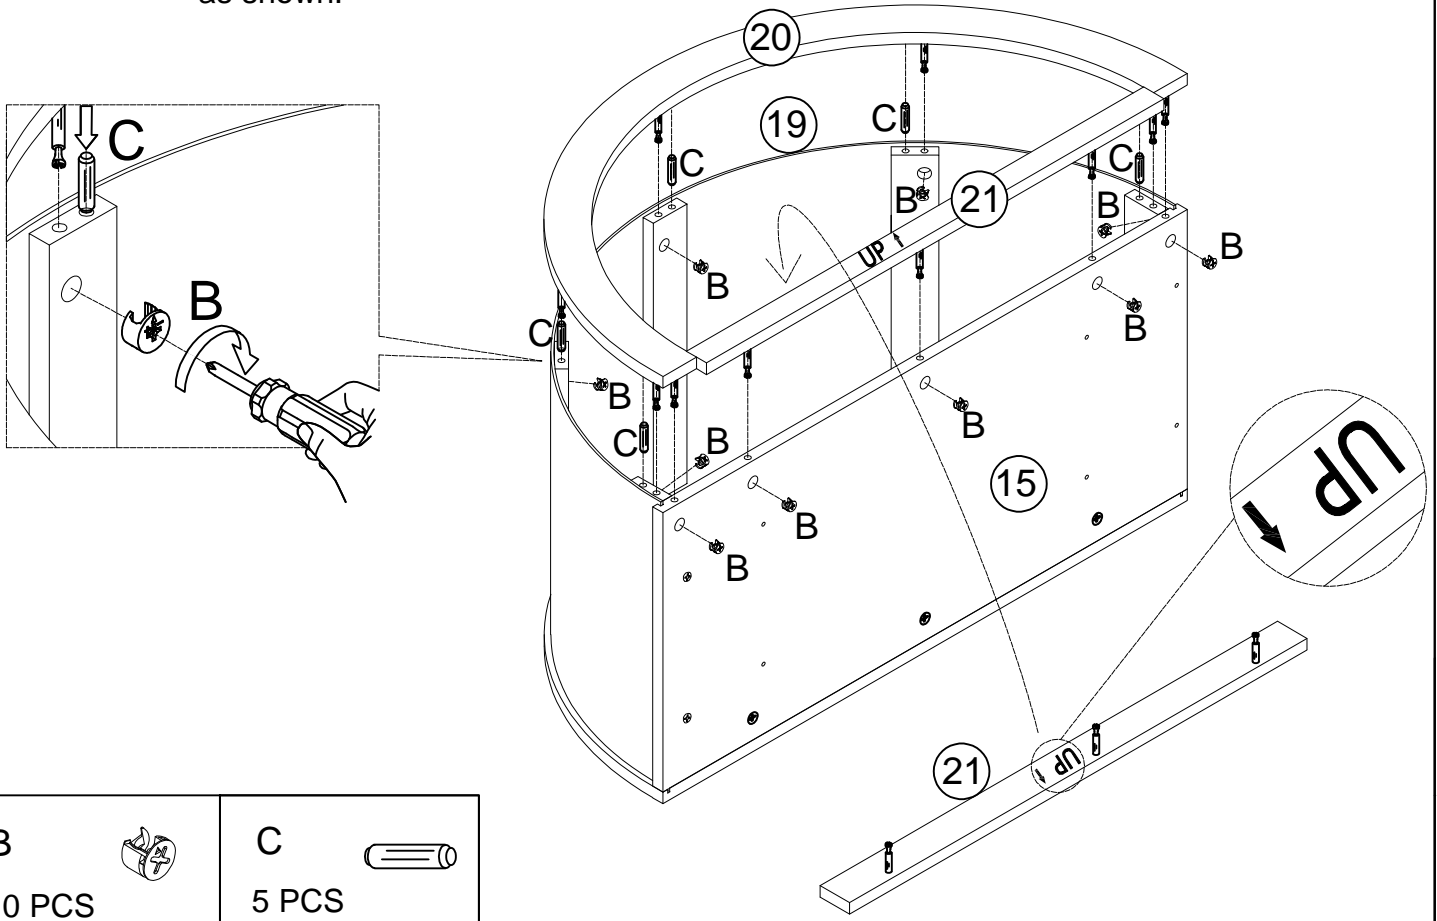

 
STEP 16 Fix plate 15 with plate 17 using screw(K) as shown.

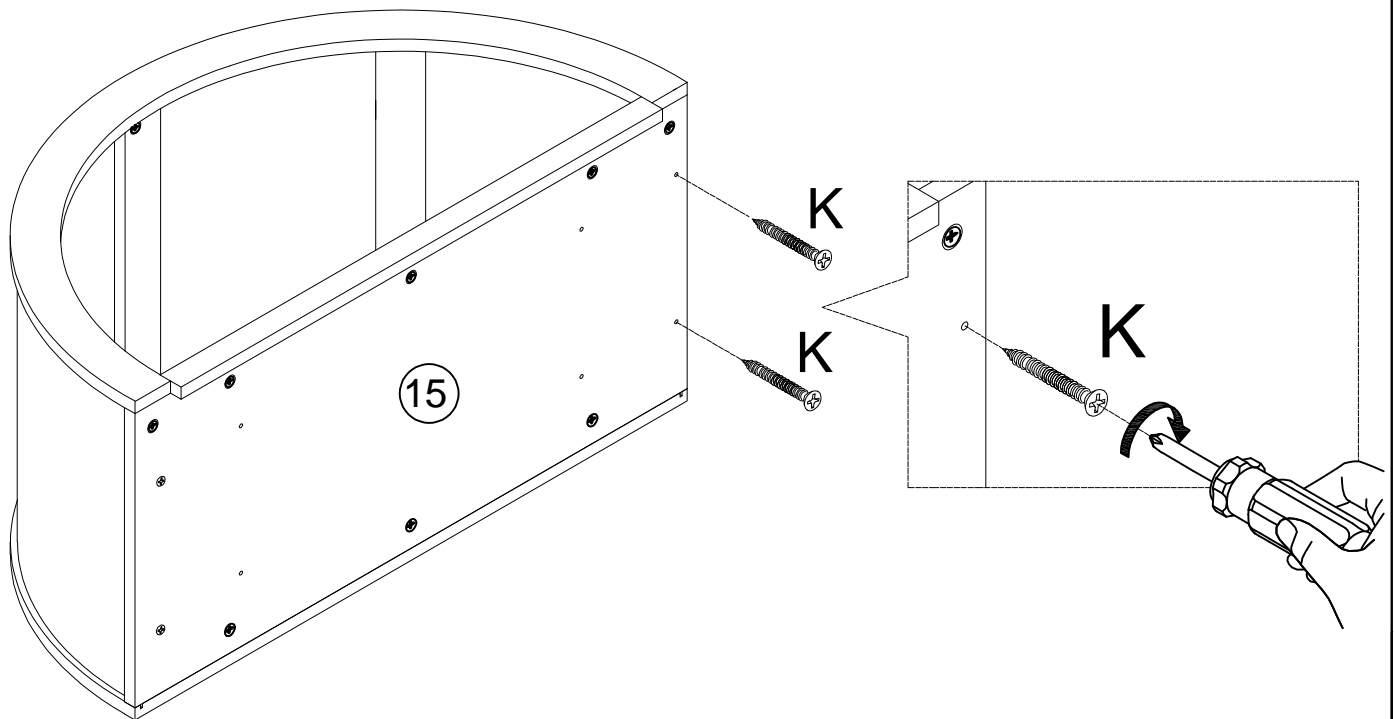

K
2 PCS

STEP 17

 Attach arched unit to cabinet by using screw(J) and allen wrench(L) as shown.

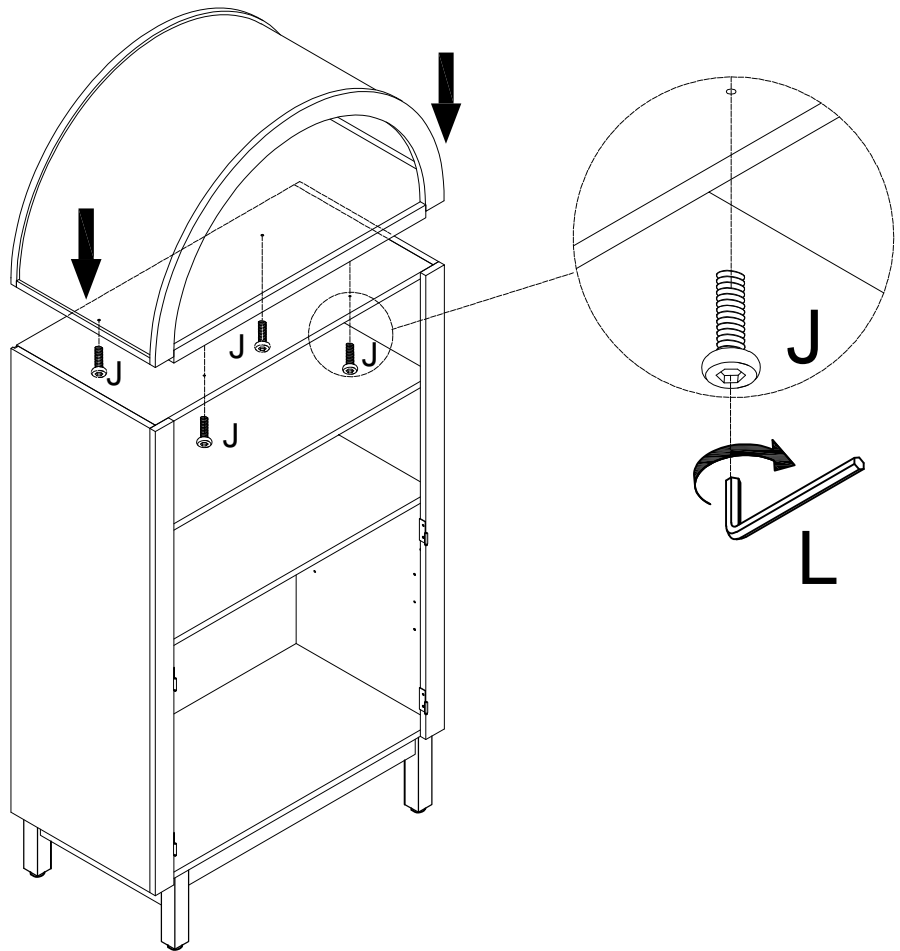

L 

 
1 PC

J 

4 PCS

STEP 18

Attach magnet(F) to plate 5 by using screw(G) and screwdriver as shown. Insert part(I) into side plates and put shelf(11) in.

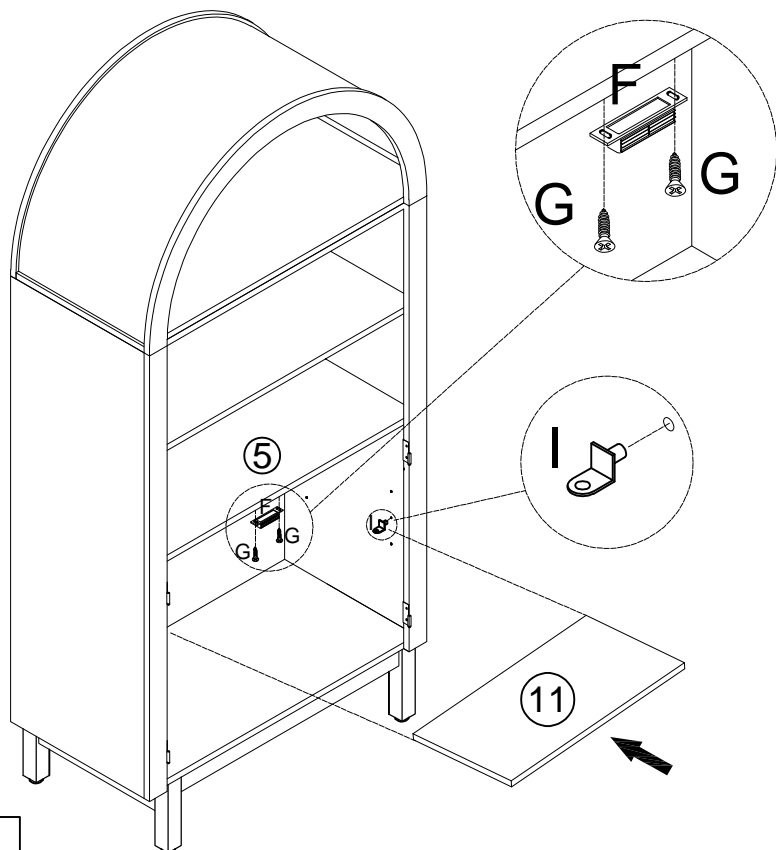

F 

1 PC

G 

 
2 PCS

I 

4 PCS

14

STEP 19 Fix handle(D) to door plate 22 and 23 with screw(E) as shown.

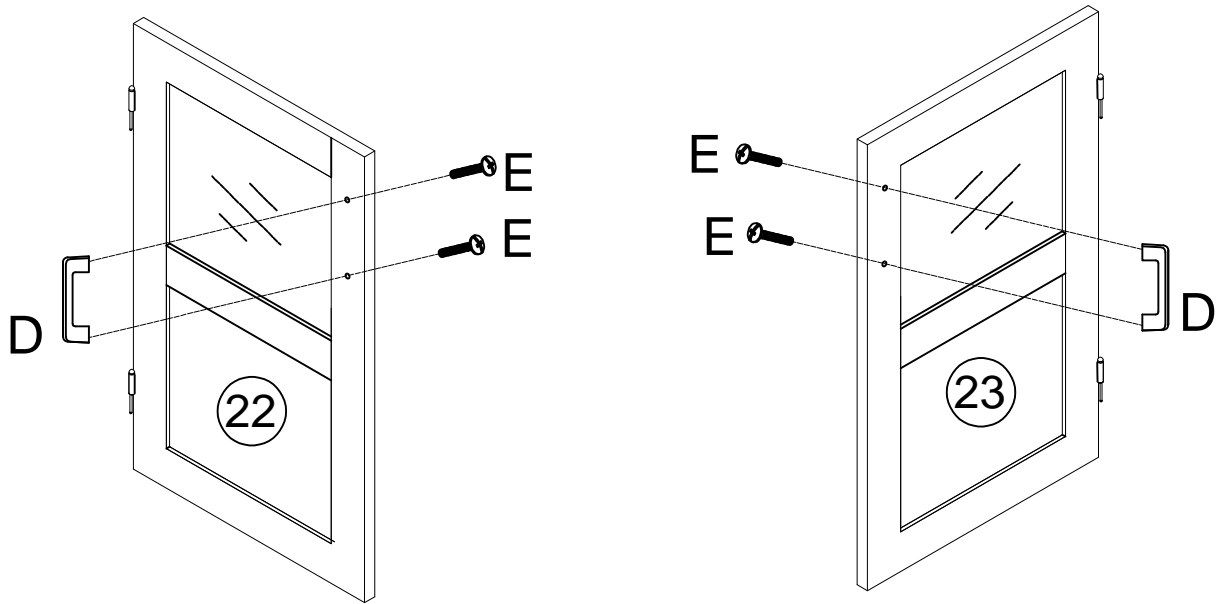



D
2 PCS



E
4 PCS









  STEP 20

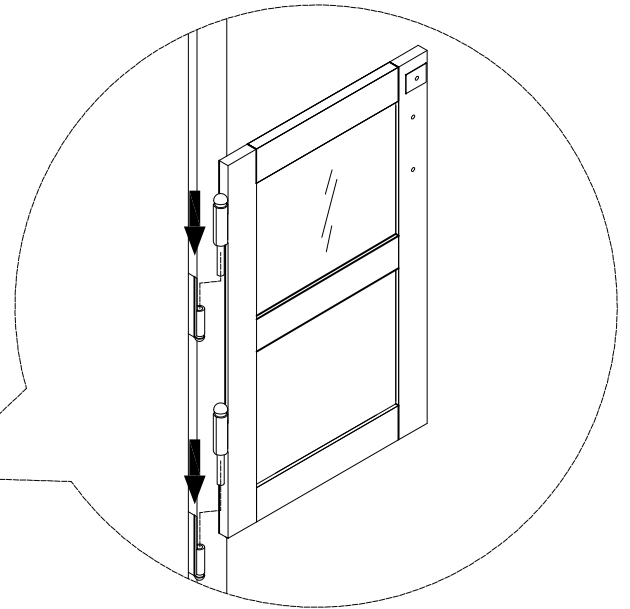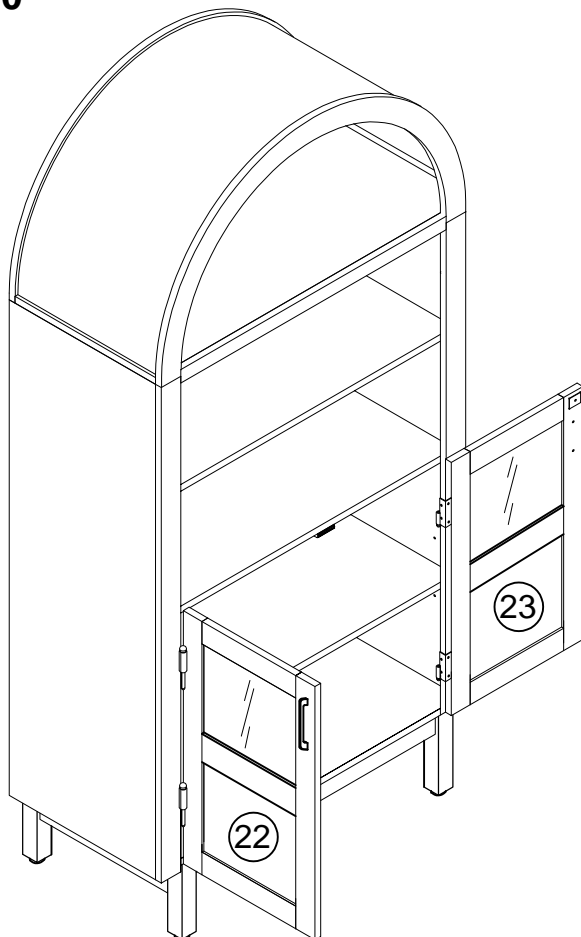

Align the hinge holes and insert the door plate.

      STEP 21

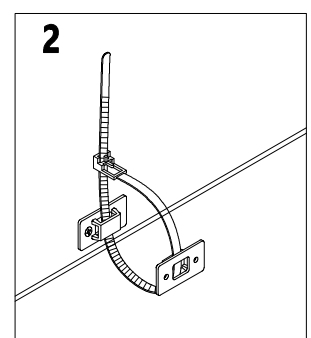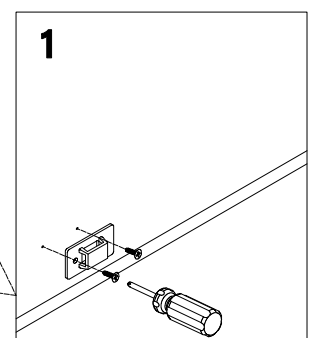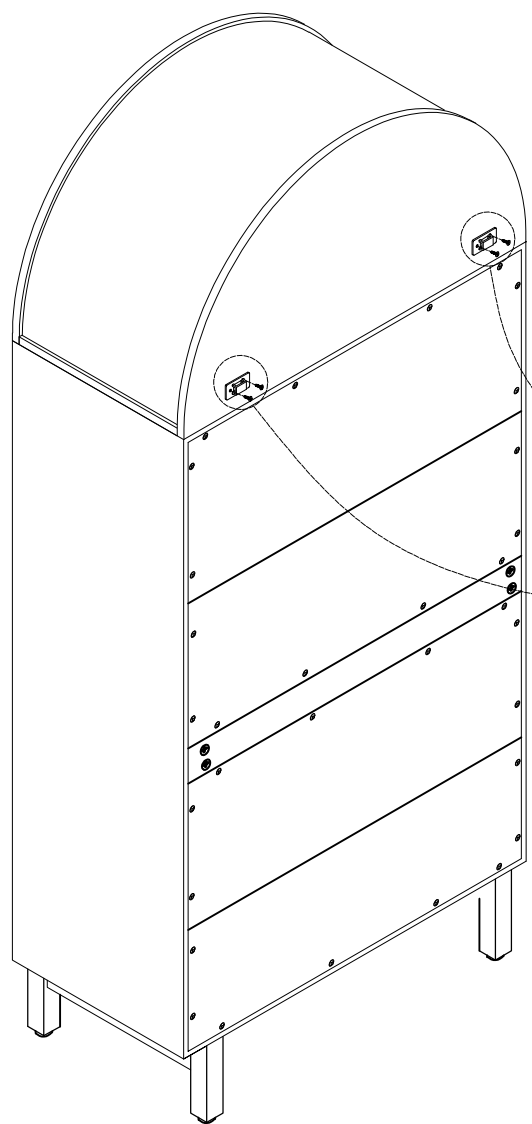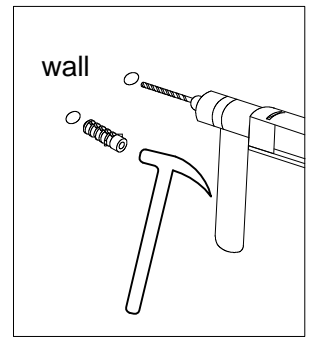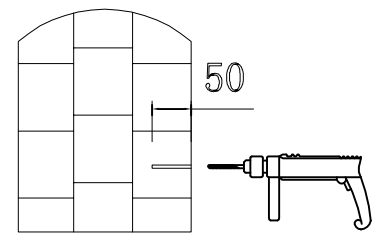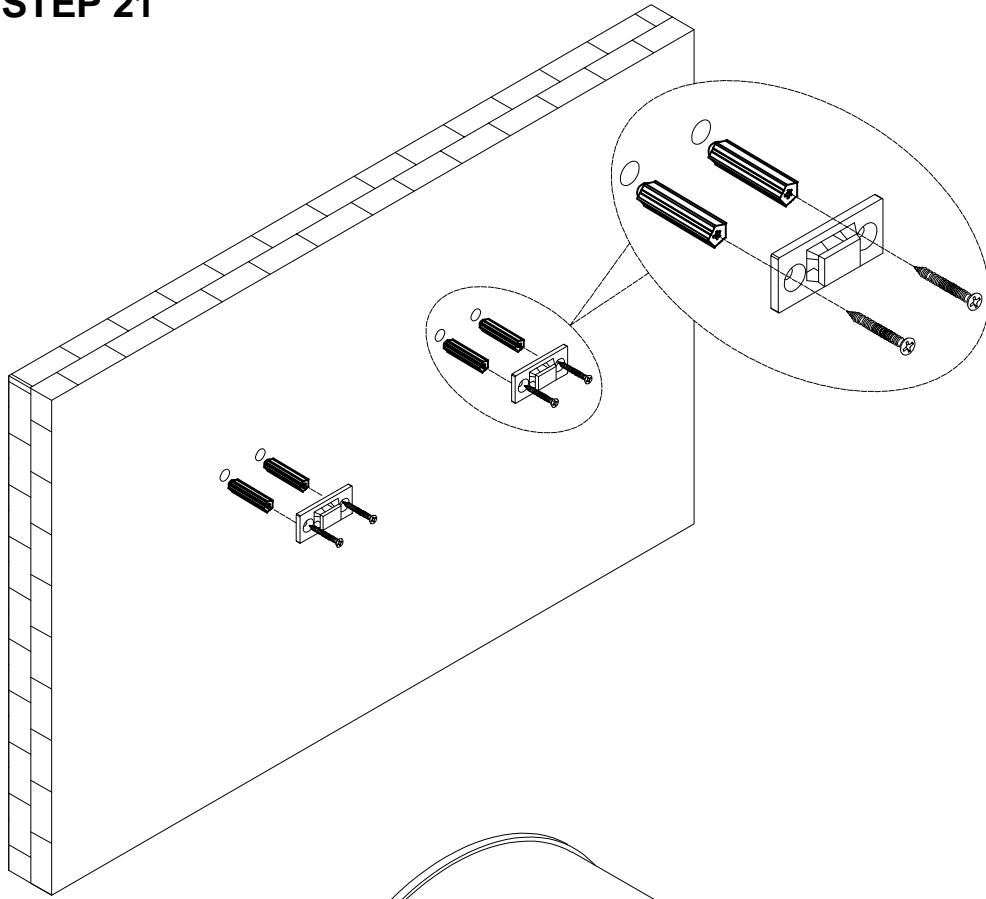


⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

 - ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

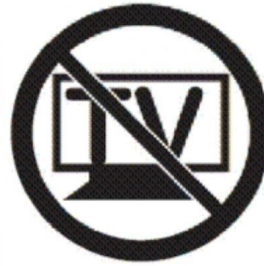

  *This is a permanent label.
Do not remove!*

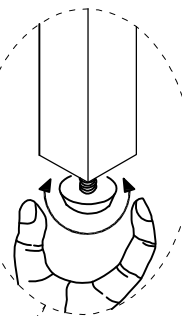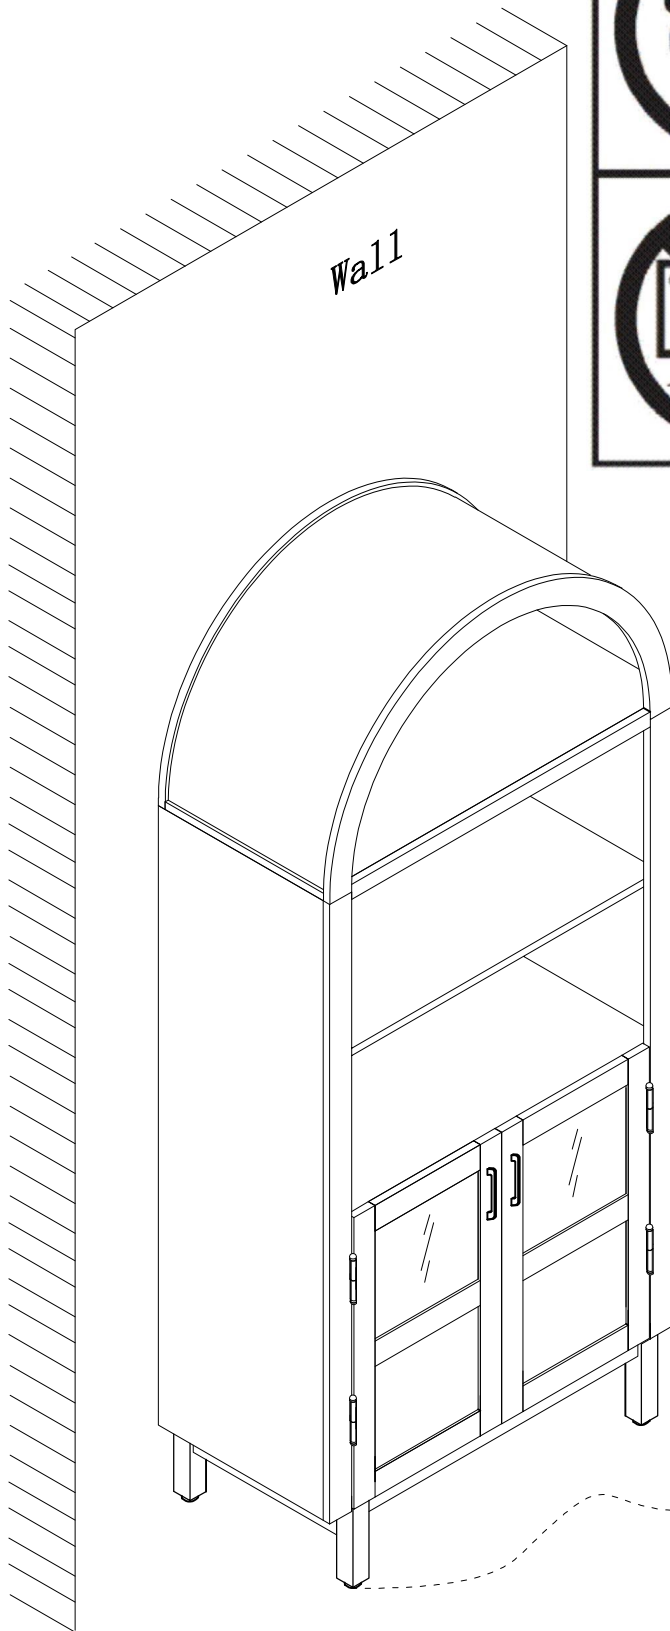

After installation, adjust the adjustable foot to keep the cabinet balanced and align the door.