

1

2

3

4

Ax1

Bx1

Cx1

Dx1

Ex1

Fx3

M8x30mm

Gx3

M8x25mm

Hx4

M6x16mm

Ix3

8x18x1.5mm

Jx4

6x16x1.5mm

SPARE Ersatzteile

Fx1

M8x30mm

Gx1

M8x25mm

Hx1

M6x16mm

Ix1

8x18x1.5mm

Jx1

6x16x1.5mm