







 
 
Parker House
FURNITURE

Assembly Instruction

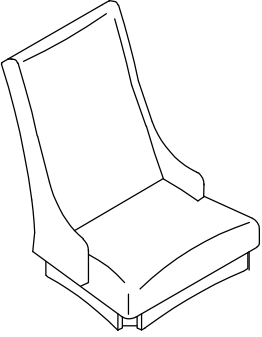
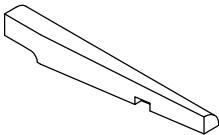
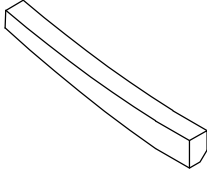
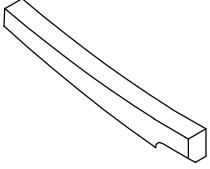
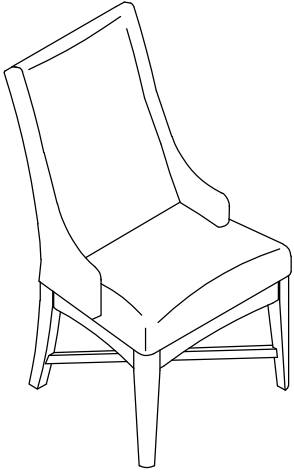
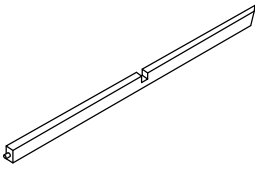
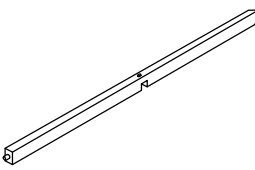
Item No: DAME#2518

Description : DINING CHAIR HOST

HARDWARE LIST

No	Description	Sketch	Q'TY
A	Allen Wrench 4mm		1PC
B	Bolt Ø1/4x60mm		8PCS
C	Lock Washer Ø1/4x12mm		8PCS
D	Flat Washer Ø1/4x19mm		8PCS
E	Screw #4x20mm		1PC
F	Screw #4x38mm		4PCS

PARTS LIST

SEAT FRAME (1PC)	FRONT LEG (2PCS)	LEFT BACK LEG (1PC)	RIGHT BACK LEG (1PC)
① 	② 	③ 	④ 
UPPER STRETCHER (1PC)	BOTTOM STRETCHER (1PC)		
⑤ 	⑥ 		



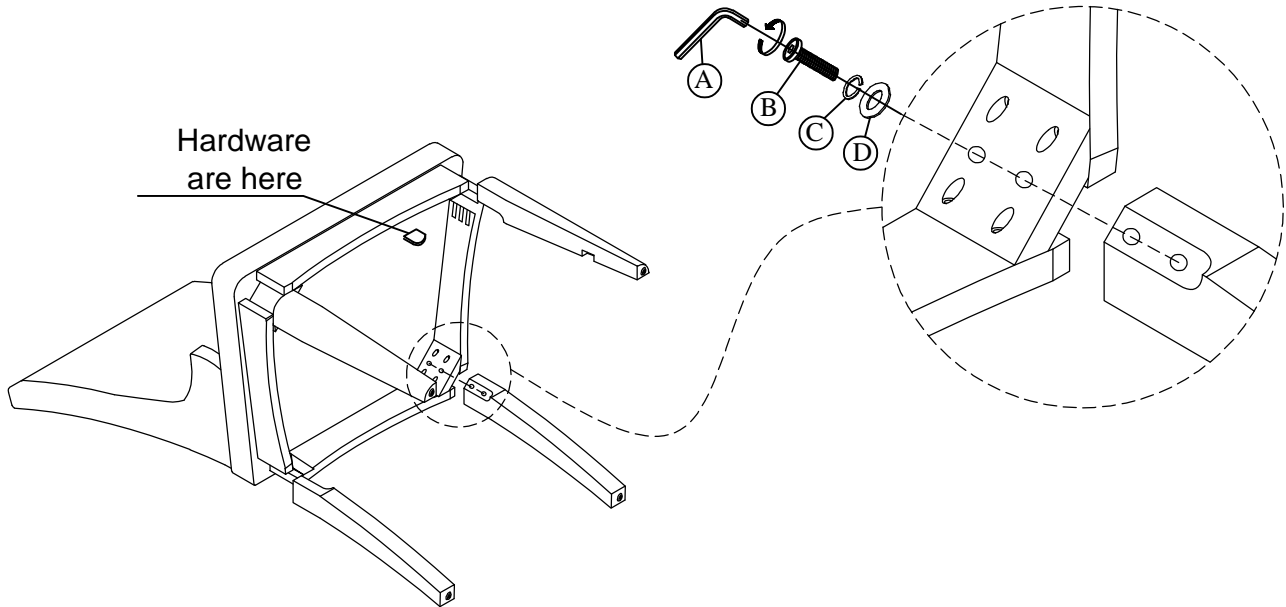
Parker House
FURNITURE

Assembly Instruction

Item No: DAME#2518

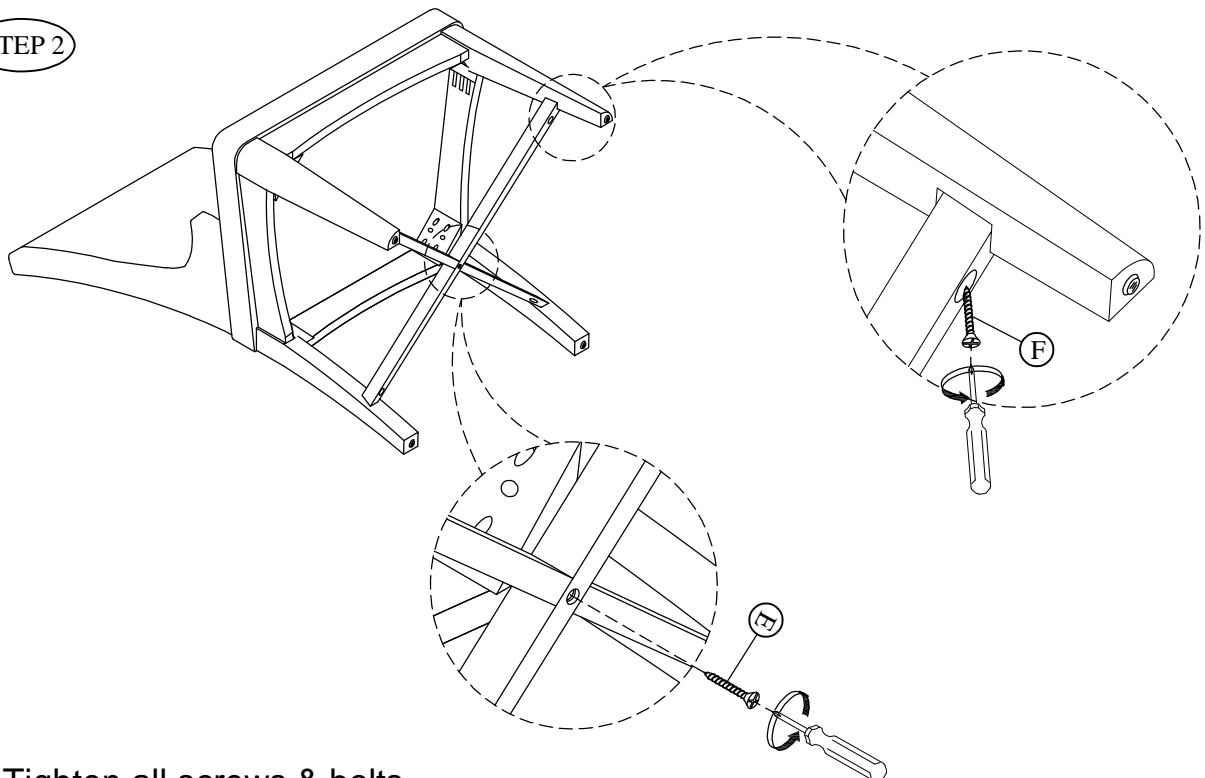
Description : DINING CHAIR HOST

STEP 1



* Do not tighten bolts

STEP 2



* Tighten all screws & bolts