 
 


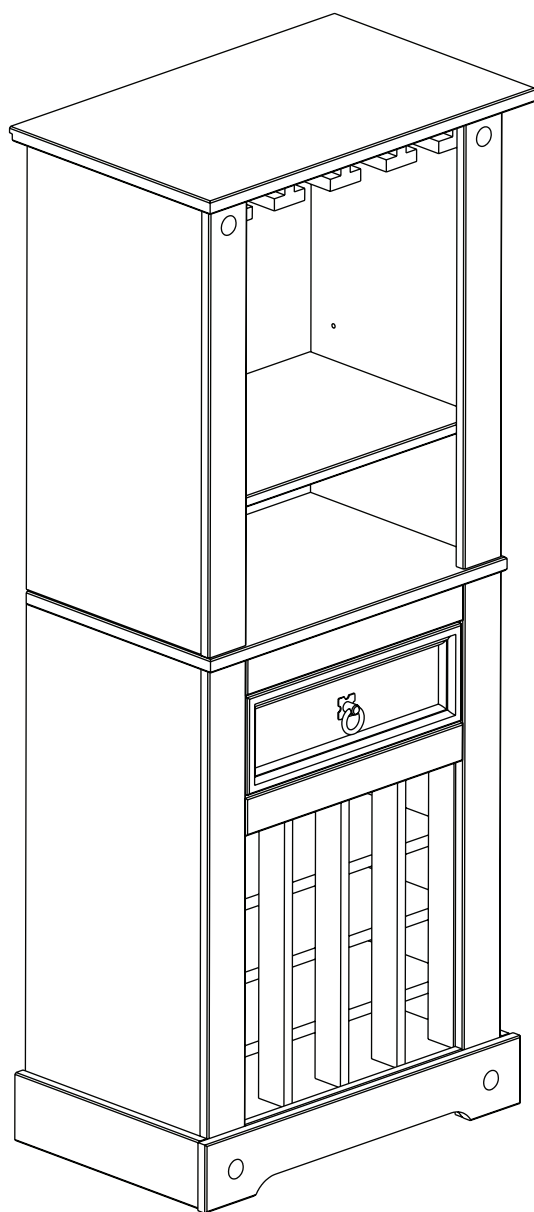

SKU : 42021159

Manual Nr : 2603085004

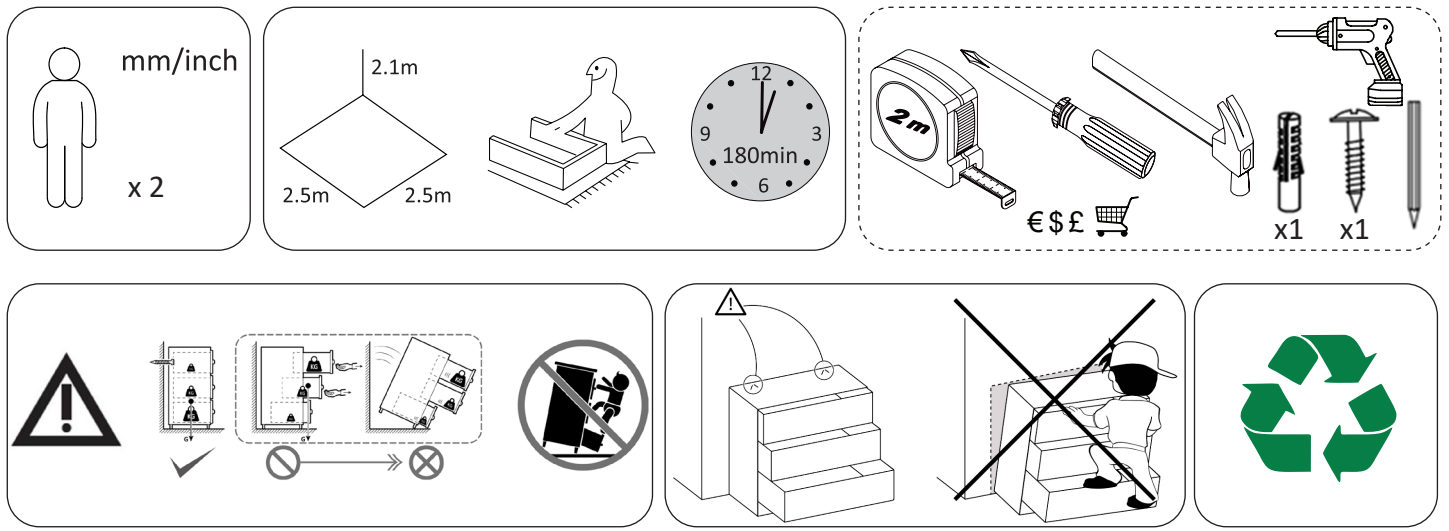



(only for Australia)

 
⚠ WARNING

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 



Ø8x30/1.2
Ax36



 
Ø3.5x30/1.2
Bx38




Ø3x30/1.2
Cx8




Ø4x40/1.6
Dx20



 
1.3x18/0.05x0.7
Ex42




Ø3/16x5/8
Fx1

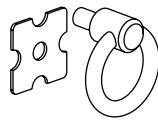 


Gx1

 

Hx4

 

Ø6x30/1.2
Ix52

 


Ø3.5x14/0.6
Jx1



Kx1



 
Lx2




615/24.2
Mx2



 
Px16

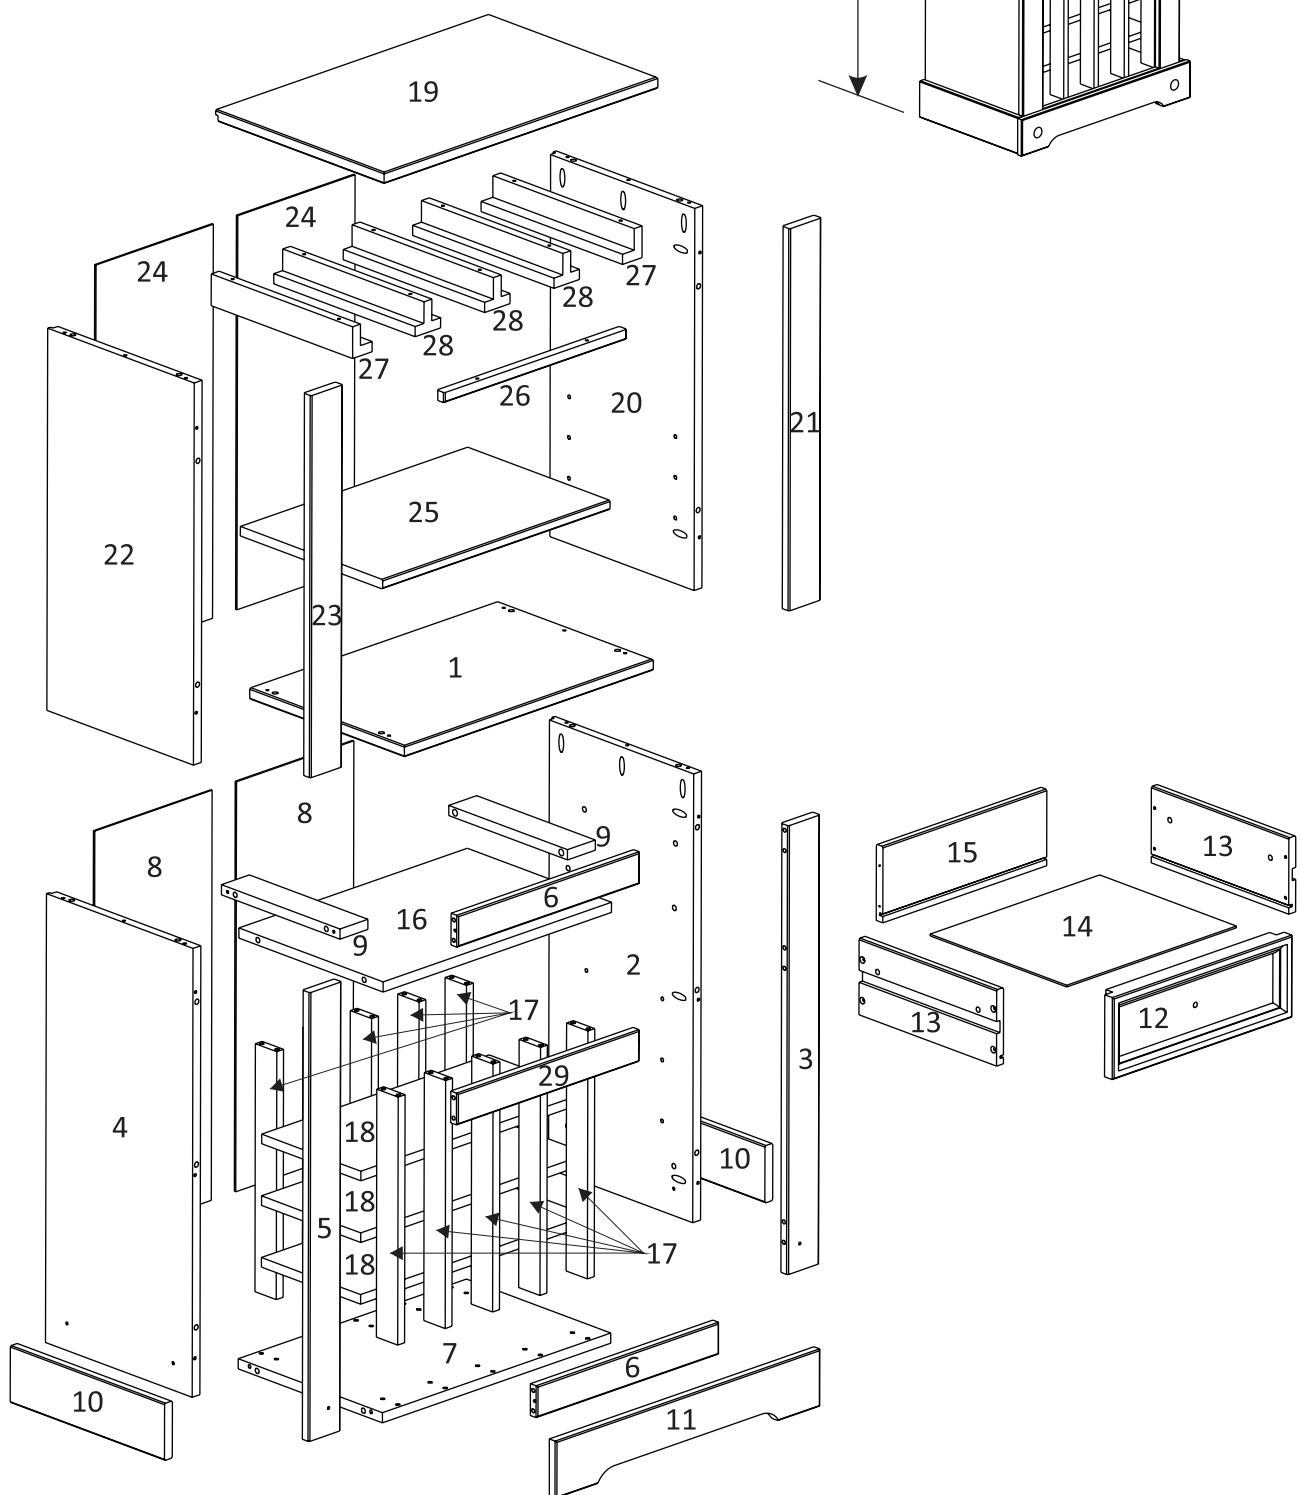


1

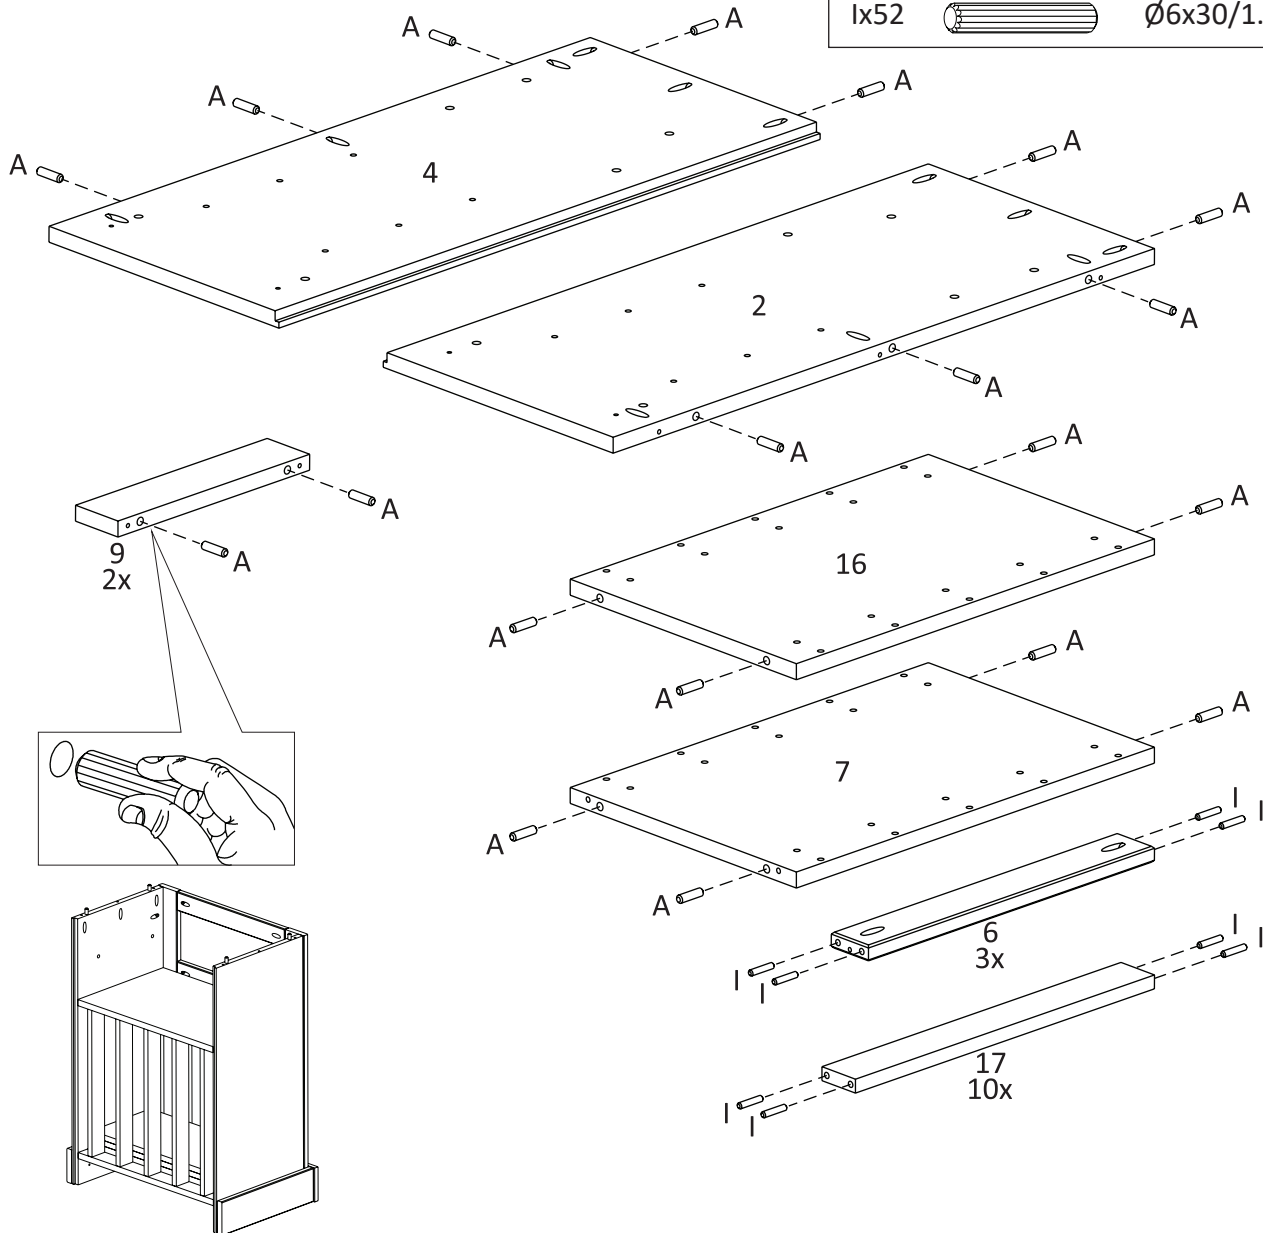 Ax22  Ø8x30/1.2Ix52  Ø6x30/1.2

 2

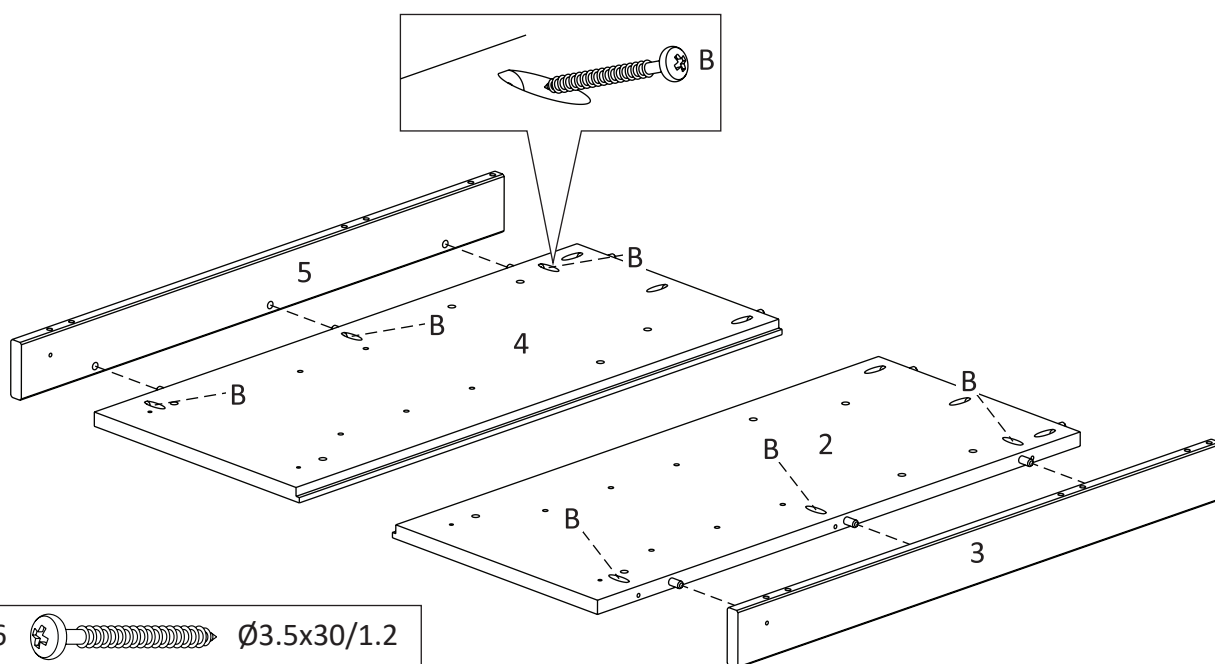
Bx6  Ø3.5x30/1.2

 3

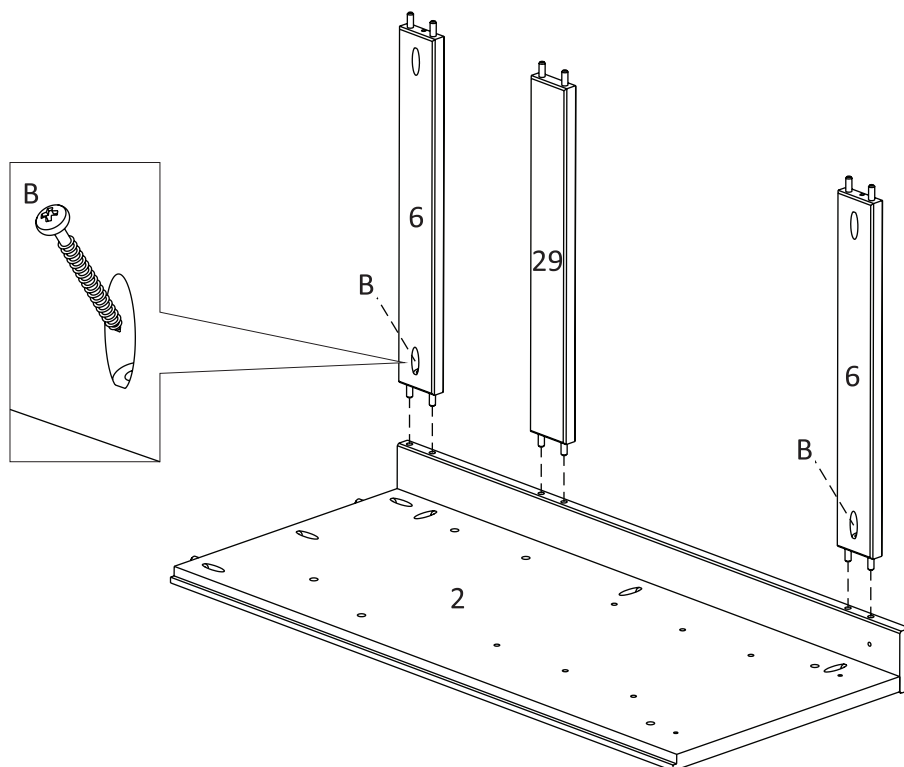


Bx2  Ø3.5x30/1.2

 4

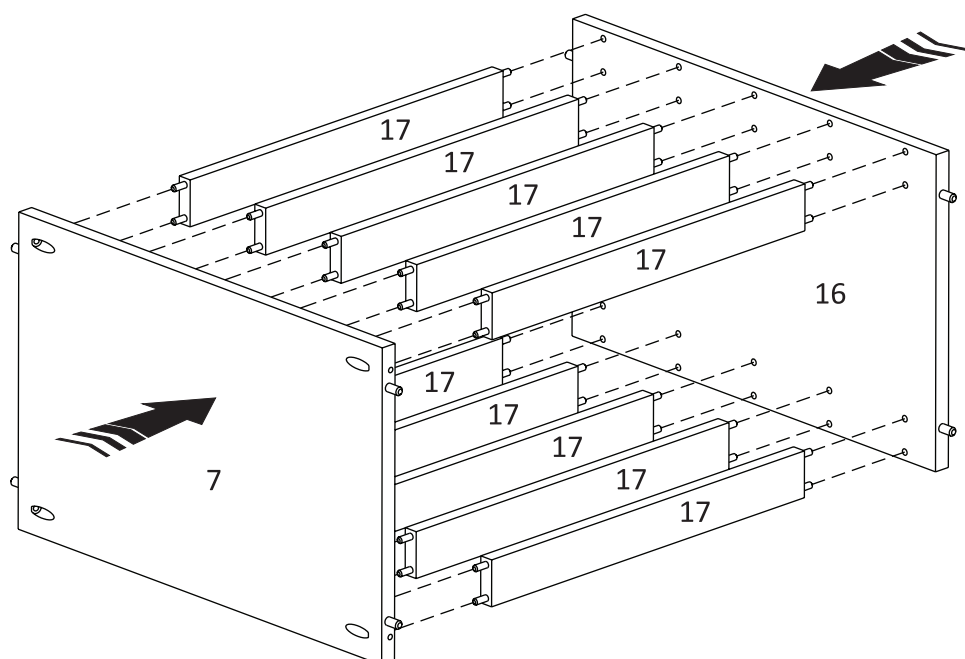


5

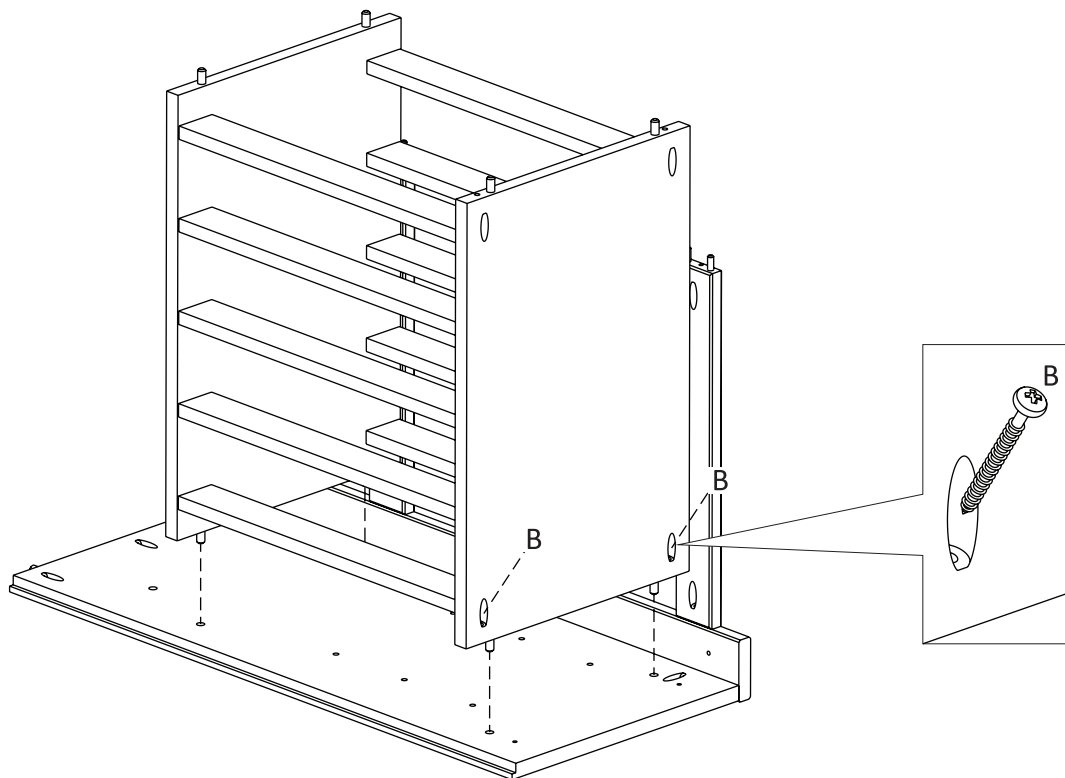 


Bx2  Ø3.5x30/1.2

 6

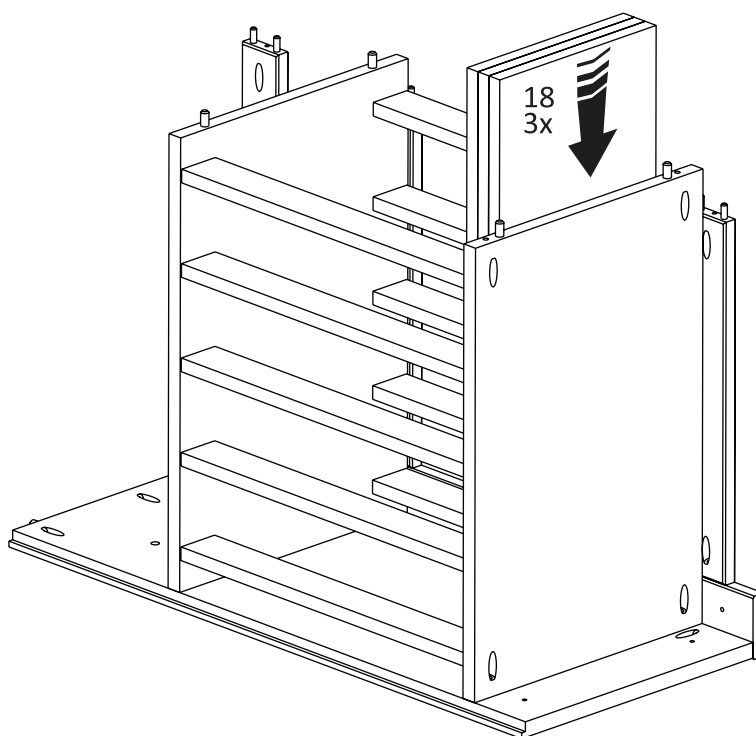


7

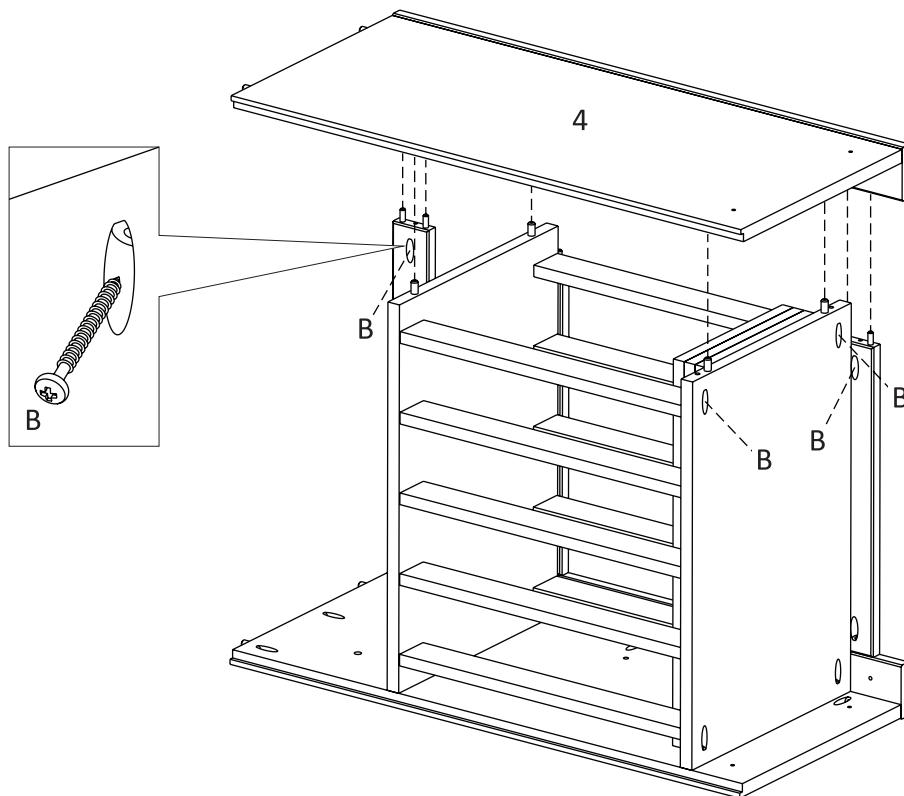 




Bx4  Ø3.5x30/1.2

 8

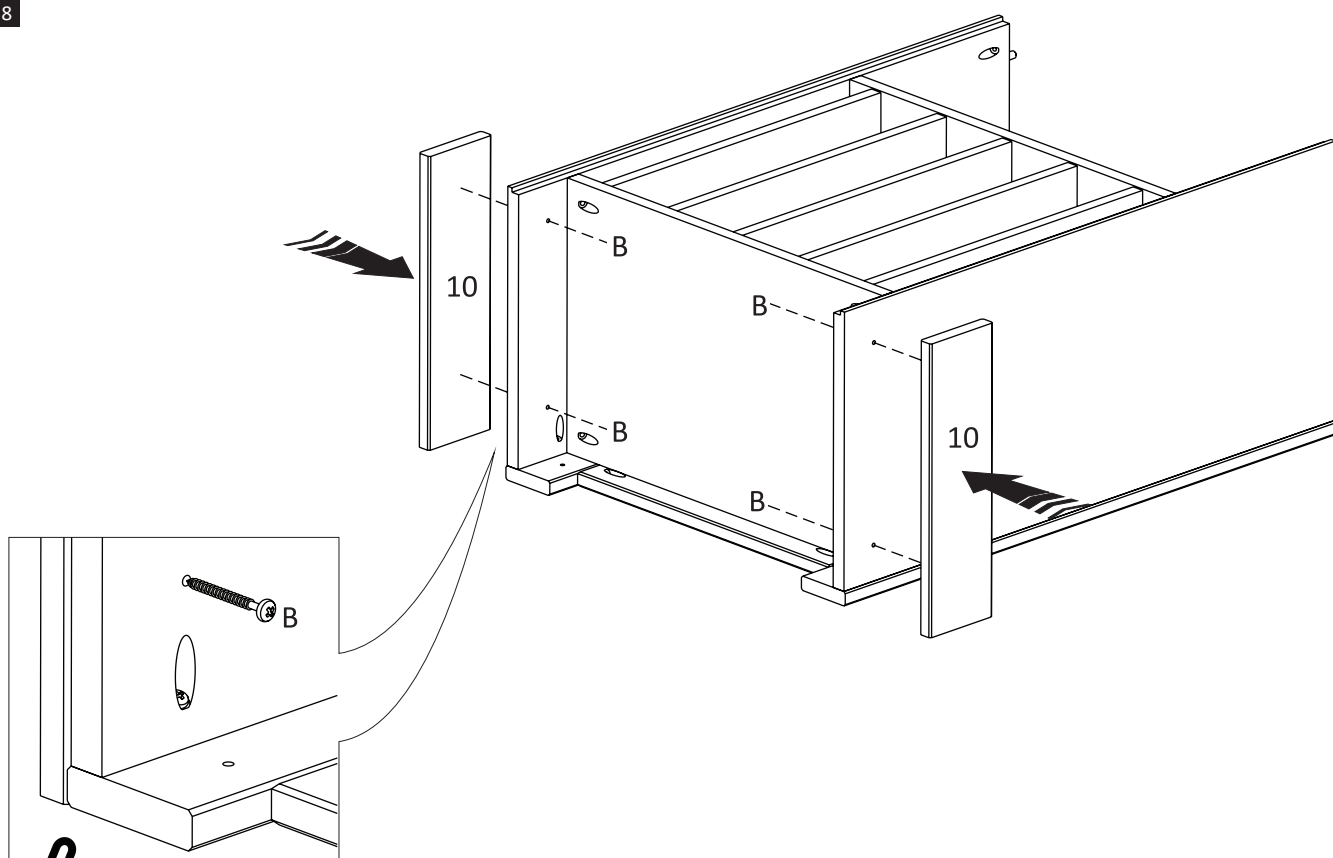





Bx4  Ø3.5x30/1.2

   9

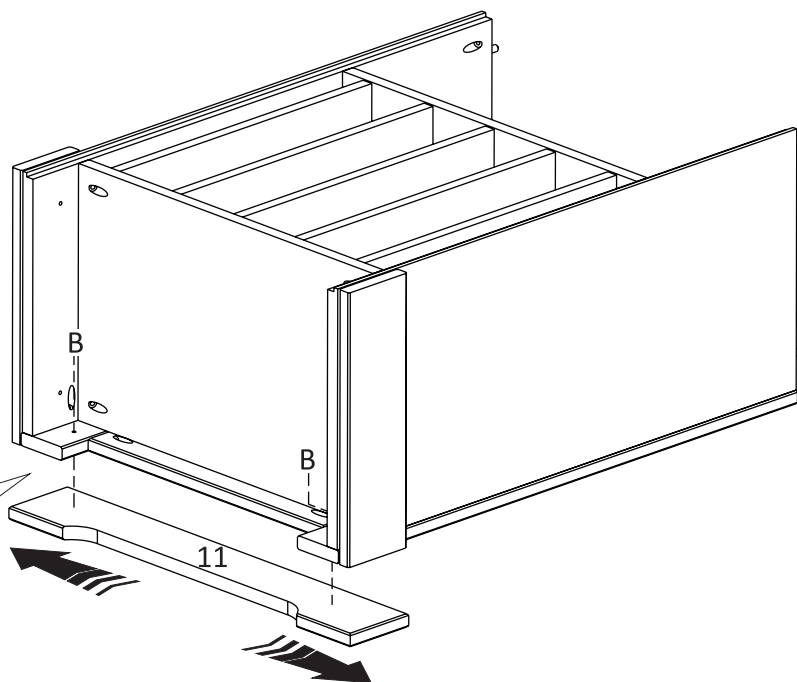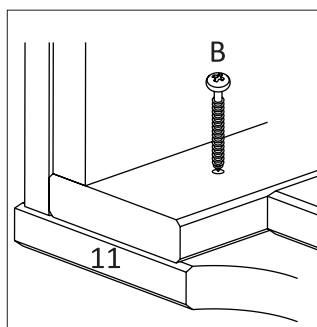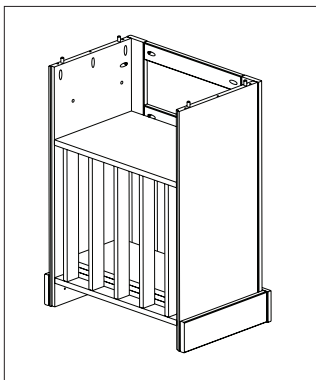

Bx4  Ø3.5x30/1.2

   
 
10

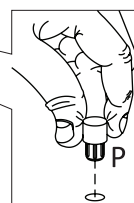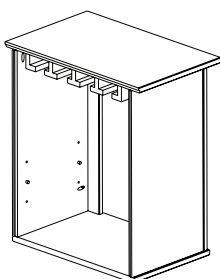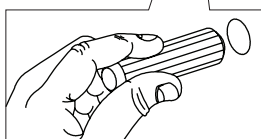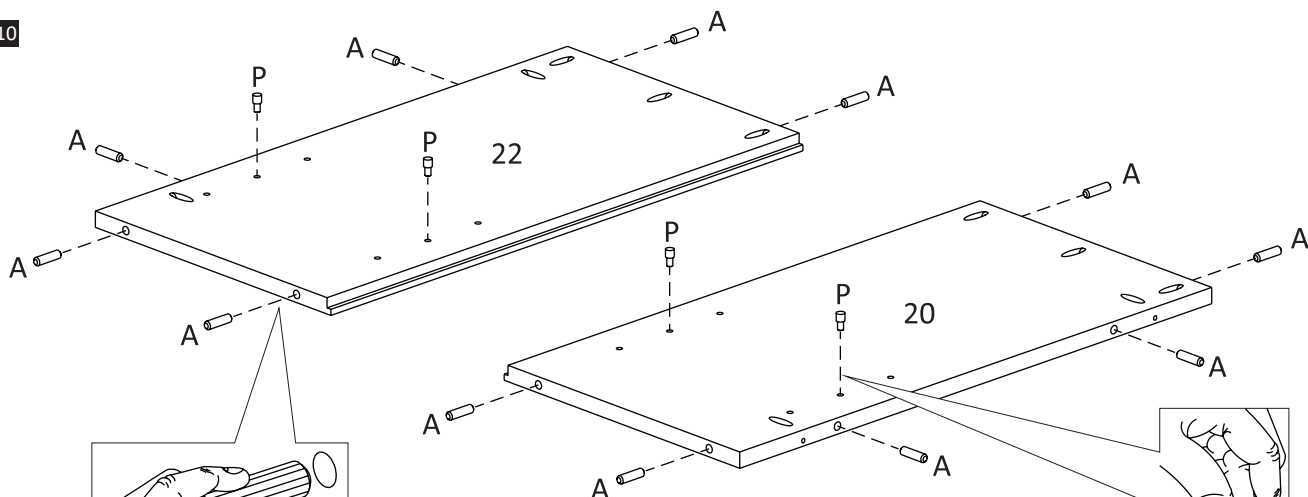


Ax12  Ø8x30/1.2

Dx10  Ø4x40/1.6

  Px4 

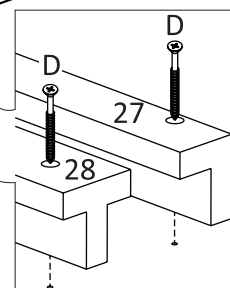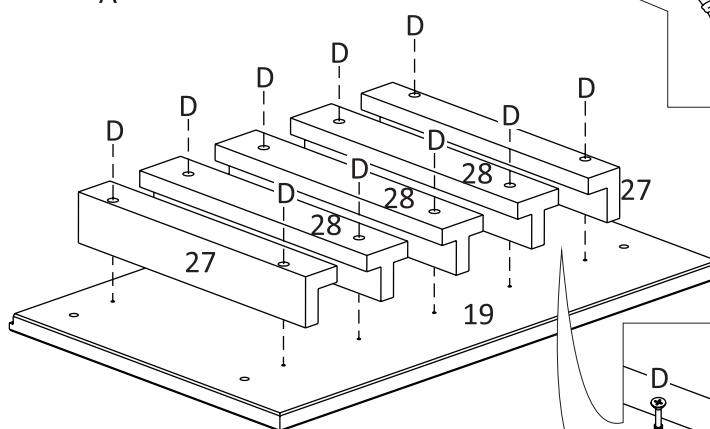


11

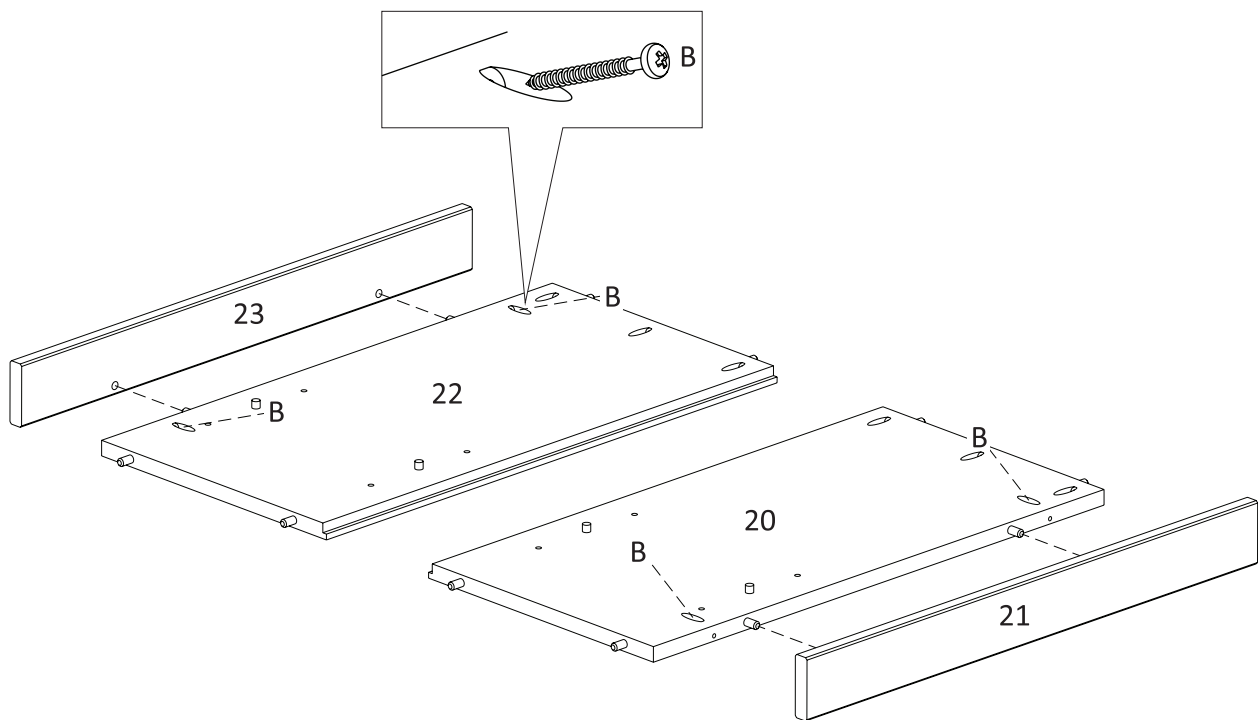 

Bx4  Ø3.5x30/1.2



 
12

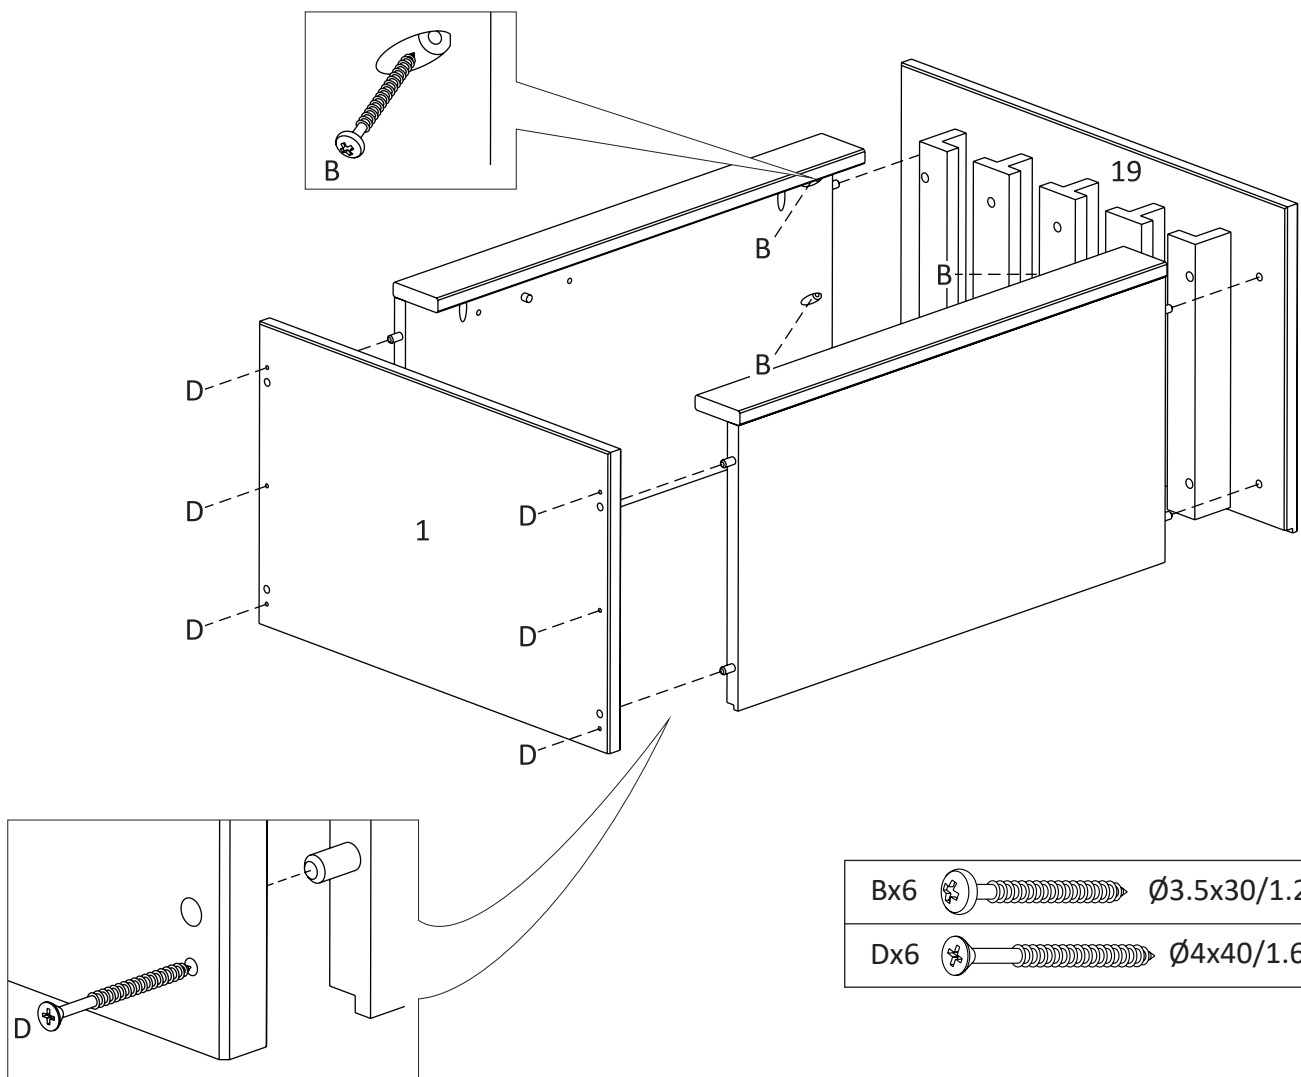

Bx6  Ø3.5x30/1.2



Dx6  Ø4x40/1.6

   13

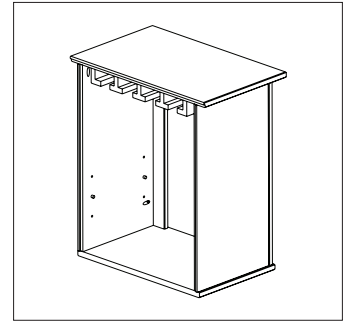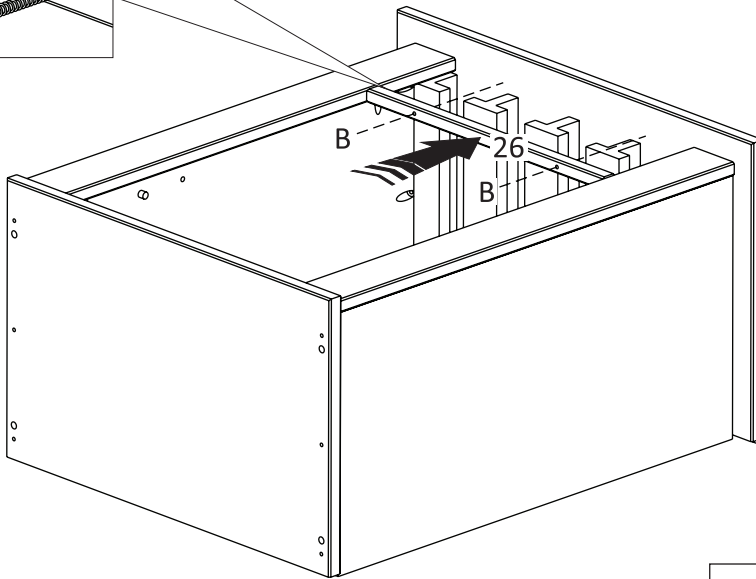
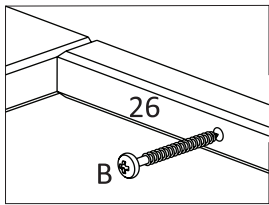


Bx2  Ø3.5x30/1.2

 
 
14

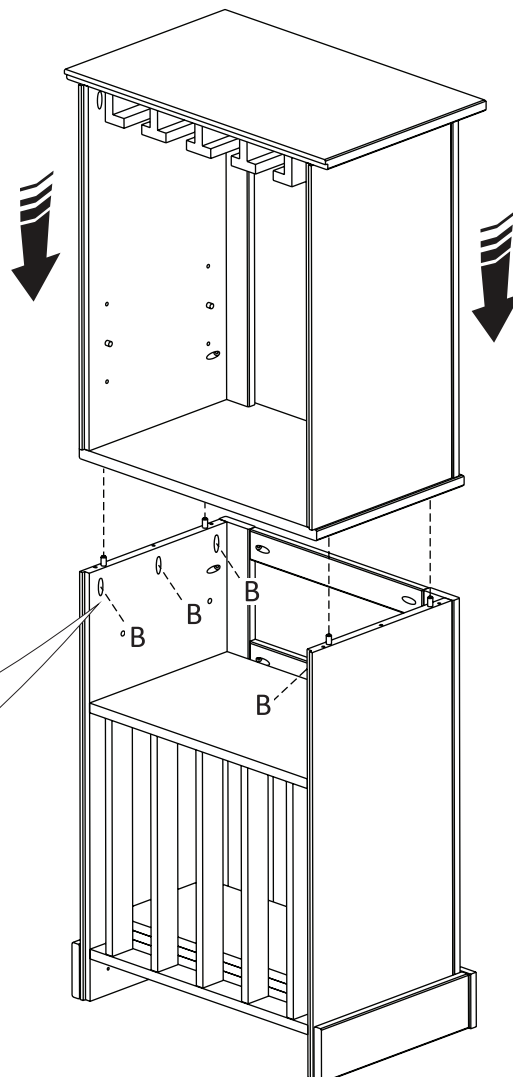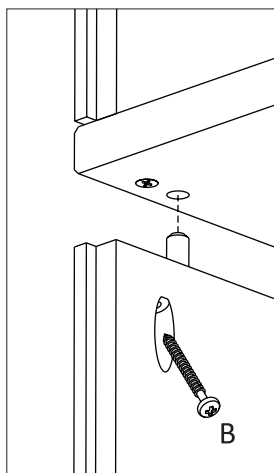


Bx6  Ø3.5x30/1.2

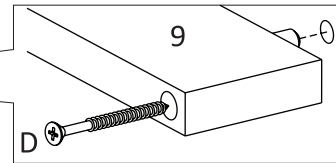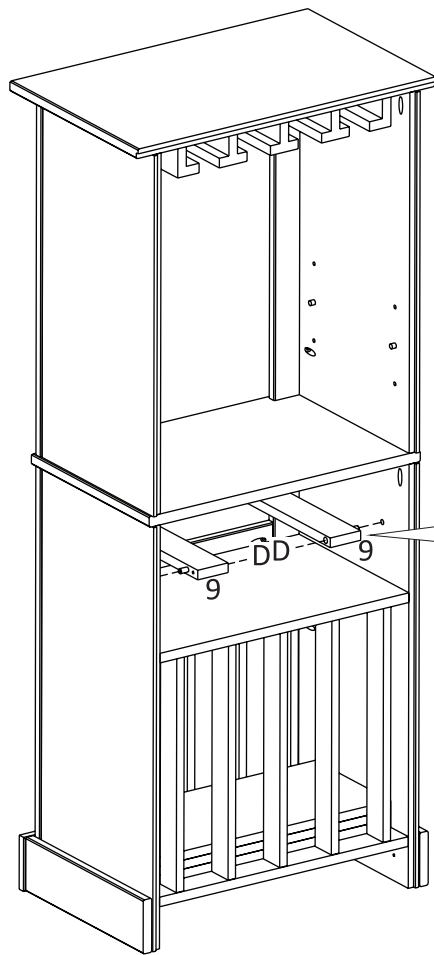  


Dx4  Ø4x40/1.6

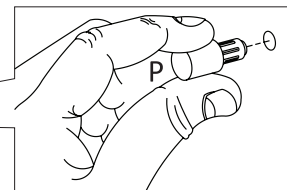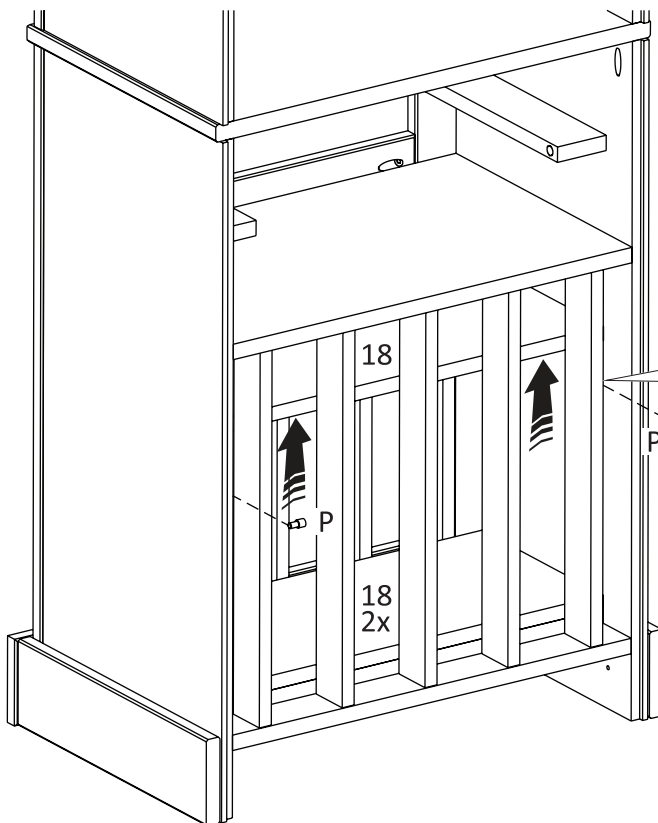  

Px4 


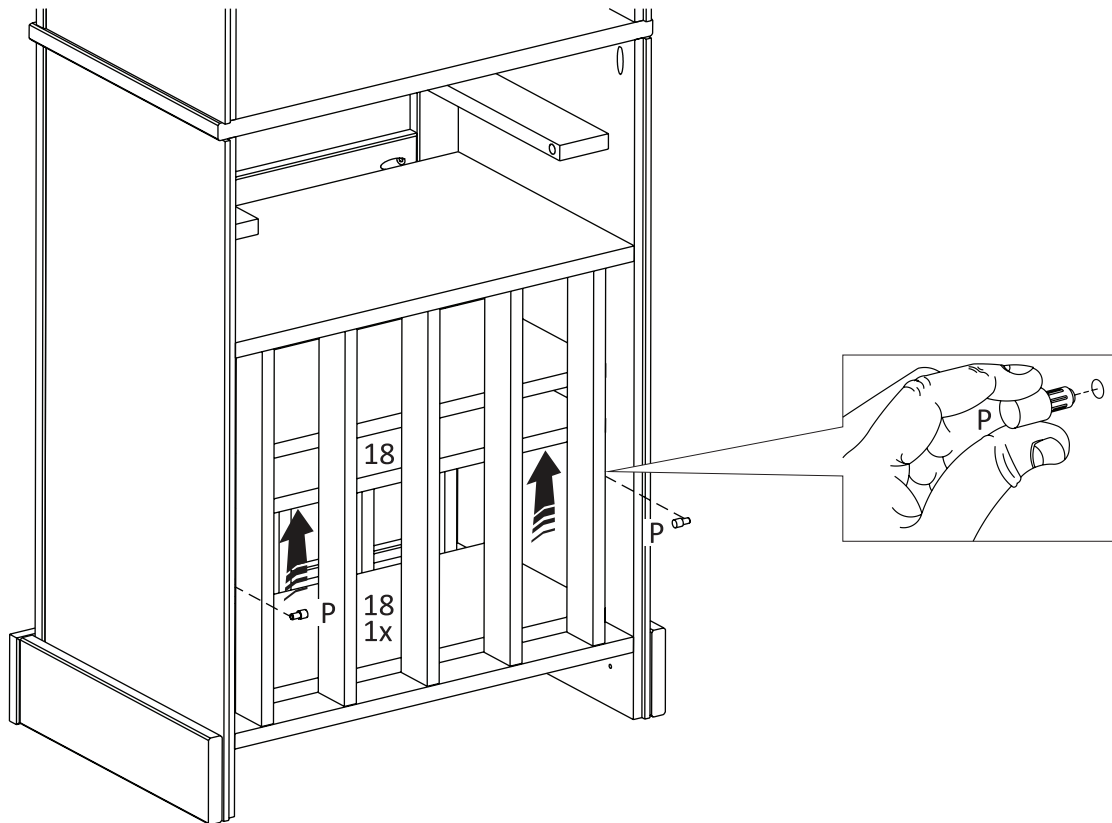 


Px4

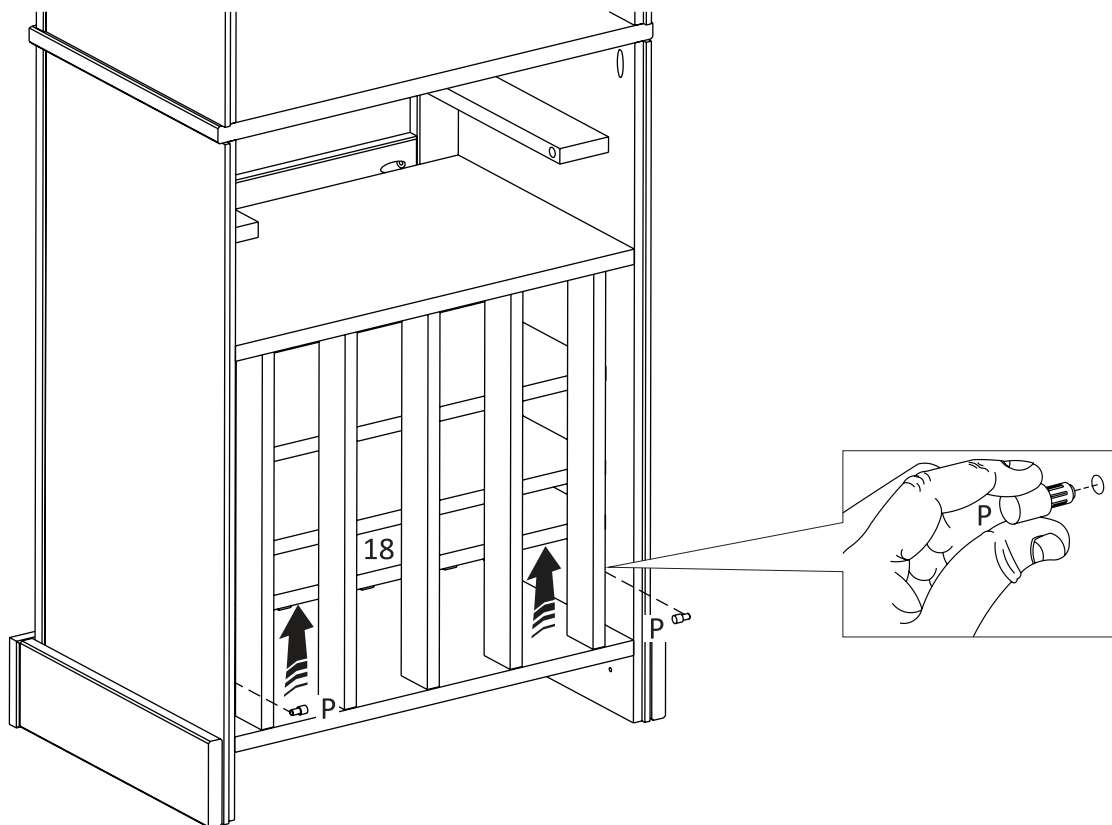 


Px4





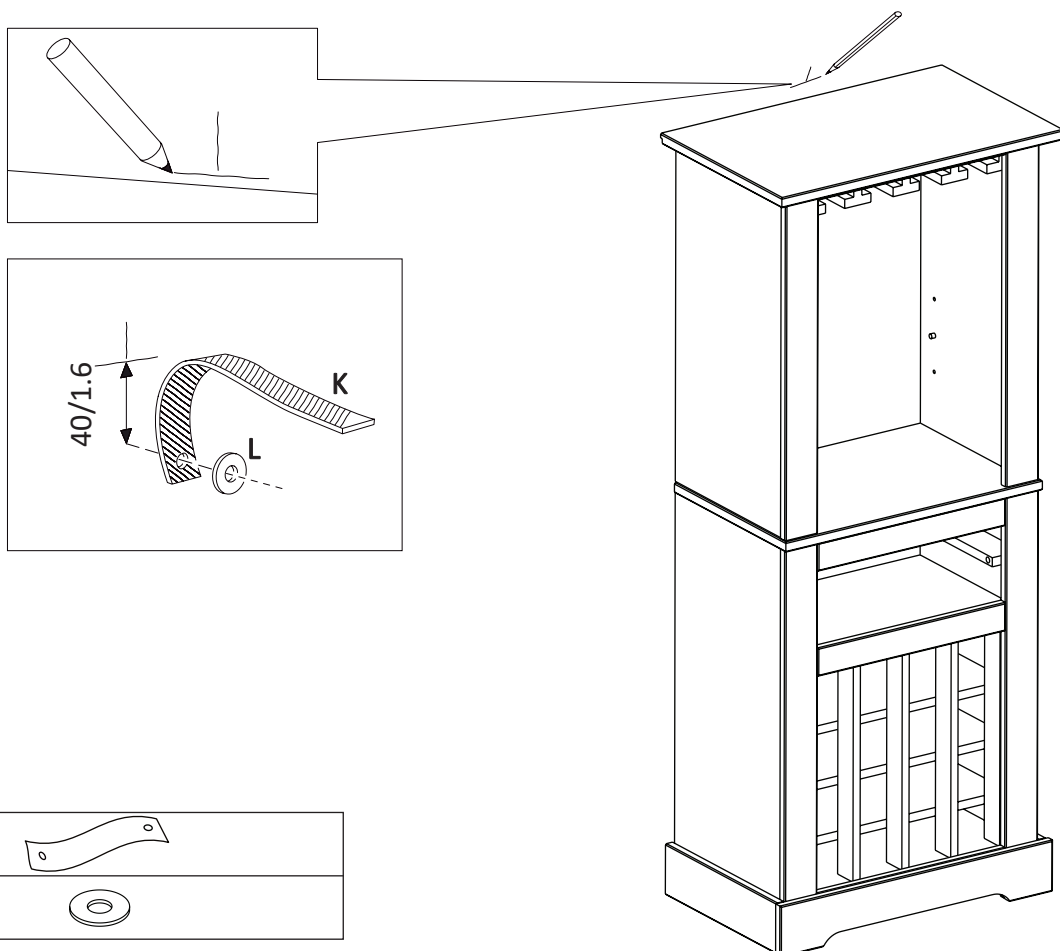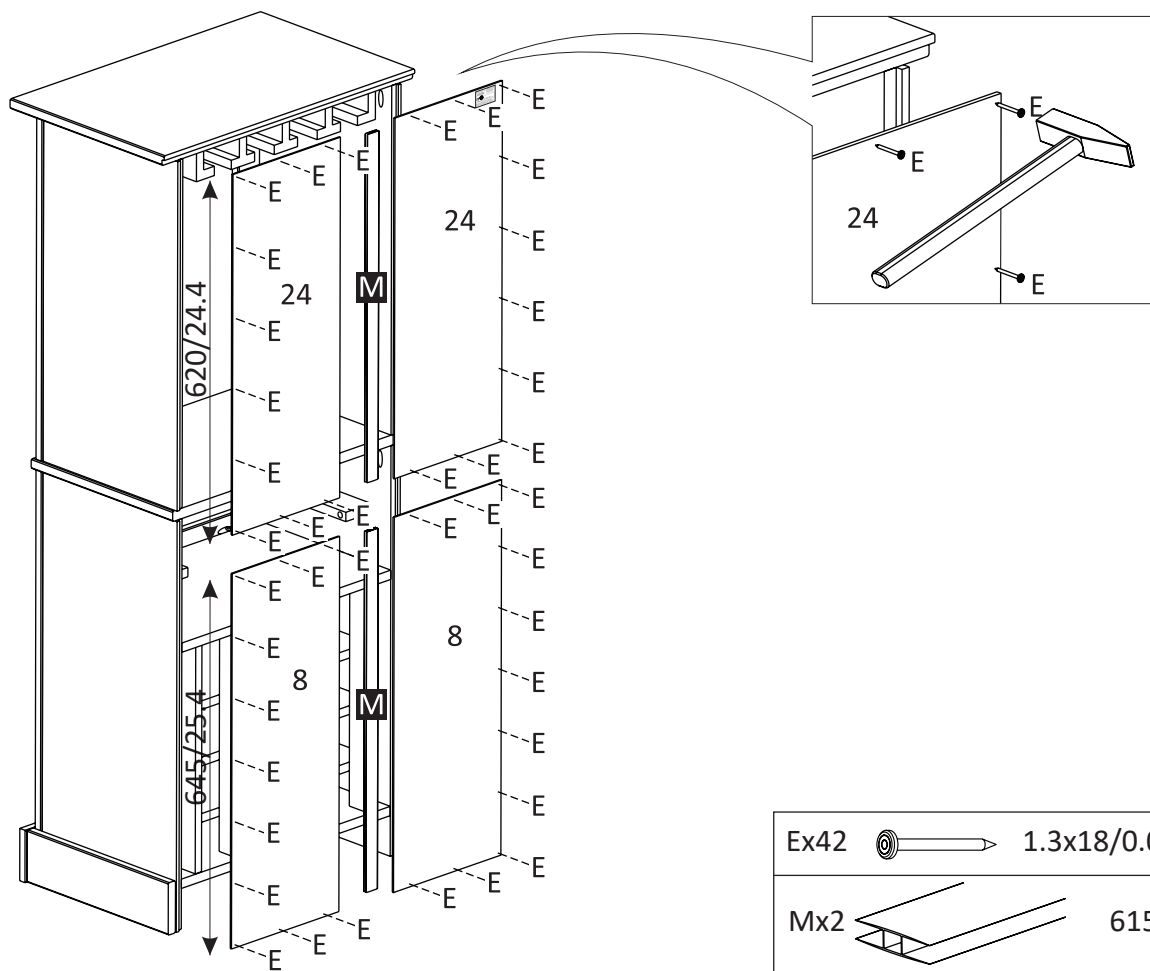  




b:

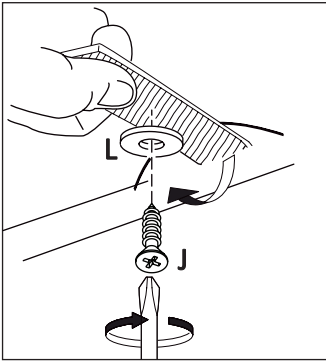 


a:

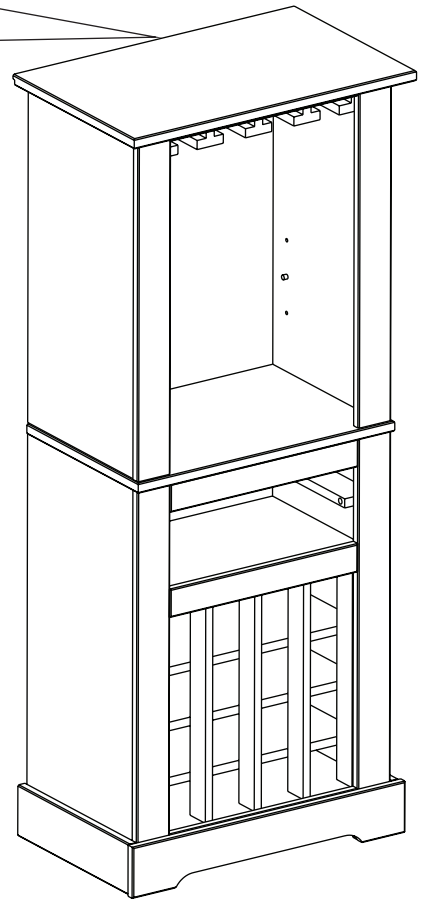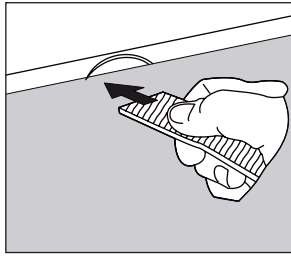  

Jx1		Ø3.5x14/0.6
Lx1		

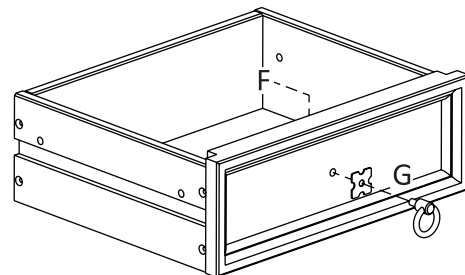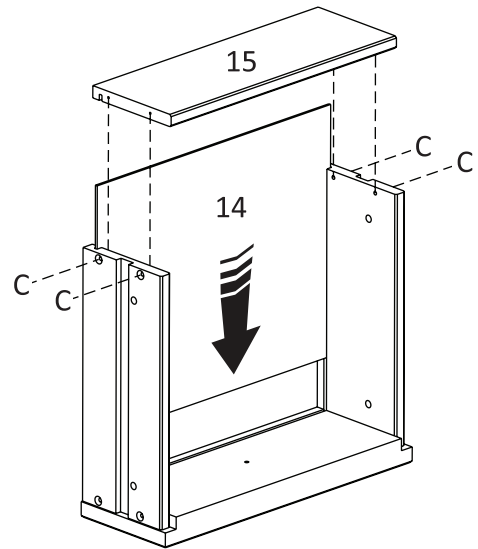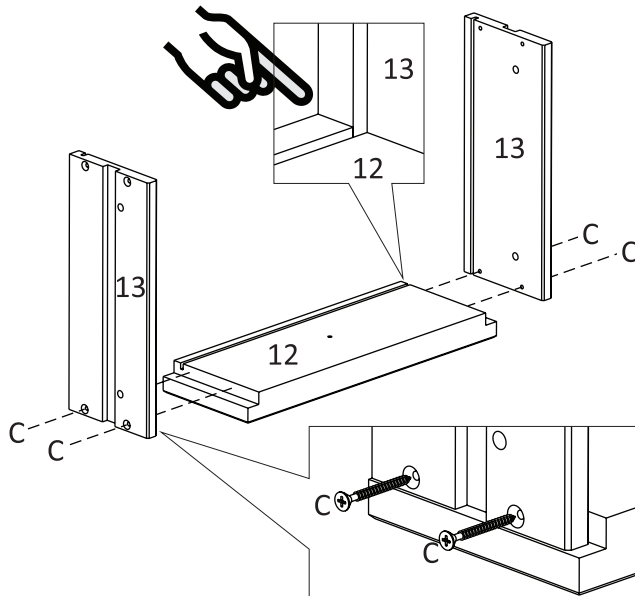   

 Cx8		Ø3x30/1.2
Fx1		Ø3/16x5/8
Gx1		

