

Audio Mixer Stand Assembly Instruction



Safety Instructions

1. Children should not operate this product unless sufficient supervision is provided.
2. Keep away the parts and hardware out of reach of children for safety concerns.

Package Contents




Specifications

Overall Dimensions (L x W x H)	22 15/16" x 20 15/16" x 55" (58.2 x 53.2 x 139.5 cm)
Adjustable Height	from 48 7/16" to 55" (from 123 to 139.5 cm)

Assembly Instructions

Notes:

This instruction can be commonly used for assembling stands of the same series. However, some series come without pole F and pole G. You can skip the corresponding steps during assembly.

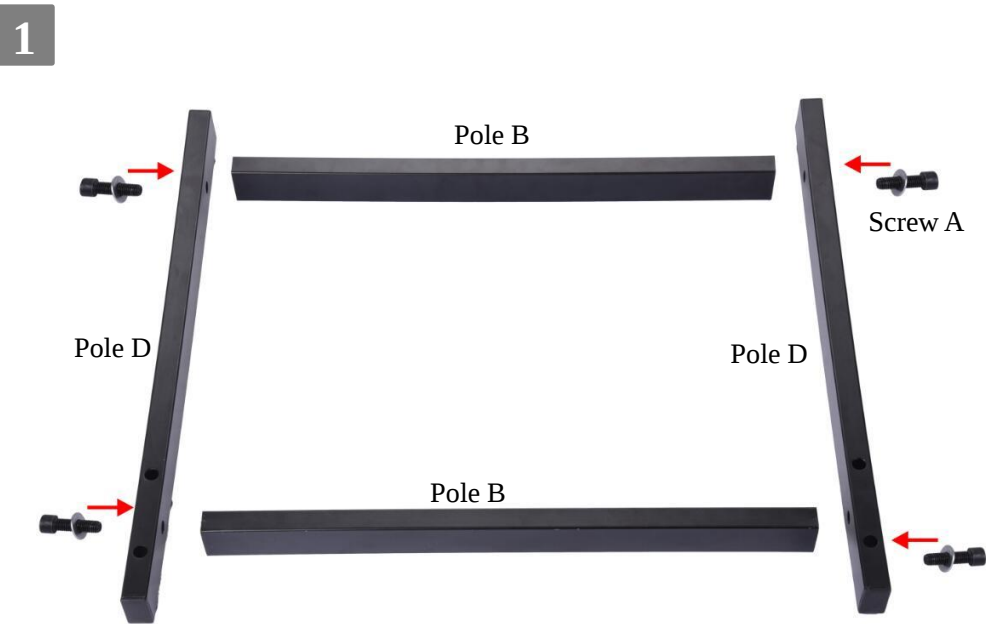


Connect two pole B and two pole D together with four screw A and washers to form the bottom frame as shown above.

2




Install the caster A and caster B onto the bottom frame as shown above.

3

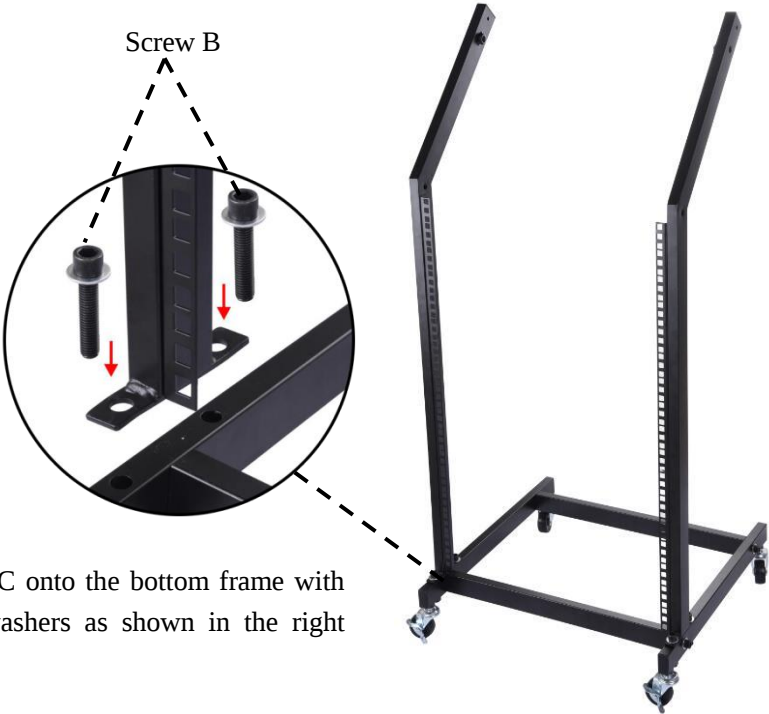


Install the pole C onto the bottom frame with screw B and washers as shown in the right picture.

4

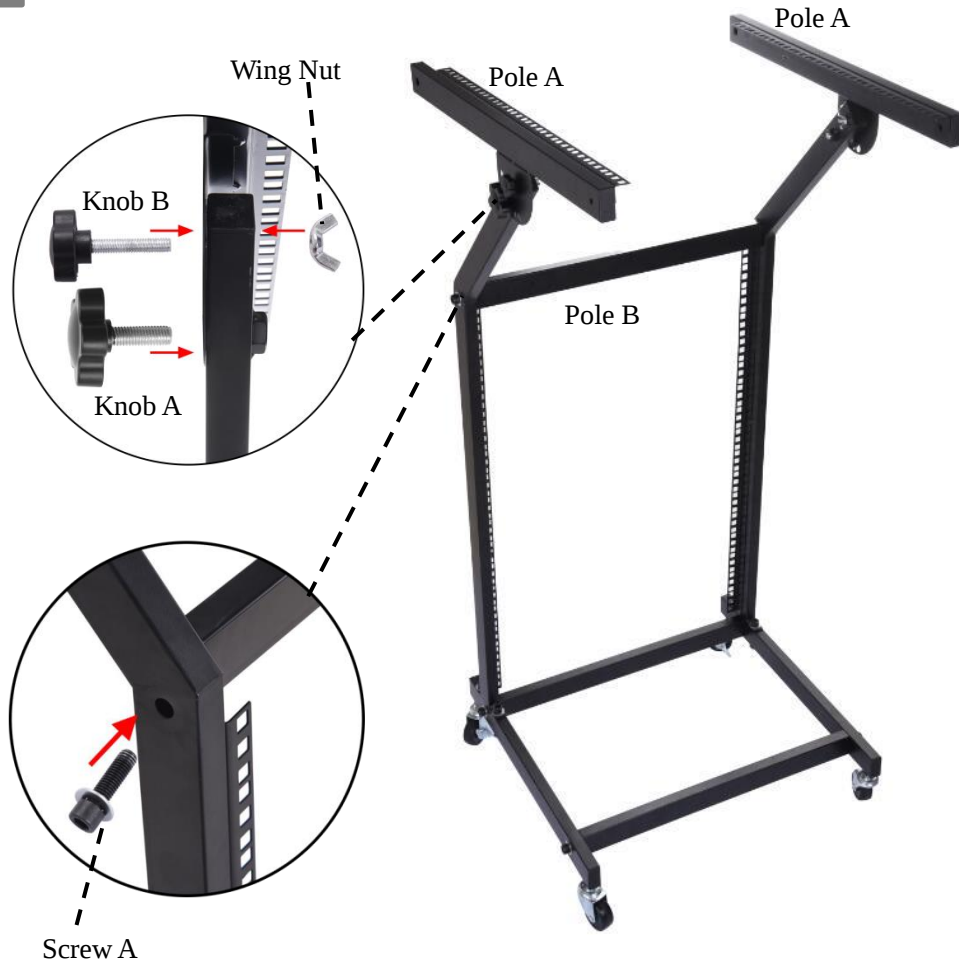


1. Install another pole B between two pole C with screw A and washers as shown above.
2. Install the two pole A on both sides of the frame respectively with knob A, knob B and wing nuts as shown above.

5

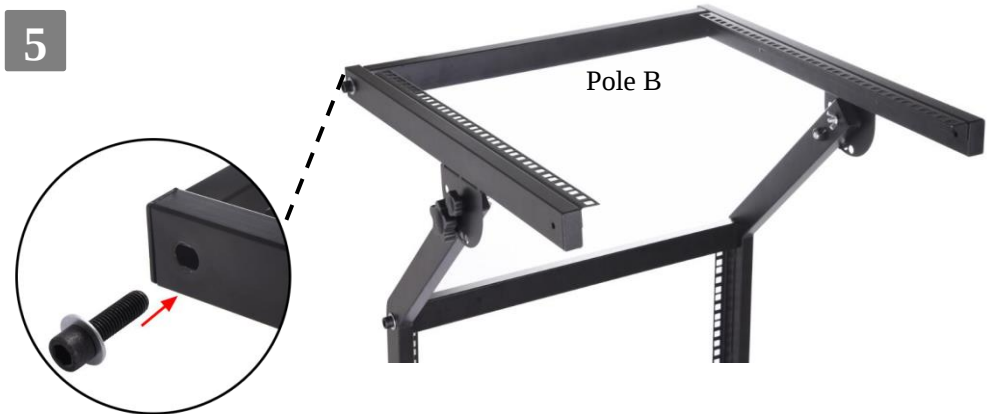


Install another pole B between two pole A with screw A and washers as shown above.

6

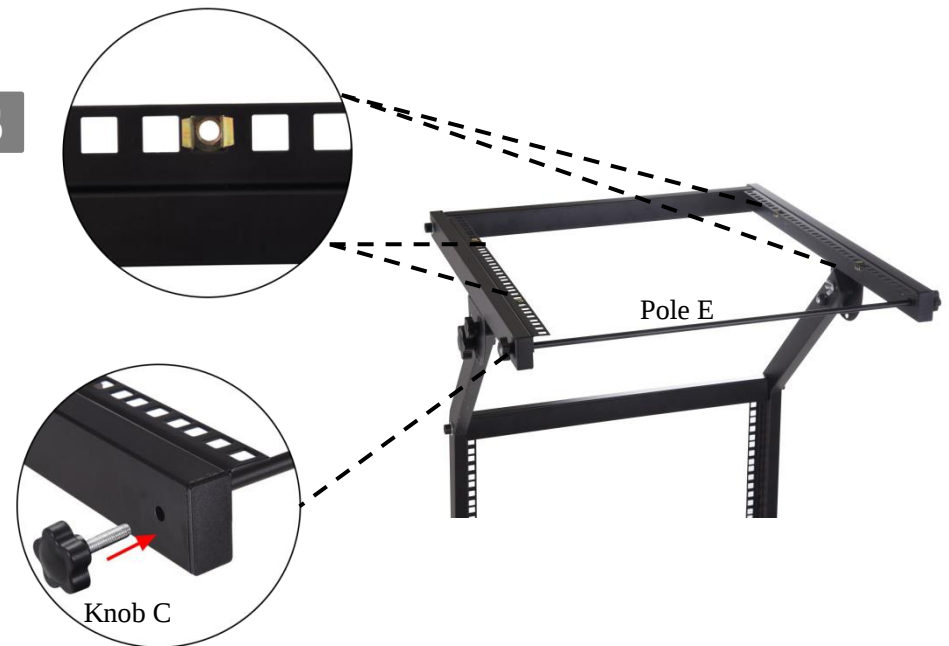


1. Install the pole E between the two pole A with knob C as shown above.
2. Install the hardware onto the grid of the pole A for the later installation of pole G.

7

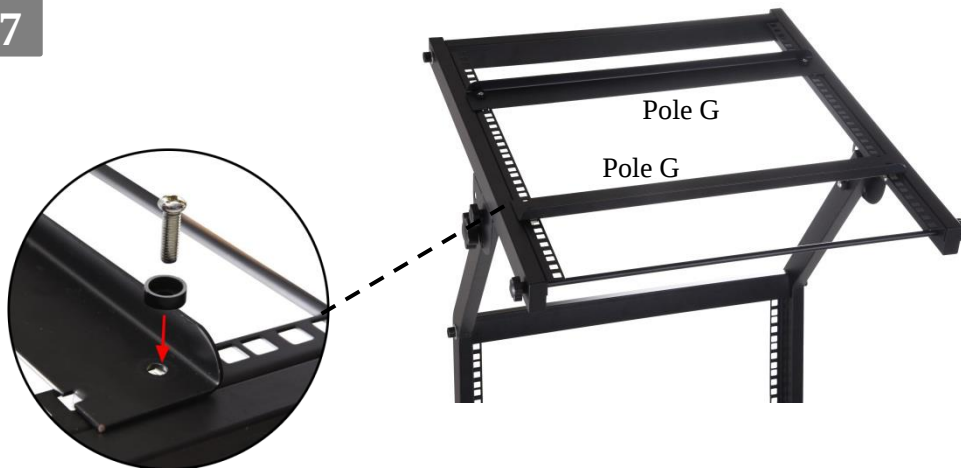

Install the two pole G onto the pole A with screws and plastic washers that are in the hardware bag.

8

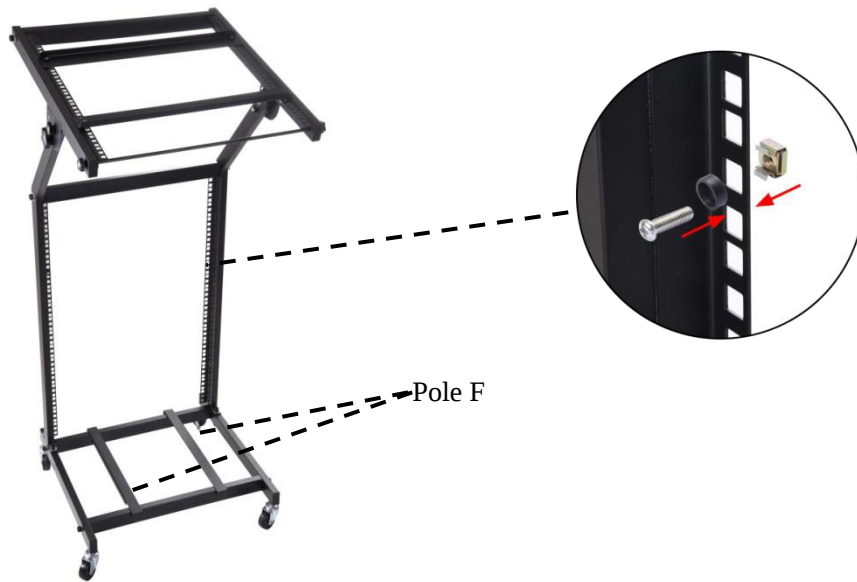

1. Place the two pole F on the bottom frame as shown above.
2. Install the hardware onto two pole C to secure your amplifier.