


TV Bracket and Mounting Assembly

Used for: Park, Cabrini, City, Morning Side, River-side, Intrepid and Lincoln Collections.

Instructions:


- ◆ Bracket KIT includes screws that will accommodate: LCD, LED, and PLAS-MA TV's. If you have another TV, contact the TV supplier for correct parts.
- ◆ Note: This bracket will only accommodate flat and vertical walls, it will not work for inclined surfaces.
- ◆ The kit is intended to be used on panels that are mounted to concrete, brick or solid wood walls.
- ◆ The kit is intended to be used on panels that are mounted to concrete, brick or solid wood walls.
- ◆ Manufacture is not responsible for problems caused by incorrect installation or application of bracket.
- ◆ Maximum TV Weight: 177 Lbs.

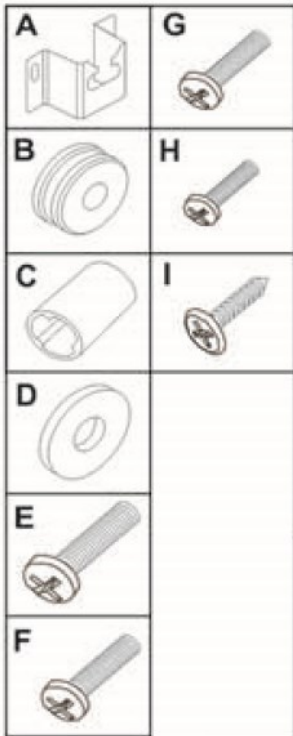

COMPONENTS		
ITEM	QTT	DESCRIPTION
A	2	WALL MOUNT
B	2	TV STAND
C	2	SPACER
D	4	WASHER P
E	4	SCREW M8X25
F	4	SCREW M6X25
G	4	SCREW M5X25
H	4	SCREW M4X20
I	4	SCREW WOOD

1. Apply hardware parts on the TV


Use the specified screws as indicated with the TV manufacturer.

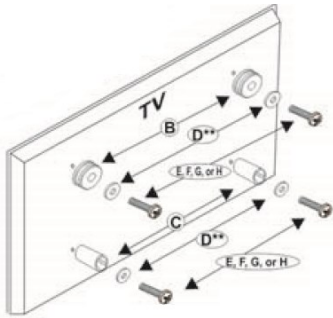

Use part "D" for instances when part "G" and "H" are needed.

3. Mount Brackets on Panel

Fix part "A" and "I" as indicated in image.

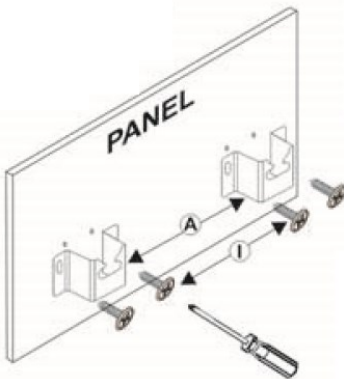


2. Drill Panel

Check pattern holes on your TV.

Use the drilling template.

Mark the Panel for fixing support.

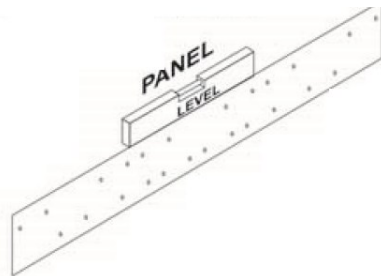

4. Attach the TV

*If this is a floating vs. freestanding panel, make sure the panel is correctly fixed onto the wall.

Simply slide part "B" from the back of the TV into part "A" that is on the panel.

