 




INSTALLATION

Product Manual

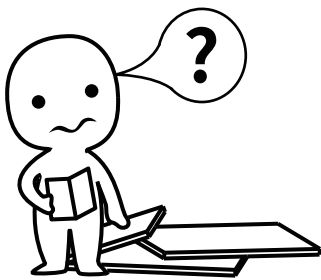


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

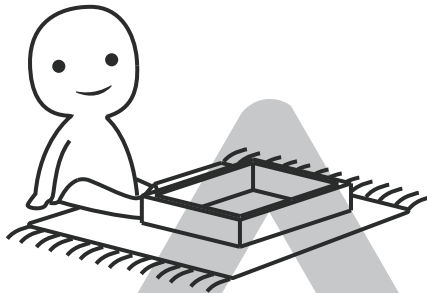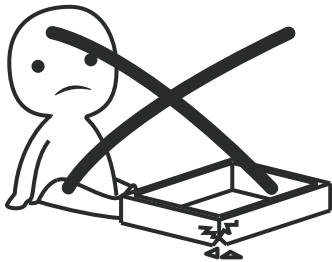



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

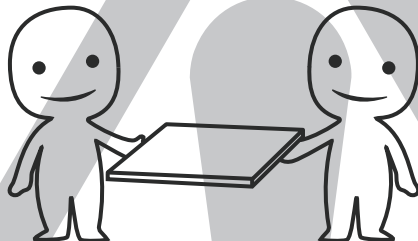

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

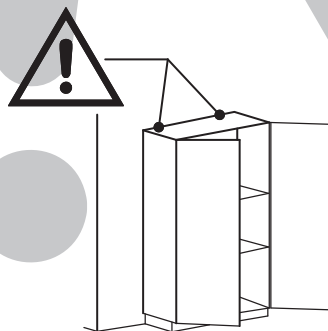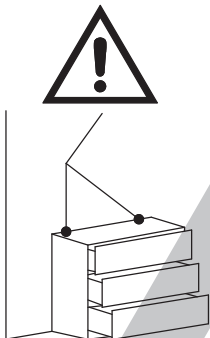

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

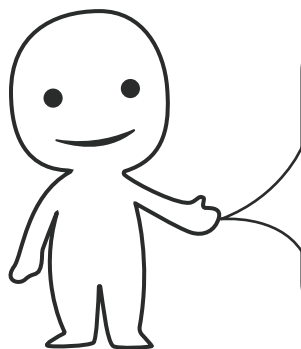


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 40



M5 x 42 mm

B x 40



Ø 15 x 10 mm

C x 8



M5 x 40 mm

D x 4



Ø 6 x 40 mm

E x 120



M3.5 x 14 mm

F x 6



111-96

G x 12



 
M4 x 20 mm

H x 4




DW

I x 4




J x 4

 


Ø 4 x 63 mm

 K x 8



M3 x 14 mm

 L x 32




M3.5 x 14 mm

M x 14




M6 x 30 mm

 N x 4




Ø 5 mm

 O x 10




L60 x K80 mm

 P x 2




Q x 15

 


Ø 1.5 x 15 mm

 R x 15




15 x 10 mm

 S x 2



T x 2

 


Ø 8x60





Ø 5x55

 x 1



#4

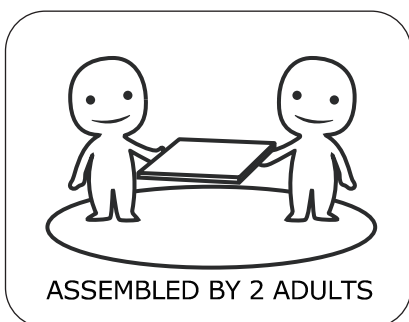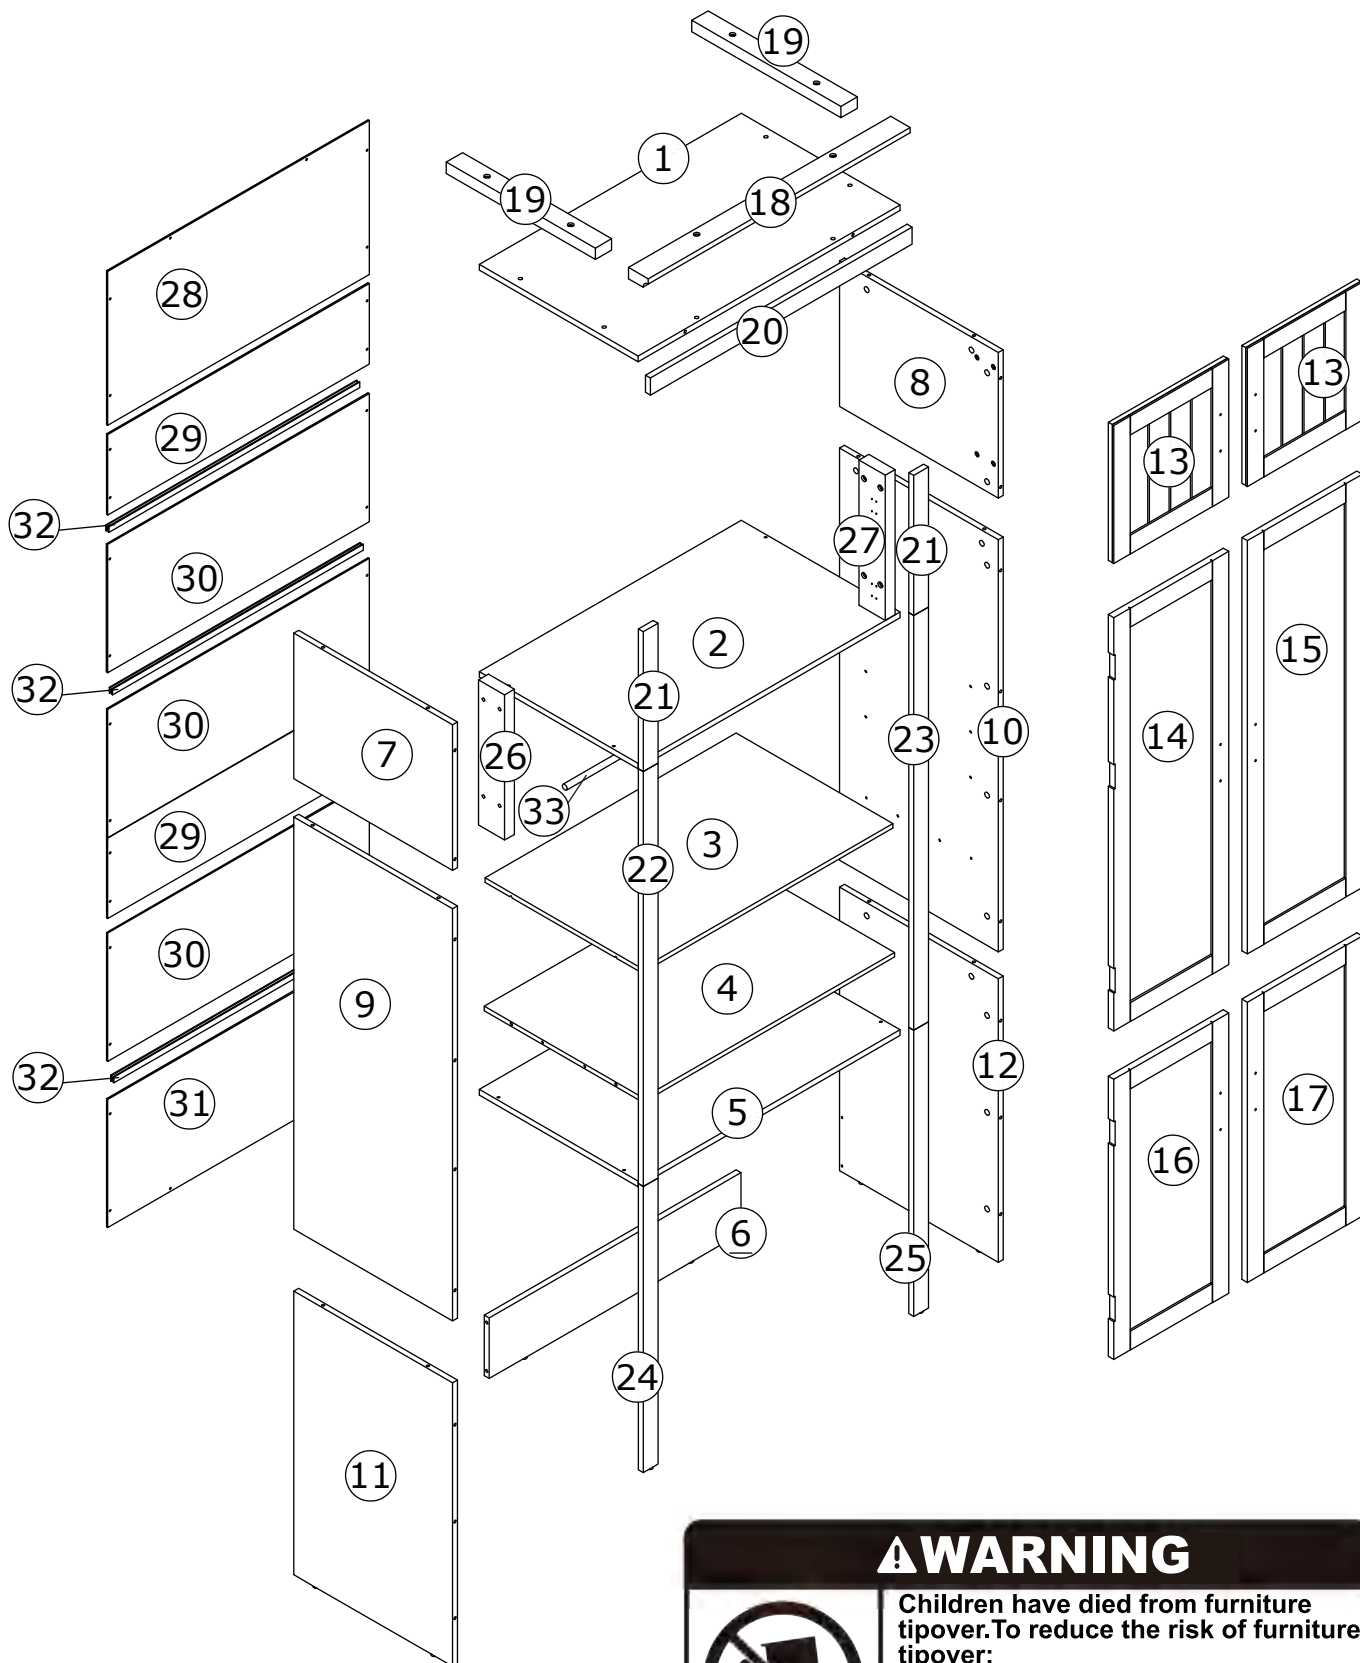  

⚠ WARNING

 
Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

1

A x 4








M5 x 42 mm



B x 4



  
 
 
 
Ø 15 x 10 mm

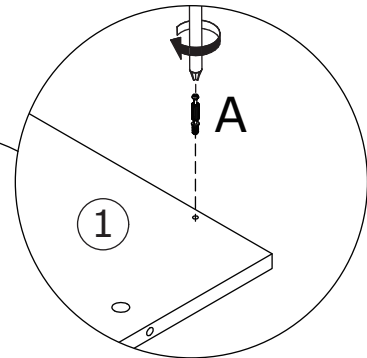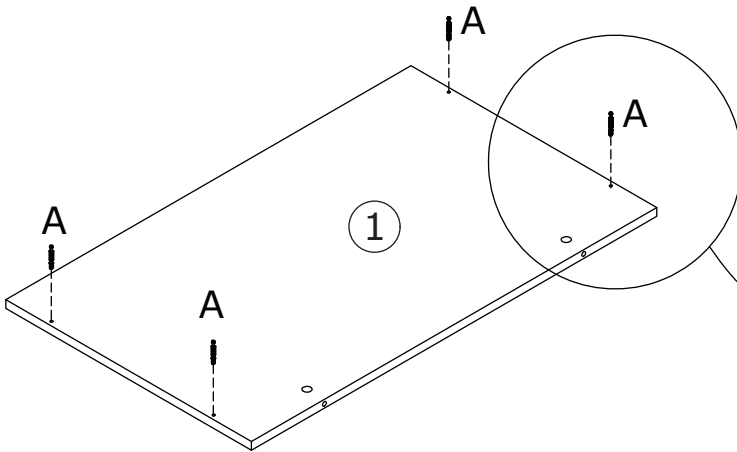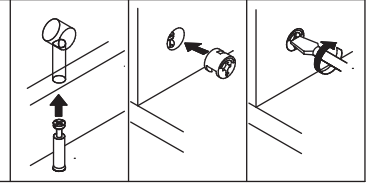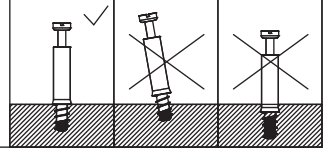

 
 
Screw self-tapping rod (A) onto plate 1. Attach Plates 7 and 8 to Plate 1, then insert the eccentric wheel (B) and turn it clockwise to tighten.

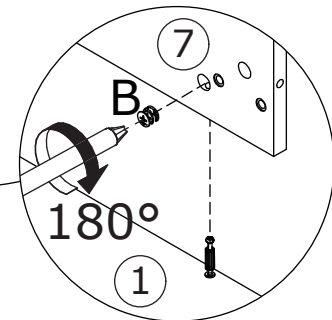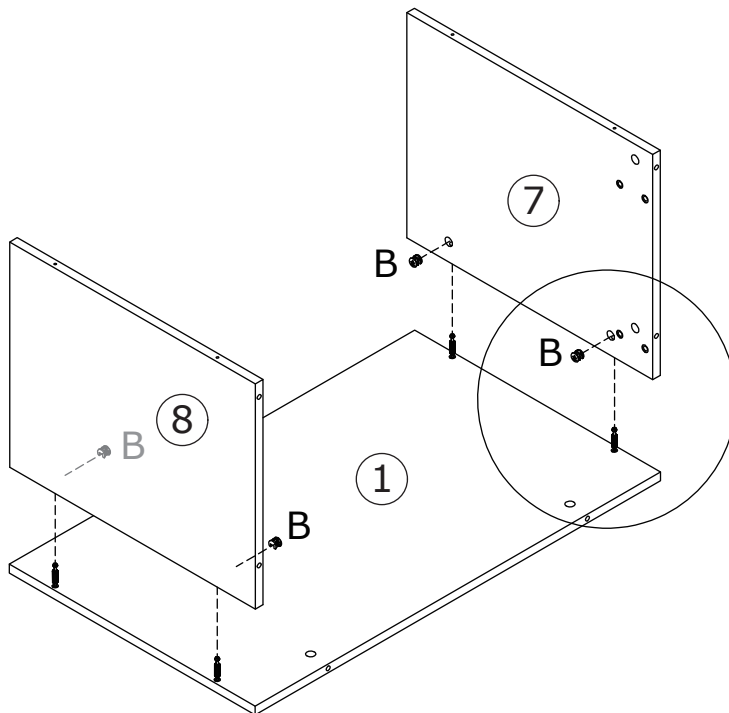




2

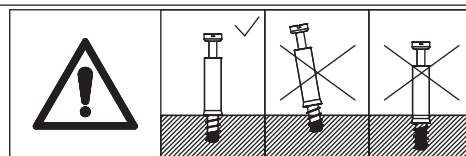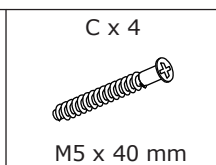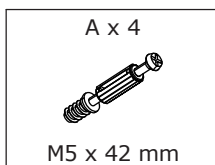    

  
Screw self-tapping rod (A) onto plate 2.
Secure plate 2 to plates 7 and 8 using screw (C).

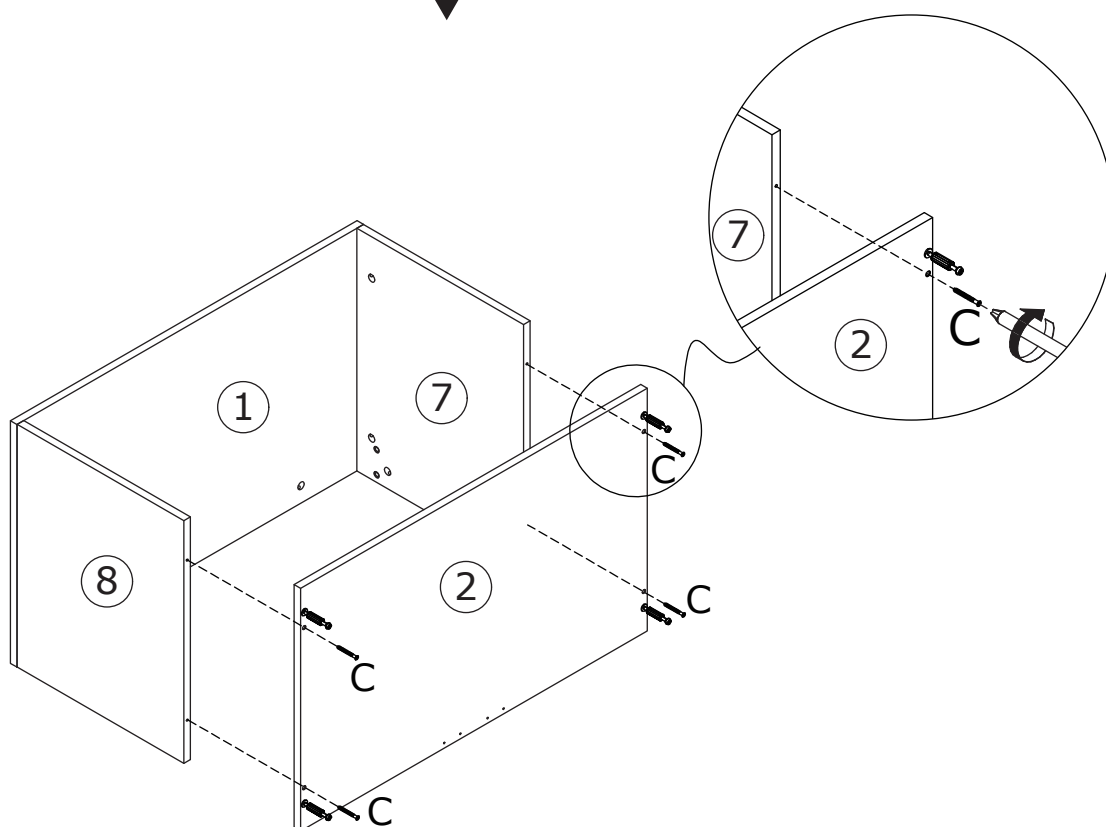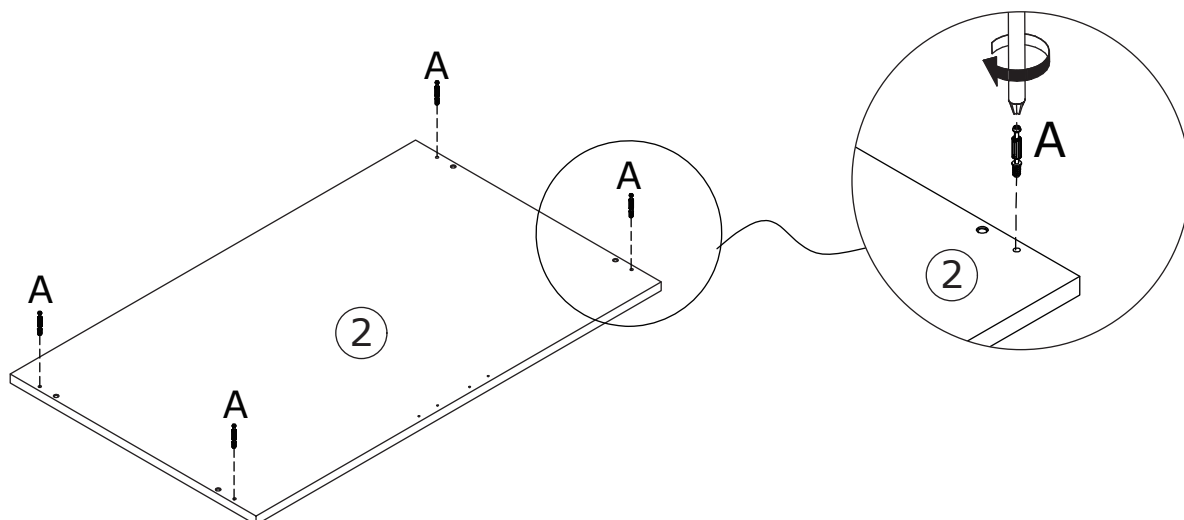


3

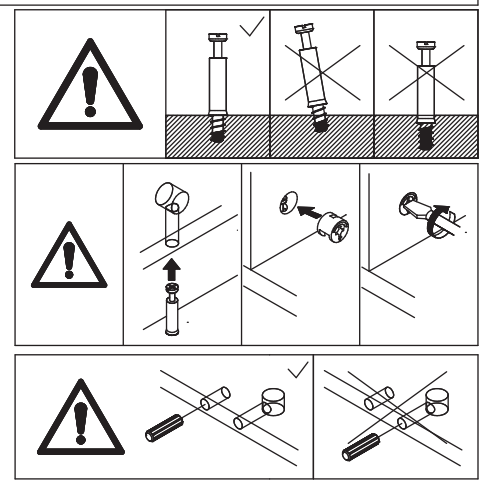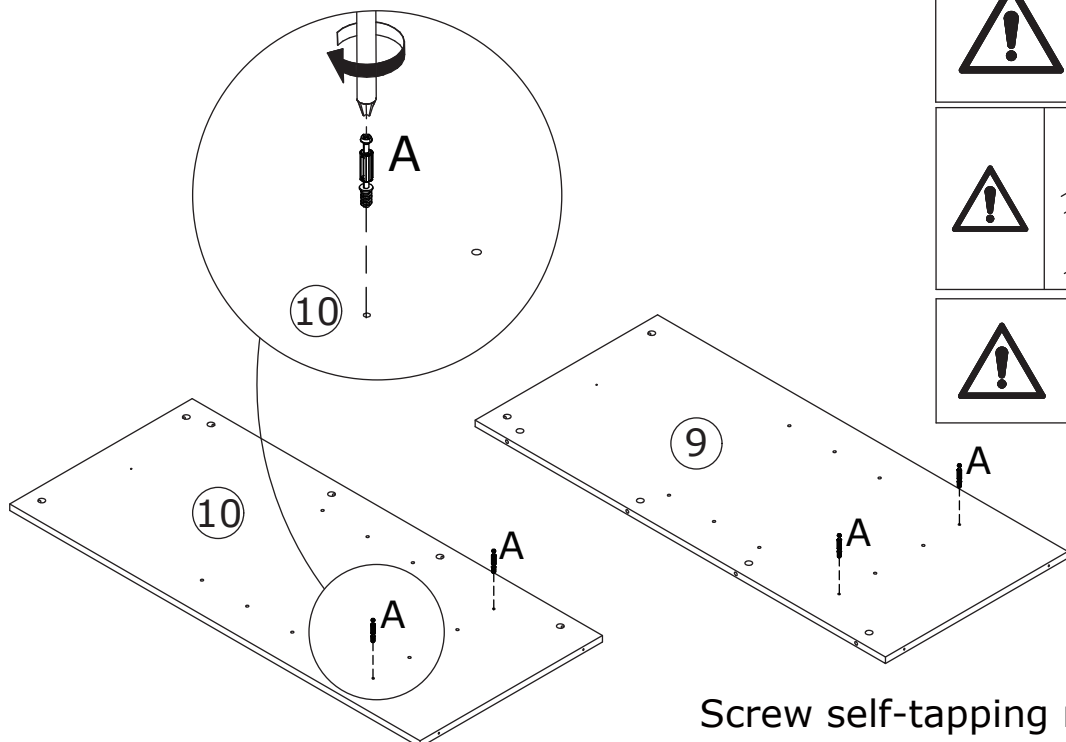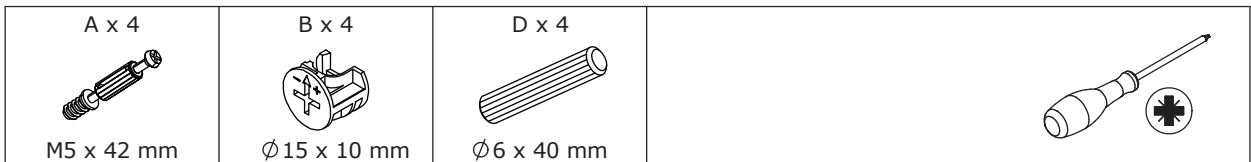   

 Screw self-tapping rod (A) onto plates 9 and 10.


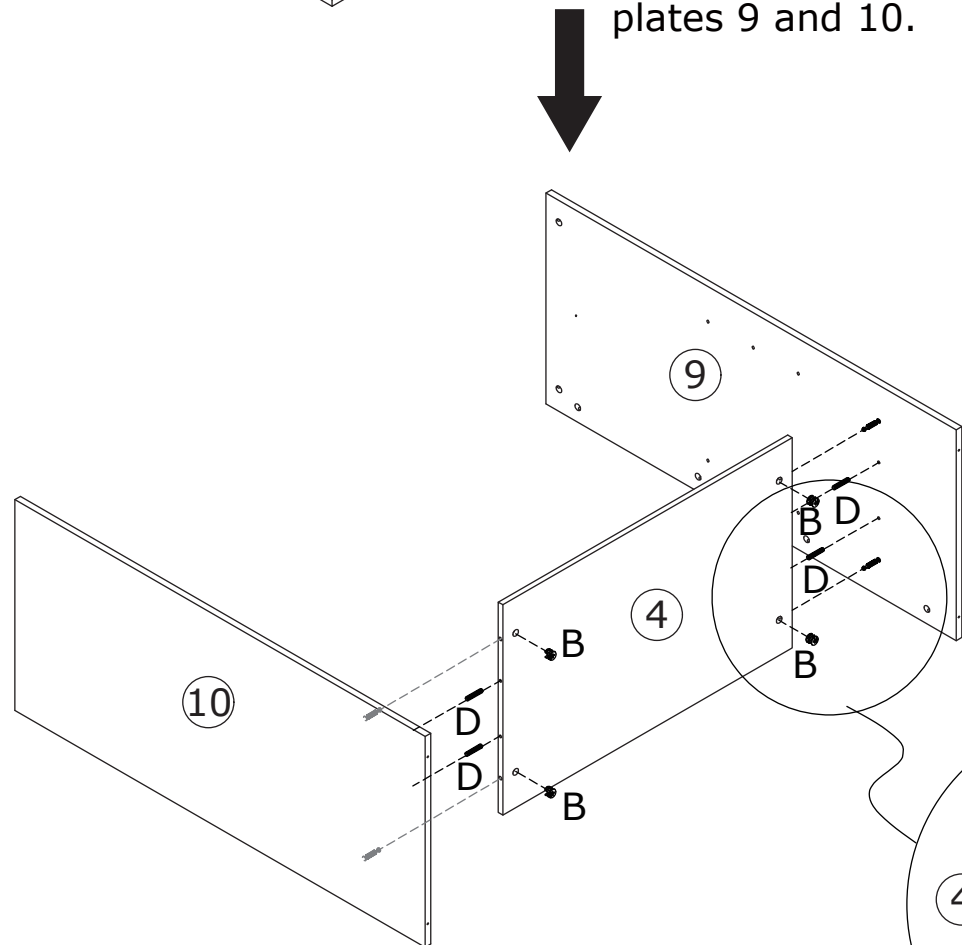


 Connect plates 9 and 10 to plate 4 using wooden dowel (D), and tighten by turning eccentric wheel (B) clockwise.

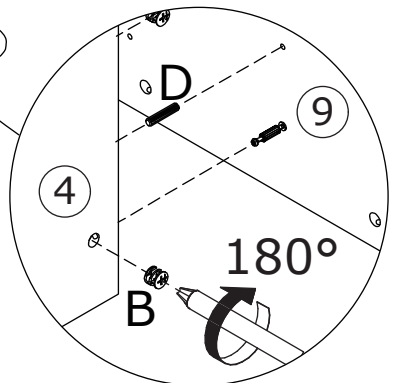


4





 
 
B x 4

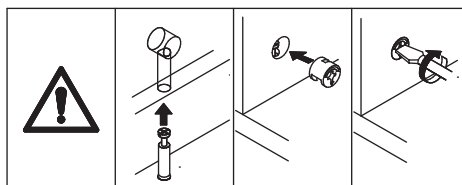 $\varnothing 15 \times 10 \text{ mm}$ 

 Connect plates 9 and 10 to plate 2, and tighten by turning eccentric wheel (B) clockwise.





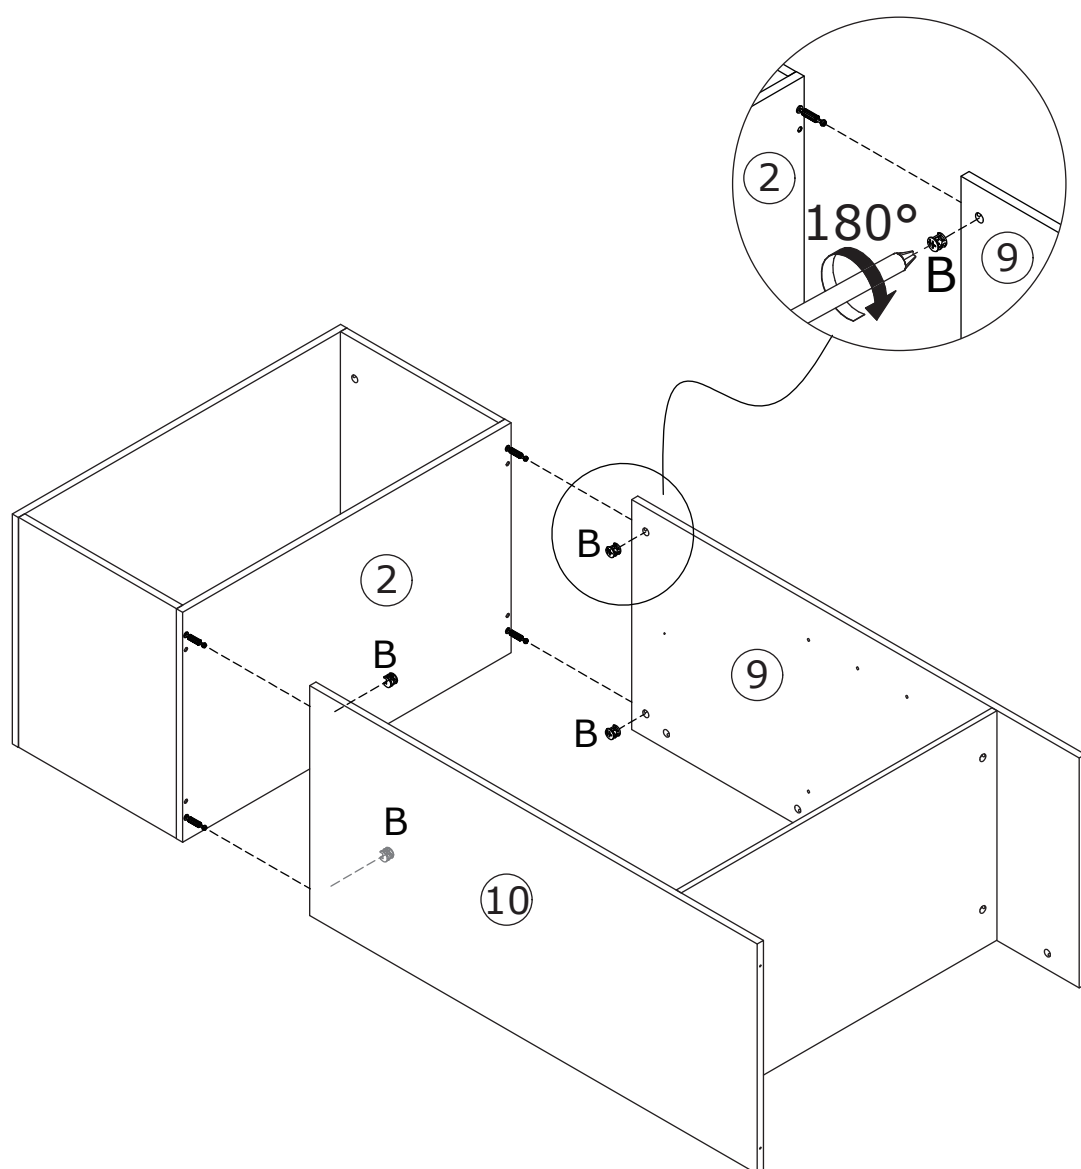


5

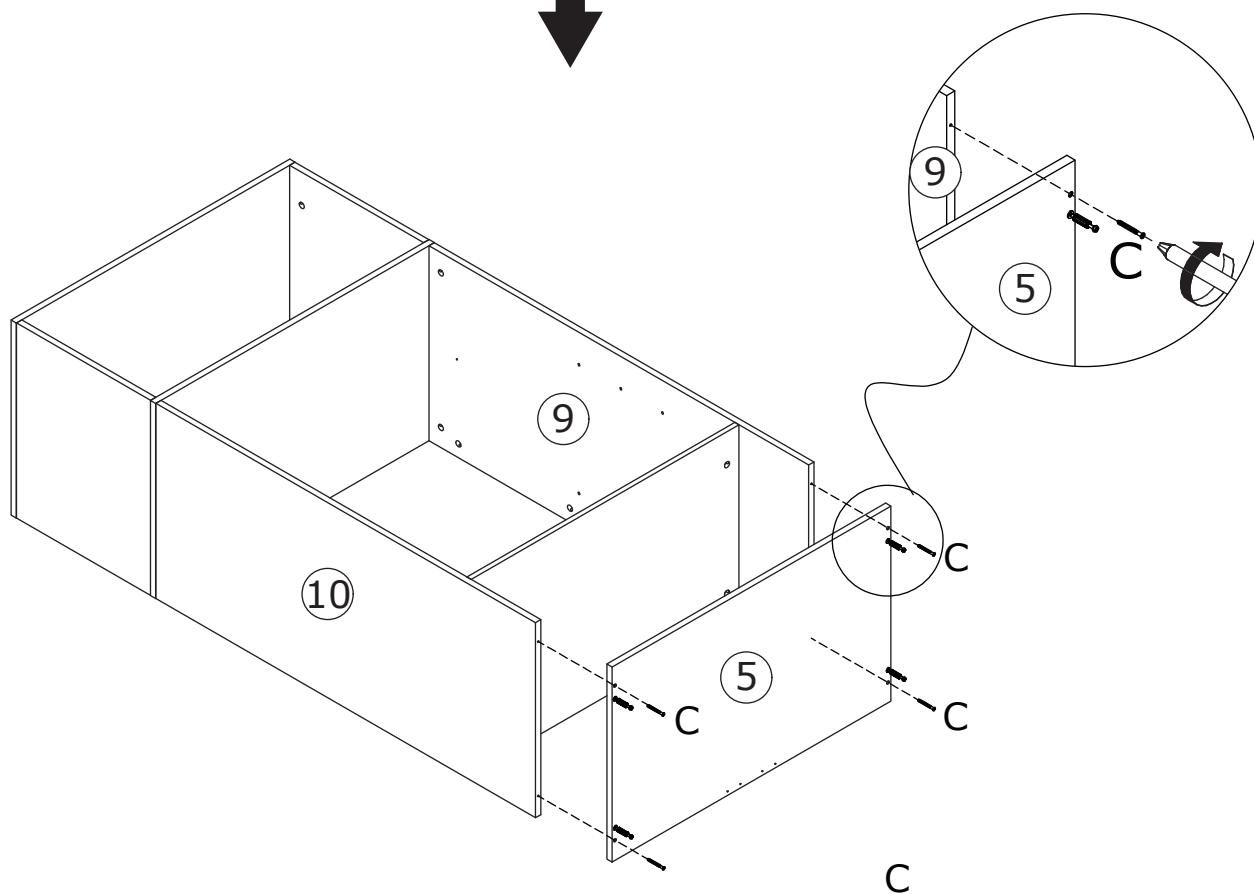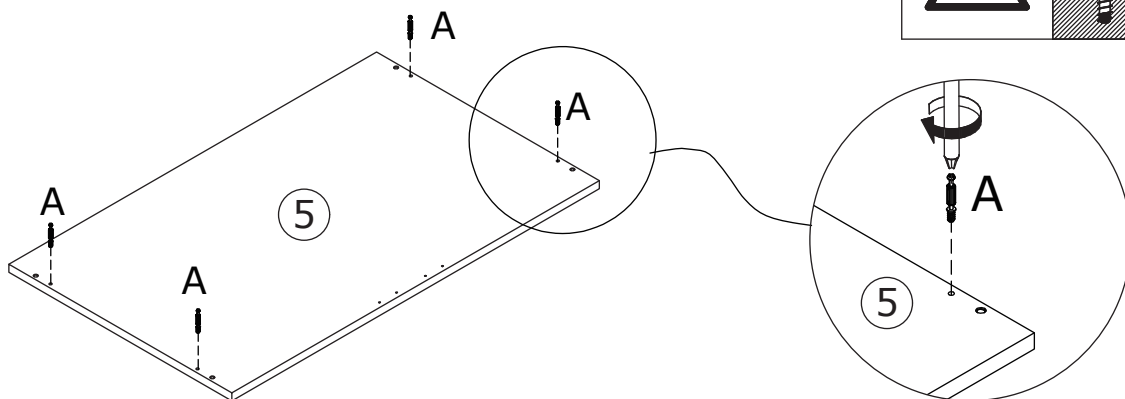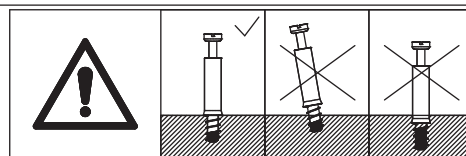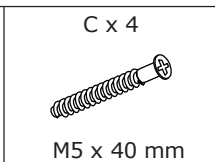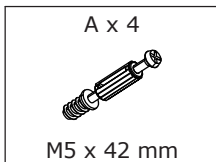      


Screw self-tapping rod (A) onto plate 5.
Secure plate 5 to plates 9 and 10 using screw (C).

   
 
 
6

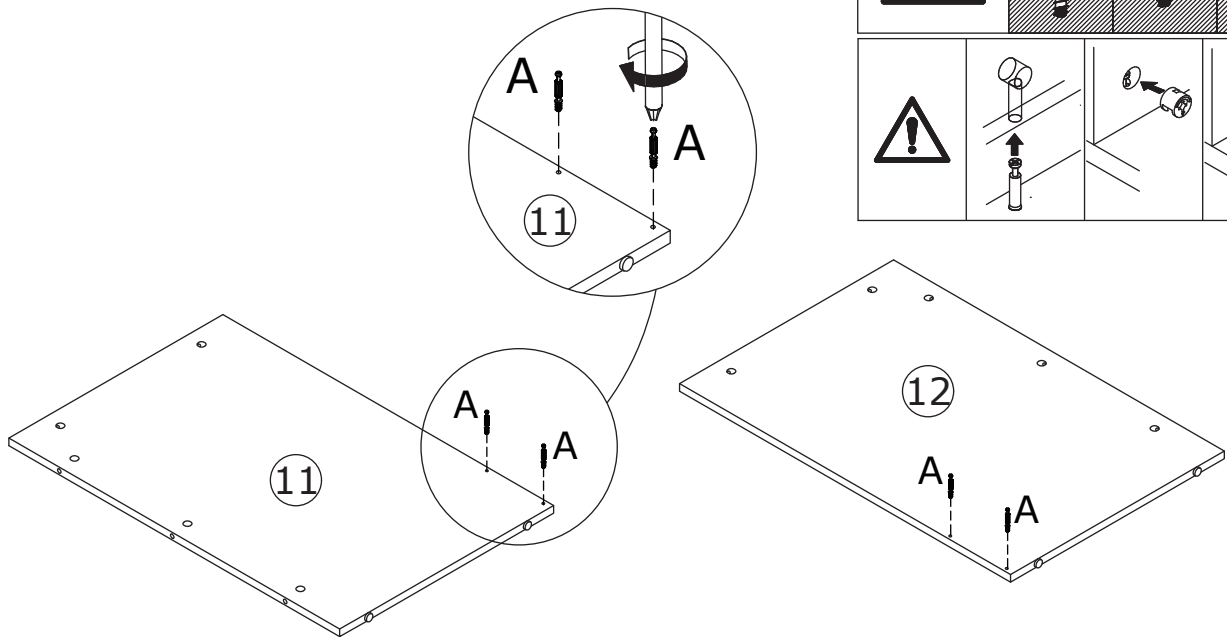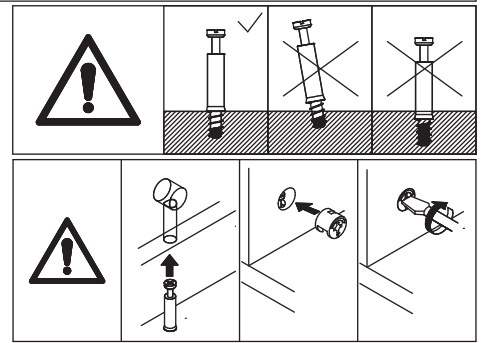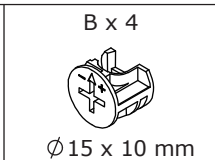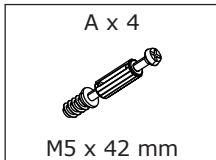

 
Screw self-tapping rod (A) onto plates 11 and 12.
Connect plates 11 and 12 to plate 6, and tighten by turning eccentric wheel (B) clockwise.

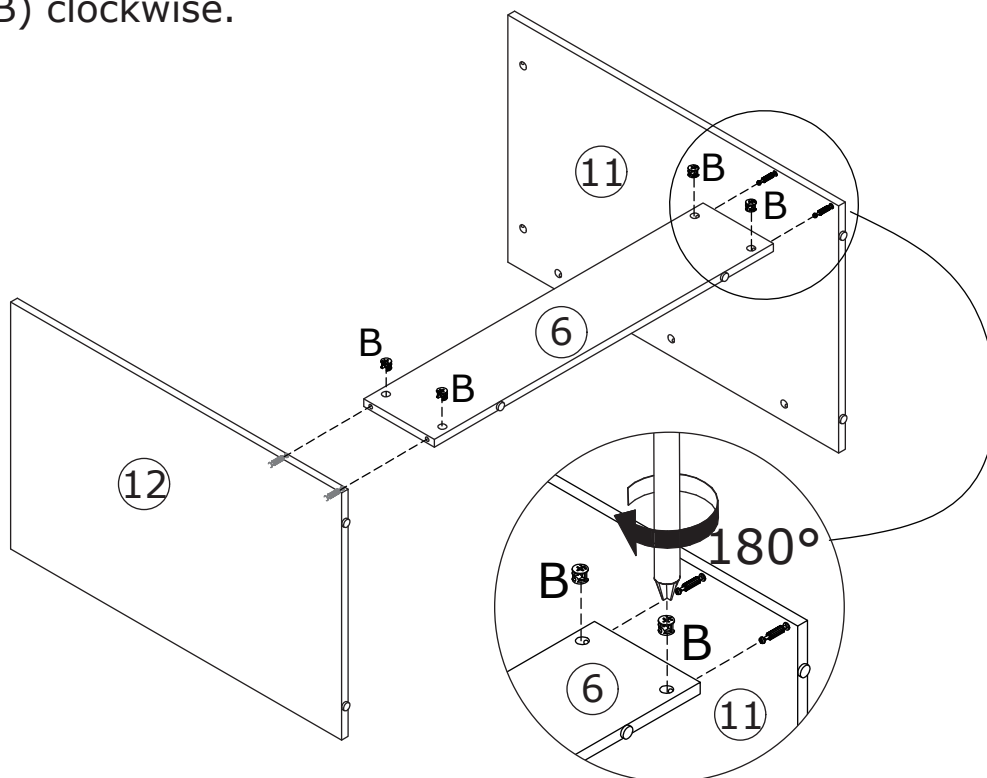

7

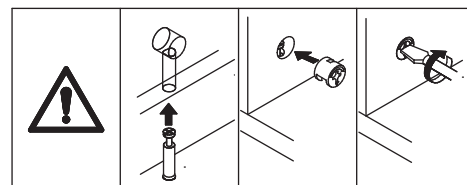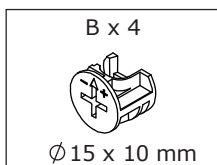   


 Connect plates 11 and 12 to plate 5, and tighten by turning eccentric wheel (B) clockwise.

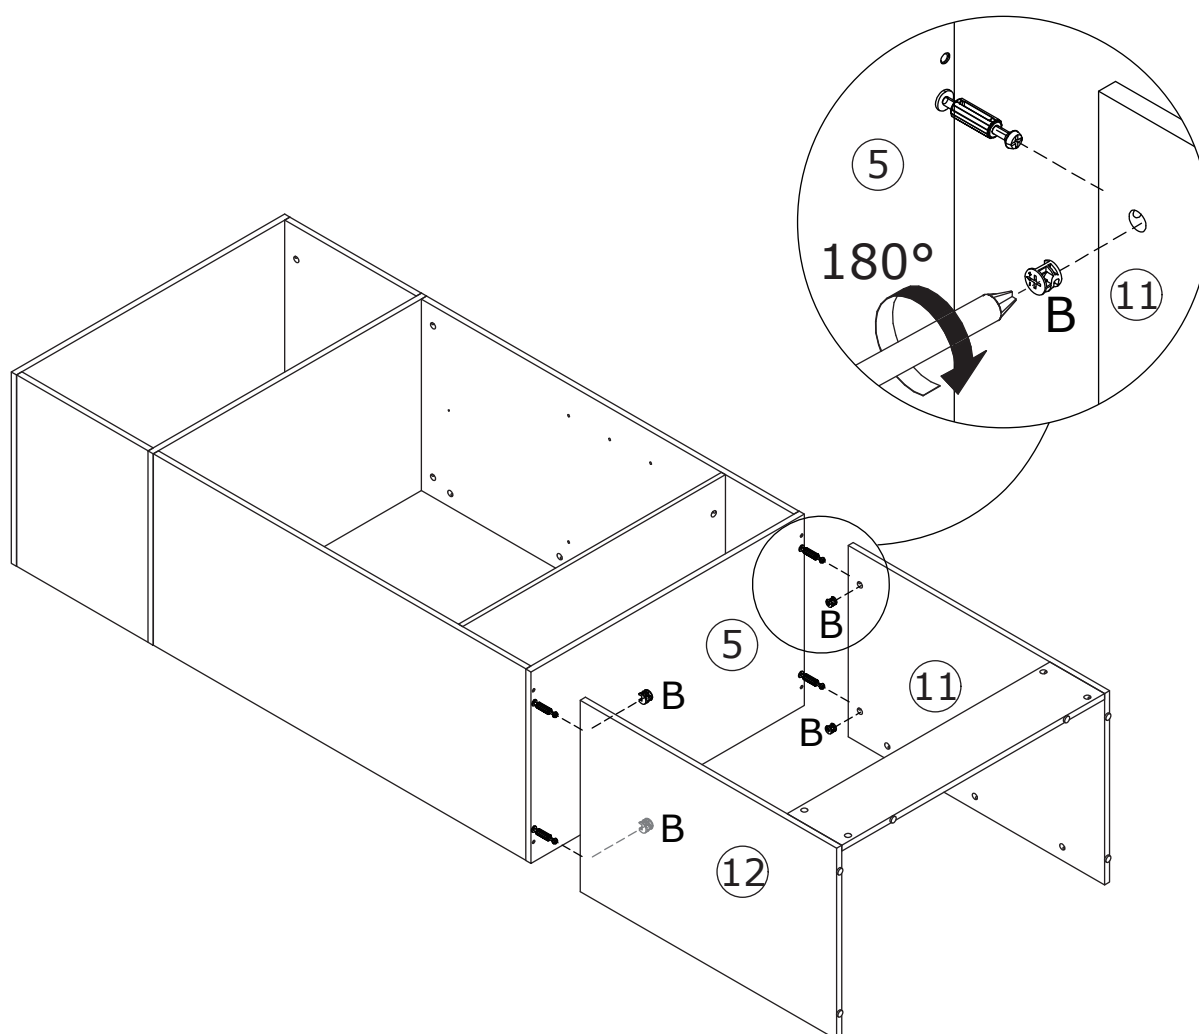


8

 L x 6
M3.5 x 14 mm



 Secure plate 28 to plates 1, 2, 7, and 8 using screw (L).

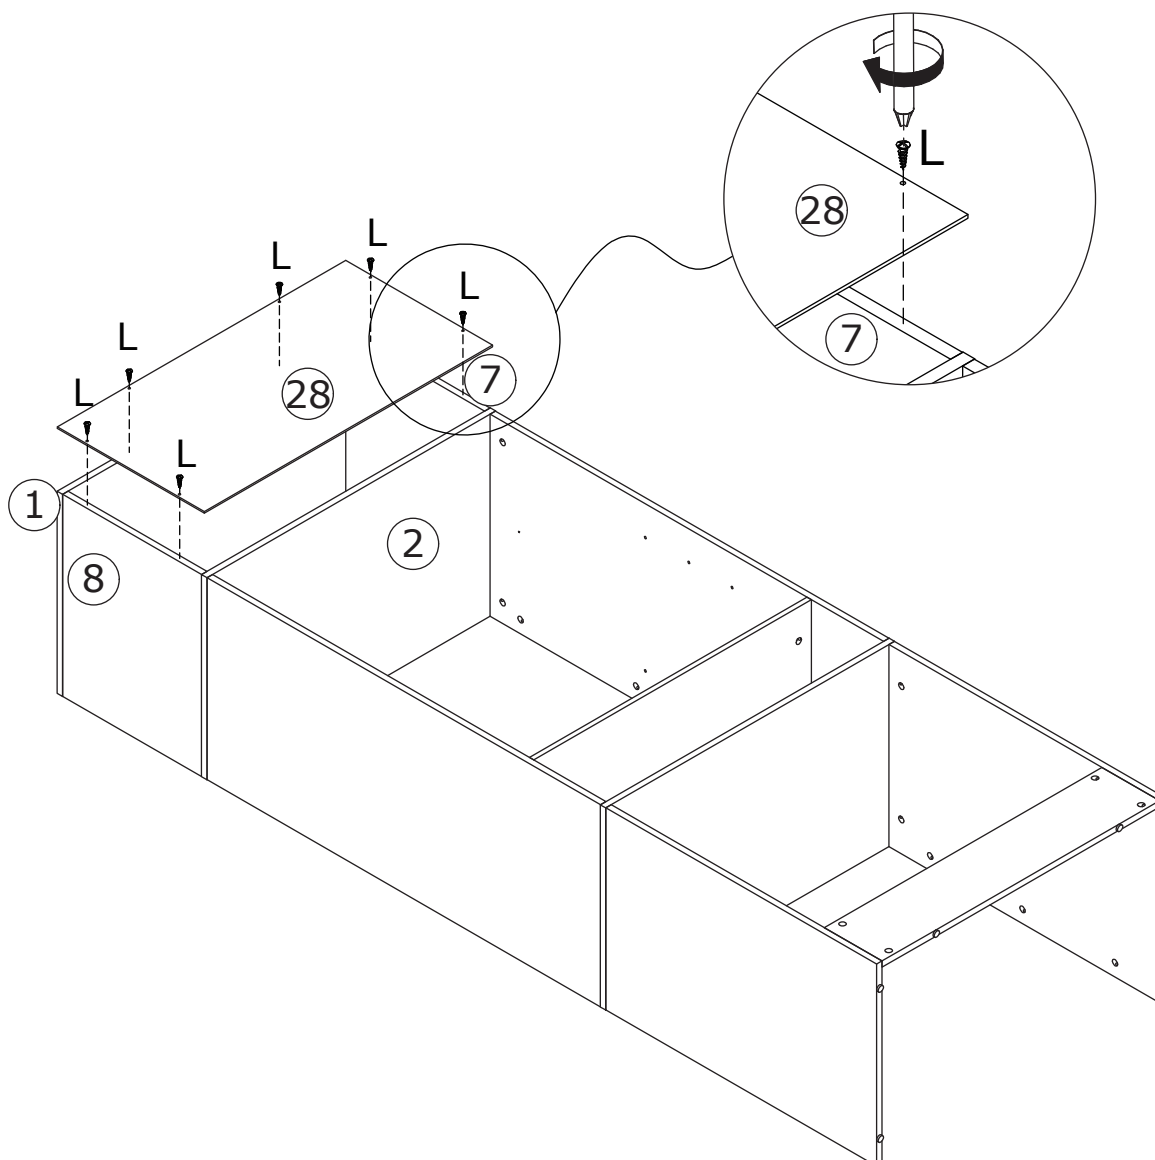


9


L x 8



 M3.5 x 14 mm




 Connect plates 29 and 30 to strip 32, and secure them to plates 9 and 10 using screw (L).

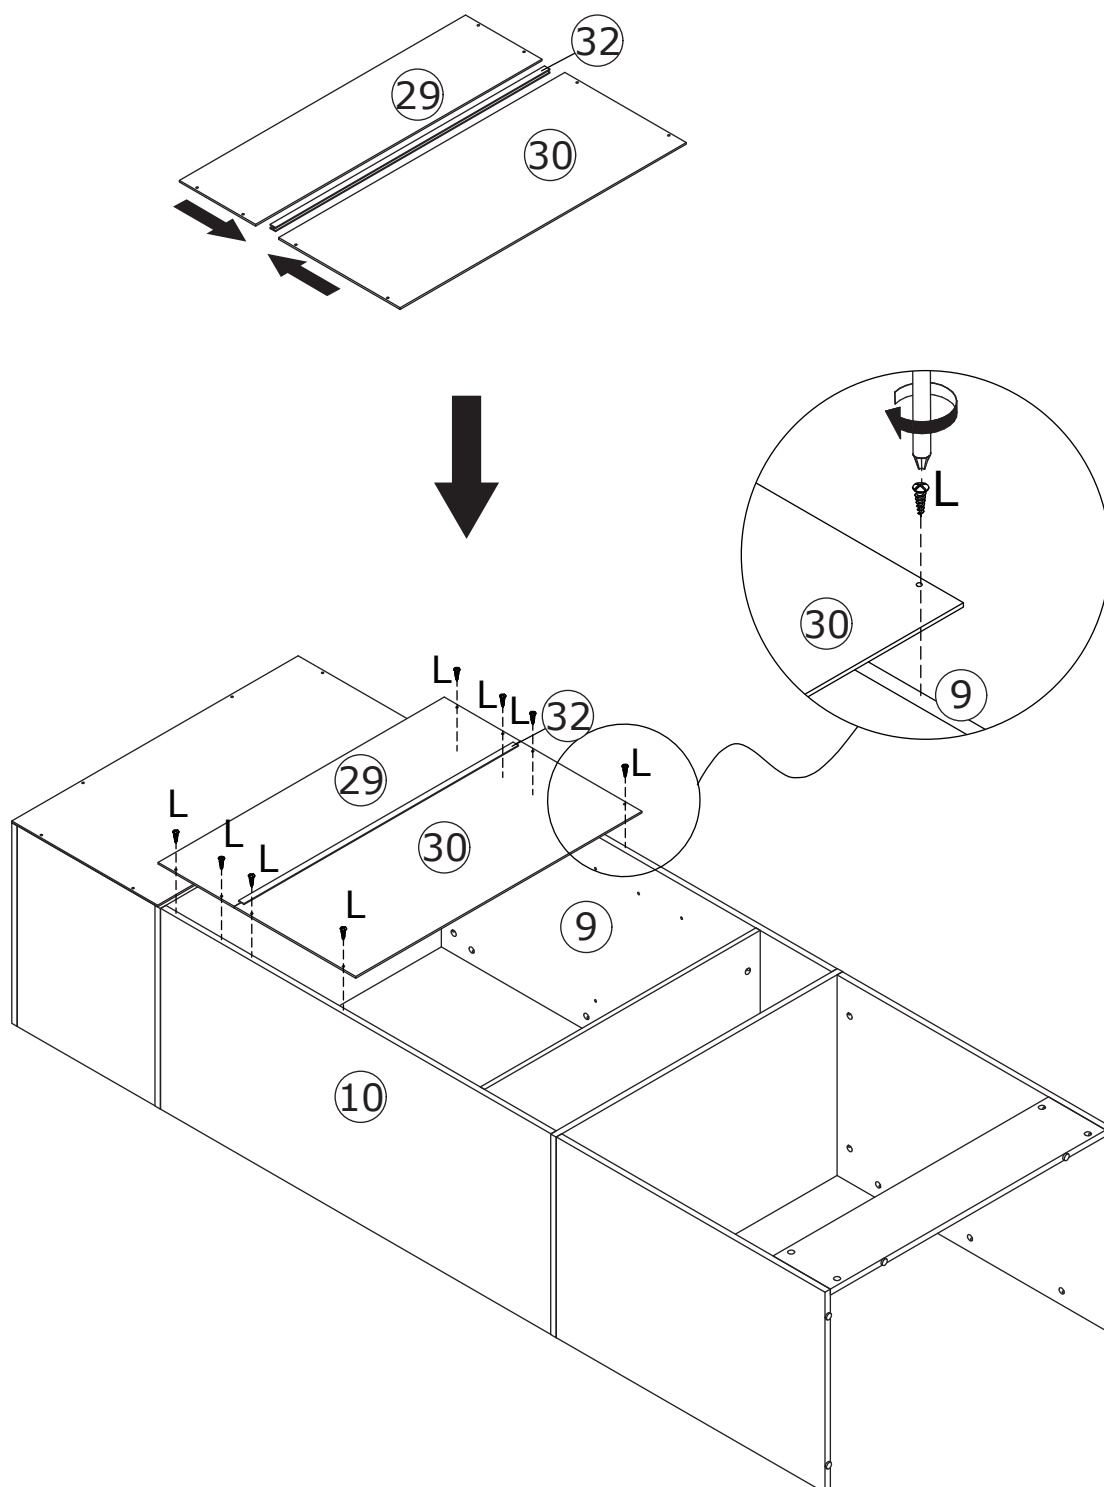


10

 L x 8
M3.5 x 14 mm



 Connect two plate 30 to strip 32, and secure plates 30 and 29 to the unit using screw (L).

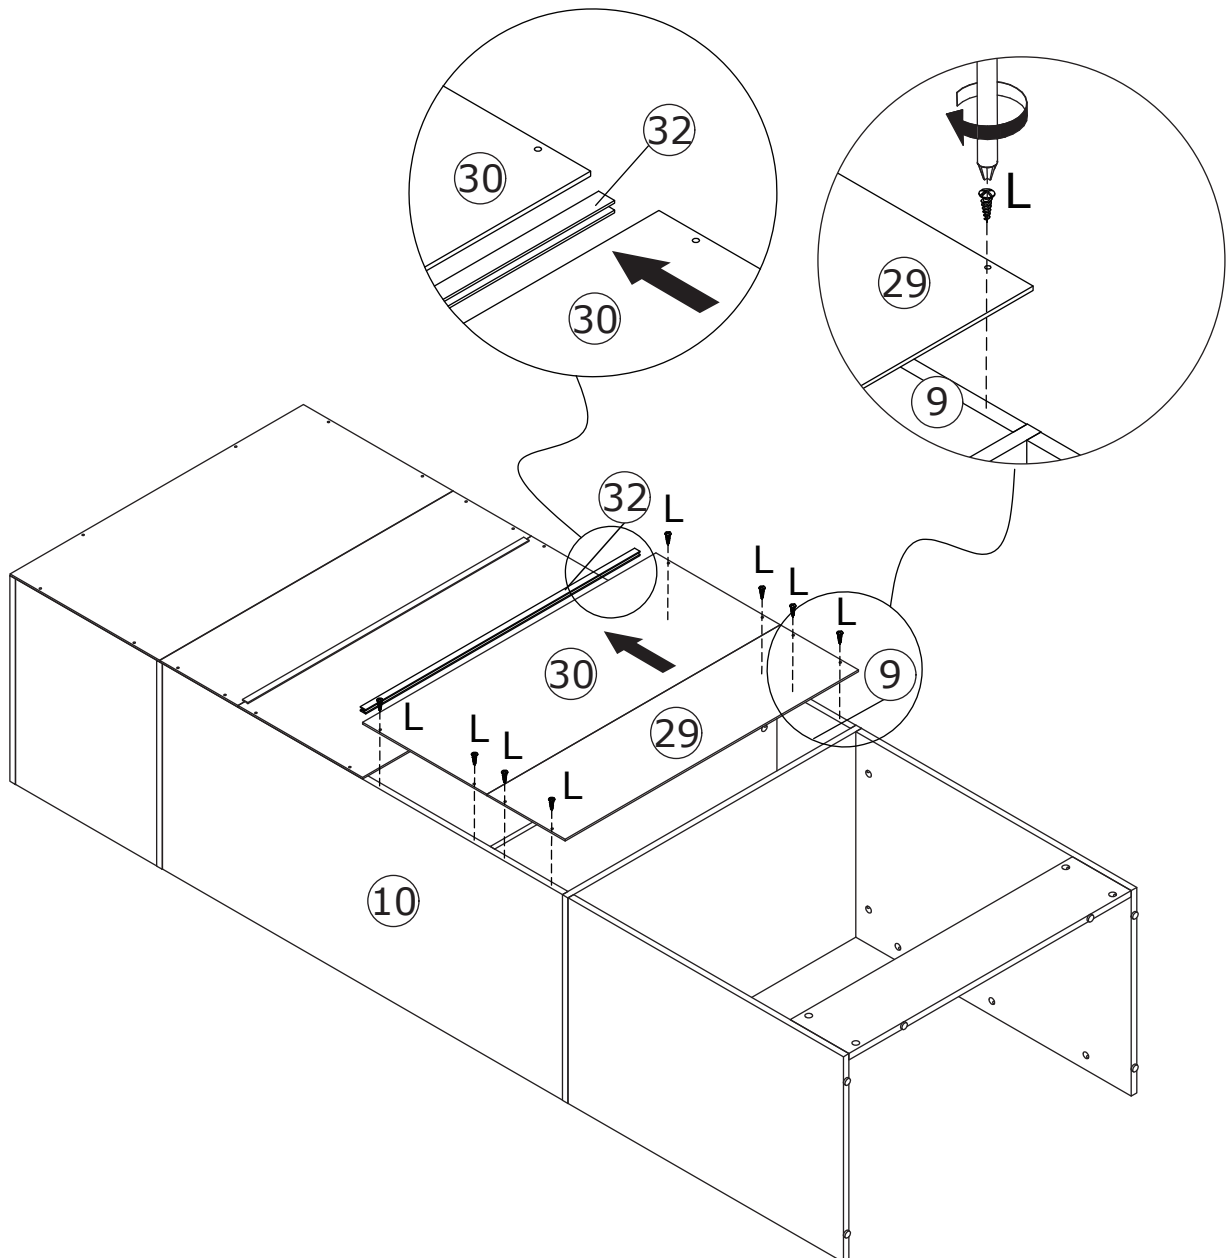


11


L x 10






 
M3.5 x 14 mm



 Connect plates 31 and 30 to strip 32, and secure them to the unit using screw (L).


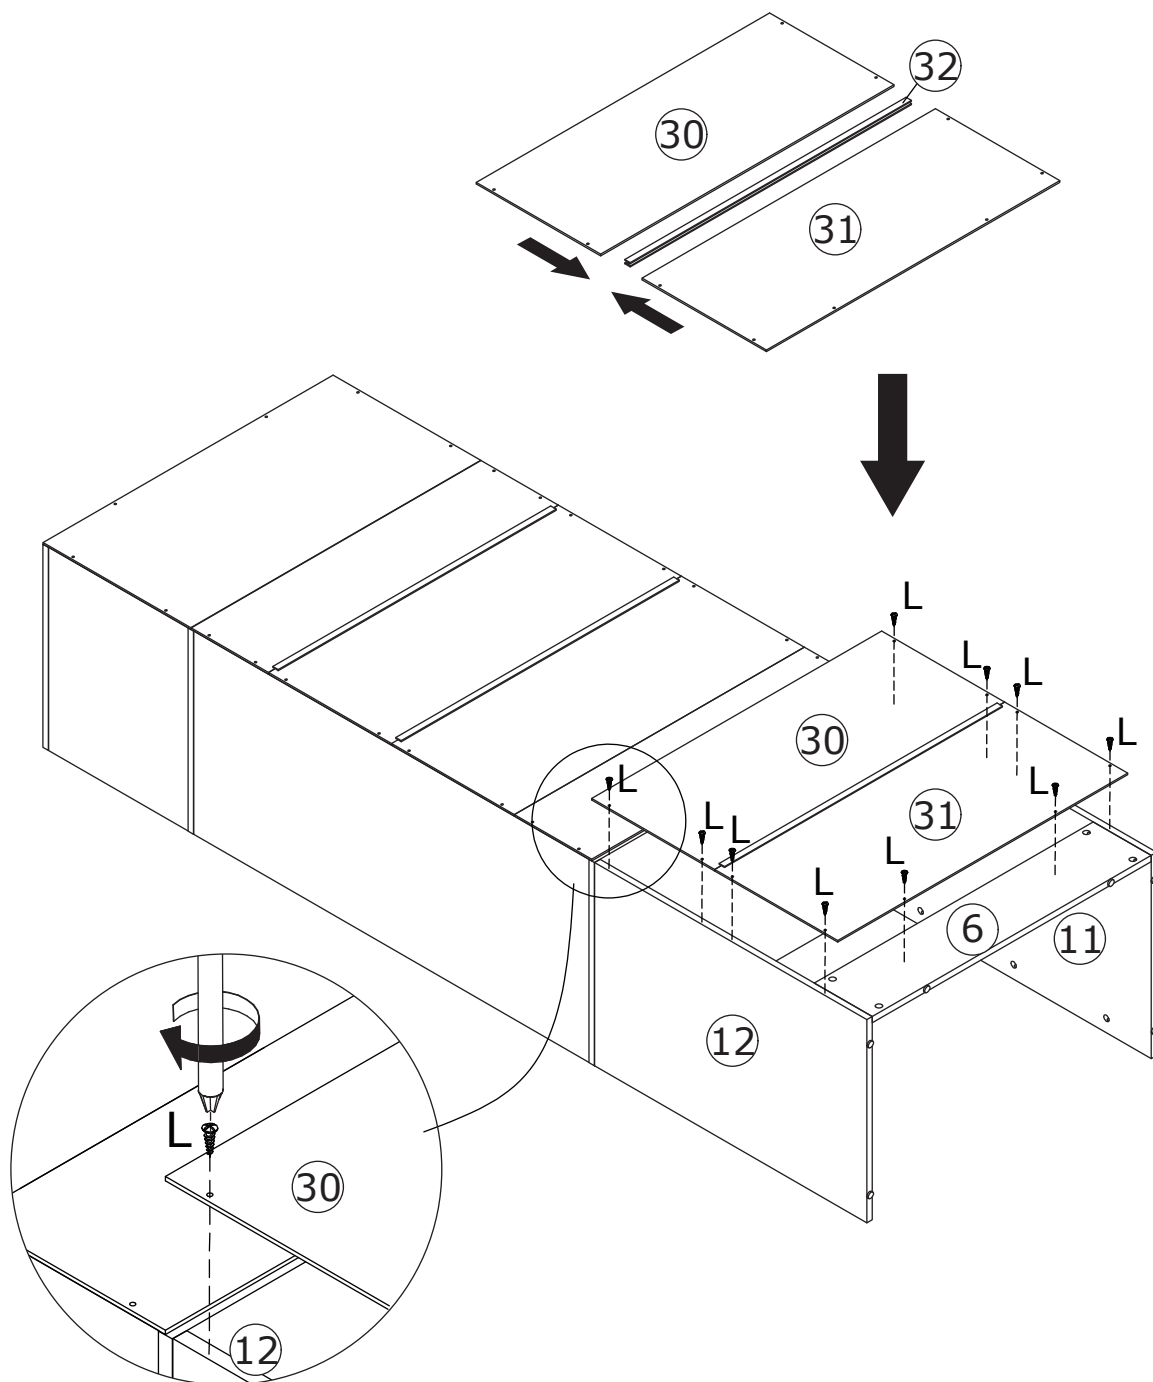


12

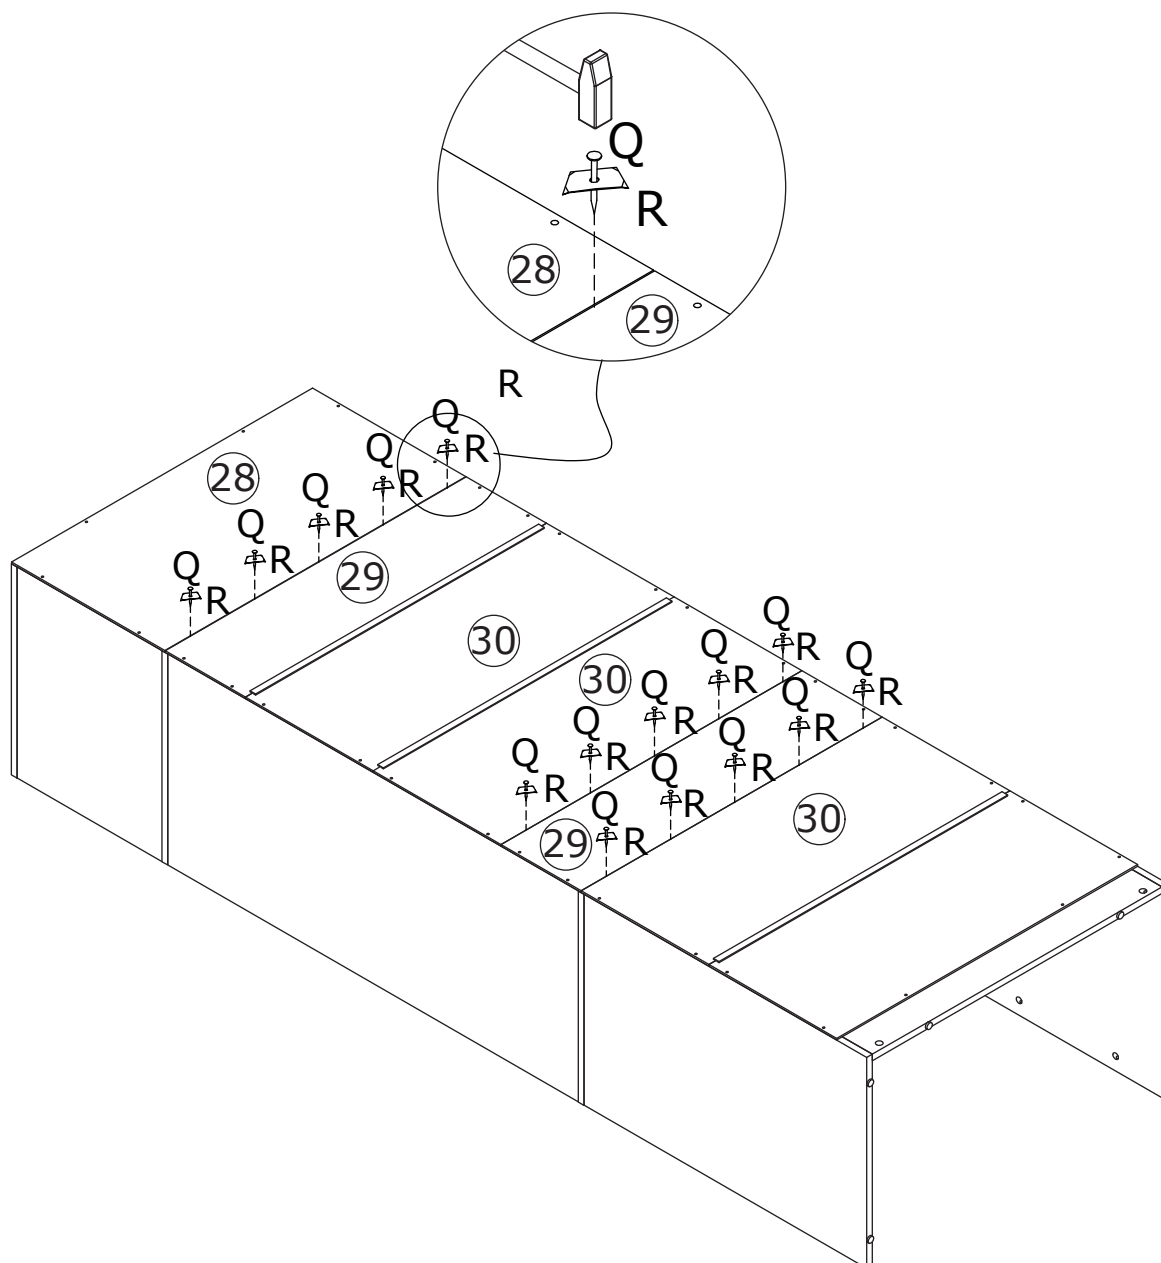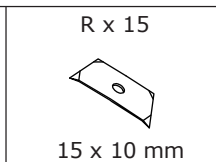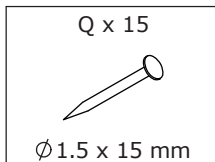    

Secure fitting (R) between back plates 28 and 29, 29 and 30, using screw (Q).

  13



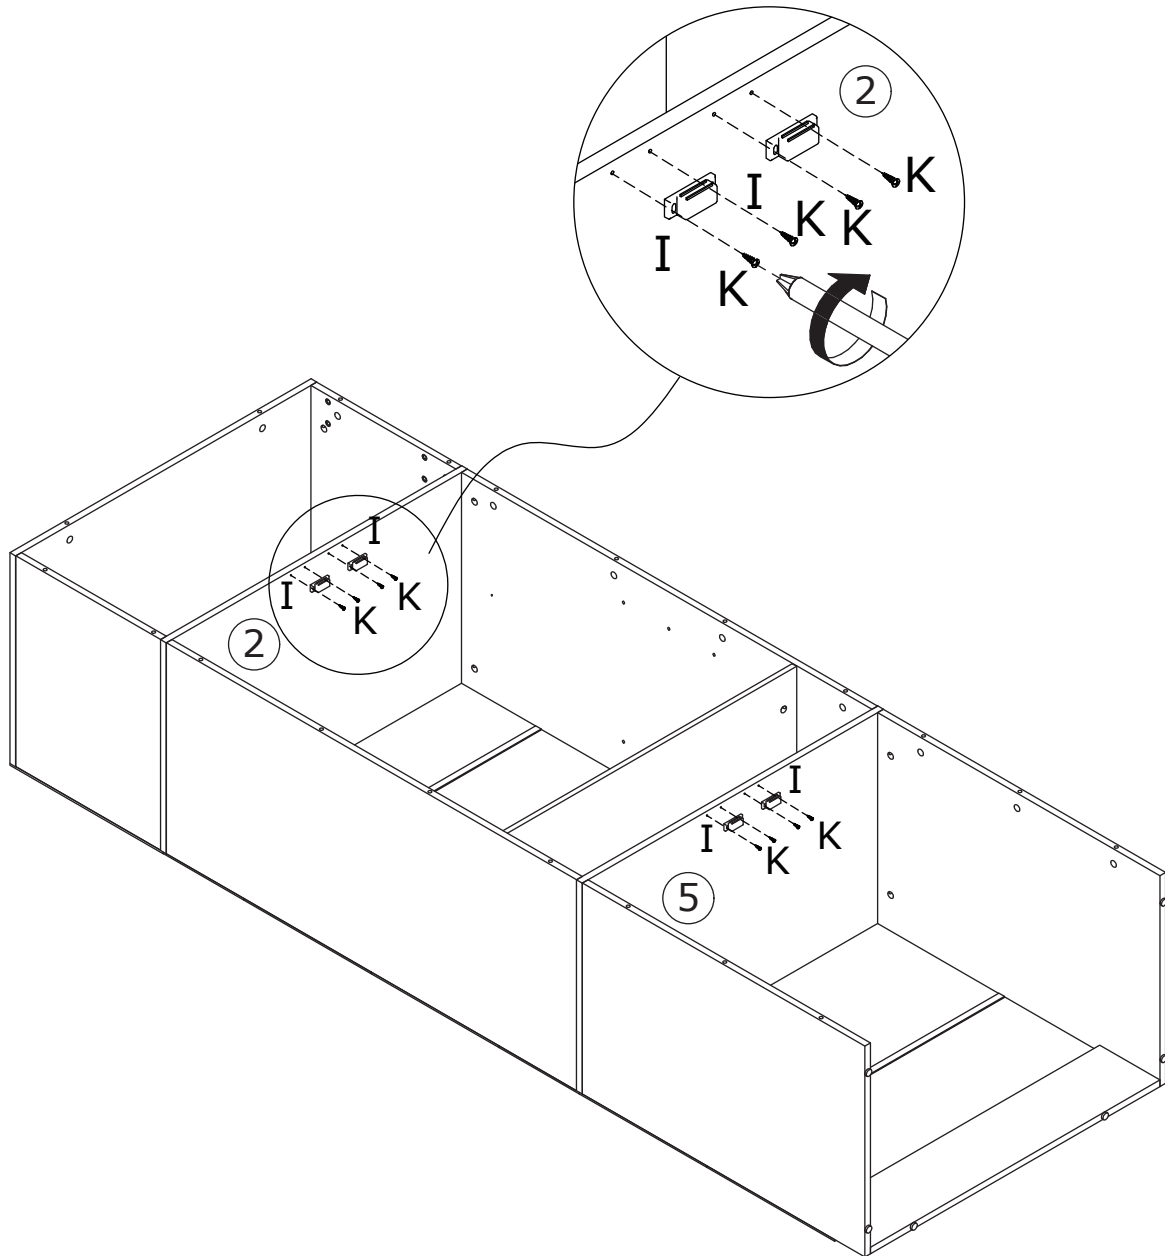
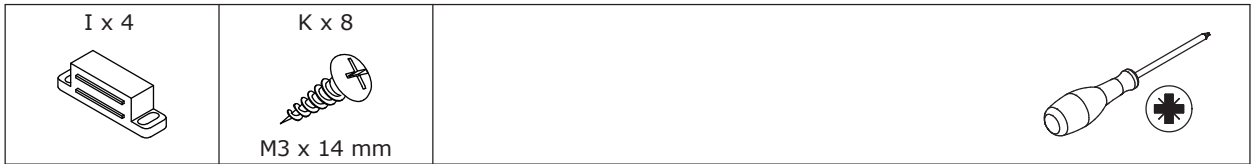


Secure fitting (I) to plates 2 and 5 using screw (K).

14



A x 2
M5 x 42 mm

    B x 2
Ø 15 x 10 mm

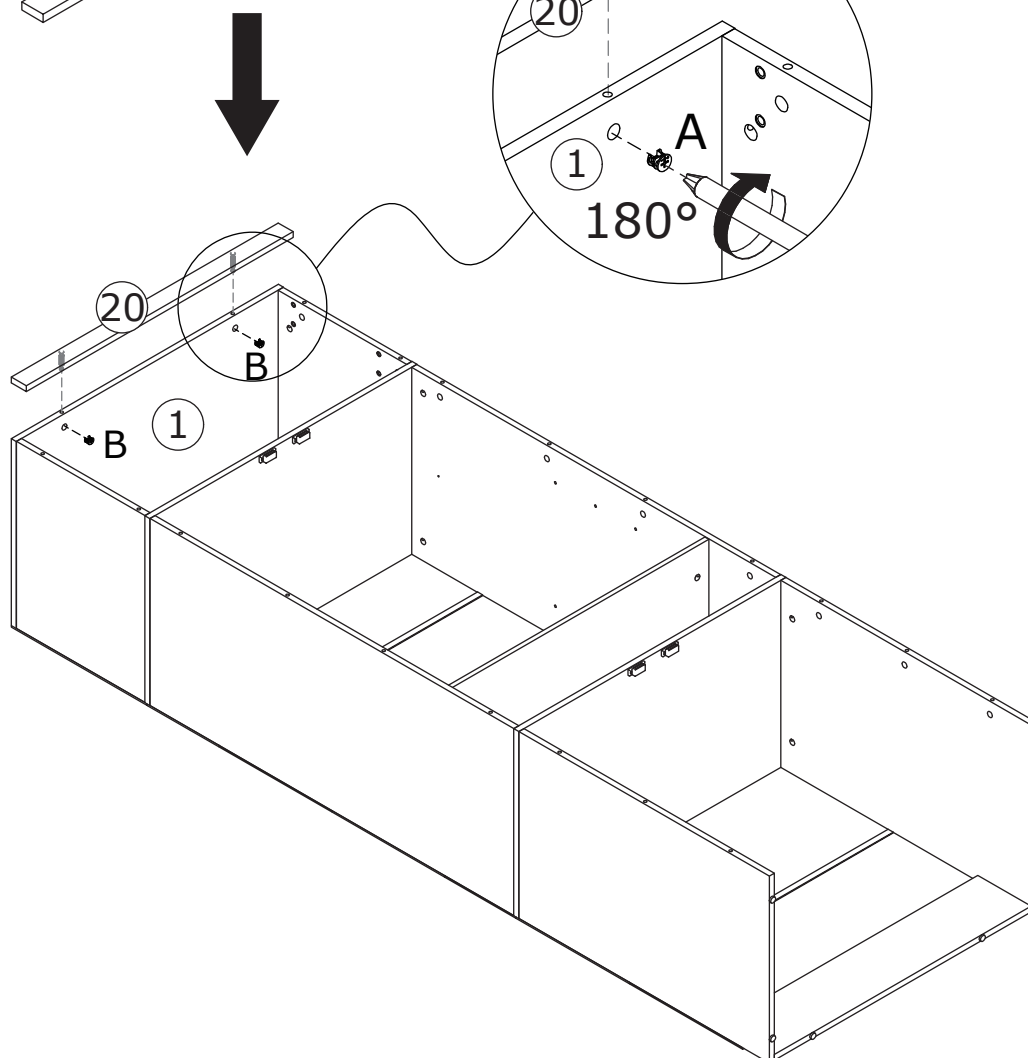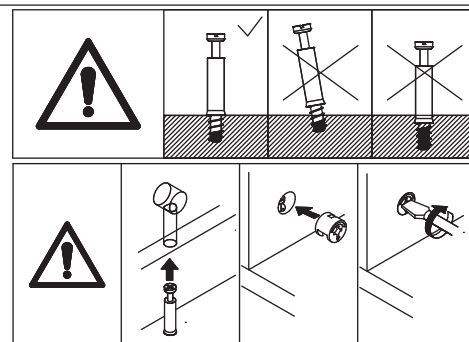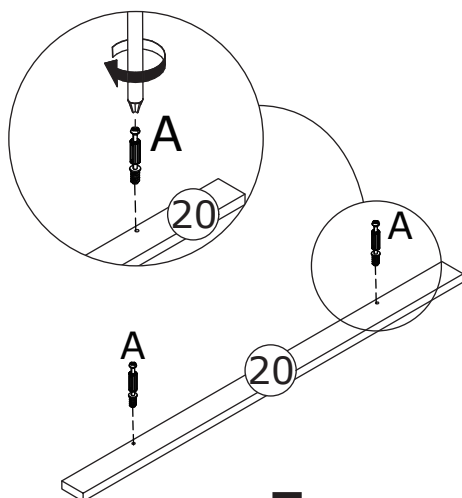


Screw self-tapping rod (A) onto plate 20.
Connect plate 20 to plate 1, and tighten by turning eccentric wheel (B) clockwise.

  15

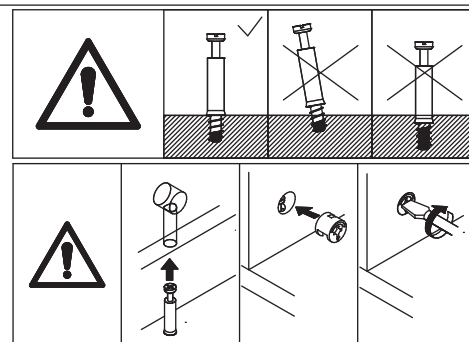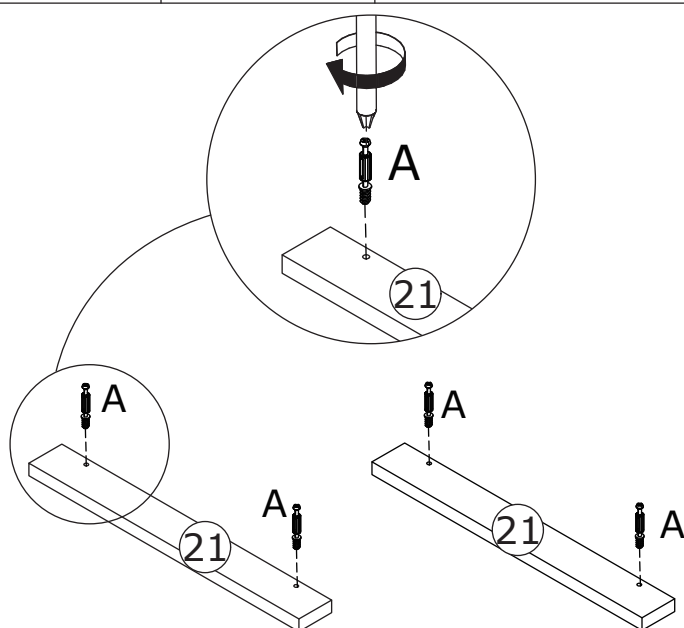

 Screw self-tapping rod (A) onto plate 21.

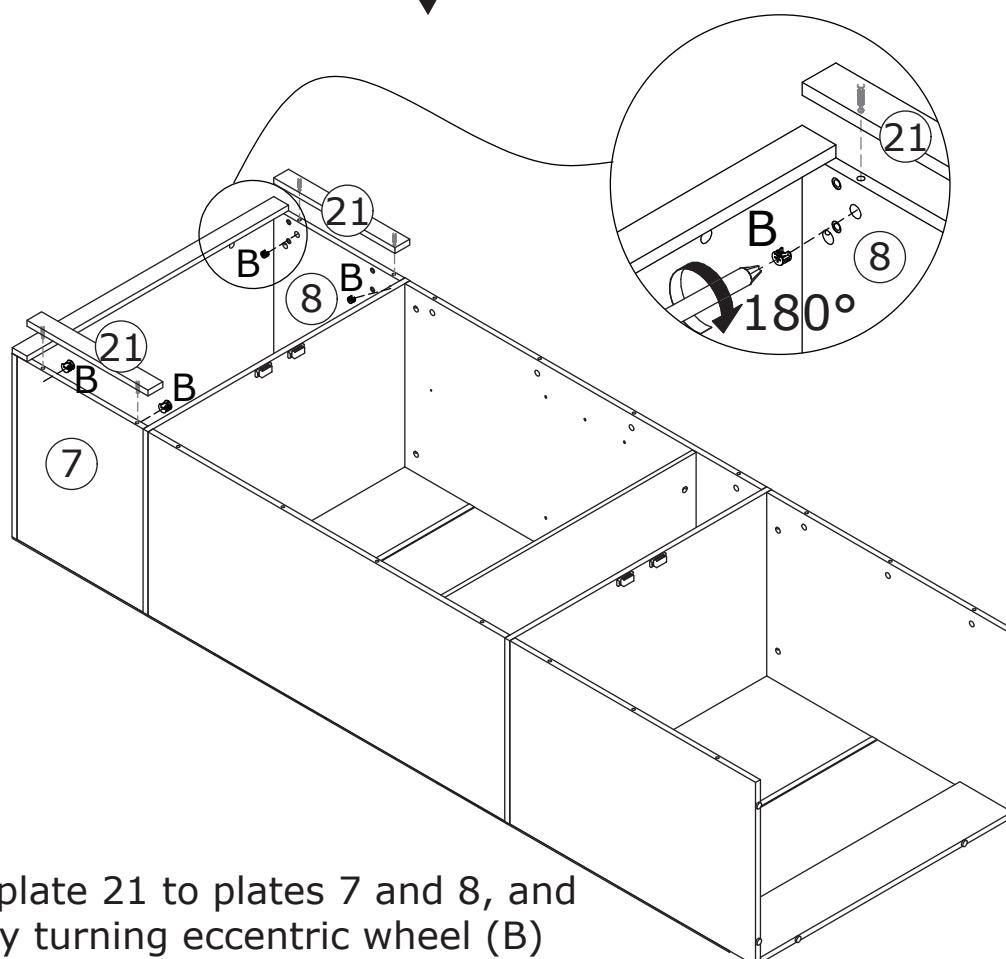

Connect plate 21 to plates 7 and 8, and tighten by turning eccentric wheel (B) clockwise.

16

M x 6




M6 x 30 mm

x 1



#4

 Secure plates 18 and 19 to plate 1 using screw (M).

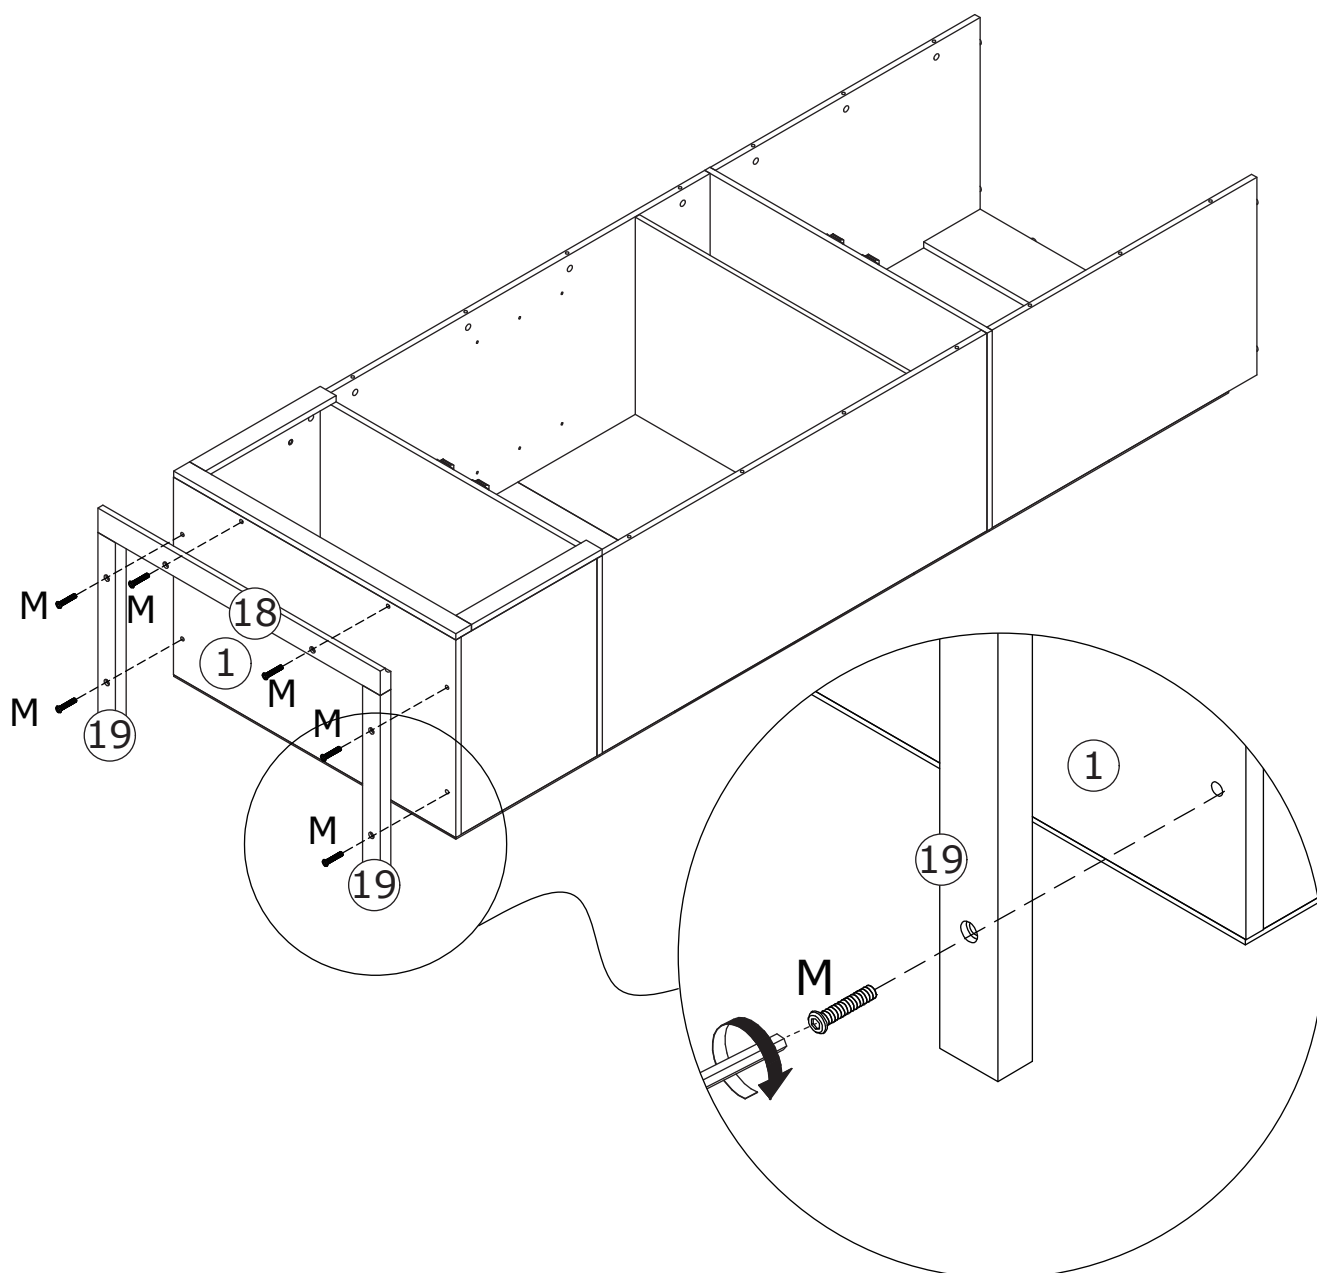

17

M x 8




M6 x 30 mm

x 1






#4

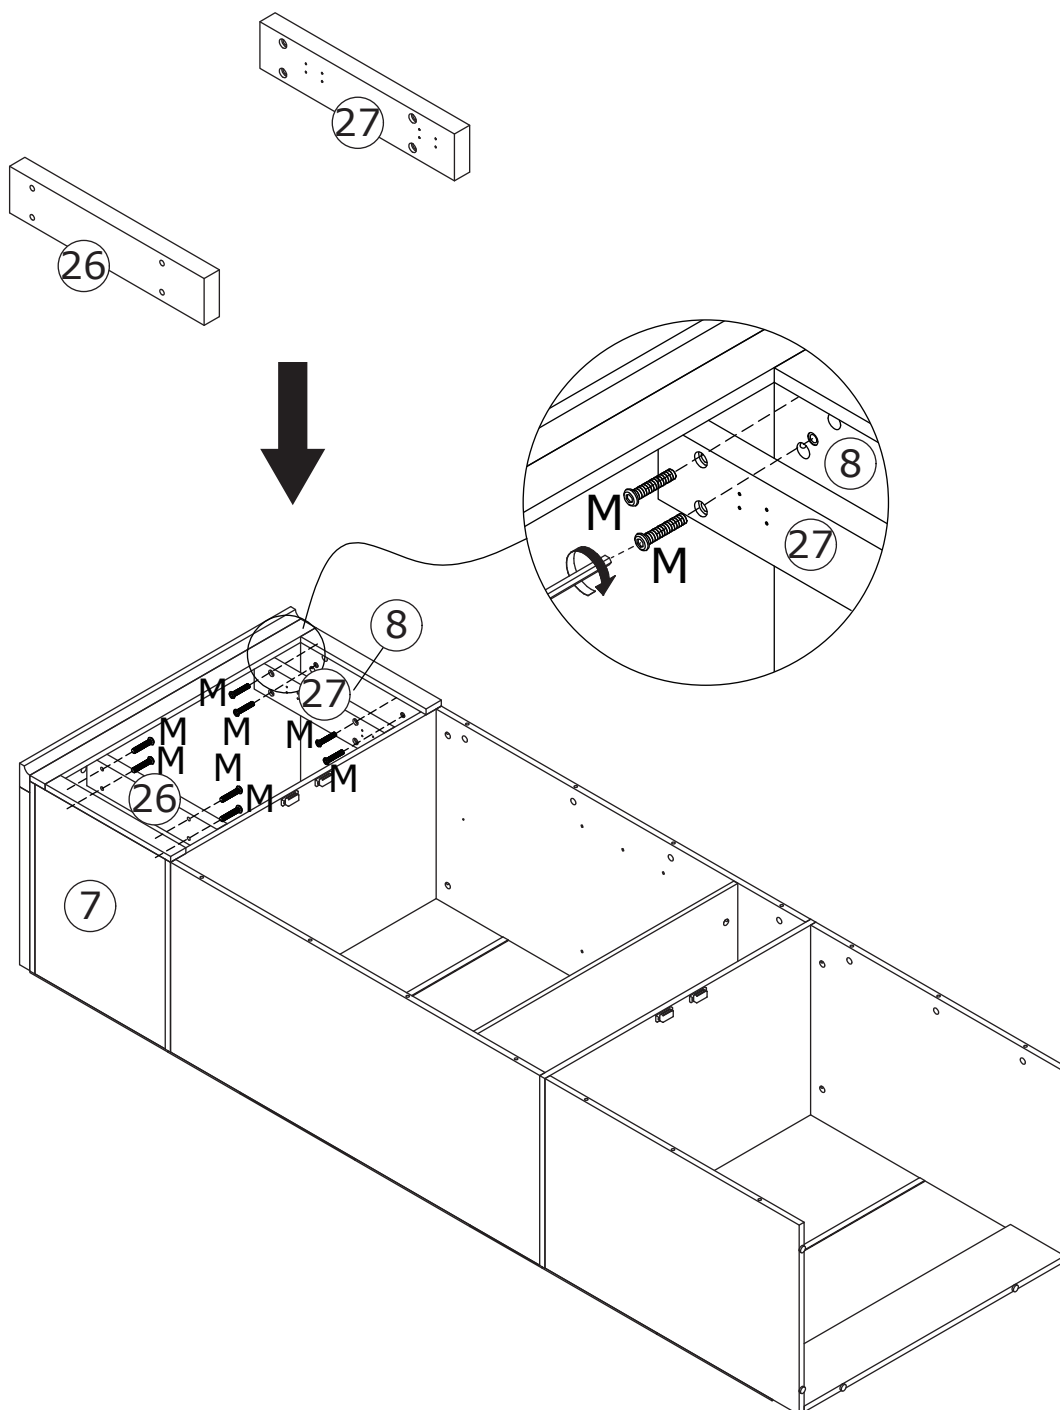 


Secure plates 26 and 27 to plates 7 and 8, respectively using screw (M).

   
18

E x 24  M3.5 x 14 mm	F x 2  111-96	G x 4  M4 x 20 mm	F x 4  DW	 
---	--	--	---	---


 
Secure hinge (H) to plate 13 using screw (E).
Secure handle (F) using screw (G).

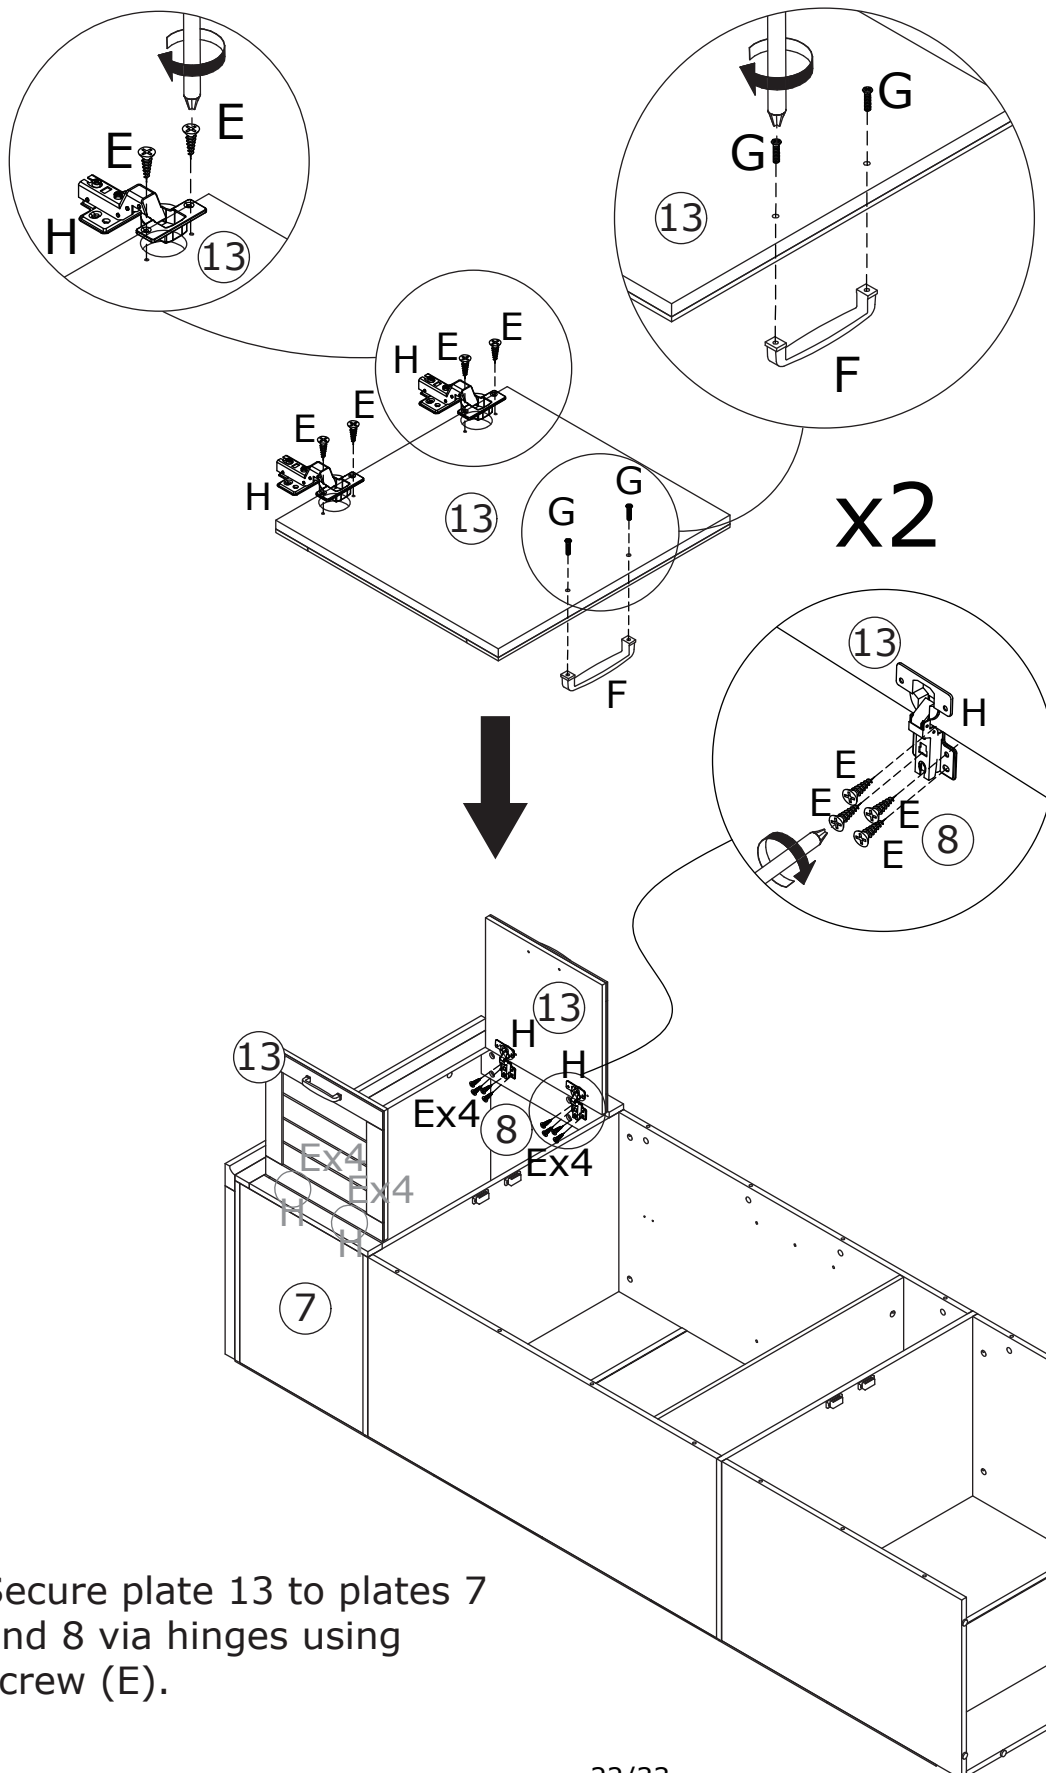

 
Secure plate 13 to plates 7 and 8 via hinges using screw (E).



  
If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

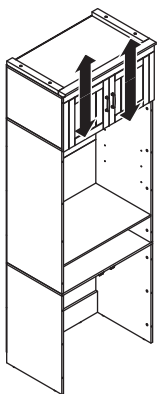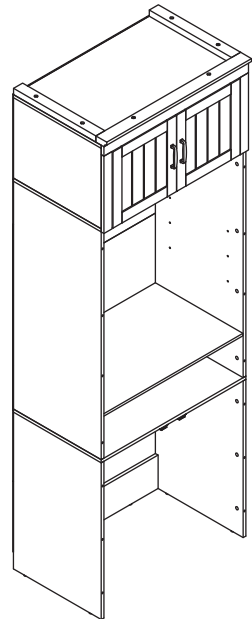



I

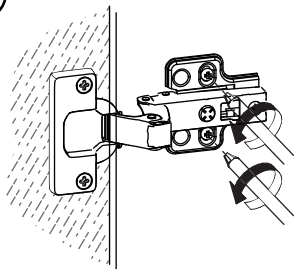 


II

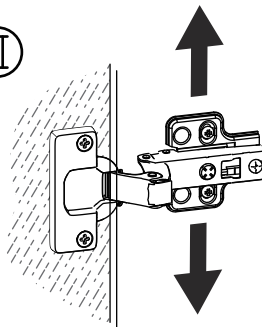 


III

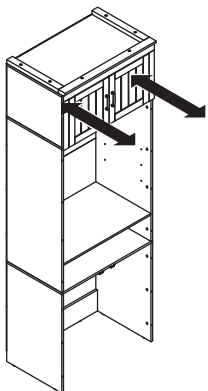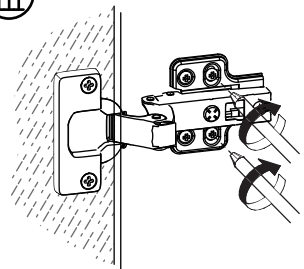  



I

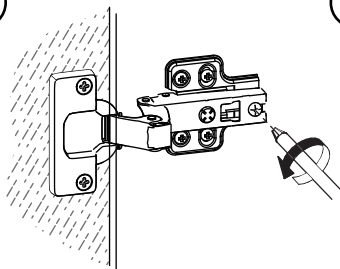 


II

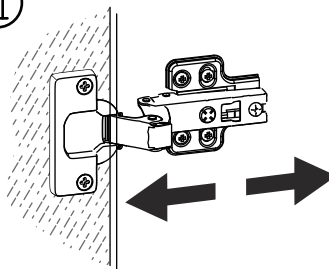 


III

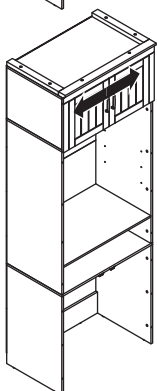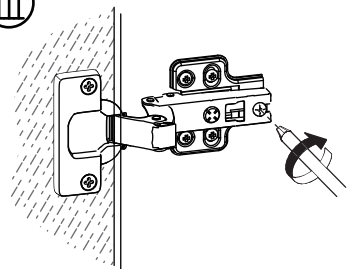  




I

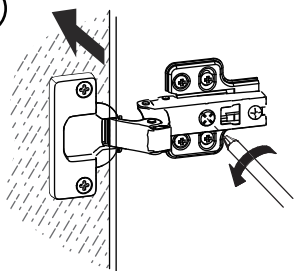 



II

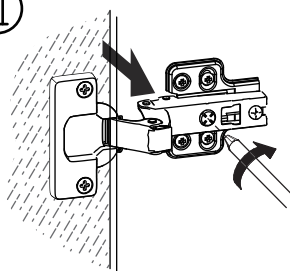 

20

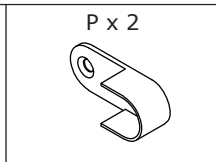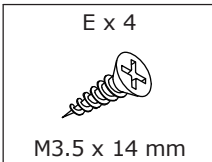   

  Secure bracket (P) to plates 9 and 10 using screw (E).
Then install hanger bar 33 onto the brackets.

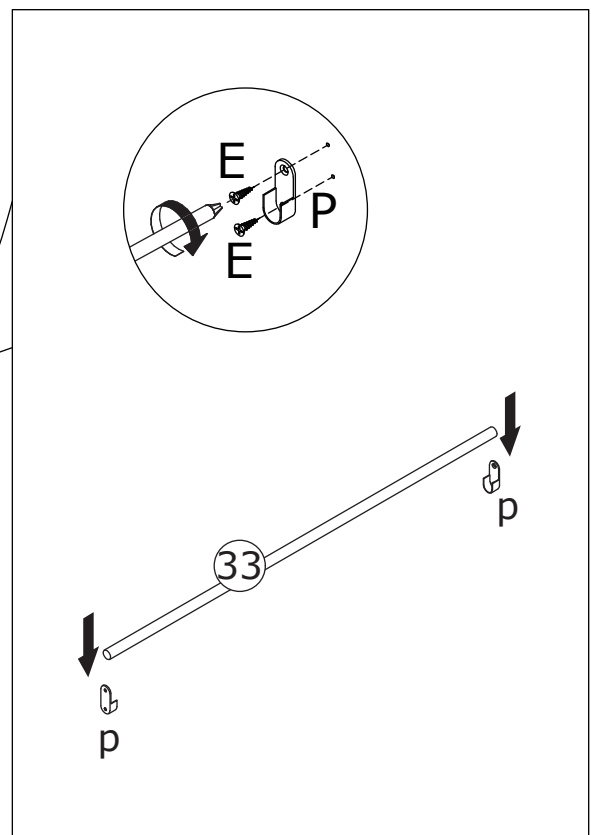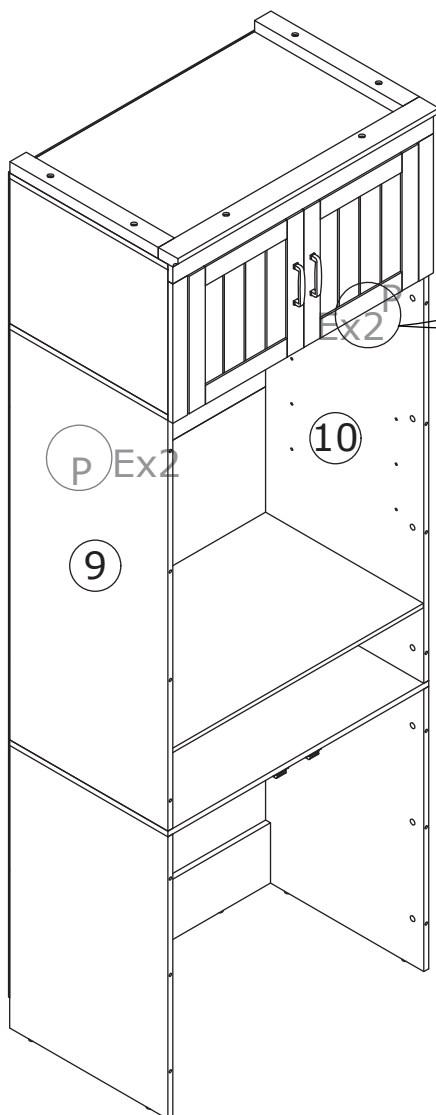



21

N x 4







Ø5 mm

  Install pin (N) to plates 9 and 10.
Then place plate 3 on top of the pins.

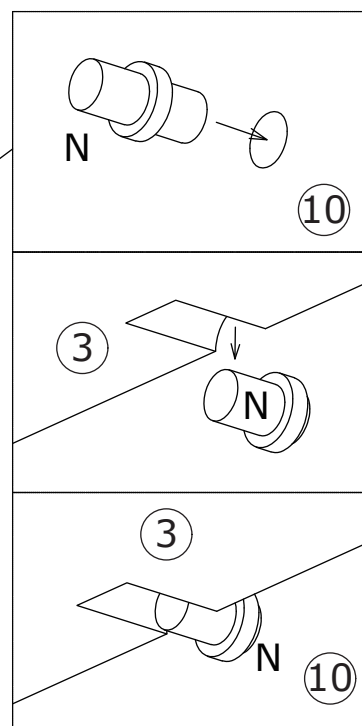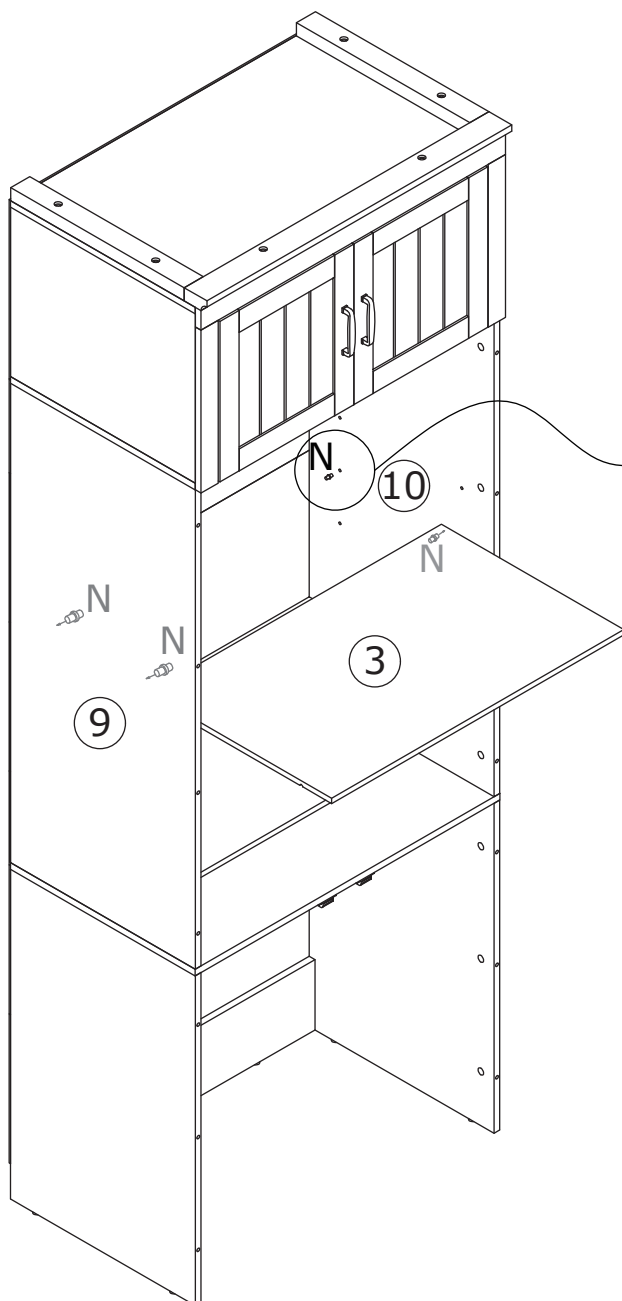

22

  A x 8  M5 x 42 mm	O x 6  L60 x K48 mm	E x 24  M3.5 x 14 mm	
--	--	---	---

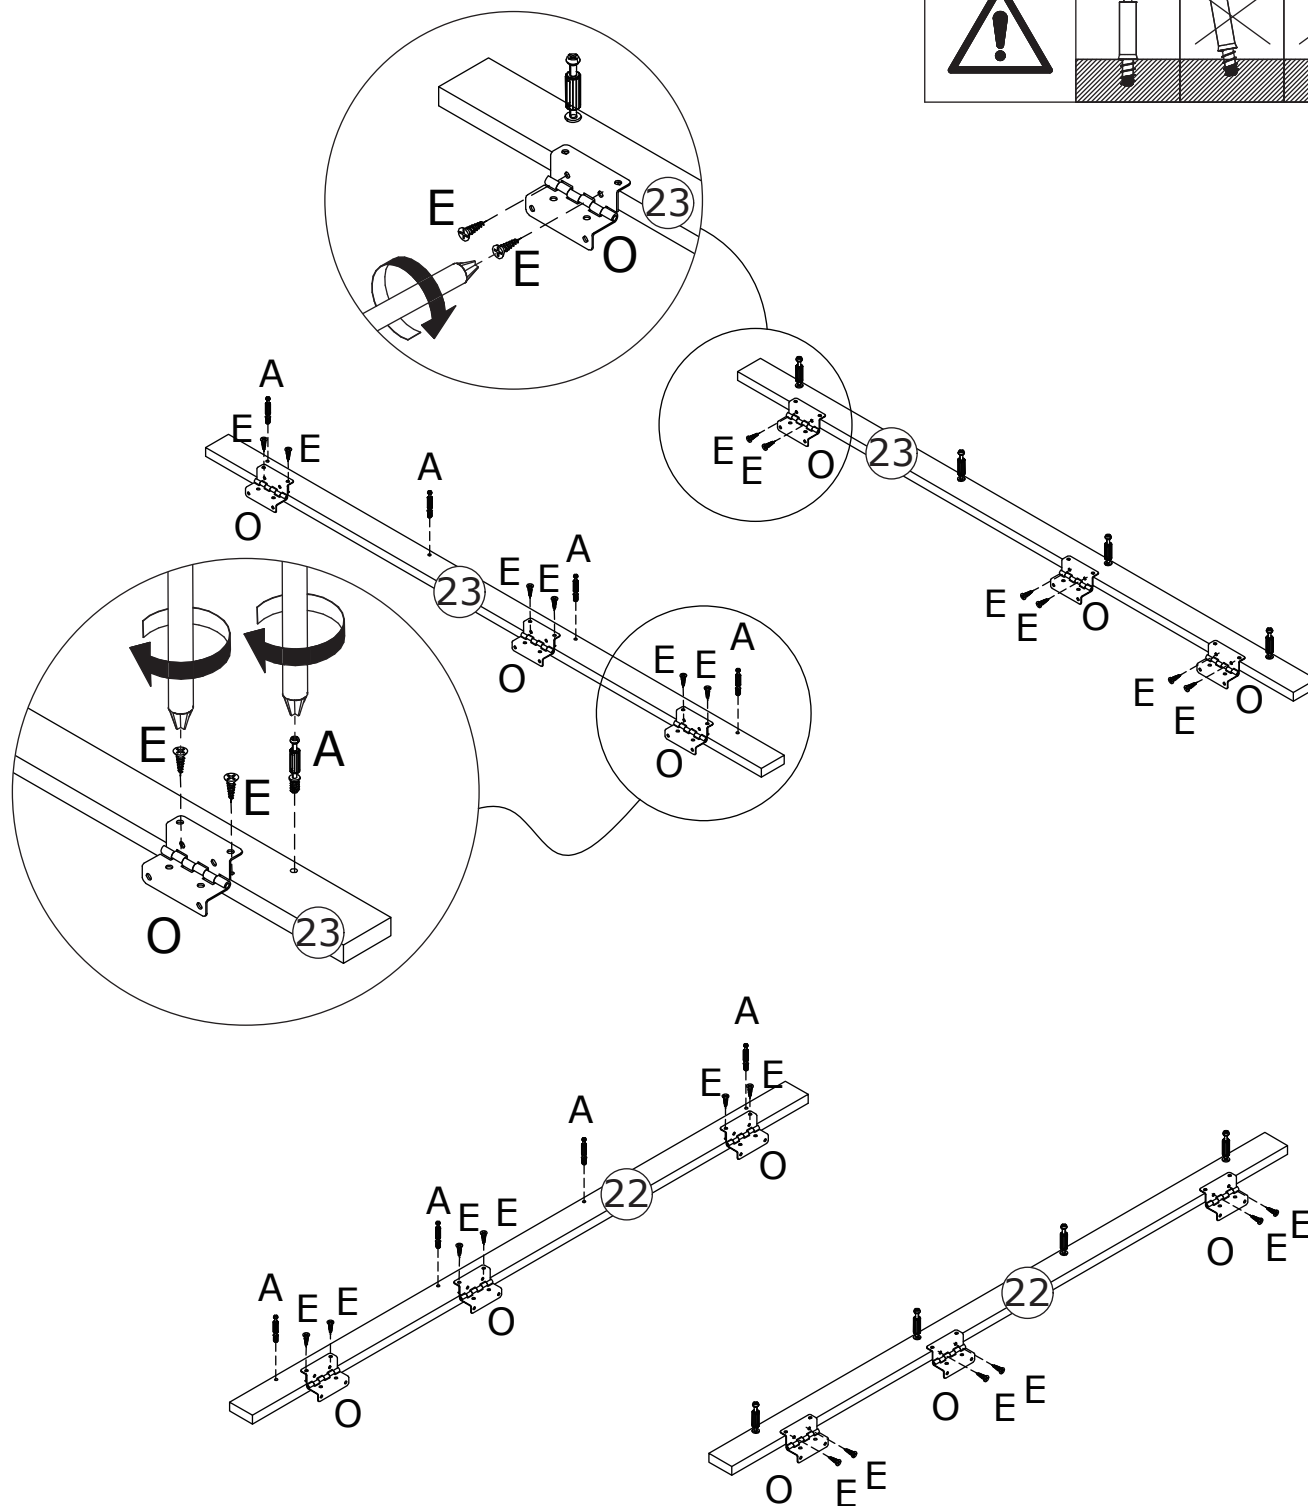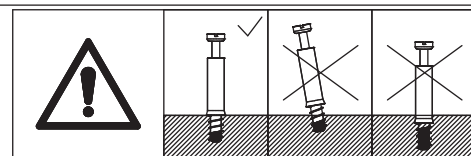  




Screw self-tapping rod (A) onto plates 22 and 23.
Secure hinge (O) to plates 22 and 23 using screw (E).

23

B x 8





  
 
Ø 15 x 10 mm

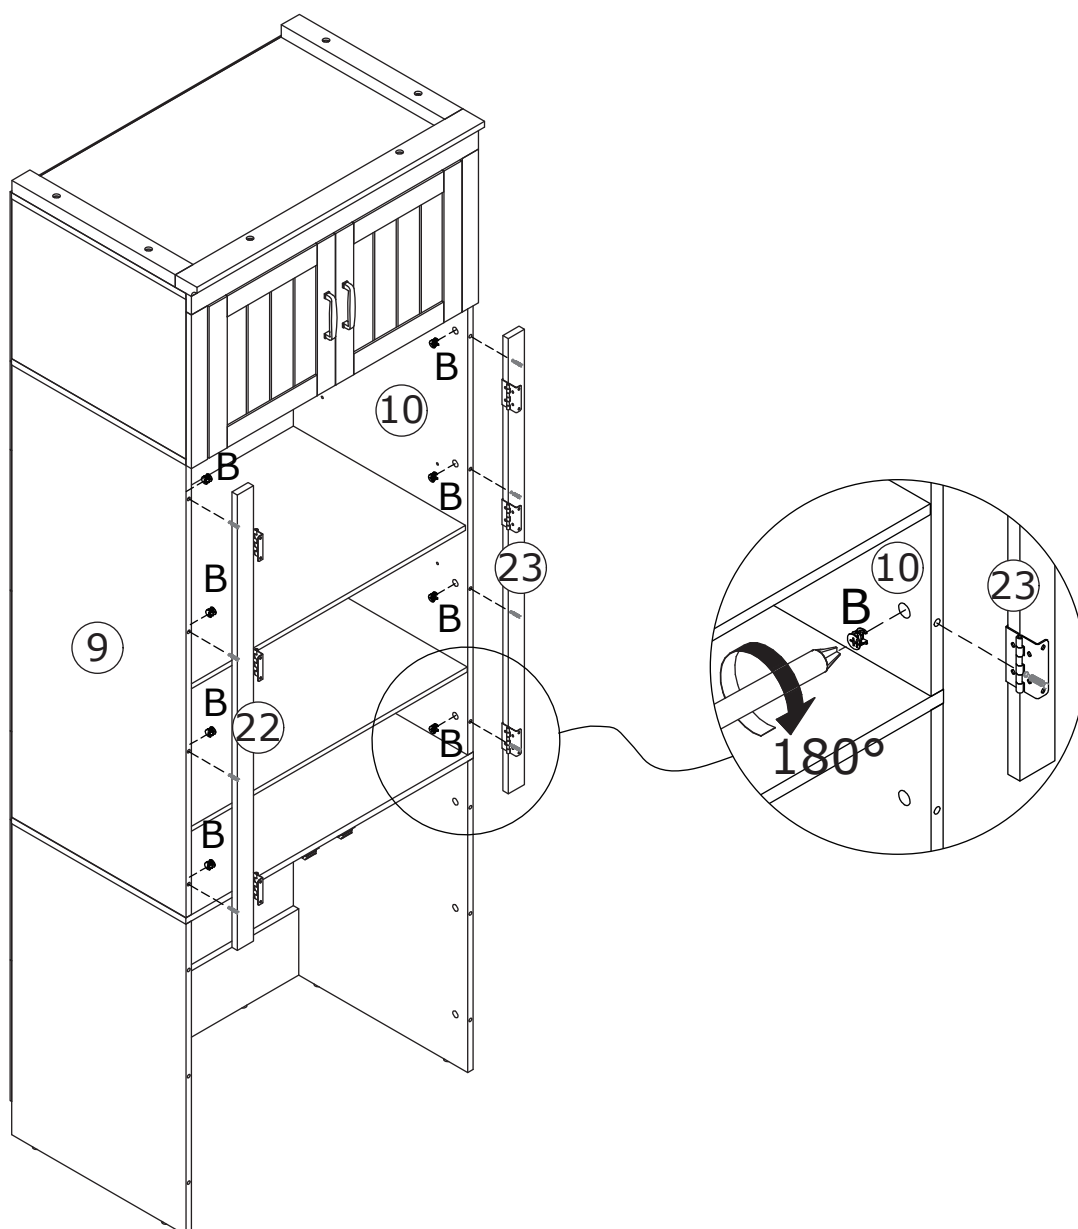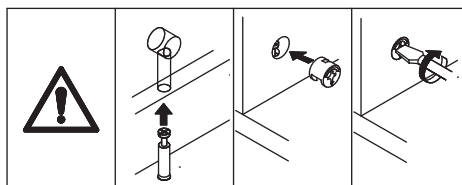

Connect plates 22 and 23 to plates 9 and 10, respectively, and tighten by turning eccentric wheel (B) clockwise.

  24

A x 6  M5 x 42 mm	O x 4  L60 x K48 mm	E x 16  M3.5 x 14 mm	
--	--	---	---

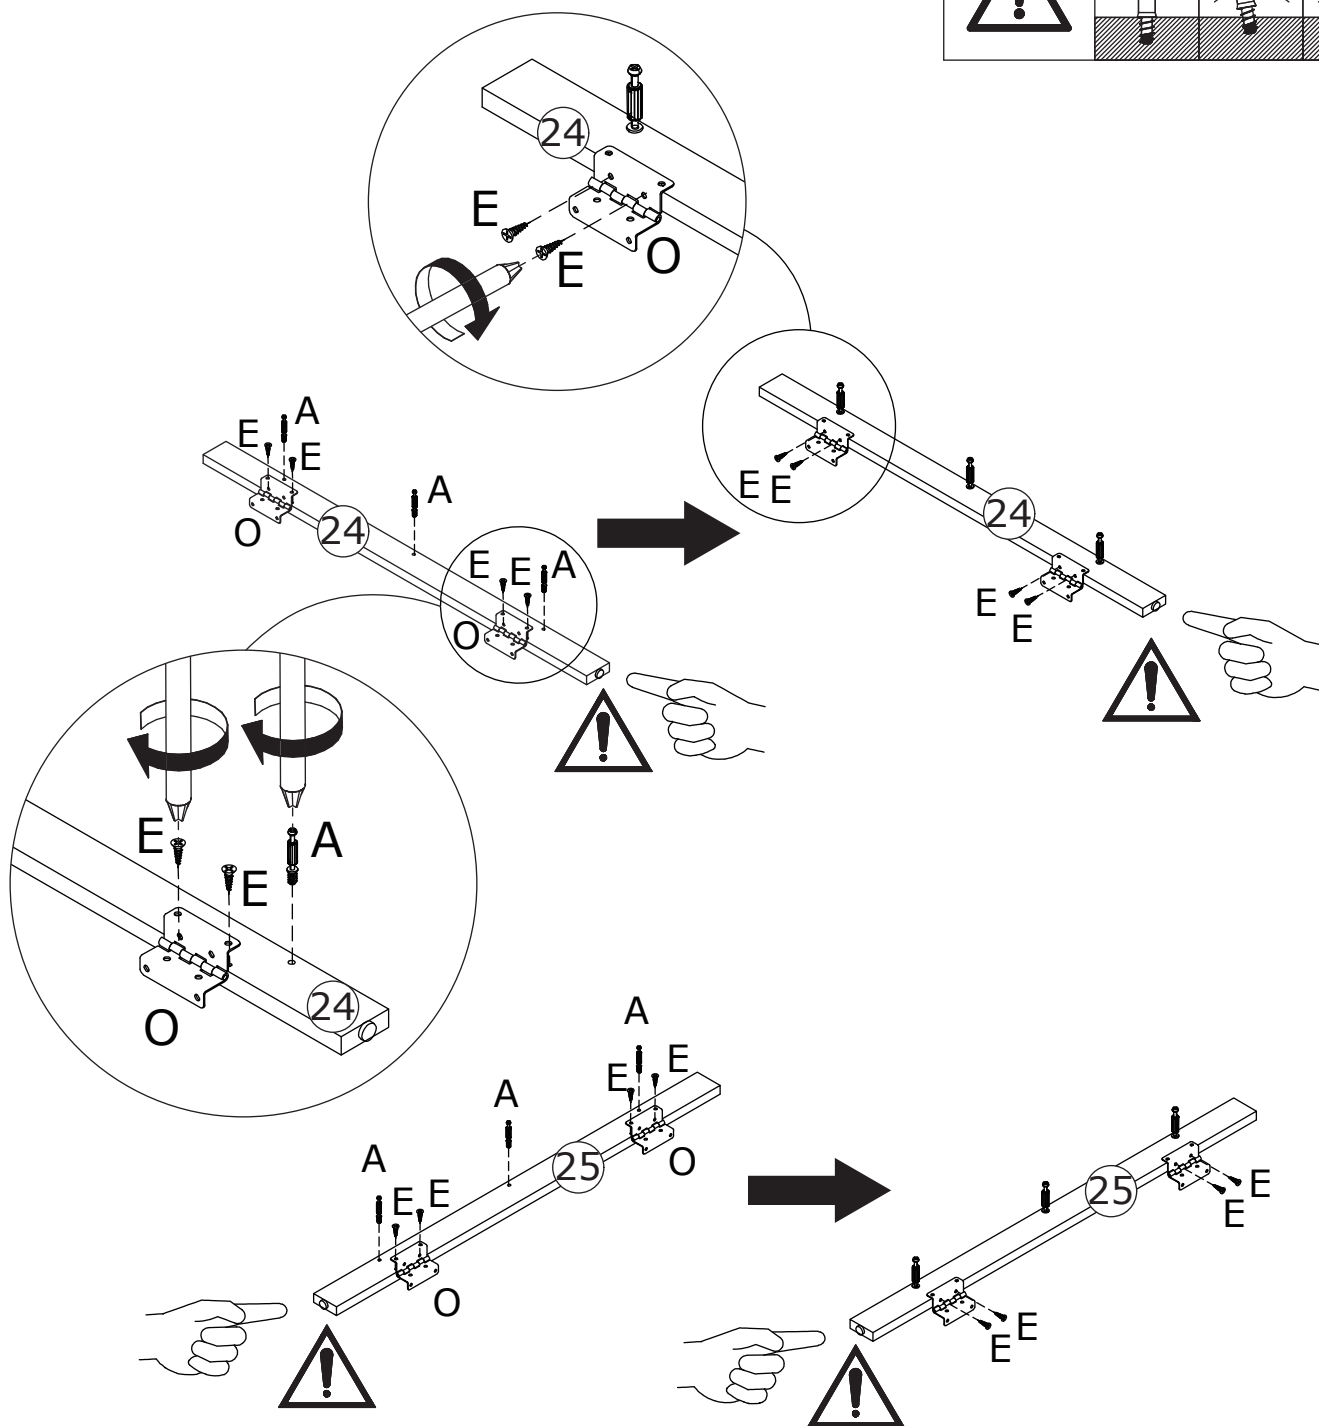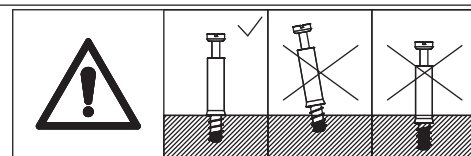  





Screw self-tapping rod (A) onto plates 24 and 25.
Secure hinge (O) to plates 24 and 25 using screw (E).

25

B x 6



    Ø 15 x 10 mm

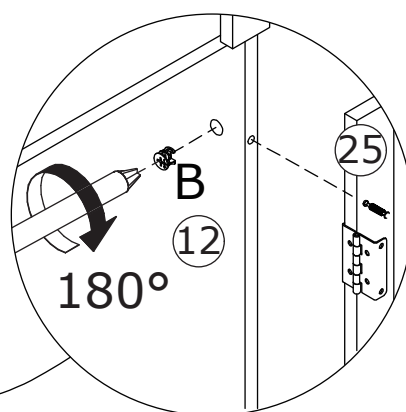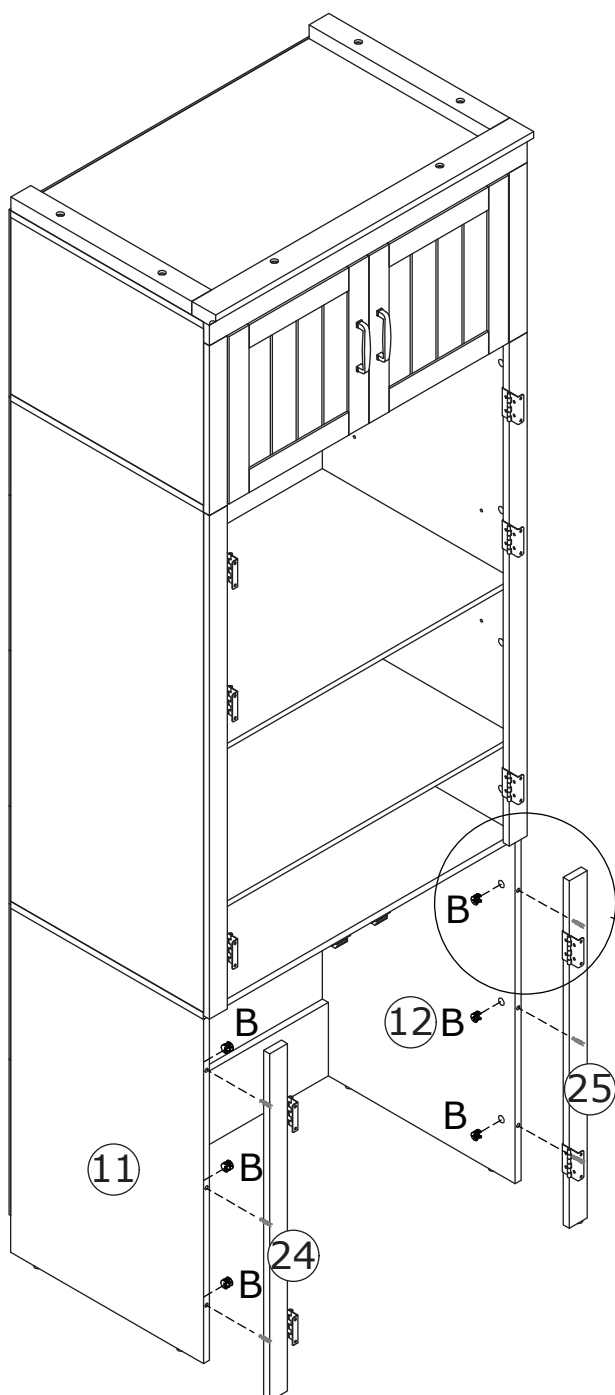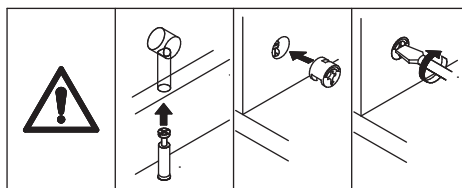

Connect plates 24 and 25 to plates 11 and 12, respectively, and tighten by turning eccentric wheel (B) clockwise.

 
26

E x 4



M3.5 x 14 mm

F x 2




111-96

G x 4





M4 x 20 mm

 J x 2



Ø4 x 63 mm

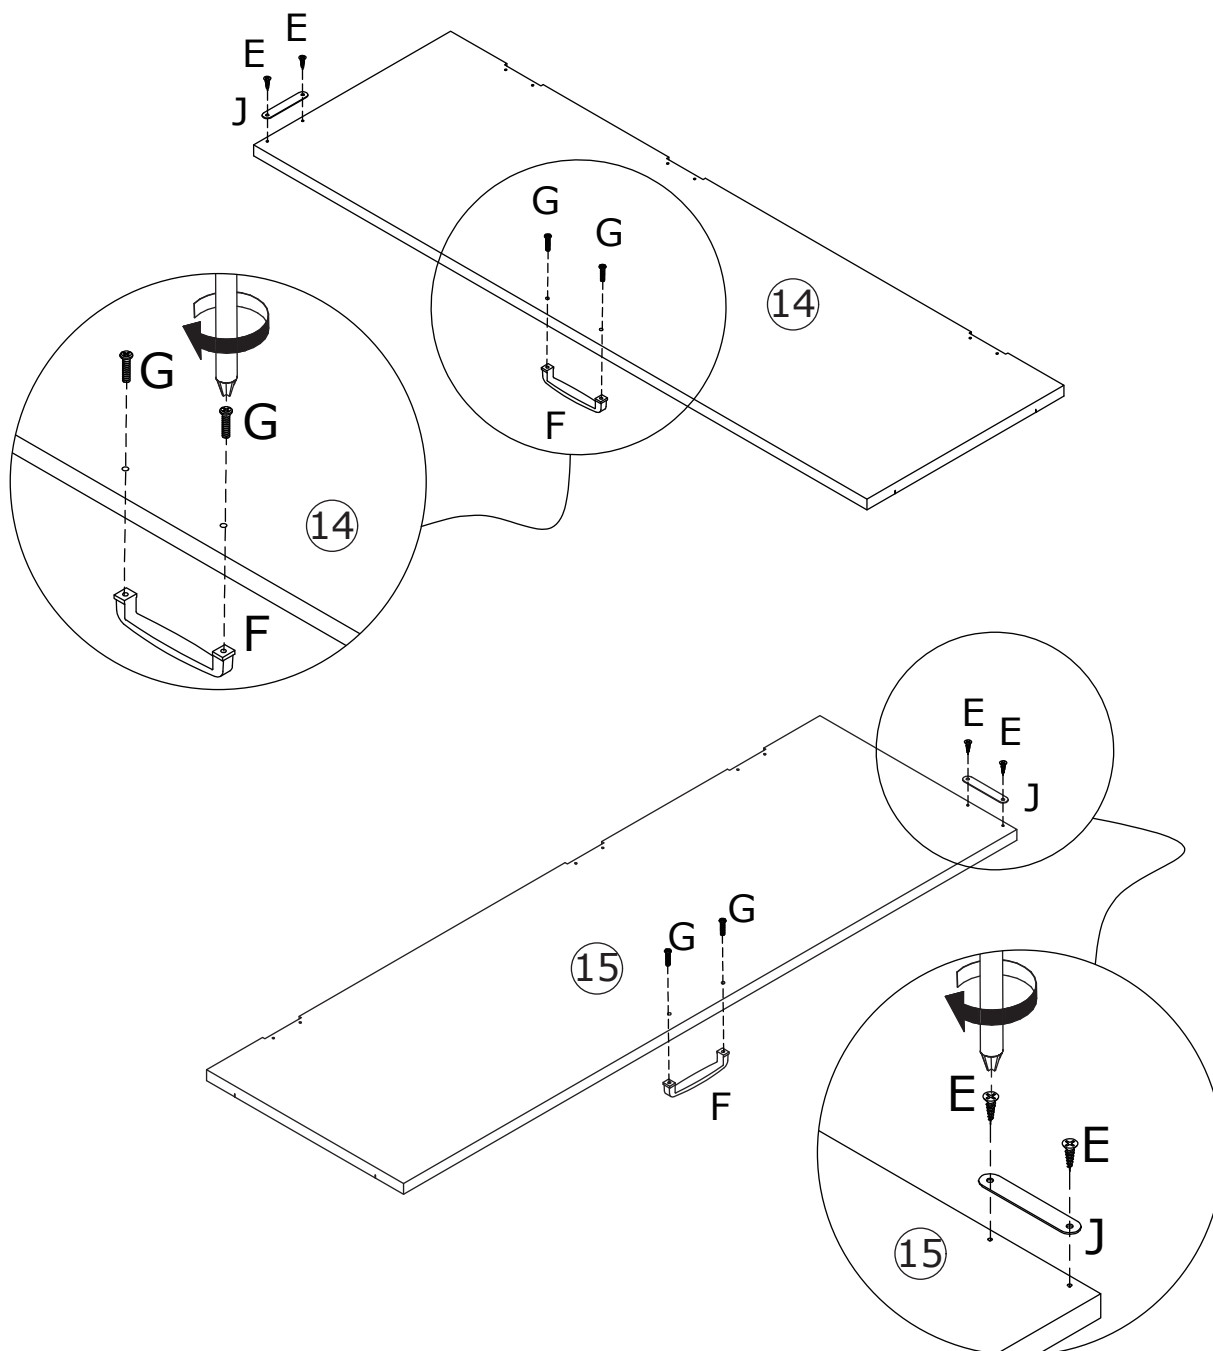  




Secure handle (F) to plates 14 and 15 using screw (G).
Secure fitting (J) using screw (E).

27

E x 24



   M3.5 x 14 mm

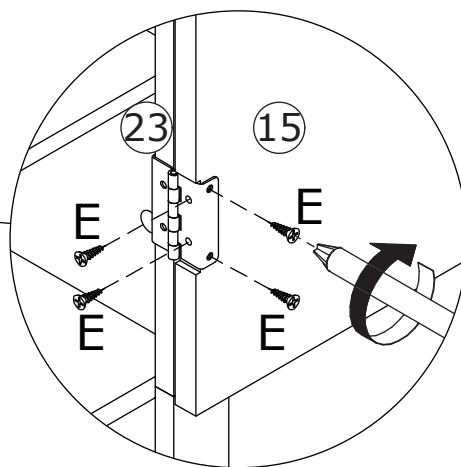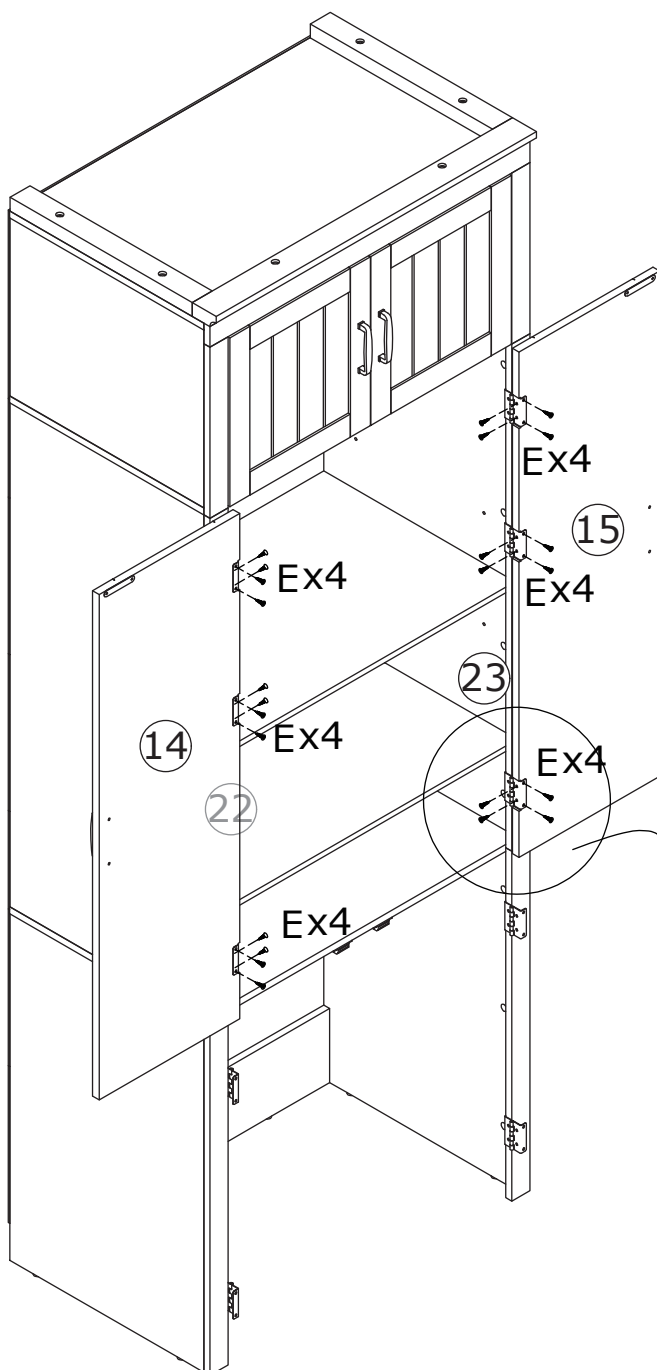

Secure plates 14 and 15 to plates 22 and 23 via hinges using screw (E).

 
28

E x 4



M3.5 x 14 mm

F x 2




111-96

G x 4




M4 x 20 mm

 
J x 2



Ø4 x 63 mm

 


 Secure handle (F) to plates 16 and 17 using screw (G).
Secure fitting (J) using screw (E).

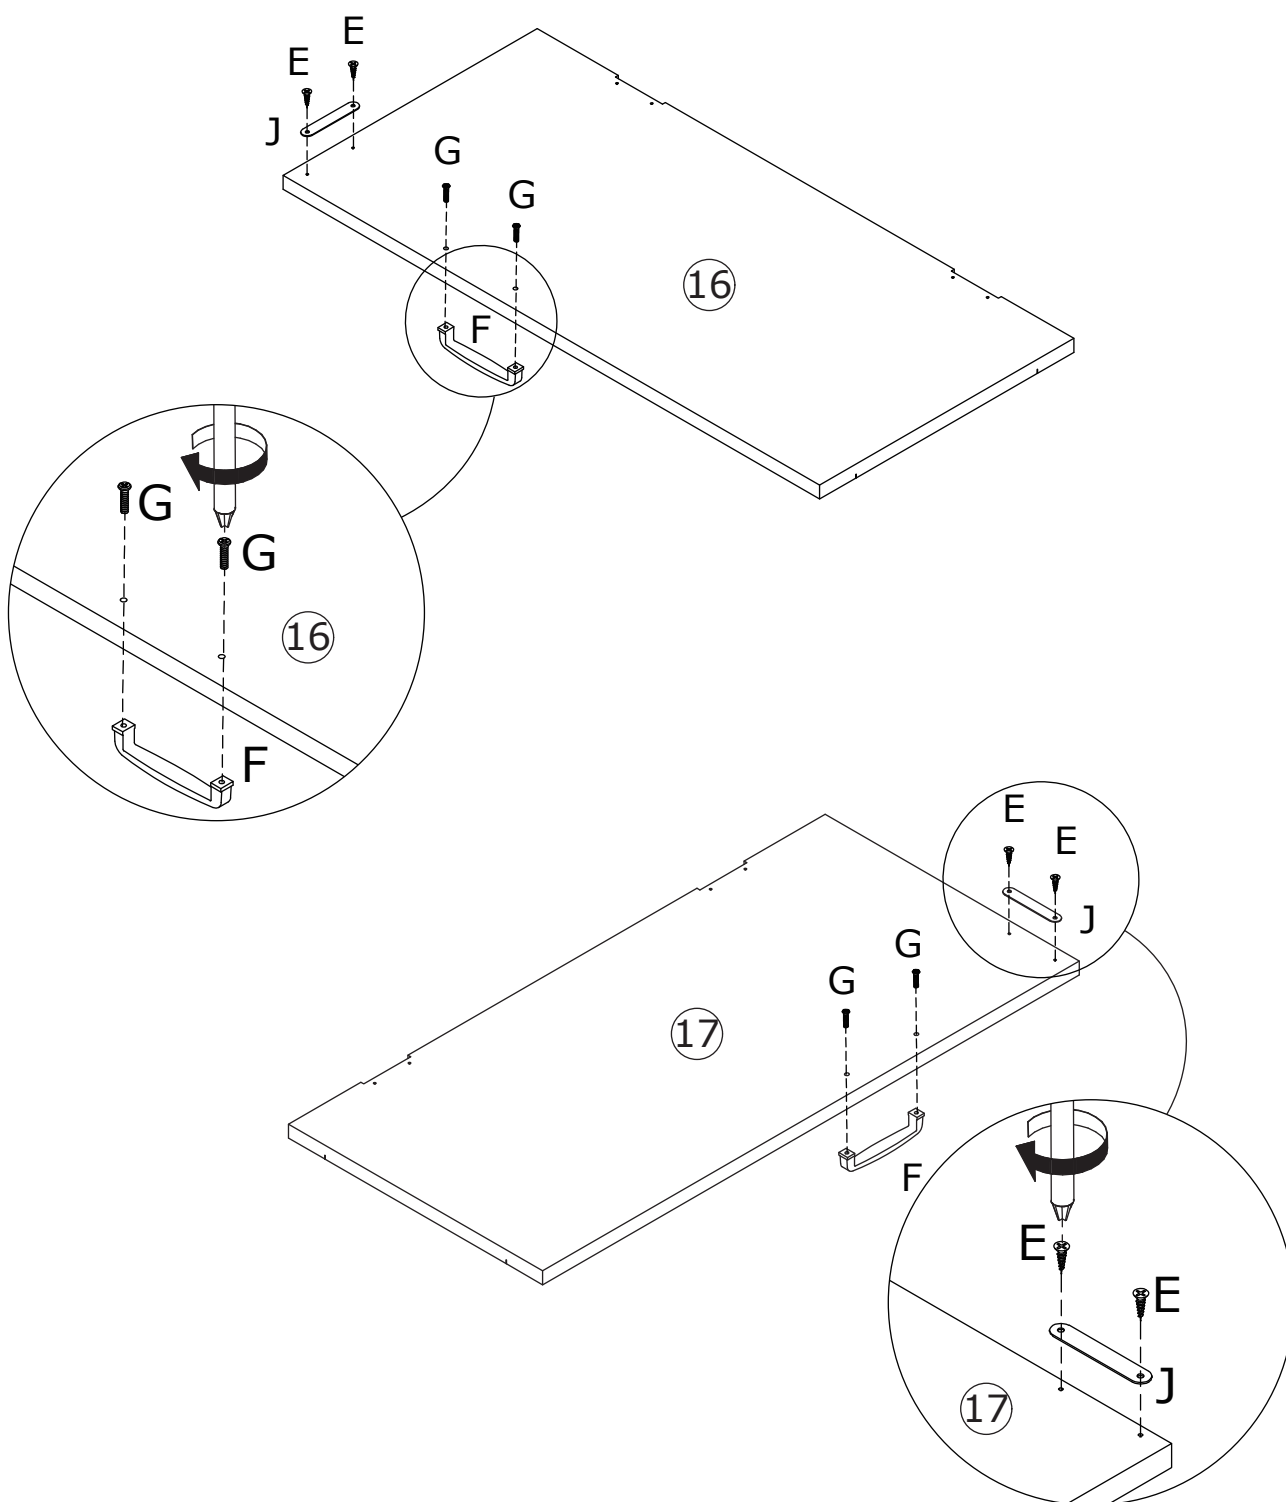


29

 E x 16
M3.5 x 14 mm



 Secure plates 16 and 17 to plates 24 and 25 via hinges using screw (E).

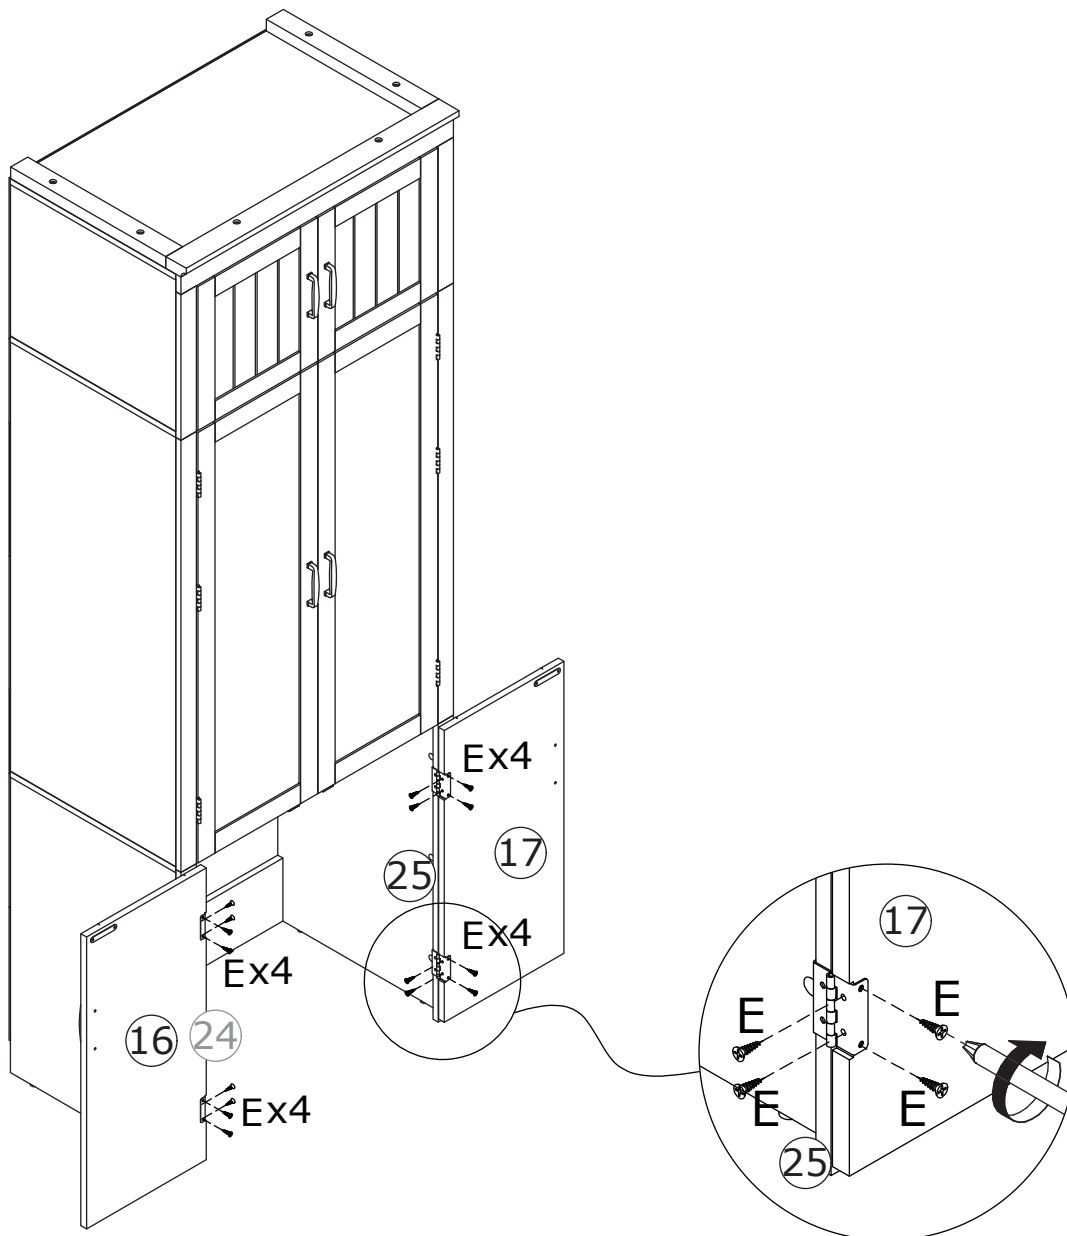

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.