 


TV Cabinet

Installation Instructions

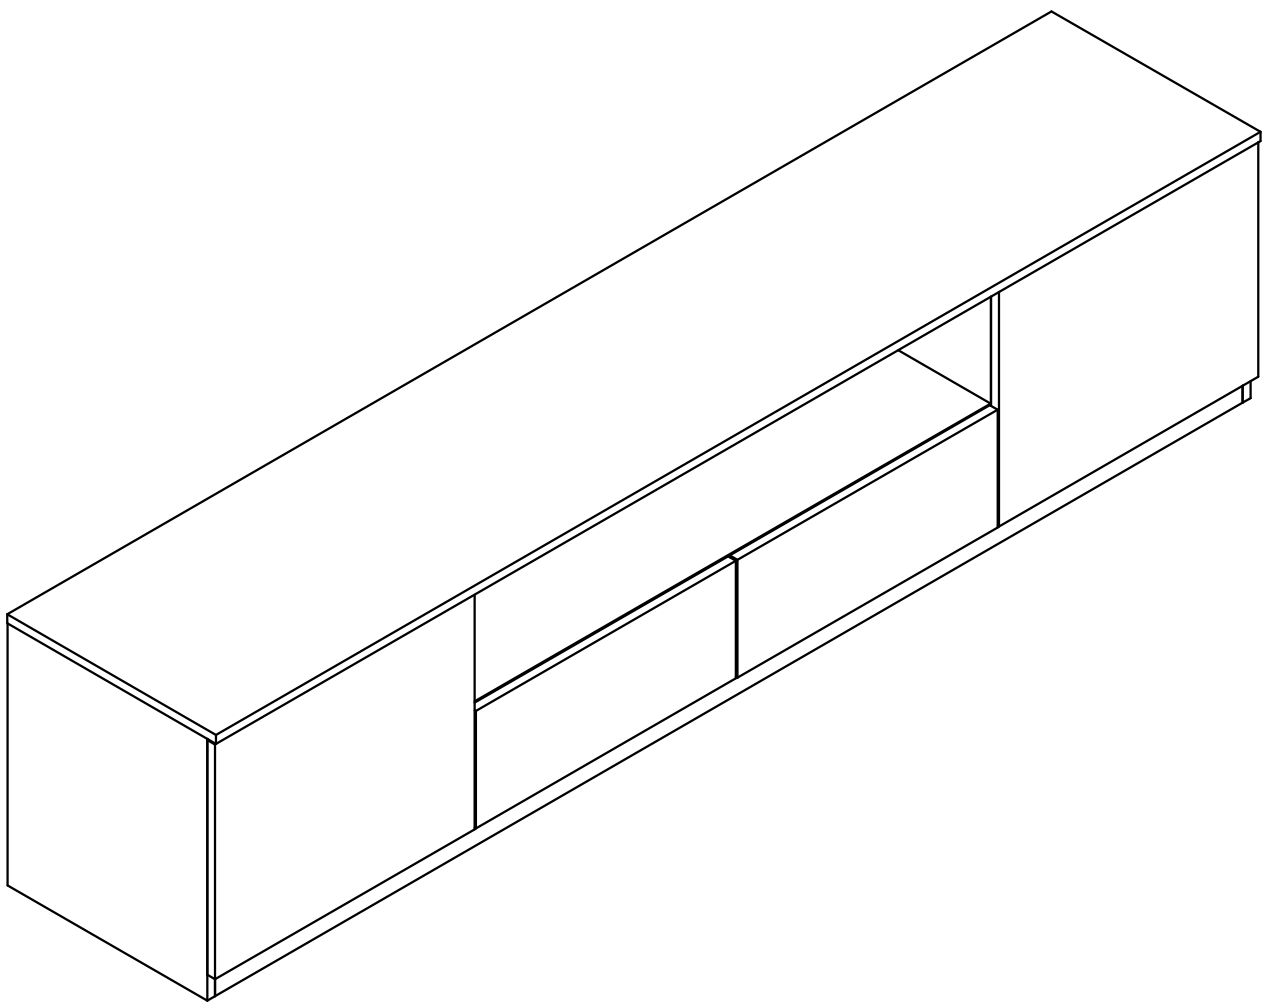

Contents

Before Use

General Guidelines.....	2
Warning.....	2
Material Properties.....	2
Assembly Instructions.....	2
Tools You May Needs.....	2

Installation Guide

Parts List.....	3-4
Accessories List.....	5
Exploded Views.....	6
<i><u>Watch The Installation Video To Assist With Installation.....</u></i>	7
Cam Lock Fastening System Installation.....	7
Installation Steps.....	8-21

Maintenance & Troubleshooting

Use and Maintenance.....	22
Trouble Shooting.....	23

Special Accessories Installation Instructions

Hinge Adjustment Diagram.....	24
-------------------------------	----

After-Sales Warranty.....25

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- Product is intended for indoor use only. It must be assembled and used according to the instructions. The seller does not accept any responsibility for damage or injury resulting from improper assembly or use.
- This summary may not include every detail of all variations and considered steps.
- Please contact us when further information and help are needed.

Warning

- Children are not allowed to assemble the product. During assembly, keep any small part out of reach of children as they may be fatal if swallowed or inhaled.
- Children are not allowed to stand, climb or play on the product to avoid serious bodily injury by toppling.
- Keep plastic packing bags out of reach of children to avoid any potential danger, such as suffocation.
- Avoid sharp objects and corrosive chemicals to prevent damage to the product or bodily injury.

Material Properties

1. Solid Wood

Trees will have a unique texture, scar, color and other natural marks during their growth. These elements constitute the natural beauty of wood. After being made into furniture, there will be discoloration when viewed under different light and different angles. That is because different grain minerals and light intensity affect vision, which is a normal phenomenon.

2. Marble and Sintered Stone

The pattern of marble and sintered stone is unique to each piece. Due to the characteristics of the material, there is no guarantee that the pattern of each piece will be consistent with the pattern seen at the time of purchase.

Assembly Instructions

- Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.
- When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.
- During assembly, align all screws with the corresponding pre-drilled holes first and then tighten them one by one.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Tools You May Needs



TIME



















2 People






DIFFICULTY

- Note: It is recommended that installation of the product be done by a qualified licensed furniture assembler.

PARTS LIST

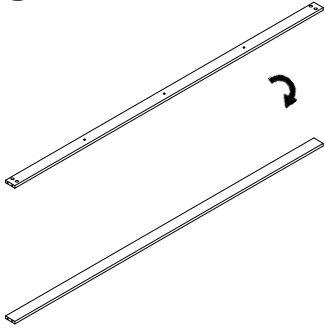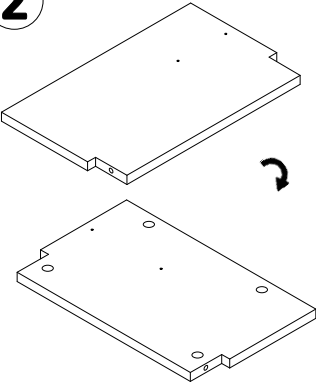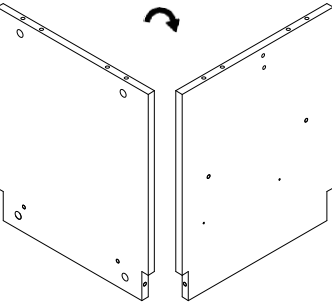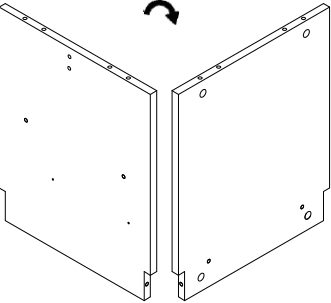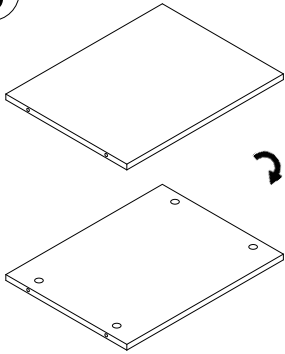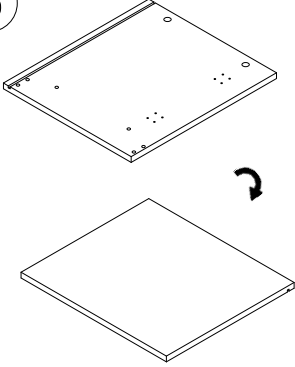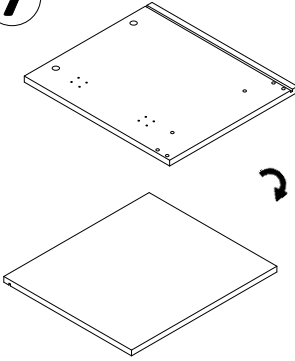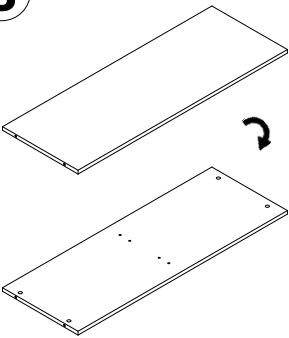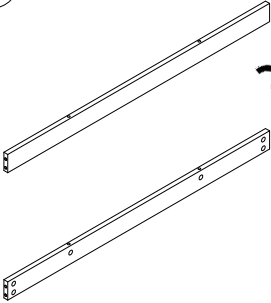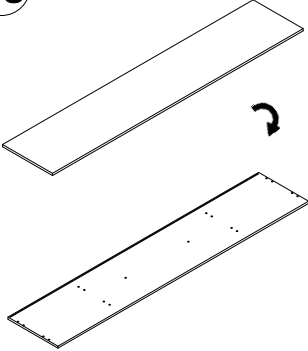
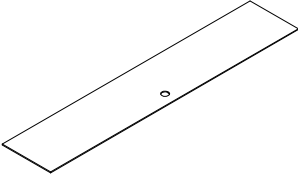
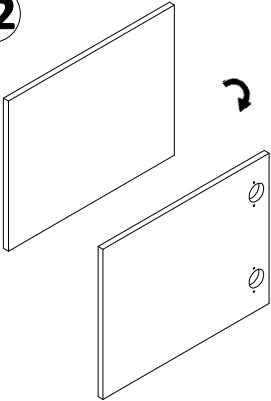
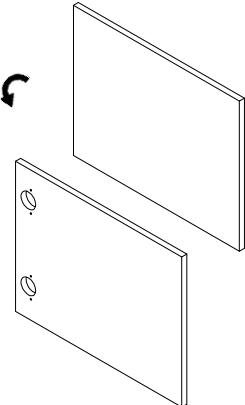
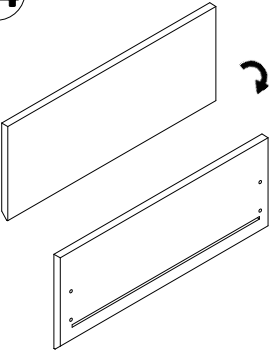
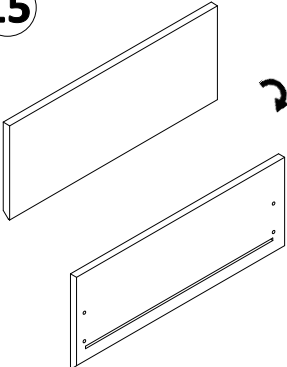
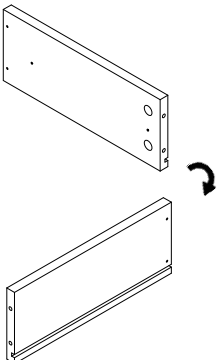
1 	2 	3 	4 
2PCS	1PC	1PC	1PC
5 	6 	7 	8 
2PCS	1PC	1PC	1PC
9 	10 	11 	12 
1PC	1PC	1PC	1PC
13 	14 	15 	16 
1PC	1PC	1PC	2PCS

PARTS LIST

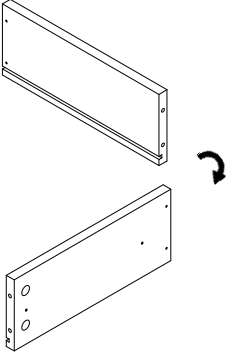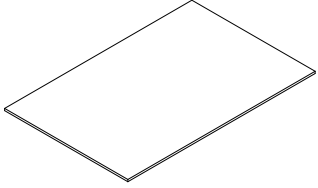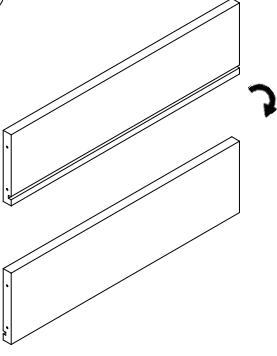17 	18 	19 	
2PCS	2PCS	2PCS	


- The number in the upper left corner indicates the panel code, and the number in the lower middle indicates the quantity.
- As some panels feature holes on both sides, both front and back views are provided accordingly in the parts list.
- If you encounter any missing or damaged panels, please contact customer service immediately. We will prioritize resolving your issue promptly.

HARDWARE LIST

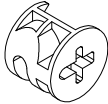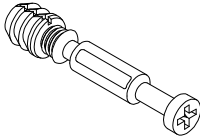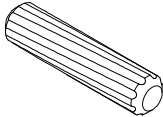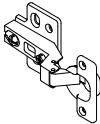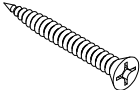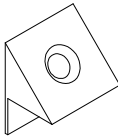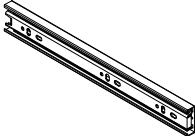
A		B		C		D		E	
									
Ø15*10MM	50PCS	Ø6*35MM	50PCS	Ø8*30MM	10PCS		4PCS	Ø3.5*35MM	8PCS
F		G		H		K			
									
Ø3.5*14MM	52PCS		8PCS		8PCS	10"	4PCS		

Exploded Views


Each wooden board has an number sticker. Match them one-by-one according to the steps in the assembly manual.

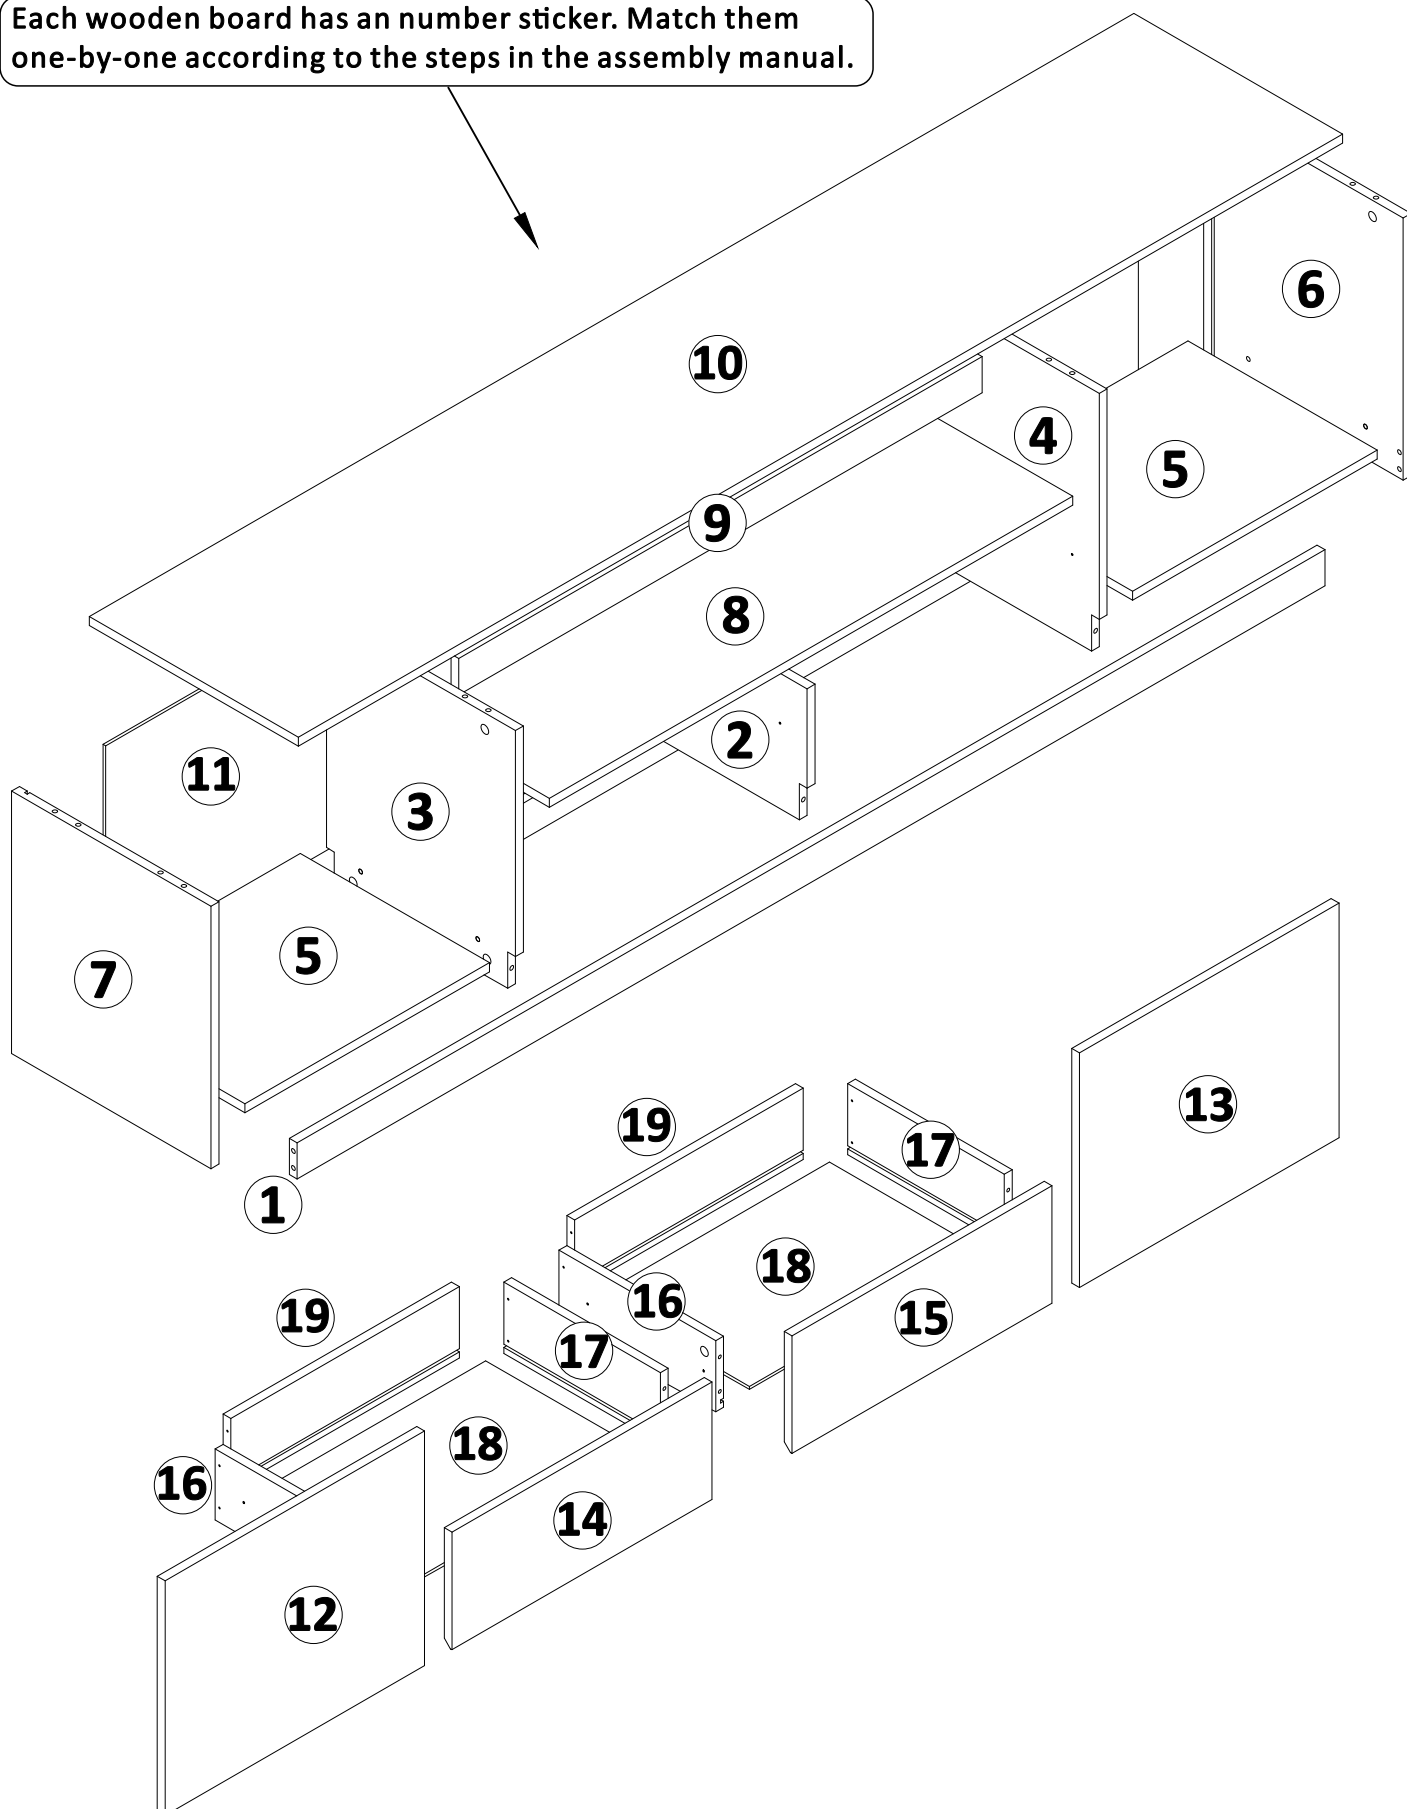


Cam Lock Fastening System Installation

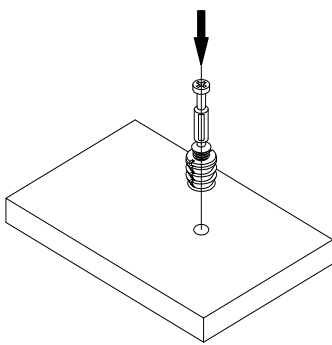


1. Install the screw rod.

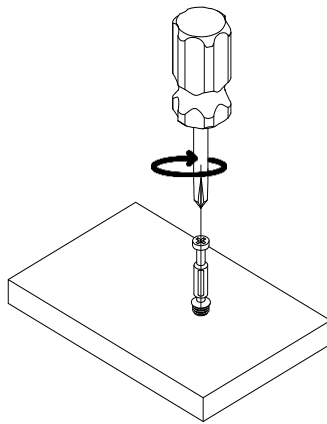


2. Tighten the screw rod clockwise.

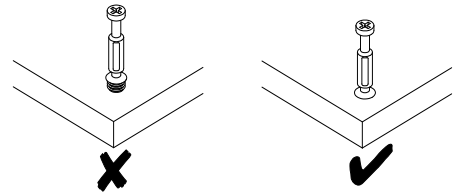


3. Pay attention to tightening the screw rod.

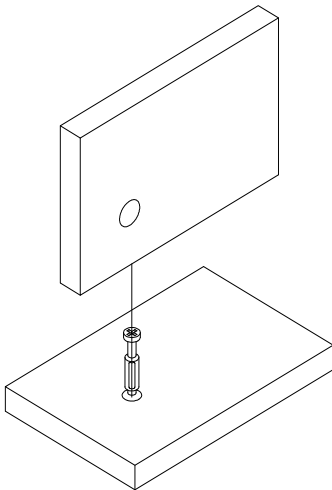

4. Installation plate.

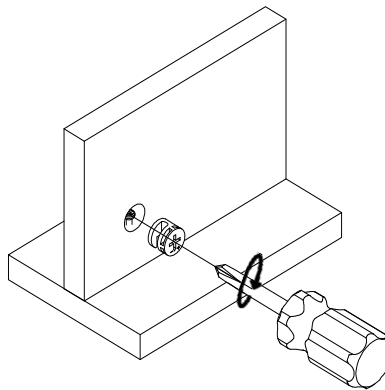


5. Align the arrow of the eccentric component with the screw rod.

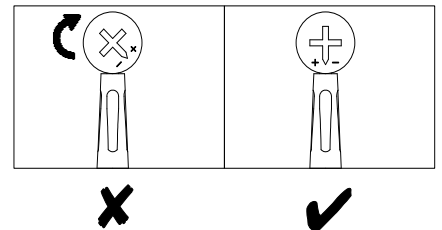


6. Pay attention to aligning the arrow of the eccentric part with the screw rod.


Step 1

As shown in the diagram, screw #B (connector bolt) into the corresponding holes of the panels 1/3 (front and back) /4 (front and back) /6/7/8/10/14/15.

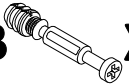B  **X50**

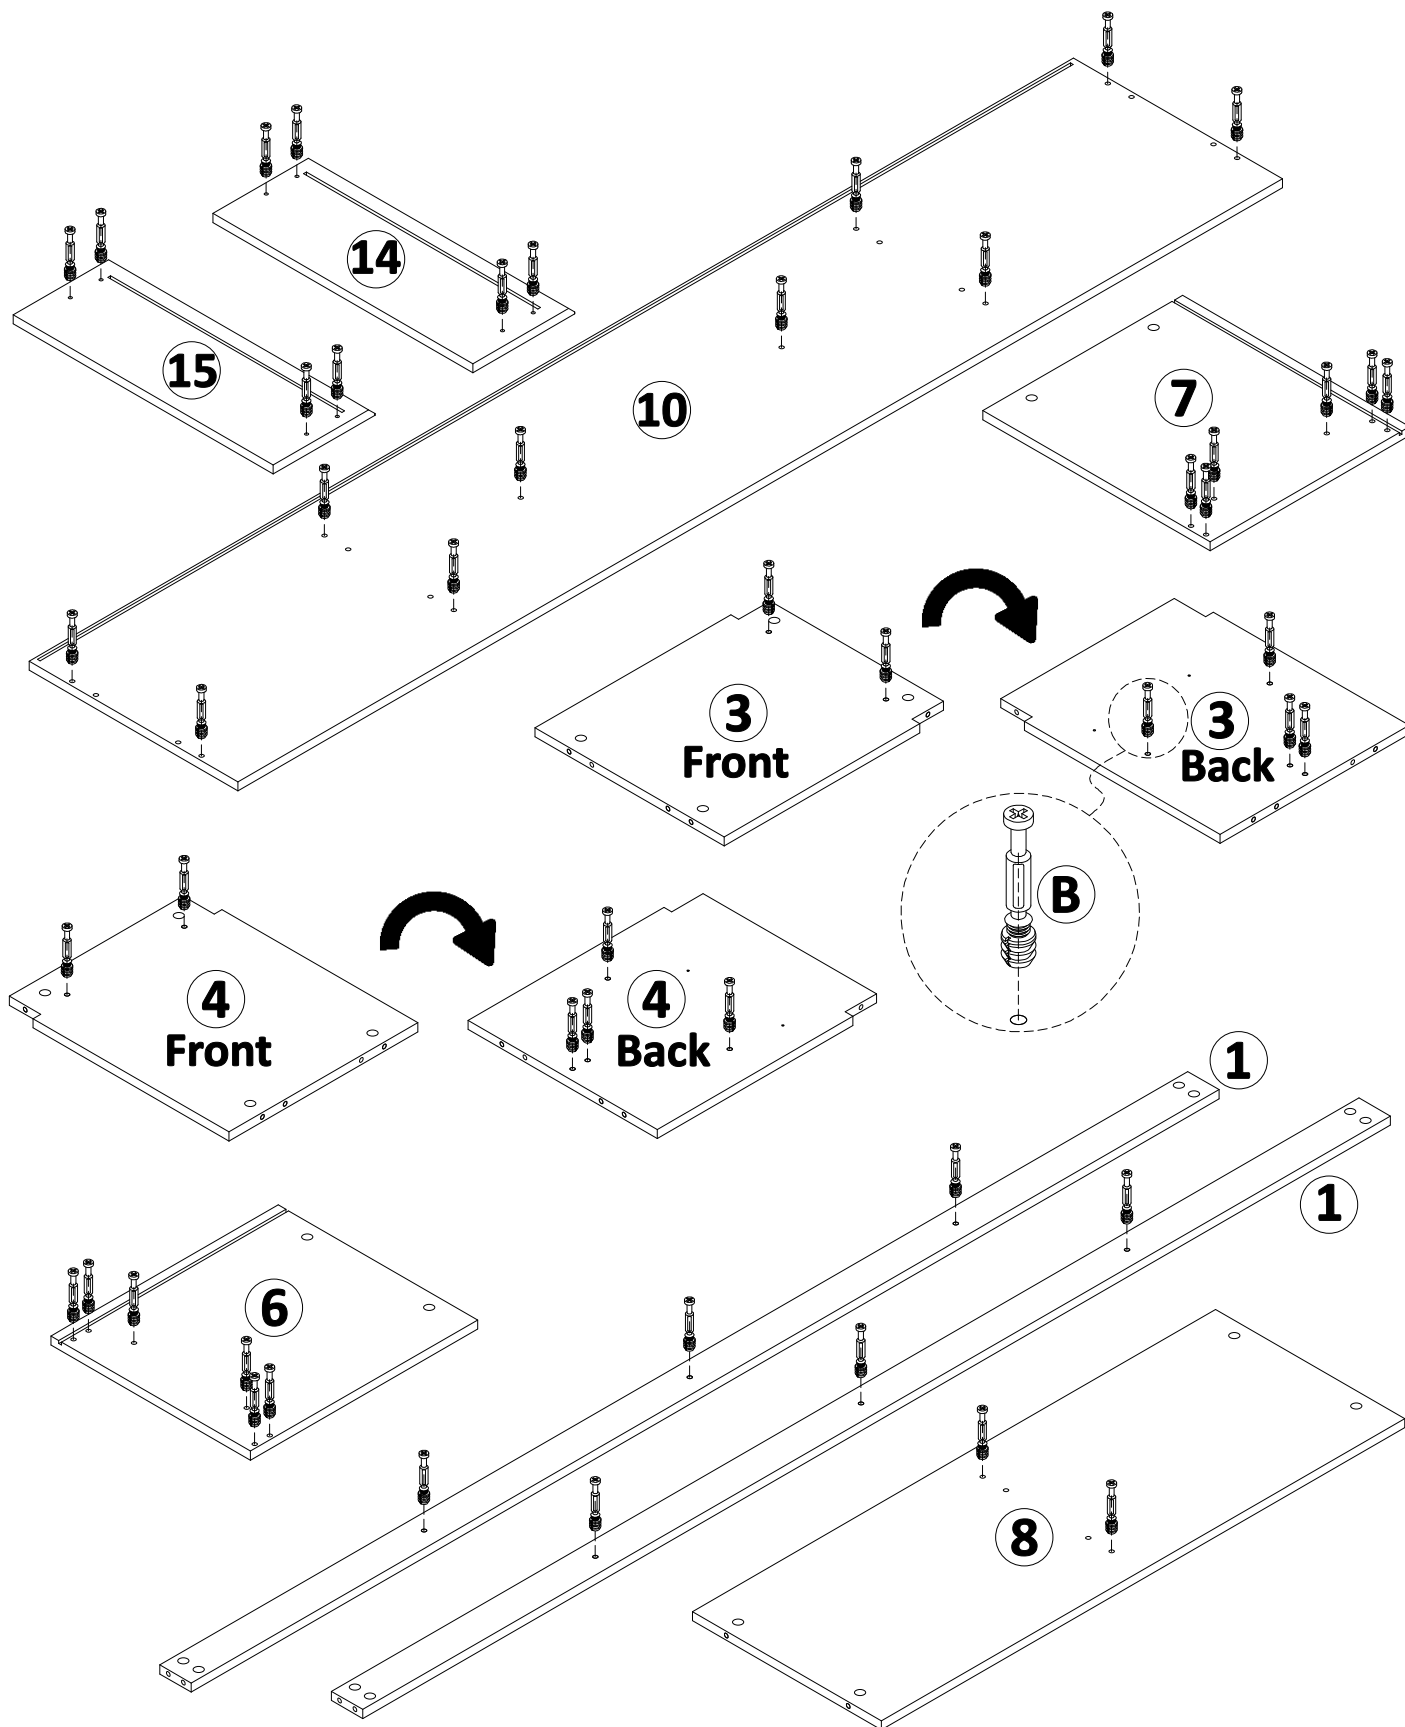

Step 2




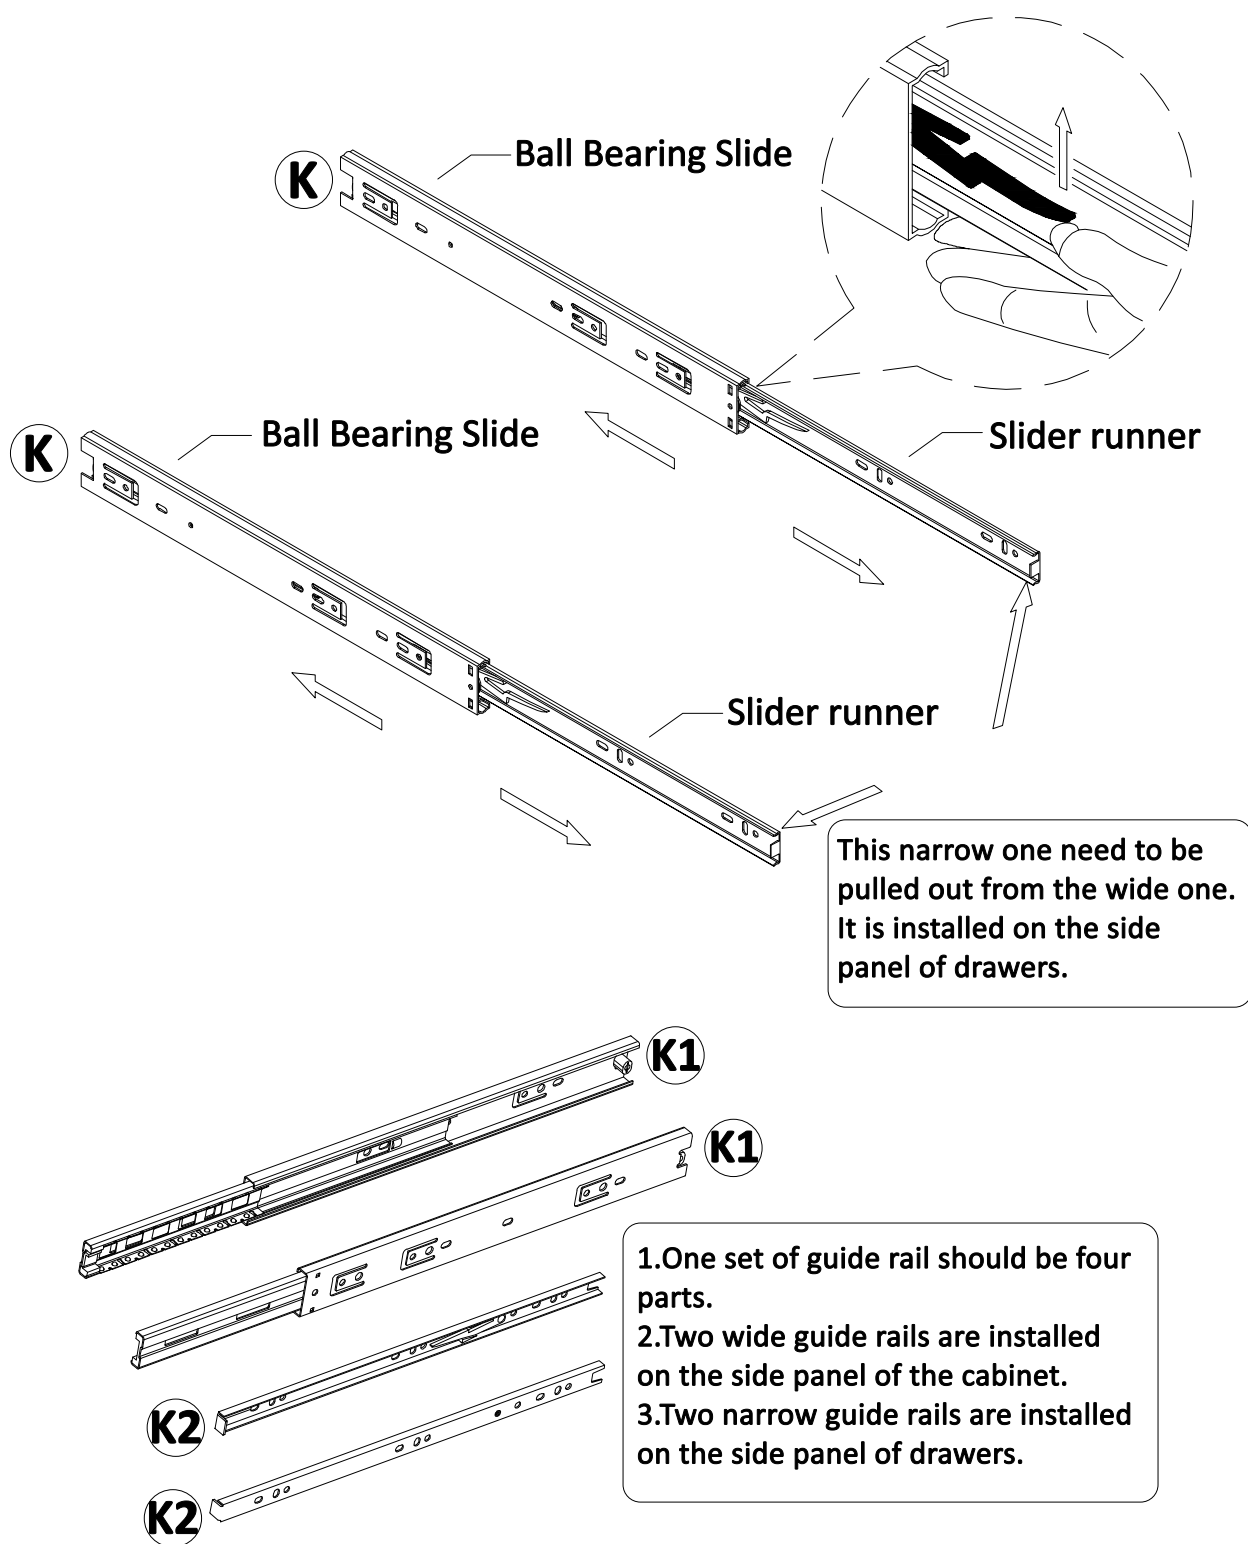


Attention:

Take care when installing the slide rails as they have been pre-lubricated.

Step 3






Secure two #K1 units to panels 3 (back) /4 (back) using #F (screws).

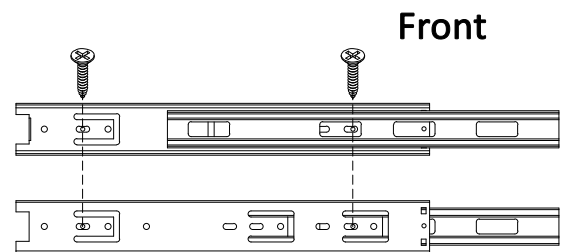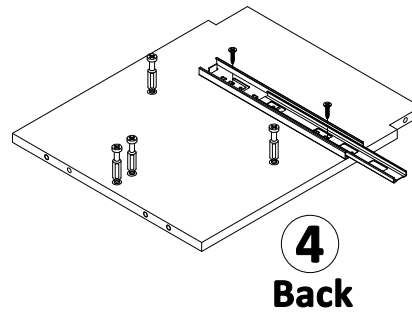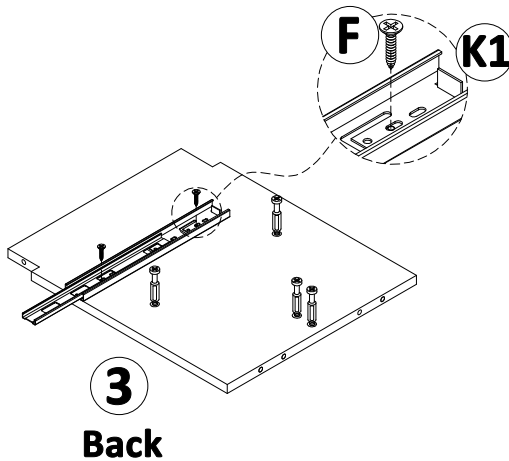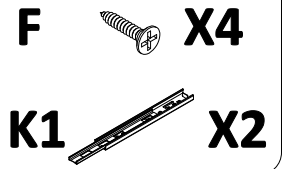

Step 4



Secure two #K1 units to panel 2 (front and back) using #F (screws).

Tips: Note that different hole positions are used when installing the guide rails on the front and back of panel 2.

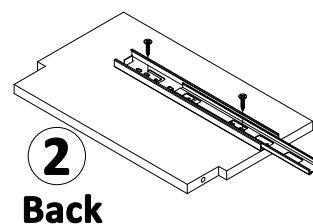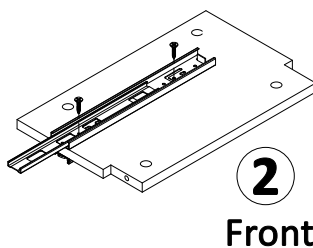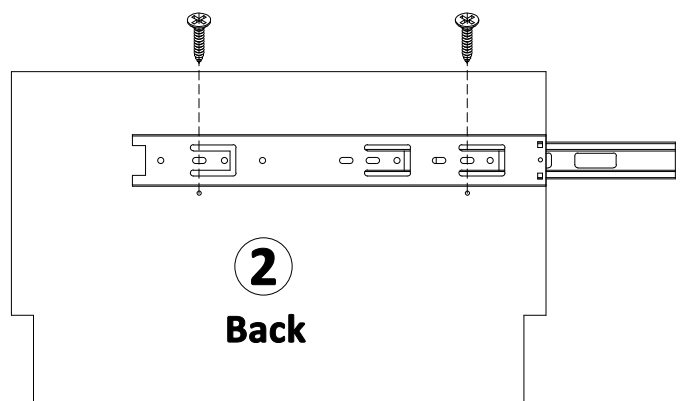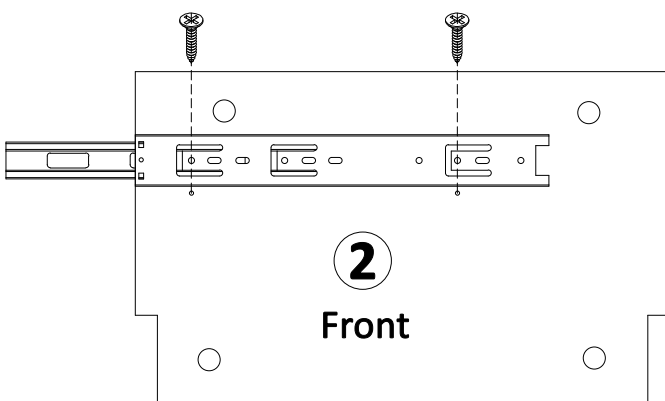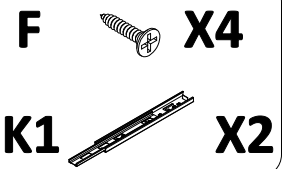


Step 5

Insert #C (wood dowel pins) into panel 8, connect panel 2 to panel 8, then secure with #A (eccentric locks) and tighten.

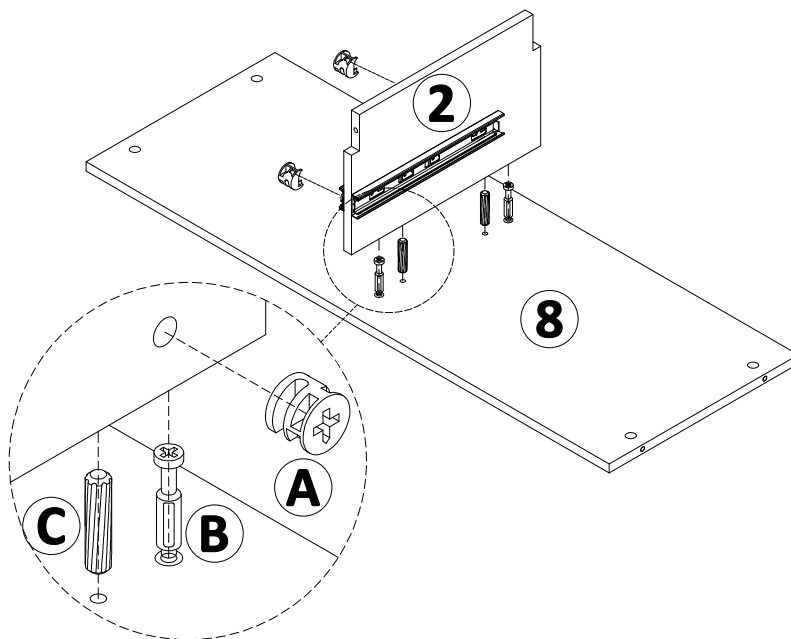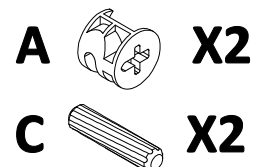

Step 6

Snap panels 3 and 4 into the sides of panels 8 and 9 and screw in #A (eccentric locks) to secure.

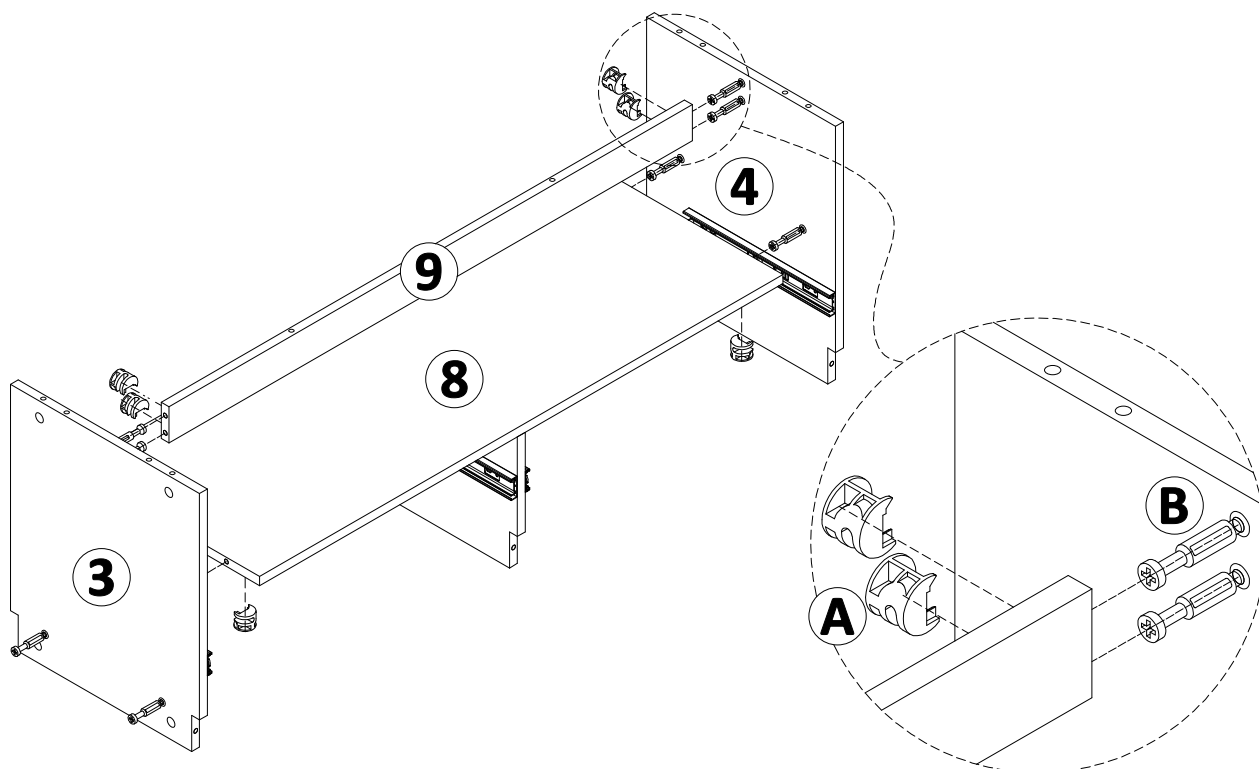


Step 7

1. As shown in the figure, insert the two panels 1 into the sides of the pre-assembled component and secure them with screw #A (eccentric locks).

A  **X6**


2. Then flip it over again to proceed with the subsequent installation.

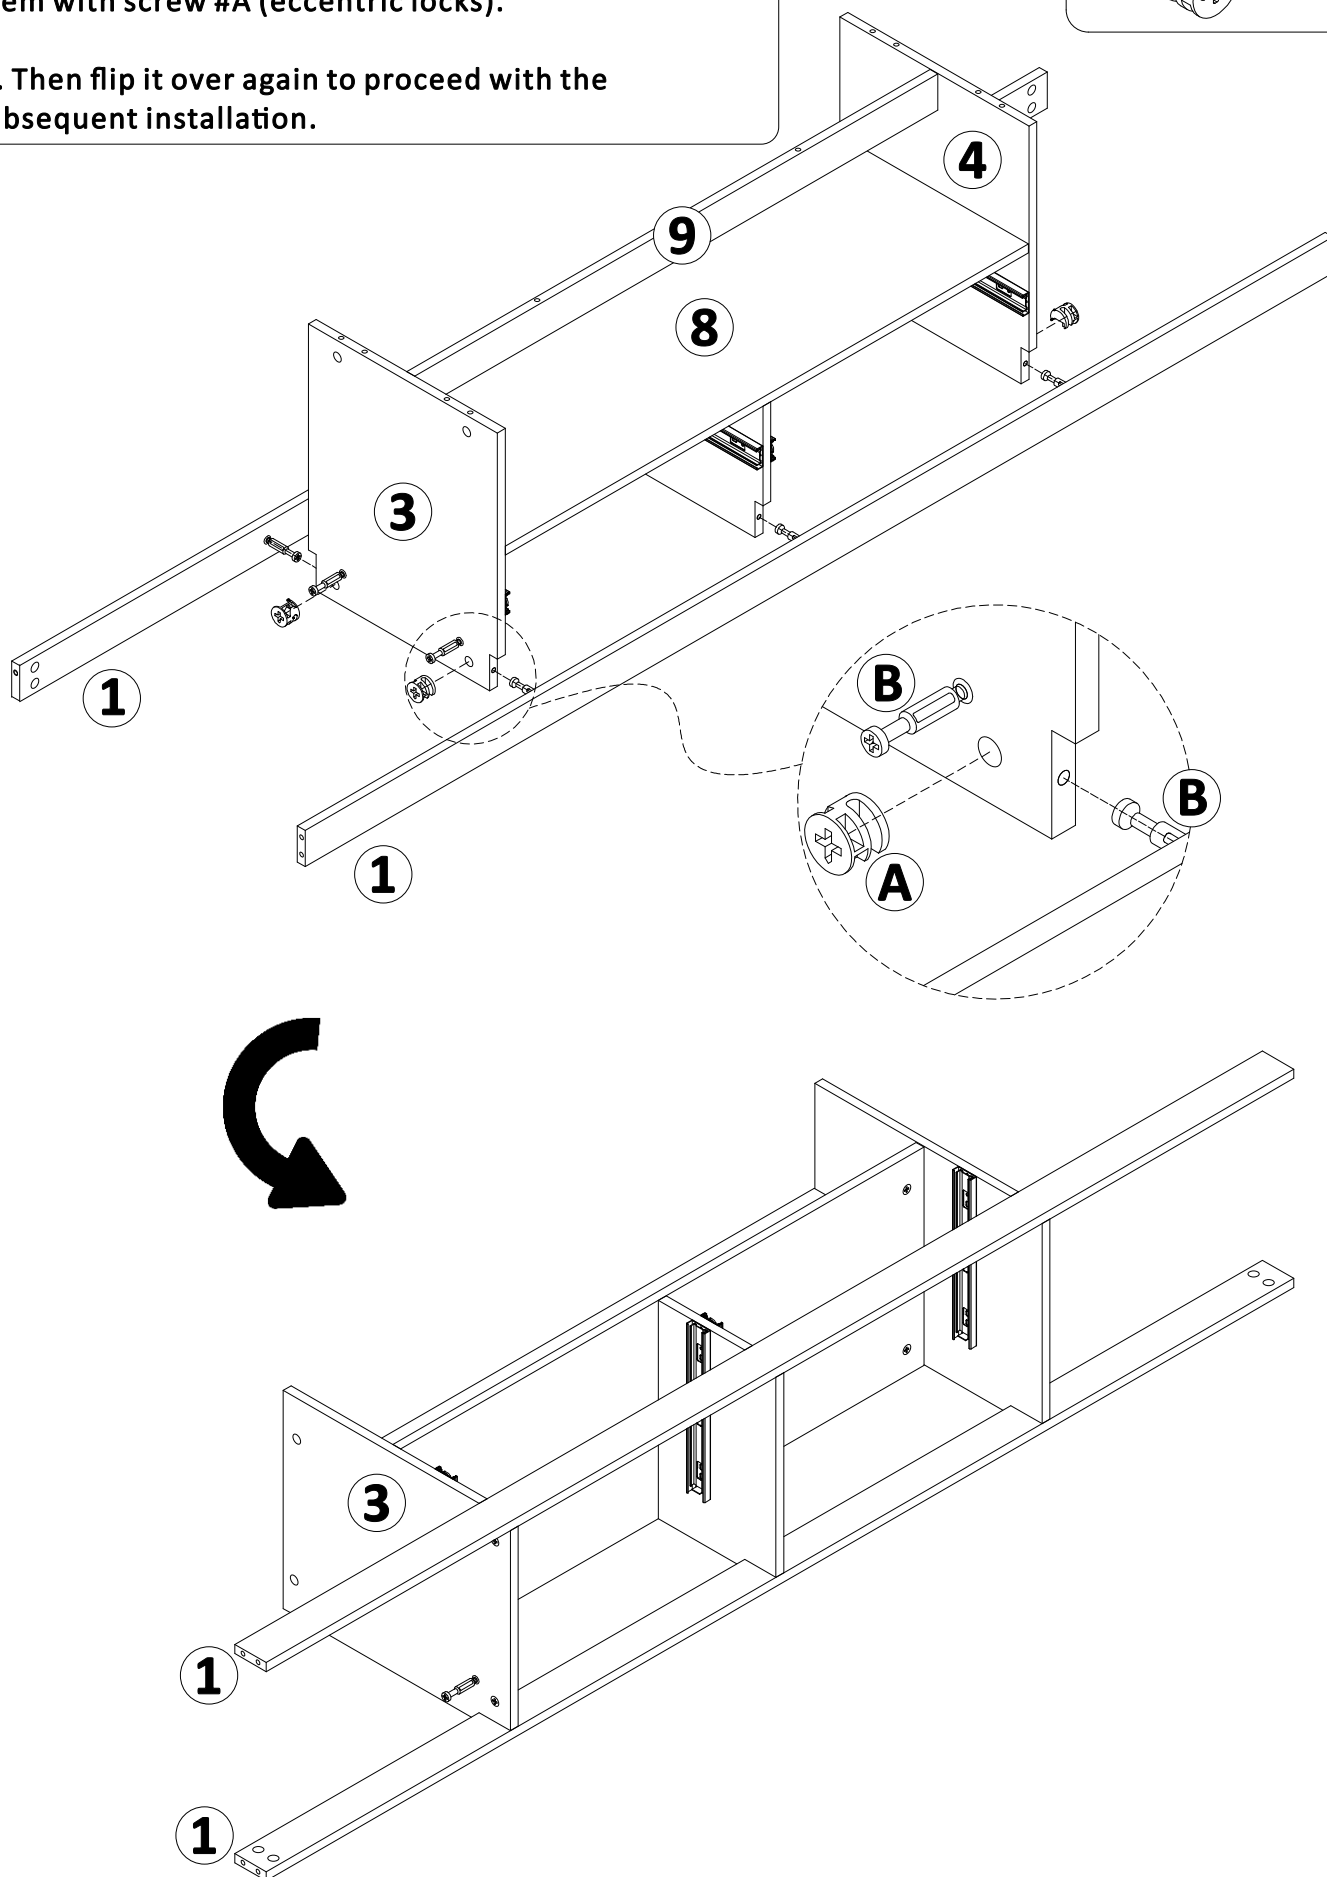

Step 8



A  **X4**

As shown in the figure, insert the two panels 5 into the sides of the pre-assembled component and secure them with screw #A (eccentric locks).

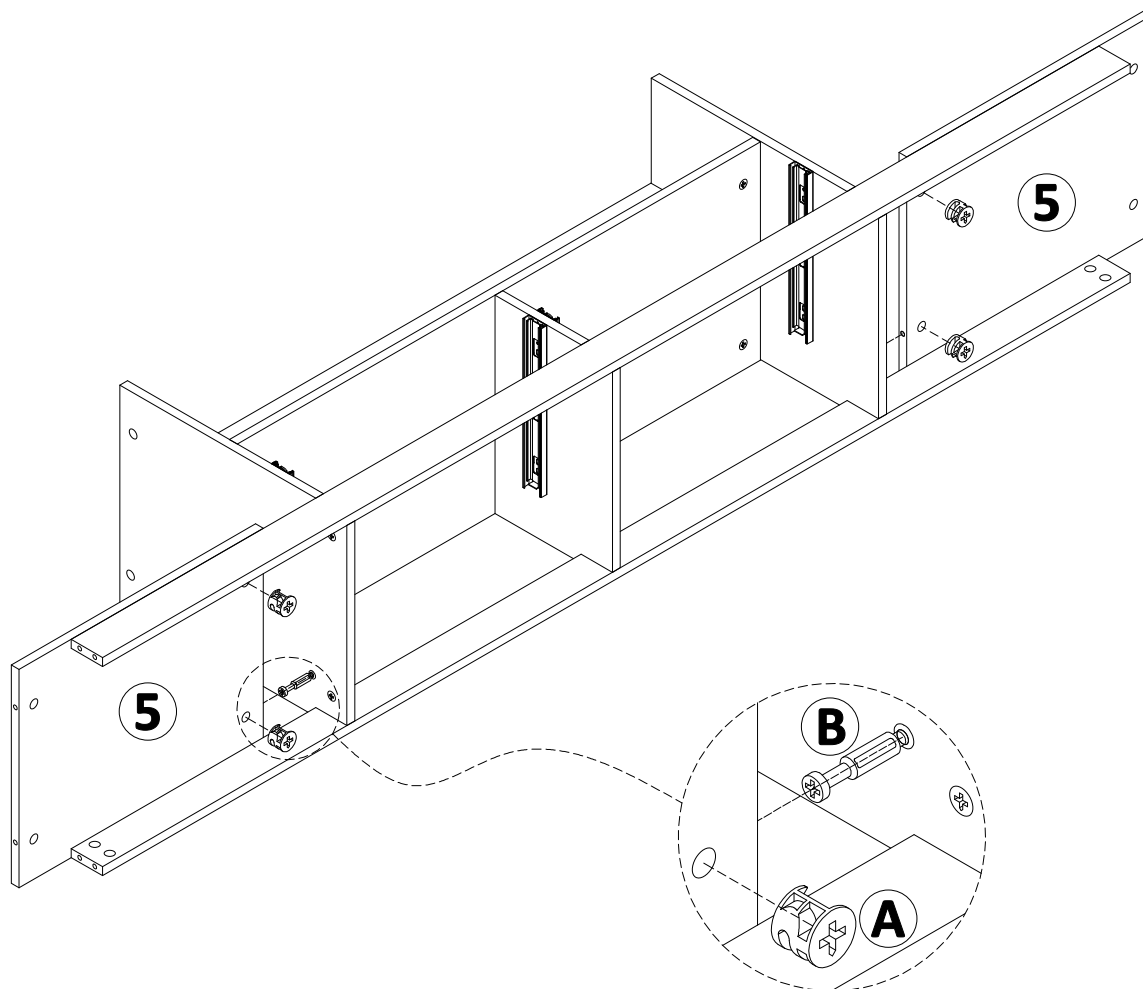



Step 9

1. As shown in the figure, insert the panels 6/7 into the sides of the pre-assembled component and secure them with screw #A (eccentric locks).
2. Ensure the side grooves on the panels are facing inward and downward, as shown in the diagram.
3. Install accessory #G onto the corresponding panels 1/6/7.

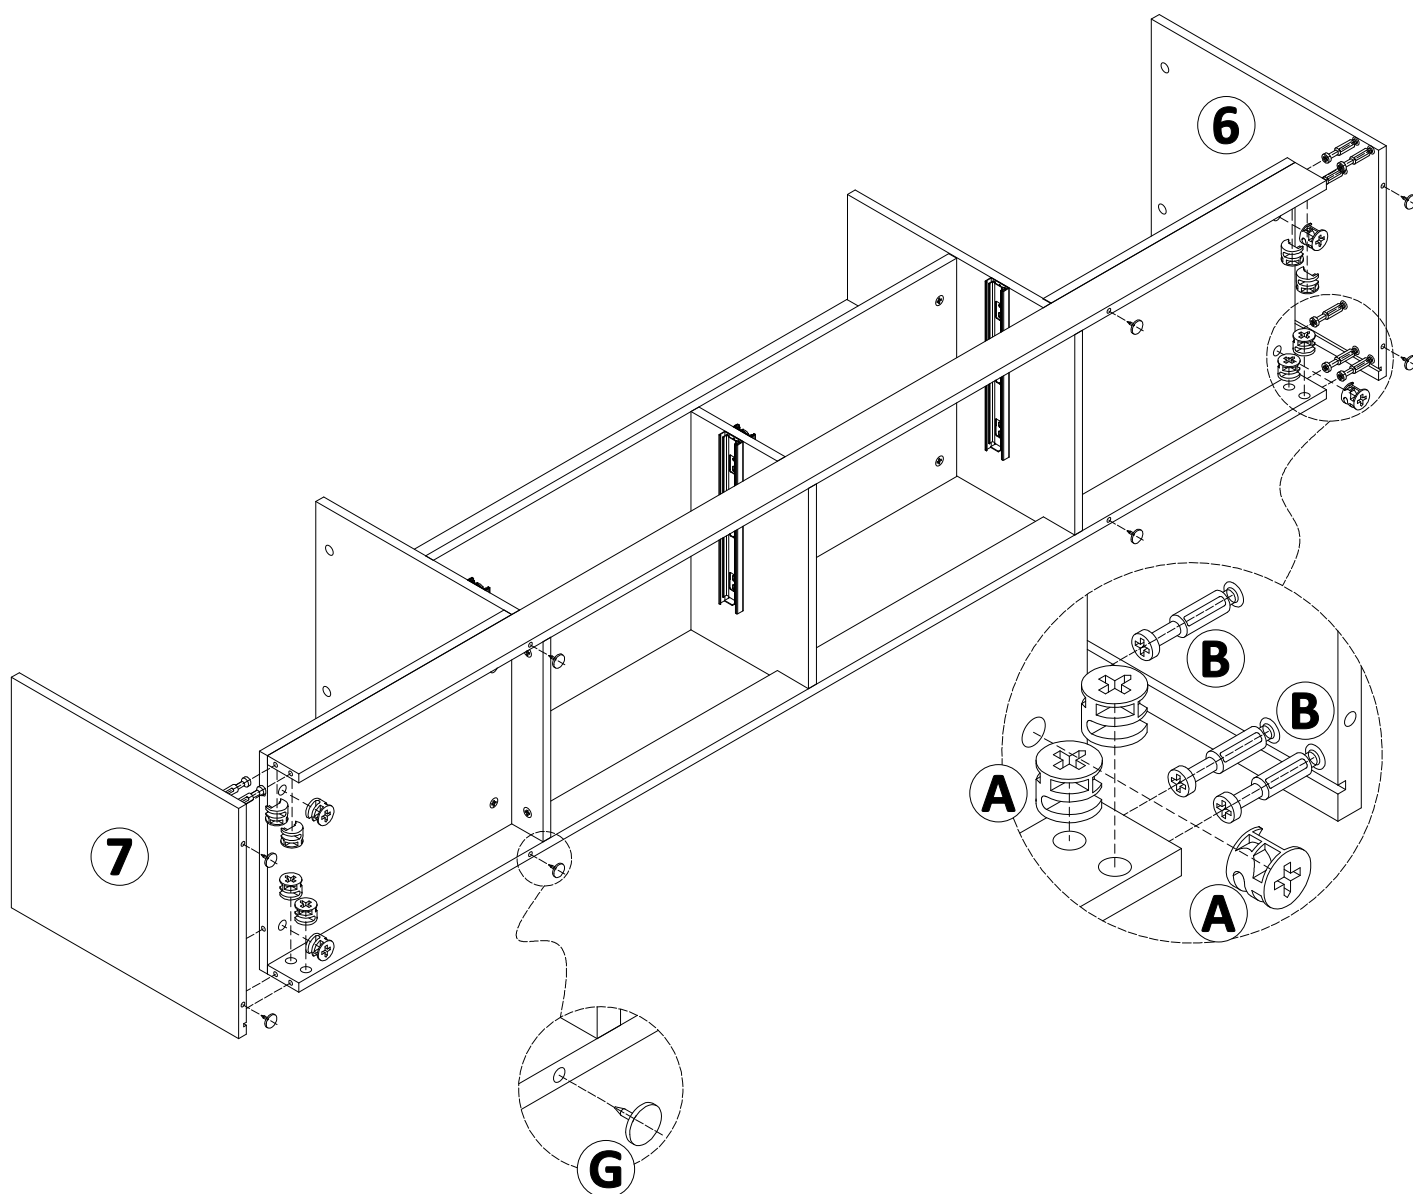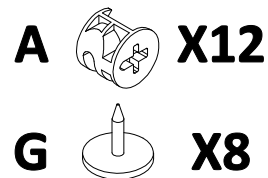


Step 10


1. Rotate the pre-assembled component to its upright position.
2. Install the #C (wood dowel pins) into the corresponding holes on the top of panels 3/4/6/7.
3. Then, place panel 10 on top. Finally, insert and tighten the #A (eccentric locks).

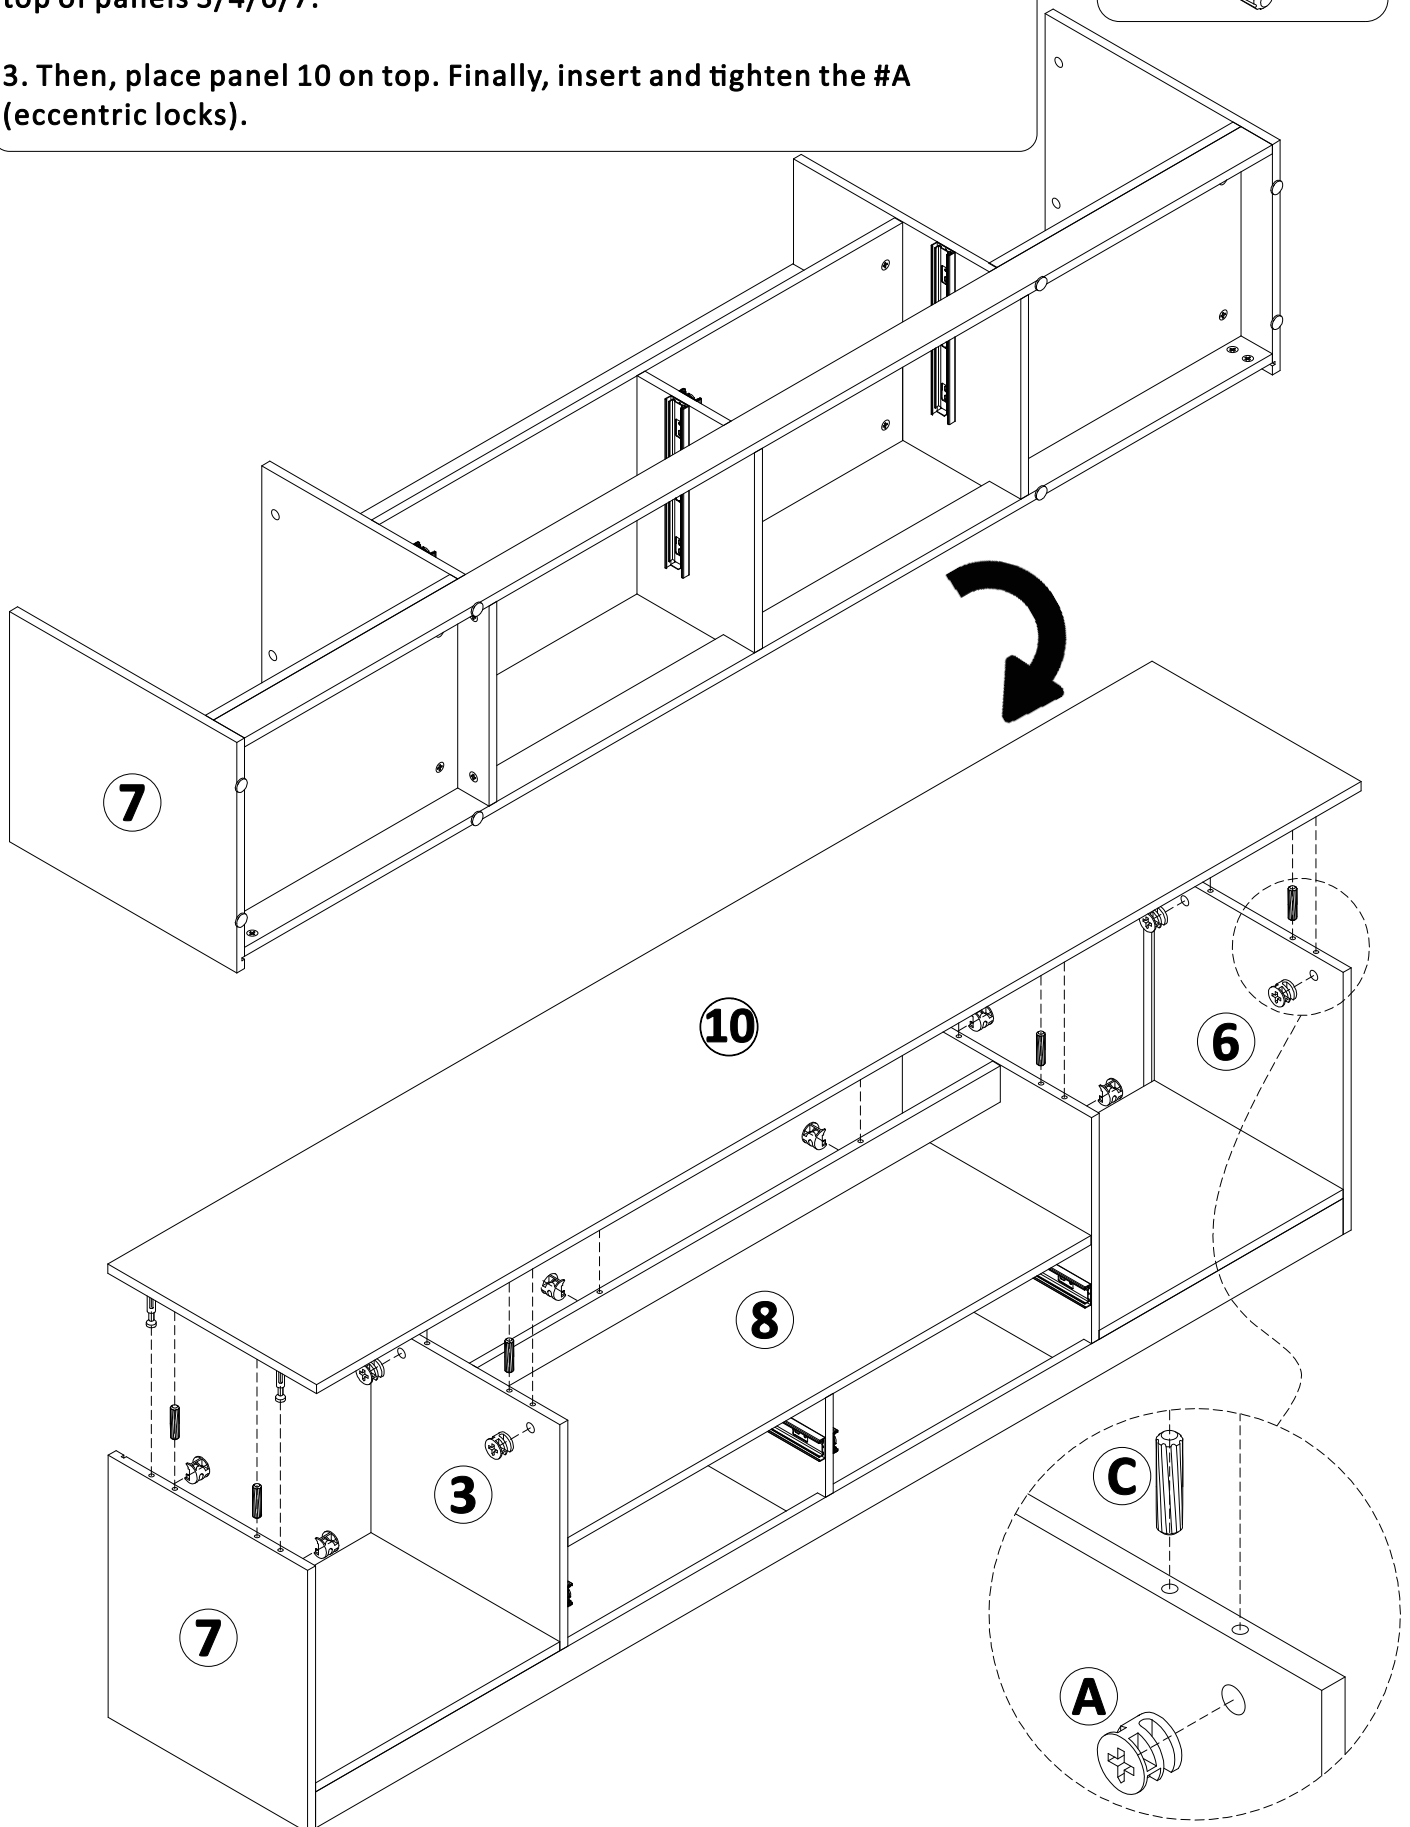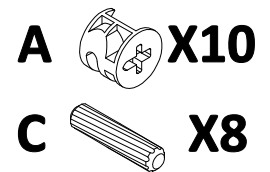

Step 11

Flip the pre-assembled component over once more. Secure panel 11 into the grooves, and then fasten it using #F (screws) and #H (accessory).

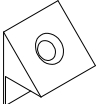
F  **X12**
H  **X8**

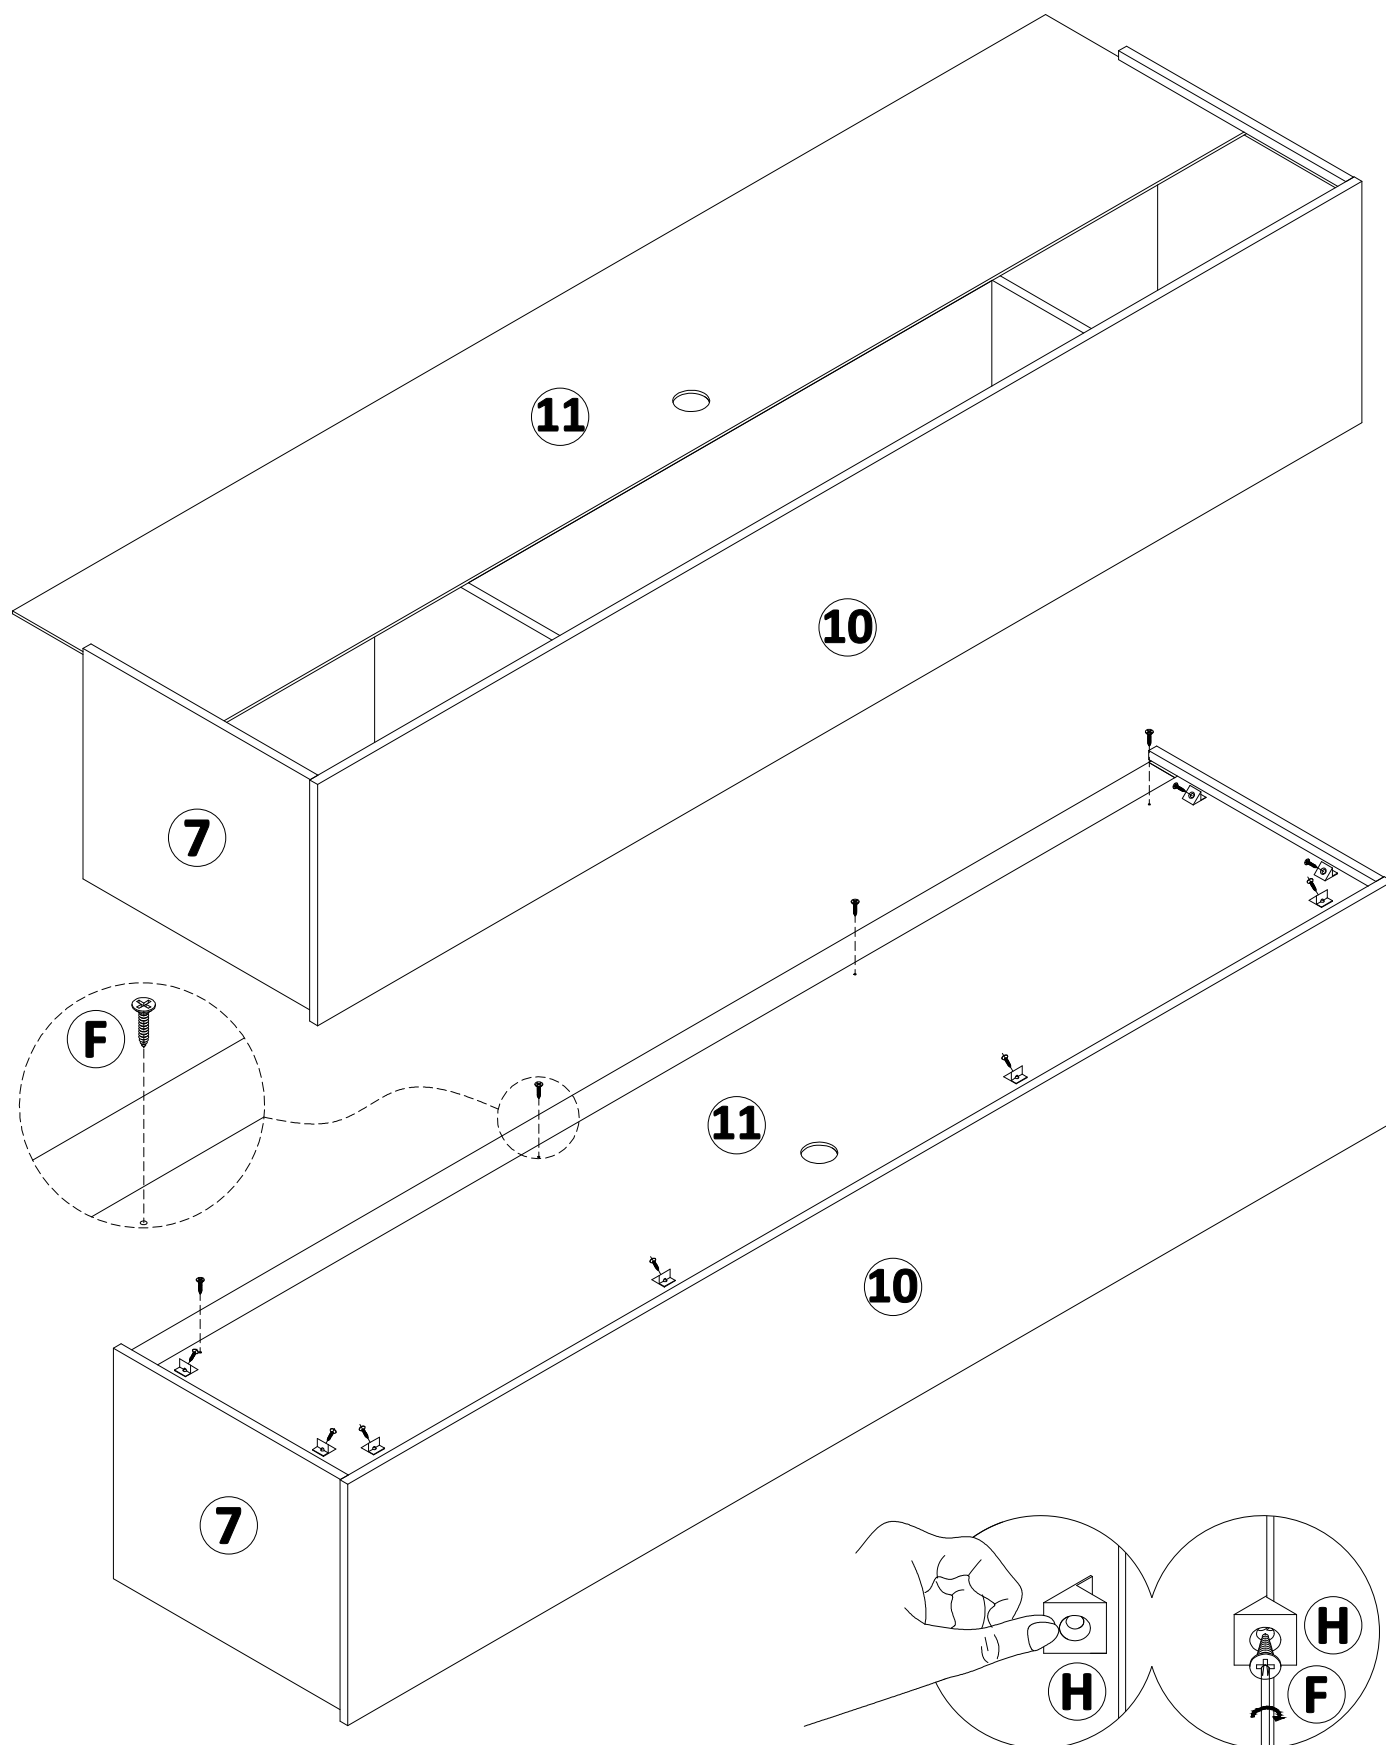

Step 12


Drawer Assembly:

Using #E (screws) secure panel 16 and panel 17 to both sides of panel 19, ensuring the grooves are aligned in the same direction. This step needs to be installed twice.

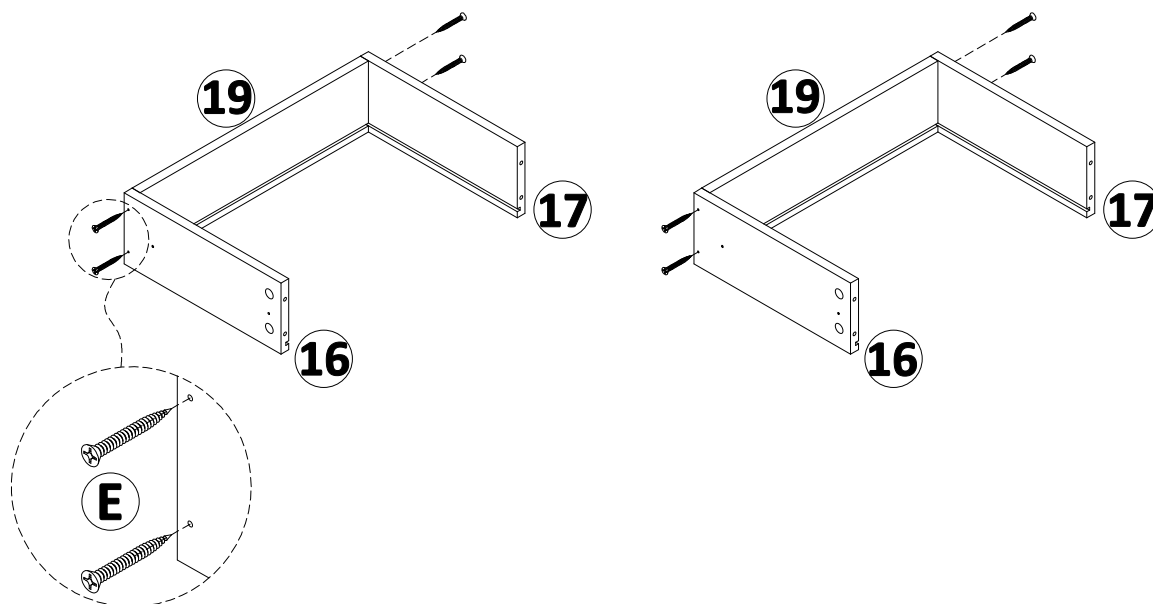E**X8**

Step 13


Snap panel 18 into the groove. This step needs to be done twice.

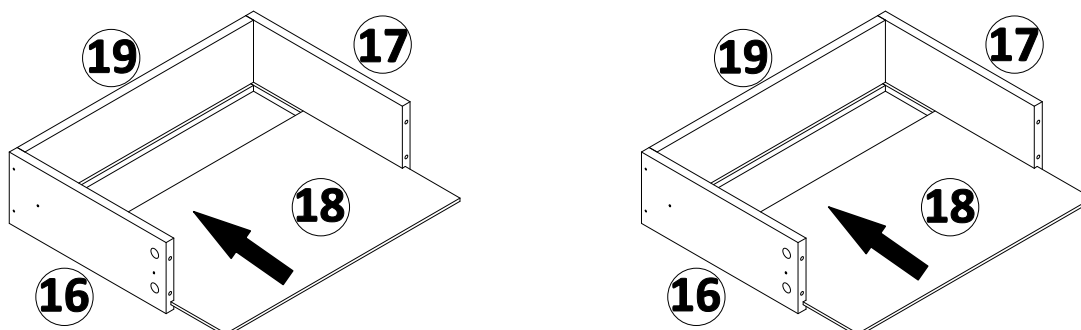

Step 14

Install panel 14/15 (drawer front) to the pre-drawer assembly and secure it by screwing #A (eccentric locks) into the side mounting holes.

A  **X8**

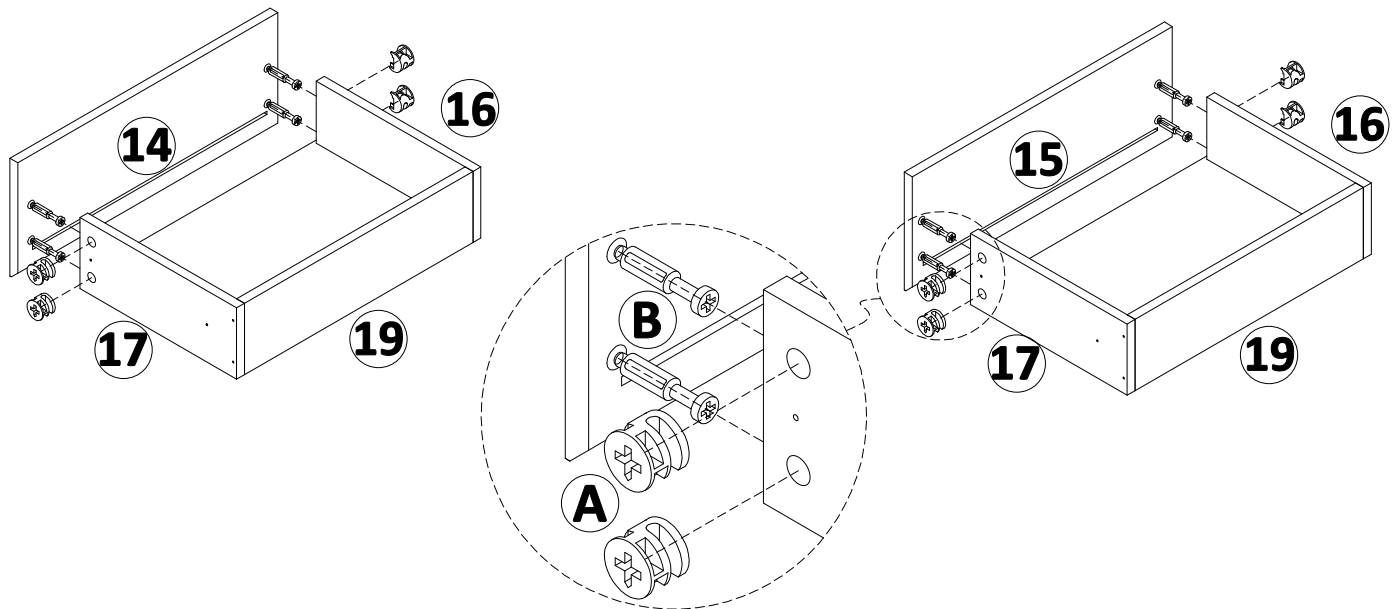


Step 15

Attach the #K2 to both sides of the drawer using the #F (screws).

F  **X8**


K2  **X4**

Note: Ensure the beveled edge of panel 14/15 faces downward.

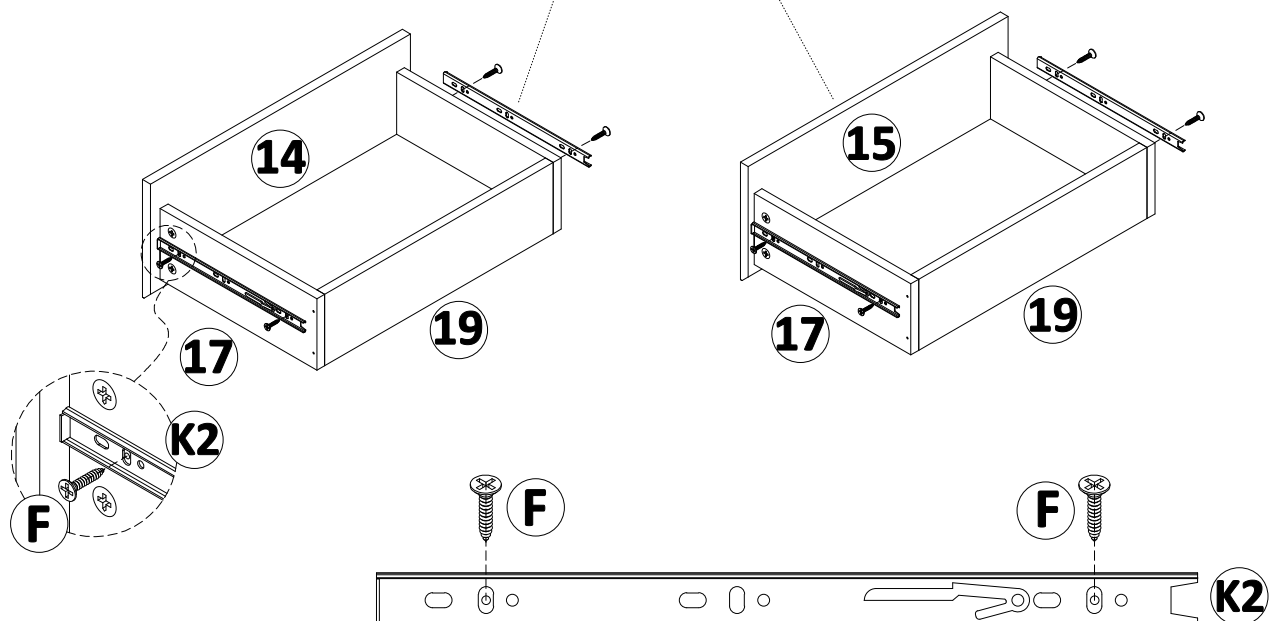

Step 16


Slide the drawer with the installed inner rails into the corresponding slots in the cabinet until it clicks into place.

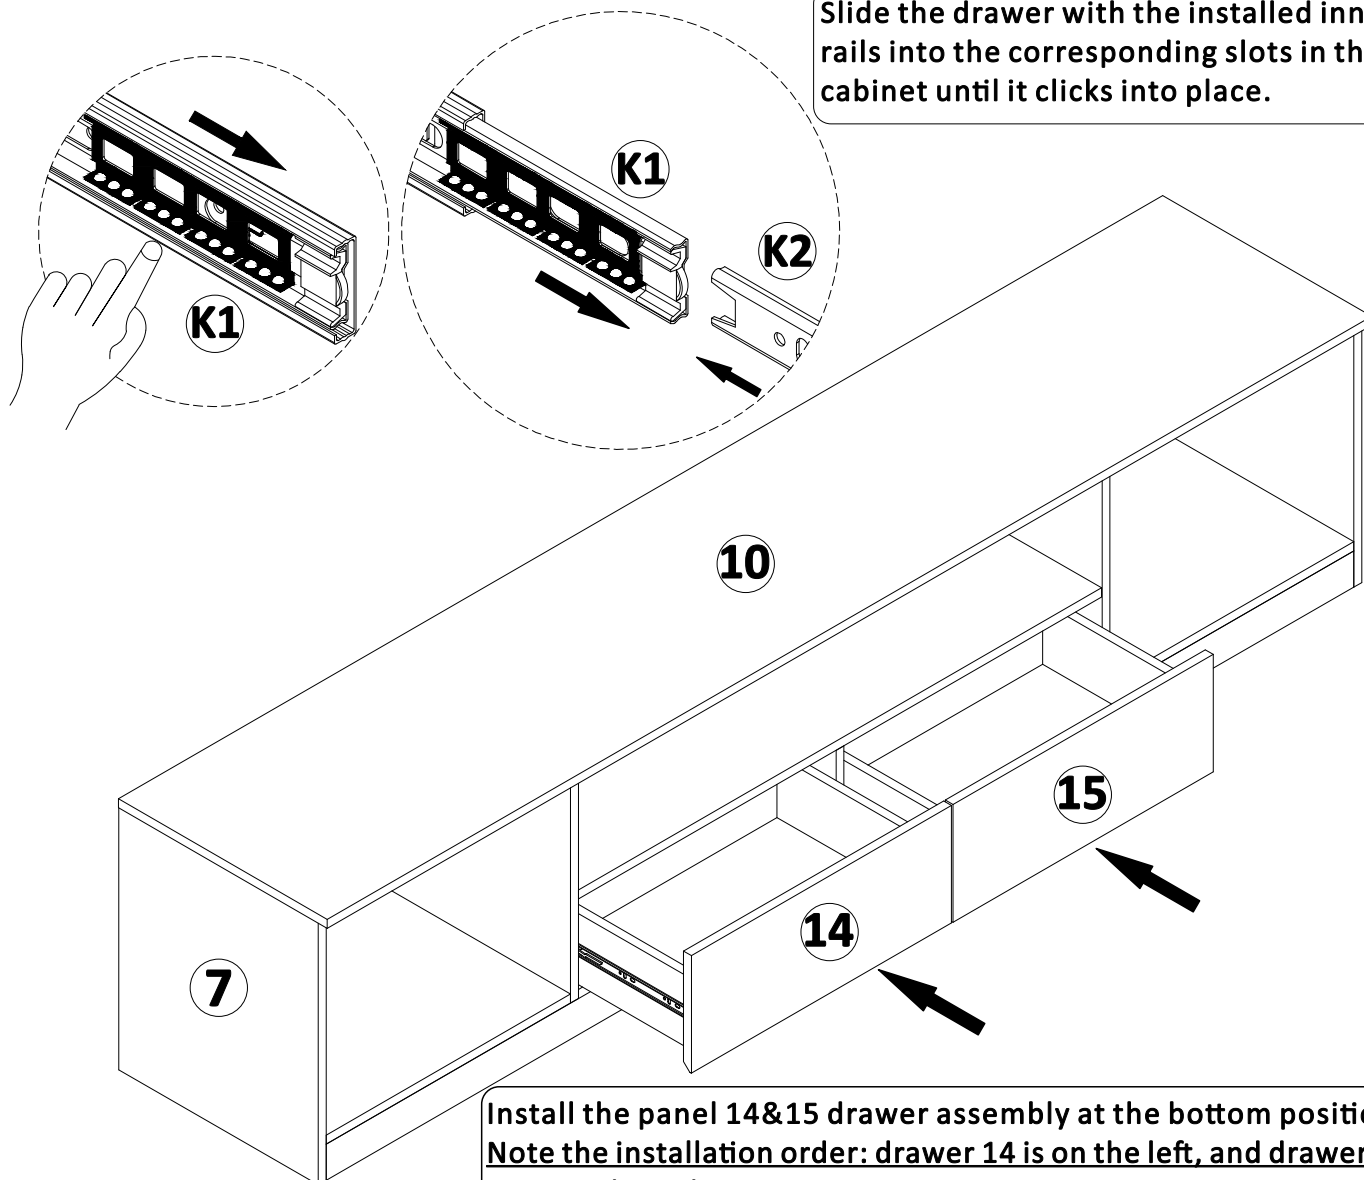

Install the panel 14&15 drawer assembly at the bottom position. Note the installation order: drawer 14 is on the left, and drawer 15 is on the right.


Step 17

As shown in the figure, install the #D (door hinge) to the designated position on panels 12 and 13 and tighten the #F (screws) to secure.

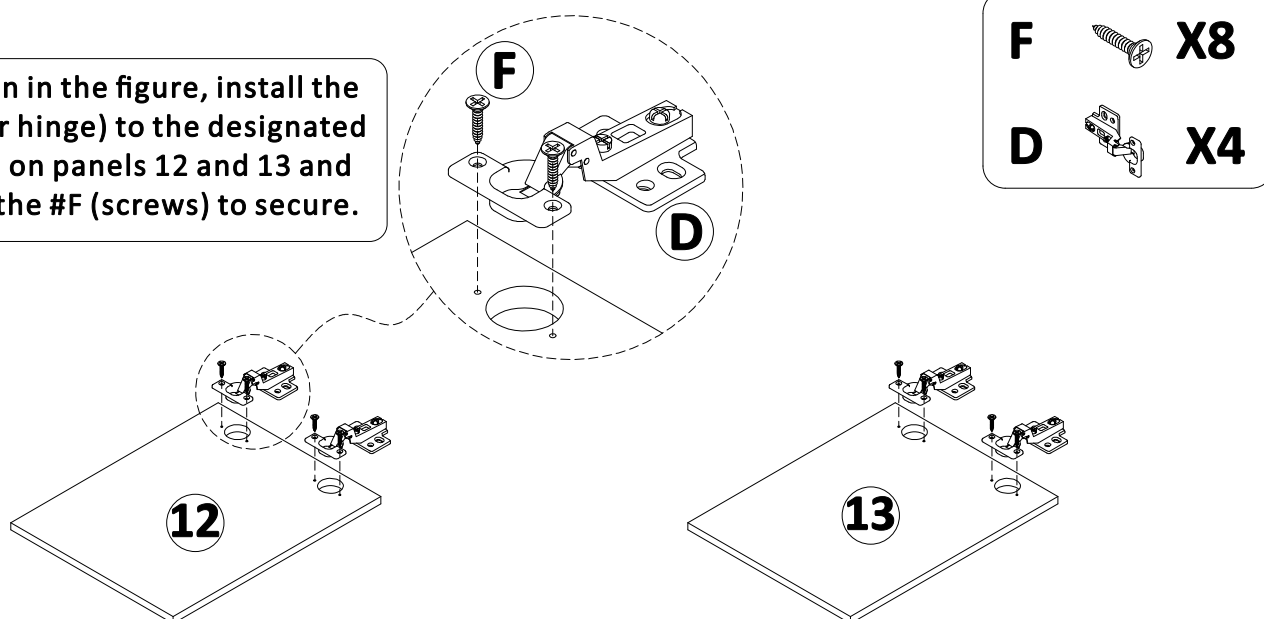


Step 18

As shown, attach panels 12 and 13 to the cabinet using #D (door hinges) and tighten with #F (screws). Please install panels 12 and 13 as shown in the figure.

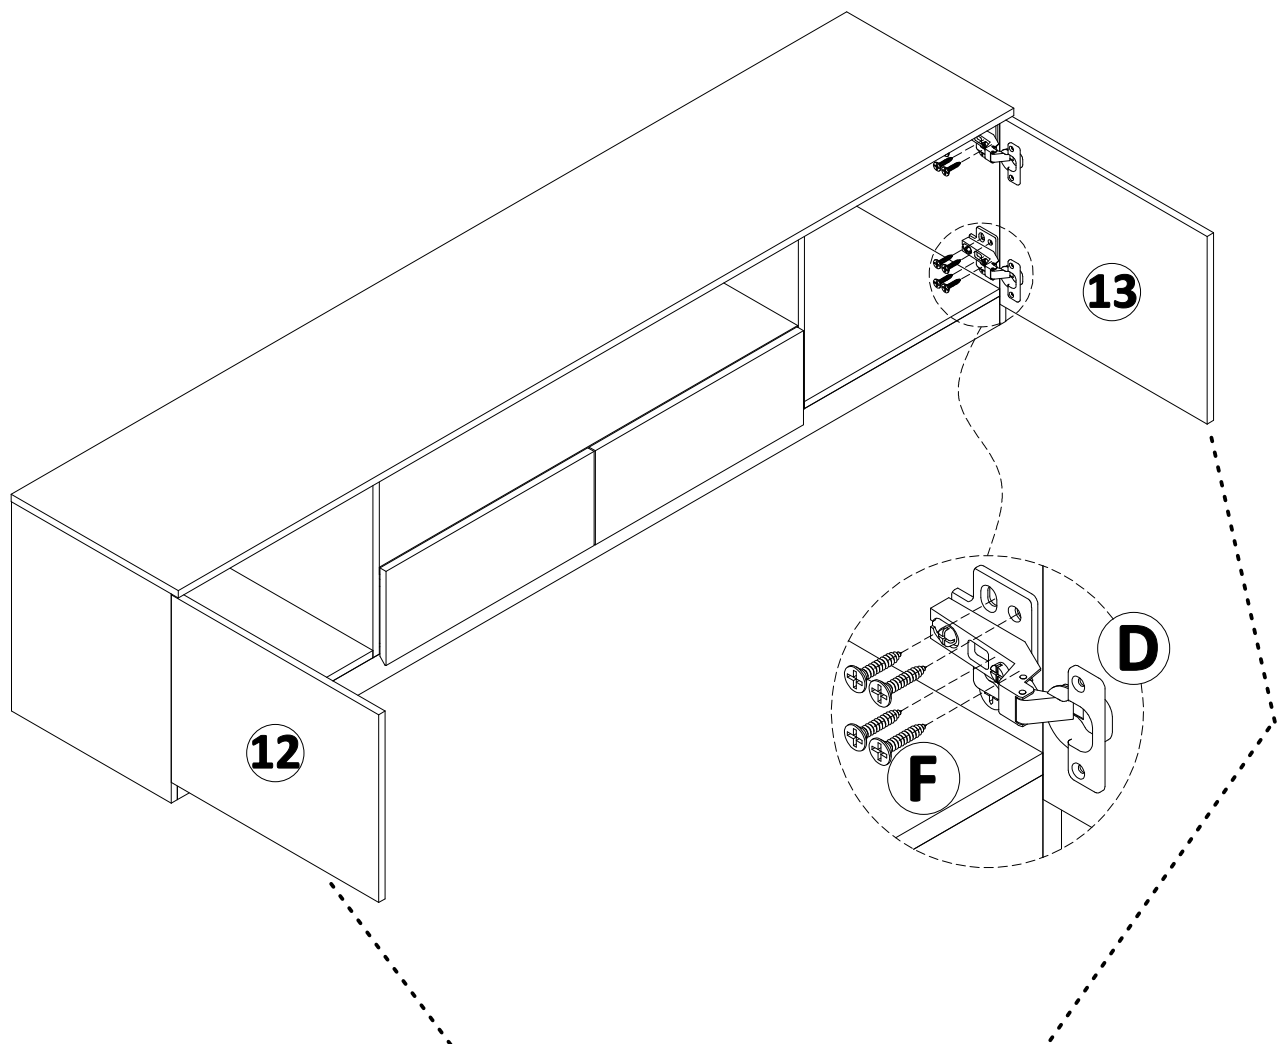F**X16**

Note: Ensure the beveled edge of panel 12/13 faces downward.

Assembly Completed

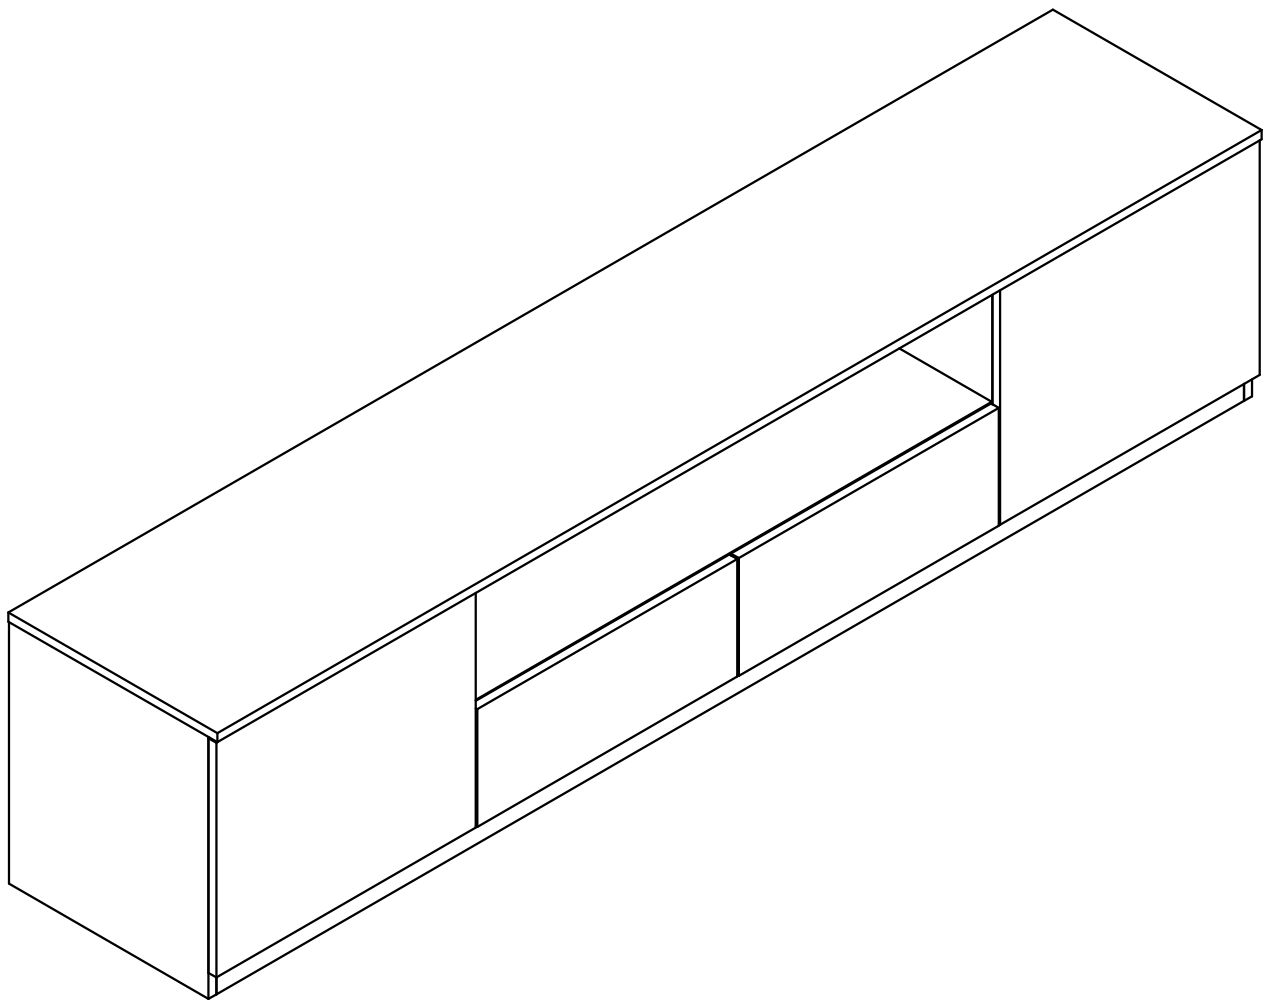

Use and Maintenance


1. Keep the furniture vacant for half a month before use, and maintain good indoor ventilation to eliminate the residual odor in furniture surface coating.
2. Place the objects smoothly, heavier objects should be placed at the bottom (layer) of the furniture to avoid the furniture from tipping over. Heavy objects should not be placed on the top of the wardrobe, so as not to cause the top plate to deform and sag and affect the opening of the cabinet door, high-temperature or frozen objects should be padded with high-temperature-resistant mats and placed on the furniture. Heavier or harder objects should be placed on the furniture table with a soft decorative tablecloth or a felt for protection.
3. Do not push hard objects directly on the furniture to avoid scratching the surface of the furniture.
4. Do not expose the furniture to sunlight for a long time or place the furniture close to the heating equipment, which can cause localized discoloration and fading.
5. Please avoid long-term exposure to humid environment to prevent mildew.
6. Place the furniture stably to avoid breaking the furniture feet or loosening the connection parts due to inclination.
7. Do not let items that are flammable and oxidizing touch the surface of the furniture, which may cause chemical reactions and damage to the furniture finishing.
8. Teach children not to play close to the glass sharp angles of furniture avoid accidental physical injury and damage to the furniture.
9. Open the doors and drawers of the furniture with appropriate force, and it is strictly forbidden to open and close them violently, which will cause loose connections.
10. Screws may become loose during long-term use. If necessary, retighten them to ensure stability and security.

Trouble Shooting


Product Category	Fault	Cause Analysis	Handling Method
Wood furniture	Door opening is not flexible	The furniture is not leveled	Use items to level the furniture
		The door hinges should be adjusted properly.	Adjust door hinges and apply lubricating oil
	Inflexible opening of drawer	Overload or deformation	Reduce weight, adjust guide rails, lubricate
	Loose component connection	Loose hinges or screws	The poke part should be coated with an appropriate amount of 502 glue, then re-install or tighten the screws.
	Minor scratches	Friction with hard or sharp objects	Use a brush to apply similar pigment ink along wood grain to the scratches, then wipe off the excess.
	Corrosive stains	Accidentally stained with chemical solvents such as nail polish, nail polish remover, etc.	Wipe them with a dry cotton cloth immediately

Possible issues during assembly:

- The two boards can't be aligned at the same level.

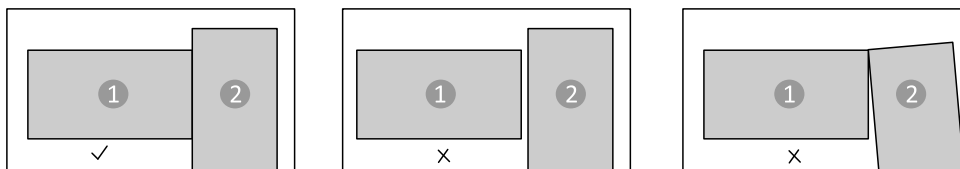


- Holes on the boards and poles are not aligned, so screws can't be installed.

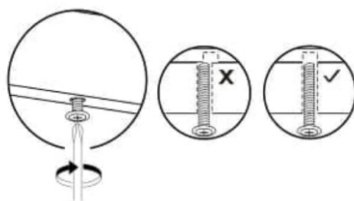

Recommended solution:


- Please slightly loosen all screws and adjust the boards. Because the diameter of the holes on the pipes 23 mm larger than that of bots, the position of the boards can be adjusted.

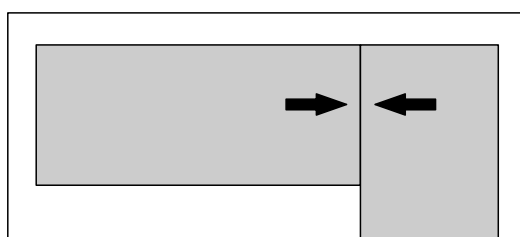

- If it still doesn't work after adjustment, please contact us for more solutions.


Special Accessories Installation Instructions

Hinge Adjustment Diagram

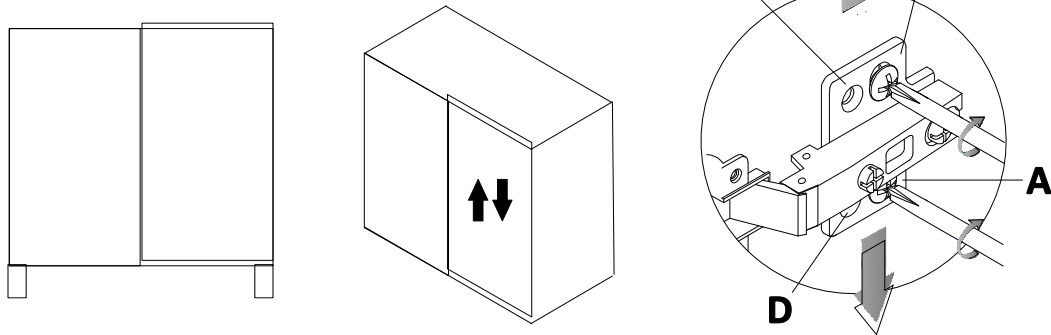


If the two doors are not vertically aligned:

Screw "A" on the hinge is the height adjustment knob. First, remove both screws "D", then loosen screw "A" and adjust the door height as needed. Once the position is correct, tighten screw "A". Adjusting the cabinet door height requires adjusting both the upper and lower hinges simultaneously.

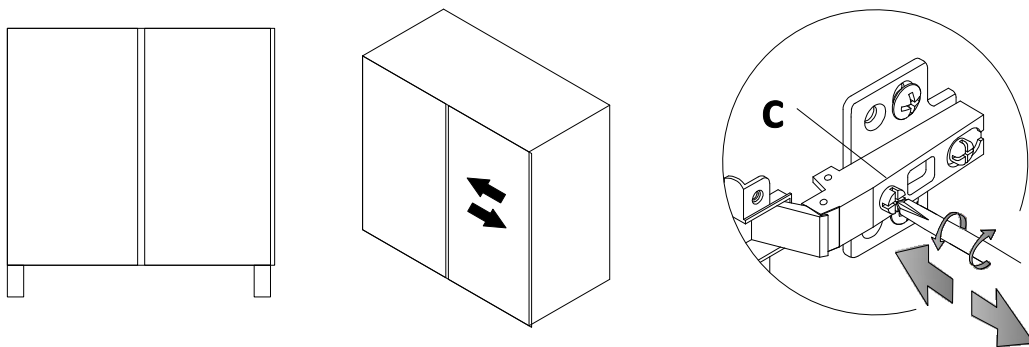

If there are gaps between the doors:

The screw "C" on the inside of the hinge is the left/right adjustment knob. Turning it clockwise will shift the door inwards, and turning it counter-clockwise will shift it outwards. The operation is the same for the upper and lower hinges.

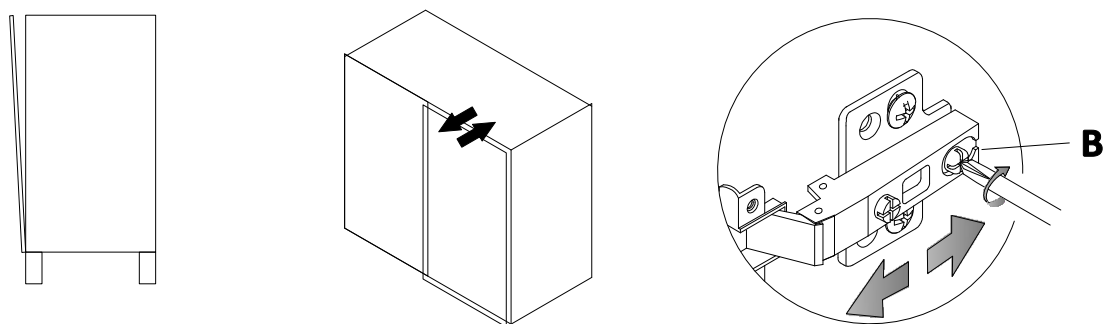

If the door cannot be fully closed:

The screw "B" on the outside of the hinge is the front-to-back adjustment knob. After loosening the screw, slide the cabinet door inwards and outwards to adjust the gap. Once the position is correct, tighten screw "B". The operation is the same for the upper and lower hinges.

After-Sales Warranty

Dear Customer,

Thank you for purchasing this TV Cabinet. If you find that the product is damaged or accessories are missing after receiving it, please contact us through our after-sales email. Our customer support team will provide you with a professional solution within 24 hours.

If you encounter any problems with the product, accessories, installation, or damage after receiving your package, you can also scan this QR code to submit your issue and relevant pictures. This will allow us to quickly understand your difficulties and provide prompt replacement parts and professional guidance. We look forward to receiving any feedback from you!