

DECO WALL SCREEN

INSTRUCTION MANUAL

THANK YOU FOR PURCHASING THE MIRADOR DECO WALL SCREEN!



This manual will provide you with clear and detailed instructions on how to safely and correctly assemble and maintain your deco wall screen, to ensure it brings you many years of use and enjoyment.

IMPORTANT

Please read the entire manual carefully before assembling and using your deco wall screen, and please ensure the manual is kept in a safe place for future reference.

Any use or modification to the deco wall screen, not included in this manual, shall be considered as improper use, which may cause considerable danger to users and property and will void the product warranty.

Please only use this product for its intended purpose within a residential environment. Failure to do so will void your warranty.

We reserve the right to make changes for product improvements.

For parts and customer service, please call +1 (877)-506-4777 in the U.S. and Canada (English and Spanish) Monday - Friday: 6:30 am - 4:30 pm, Saturday – Sunday: 8:30 am – 4:30 pm, Pacific Time. Or email: support@miradoroutdoor.com

Digital instruction manual is also available on our official website www.miradoroutdoor.com for your reference.

TABLE OF CONTENTS

- Before Assembling Your Deco Wall Screen	3
- Important Safety Advice	5
- List of Parts	7
- Assembly	8
- Enjoy Your Deco Wall Screen	14
- Care & Maintenance	15
- Warranty & Complaints Procedure	16

BEFORE ASSEMBLING YOUR DECO WALL SCREEN

Please read all the instructions carefully before you begin, and follow the steps in the order they are presented.

Make sure you have all the tools required for assembling your deco wall screen

In order to assemble your deco wall screen safely and correctly, please ensure you have access to the following tools and accessories, all of which are not provided.




2 Hard hats



2 Protective gloves




Safety knife

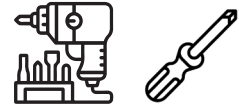

Screwdriver



Hammer drill

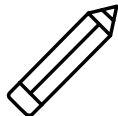

Pencil



2 Step ladders



Hammer

Check to ensure there are no missing parts:






Before you begin assembly, please check that you have all the parts required to assemble your deco wall screen. Please also carefully check that the quantity of parts match with that of the model you have purchased.

If any parts are missing, please refer **Warranty & Complaints Procedure** to contact customer service before beginning the assembly.

Prepare the parts you will need for each step:

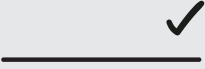In the **Assembly** section of the manual, each step indicates the necessary parts and quantities required to complete the step. We recommend that you prepare the parts you will need for each assembly step. Doing this will save you time and effort during assembly. If possible, place the parts on cardboard or other soft surface to protect from scratching the painted surfaces.

Select a suitable location:

The ground should be solid and flat.	The ground should be level.	The deco wall screen must be positioned and fixed on a properly installed Mirador pergola, which is installed on a flat concrete ground, providing proper stability.
		
		

Warning:

Most terraces or patios are designed with a slight slope to prevent (rain) water from forming pools or reaching the house or other structures. For the perfect deco wall screen assembly, a level concrete surface without such a slope is required. Small pebbles could also prevent the deco wall screen from being safely secured on the ground.

If the deco wall screen is installed on an uneven surface, it may prevent accessory components from working correctly and may void the product warranty.

Prepare a foundation:







To prepare it, you need to:





- check for underground pipes and cables (Call 811 before you dig if you live in the USA)
- check with your local authorities regarding any building permits that may be required
- contact a reliable contractor to install a flat surface base if you don't have one

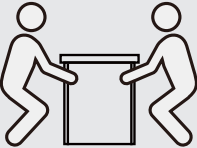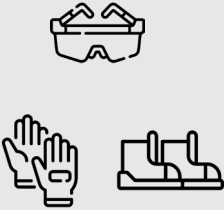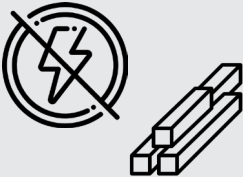Do not assemble the deco wall screen on sandy, muddy or loose soil, as the stakes do not have the sufficient anchorage to be installed in these types of soil.



IMPORTANT SAFETY ADVICE

For the safety of all persons assembling and using the deco wall screen, it is important to follow the safety guidelines below.






 
 








<p>It is recommended that two people lift the deco wall screen once assembled. Ensure you lift with the correct posture & technique.</p>	<p>Always wear appropriate work shoes, gloves and eye protection when working.</p>	<p>Work well away from power lines, particularly when handling metal parts.</p>	<p>If using power tools or a ladder, always follow the manufacturer's safety instructions.</p>
			
<p>Make sure the deco wall screen complies with local building regulatory codes.</p>	<p>Working at heights can be dangerous. Always wear protective clothing to prevent injury in the event of a fall.</p>	<p>Only use ladders and scaffolding with a sufficiently high load bearing capacity.</p>	<p>Do not assemble the deco wall screen when you find damaged parts or any parts missing. Only use replacement parts that are approved by the manufacturer.</p>
			
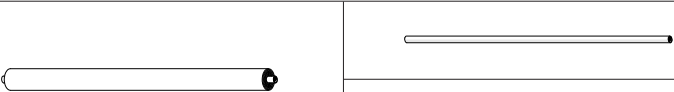
<p>Please recycle packaging where possible.</p>	<p>After prolonged use we recommend you check all the fittings are tightened securely.</p>	<p>Install on non-Mirador branded pergola will void the product warranty and can damage the operation mechanism.</p>	<p>After prolonged use we recommend you check all the fittings are tightened securely.</p>
			

<p>Do not attempt to assemble the product if you are tired, or after consuming alcohol.</p>	<p>Dispose of all plastic bags safely. Keep them out of the reach of children.</p>	<p>Keep children and pets away from the assembly area until the work is completed.</p>	<p>Do not attempt to assemble the deco wall screen in windy or wet conditions.</p>
			

<p>Changes to the design or configuration of equipment may not be made without consulting the manufacturer or authorized representative.</p>	<p>Hot items such as recently used grills, fire pits etc. must not be stored close to the deco wall screen.</p>
	

LIST OF PARTS

	REF	PART NAME	QTY
A		Vertical beam	2
B		Horizontal bar (top)	1
B1		Horizontal bar (bottom)	1
C		Support bar	2
D		Cross bar	1
E		Fabric	1
F		Foot Pad	2
G		Screw M6x45mm	4
H		Washer	4
I		Screw ST5.5x50mm	4
J		Plastic expansion pipe 8x40mm	4
K		Screw ST4.8x38mm	1+1
L		Screw ST4.8x25mm	2
M		Screw ST4.2x25mm	14+2
N		Hex key	2

ASSEMBLY


1. Deco wall screen assembly



Assembly Video

1A

Unroll the fabric **E** until it is flat.

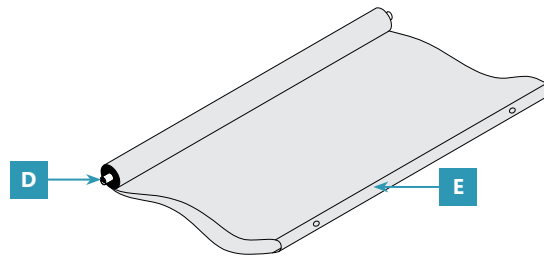


D x1

E x1

1B

Insert cross bar **D** into vertical beams **A**.

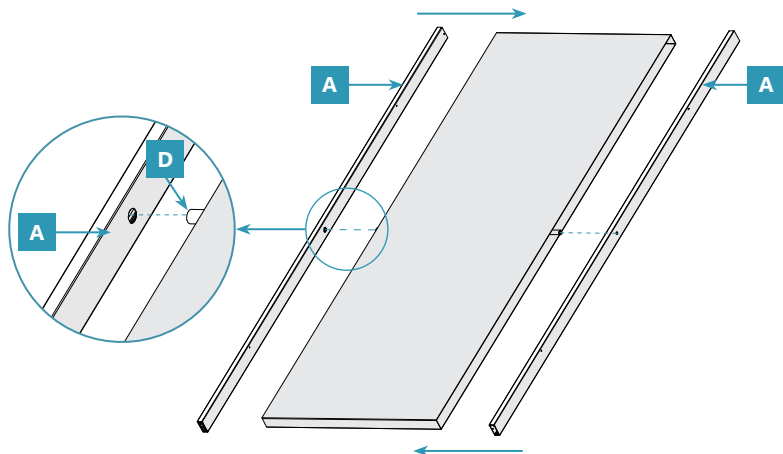

A x2


 
1C

Cover the horizontal bars (**B** & **B1**) onto the assembled frame.

B x1

 


B1 x1

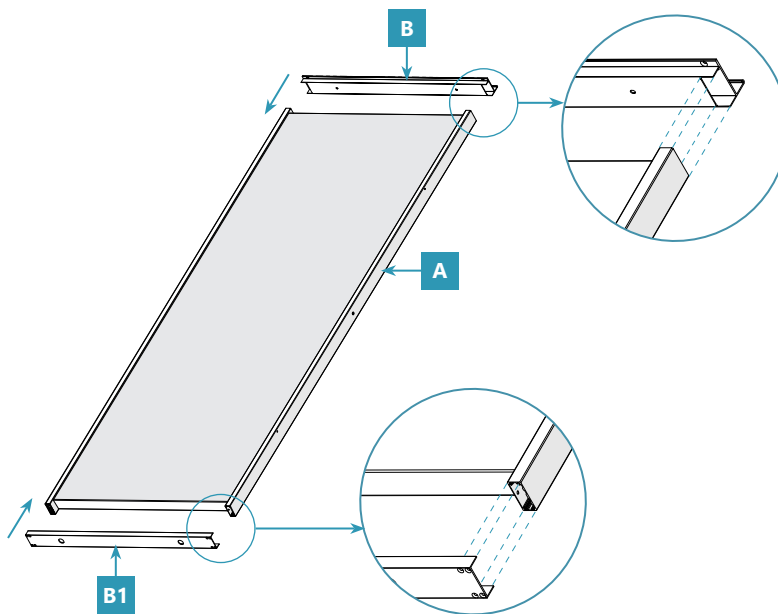


1D

Secure the horizontal bars **B** and vertical beams **A** by tightening the screw **M** clockwise.



M x6

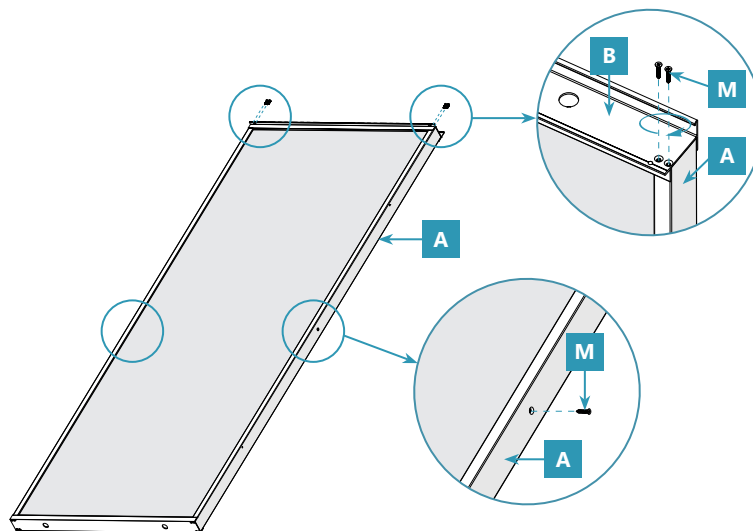





1E


Assemble the foot pads **F** to the bottom of the deco wall screen with screw **M** clockwise.

Notice:

There is no need to assemble foot pad **F** on the side near the pergola pillar.

Below parts are needed for 3 different assembly positions of the deco wall screen.

Part \ QTY	Left/right screen	Middle screen
M 	8	8
F 	1	2

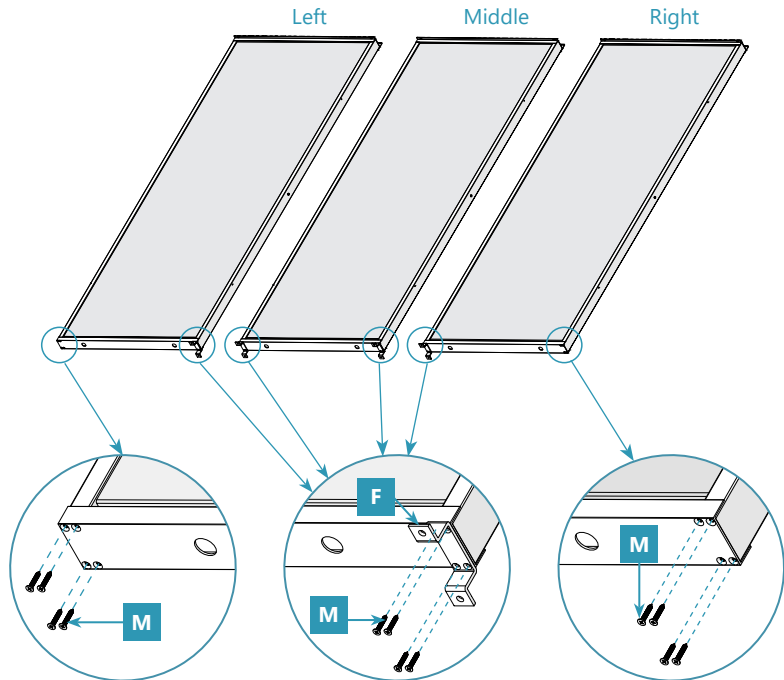



1F

Insert the support bars **C** into fabric **E**.

Notice:

Ensure the side with the smaller hole on the support bars **C** is facing the horizontal bars.

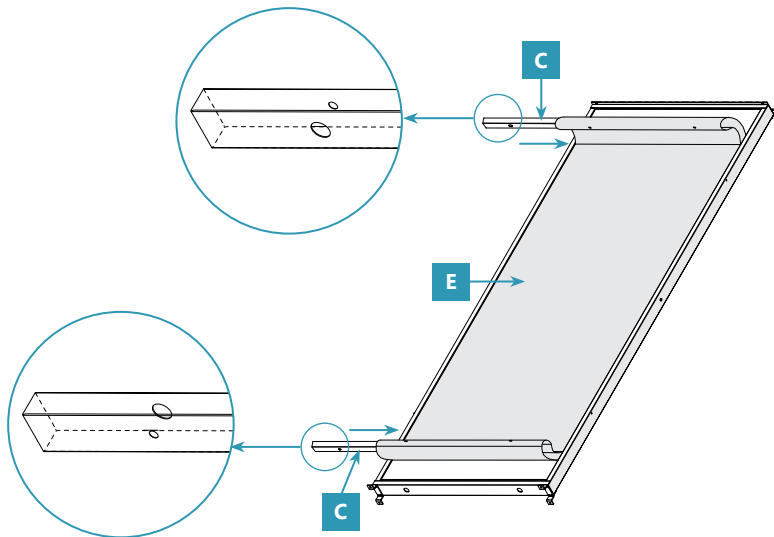


C x 2 

1G


Align the screw holes of **E** & **C** & **B**
and connect them with screws **G** and
washers **H**.

Do not tighten the screws.

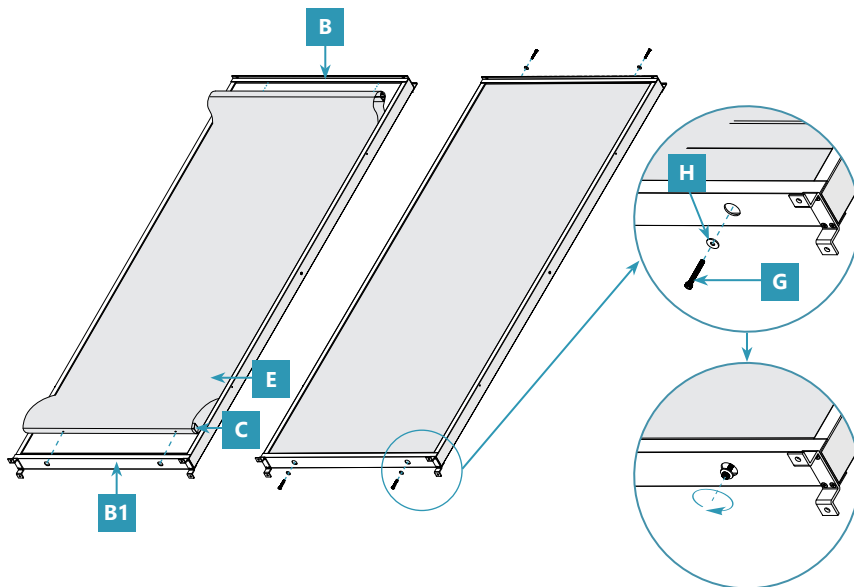

1H

Tighten the screws **G** on the bottom till
the fabric is positioned where its center
is 10-15mm below the upper surface of
the vertical beam **A**.

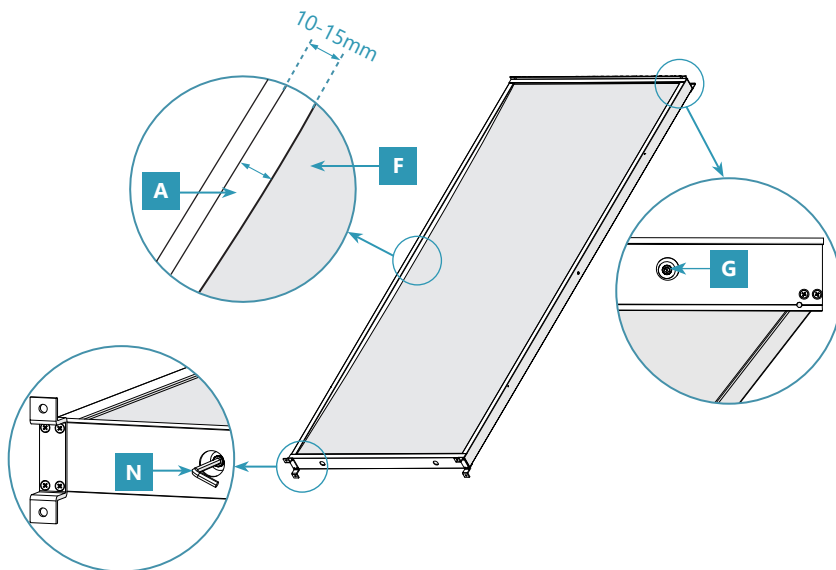

2. Install the deco wall screen onto a Mirador® pergola

2A





Position the deco wall screen (against the pergola pillar or in the middle), mark the position of the drill holes on the ground with a pencil.

Remove the wall. Drill holes with hammer drill and knock in the plastic expansion pipe **J** with hammer.

Notice:

Always start from the left/right wall if it is intended to install more than 1 deco wall screen on one side of the pergola.

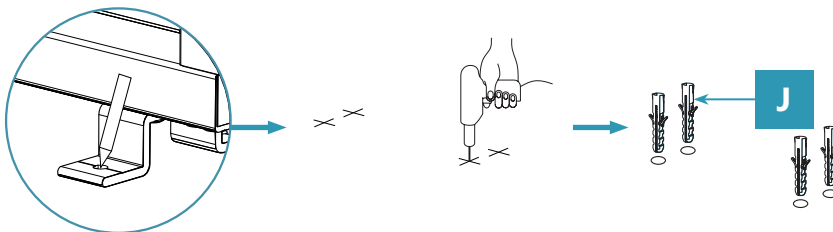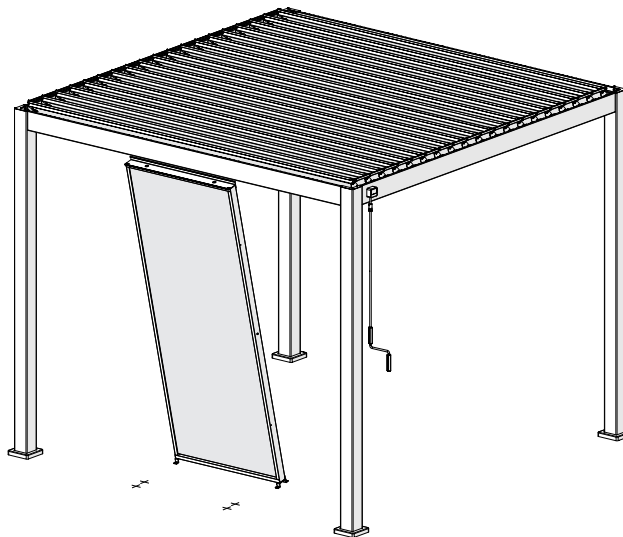


Part \ QTY	Left/right screen	Middle screen
J 	2	4



2B

Hook the deco wall screen onto the beam of the pergola then secure the screen with screw **L**.

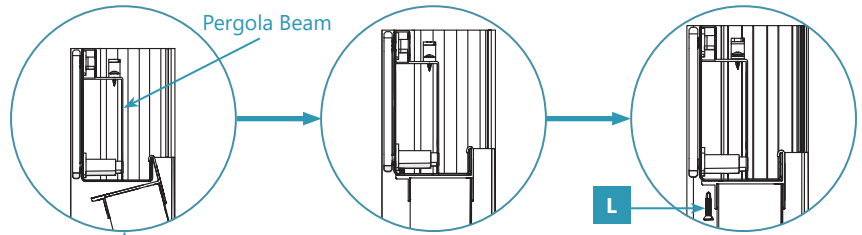




L x 2 





2C


Fix the deco wall screen to the ground with screws **I**.

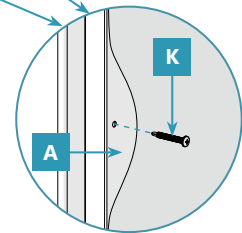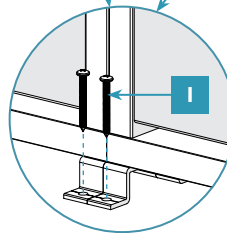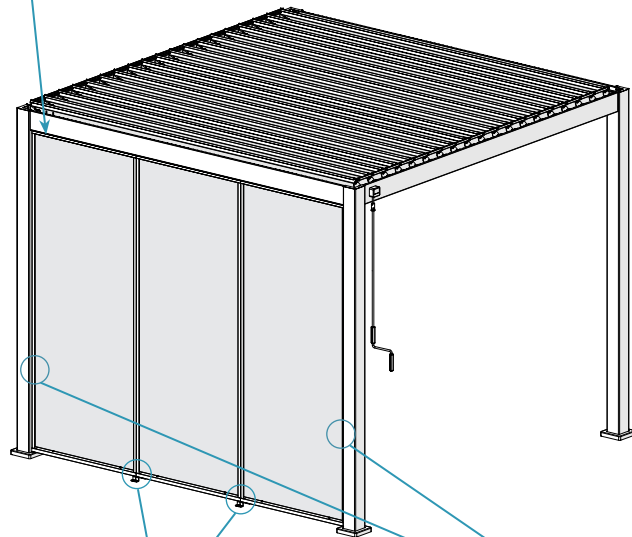Gently push aside the fabric and fix the left/right hand side deco wall screen to pergola pillar with screws **K**.







Part \ QTY		Left/right screen	Middle screen
I		2	4
K		1	0

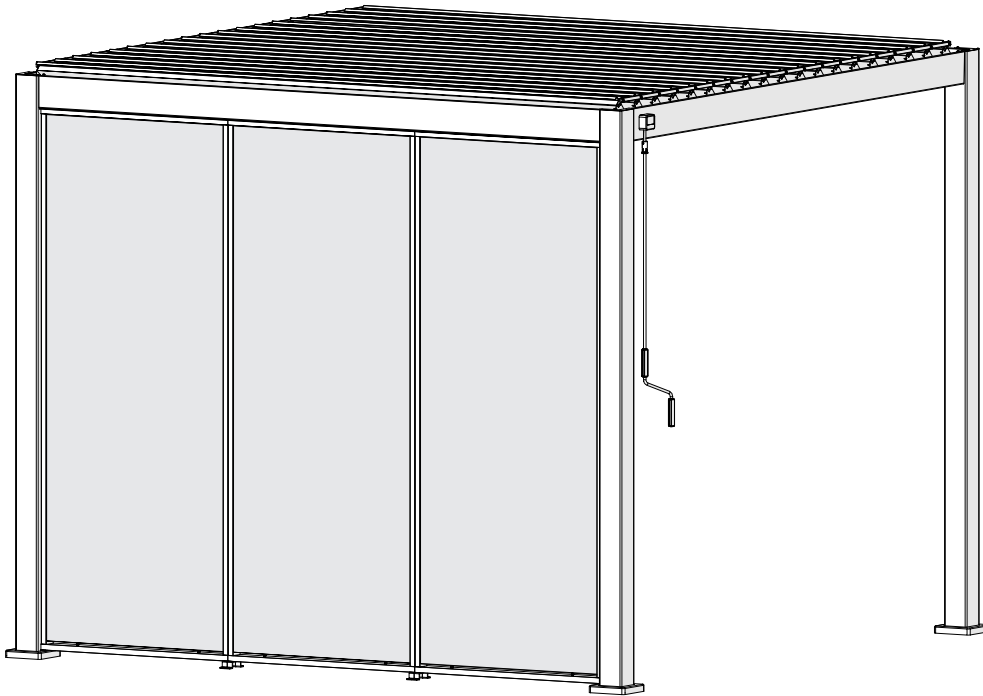ENJOY YOUR DECO WALL SCREEN

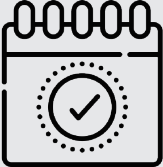

CARE & MAINTENANCE

<p>Dust and dirt will collect on the deco wall screen and will require periodic cleaning.</p>	<p>Use a water & detergent mixture and a soft clean cloth to clean the deco wall screen.</p>	<p>Air dry or wipe with a soft clean cloth.</p>
		
<p>In coastal areas, it is recommended that you frequently spray the deco wall screen with water to reduce accumulation of salt and dirt.</p>	<p>From more soiled areas, rinse the surface with clean water from top to bottom.</p>	<p>Do not use any acidic, alkaline or petroleum based spray lubricants.</p>
		

* Alcohol based cleaner: methyl alcohol, ethyl alcohol, butyl alcohol, Isopropyl alcohol, etc.

WARRANTY & COMPLAINTS PROCEDURE

For terms and conditions of our limited warranty, please visit www.miradoroutdoor.com or contact your local Mirador sales representative.

Complaints procedure:

- The complaint must include an order number or transaction number. Goods without an order number or transaction number are not covered under the warranty.
- The complaint must include a detailed description of the defect, the name of the company which assembled the product if 3rd party was used and the date when the defect was discovered.
- At Sorara Outdoor Living USA Inc's discretion, customer must offer supplier the photos/videos of the issue/damaged parts. Otherwise, supplier reserves the right to refuse replacement parts or credit.
- Please save a copy of your purchase receipt.

Contact:

Customer Service: support@miradoroutdoor.com

Need Assistance? Call +1 (877)-506-4777

Hours of Operation:

Phone Support: Monday - Friday: 6:30 am - 4:30 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Email Support: We are available 24 hours a day. Please allow up to 24 hours for a response.

Chat With Us Online: miradoroutdoor.com, Monday - Friday: 5:30 am - 2:00 pm, Saturday – Sunday: 8:30 am – 4:30 pm, PST.

Note: Our team is available to assist you during these hours. If you have any inquiries or require support outside of these hours, please leave a voicemail, send an email, or use our online contact form. We will get back to you promptly during the next available support hours. Thank you for choosing Mirador Outdoor!

more to
enjoy

FOLLOW US ON
WWW.MIRADOROUTDOOR.COM

 @miradoroutdoor  @MiradorOutdoor
 @miradoroutdoor  @miradoroutdoor



Printed on 100%
post-consumer
recycled paper

