

Power supply



⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

⚠ ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

⚠ WARNUNG











 
 

Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.






















Dies ist ein dauerhaftes Etikett.

Nicht entfernen!




Hardware List

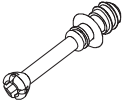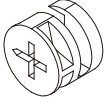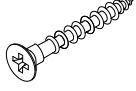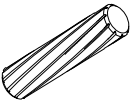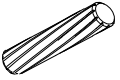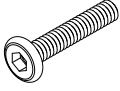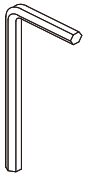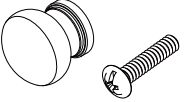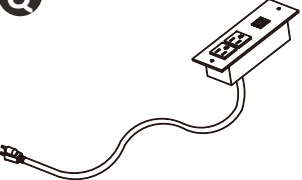A 	B 	C 	D 
Cam bolt (x26)	Cam lock (x26)	Long screw (x12)	Long wood dowel (x4)
E 	F 	G 	H 
Short wood dowel (x14)	Long bolt(x8)	Short bolt(x4)	Washer(x12)
I 	J 	K 	L 
Allen wrench(x1)	Metal slide(X4)	Short screw (x40)	Knob & screw(x3)
M 	N 	O 	P 
Plastic bracket(X1)	Cable tie (x1)	Eyelet screw (x1)	Anchor(x1)
Q 	CL 	CR 	DL 
Power strip(x1)	Cabinet left slide (x1)	Cabinet right slide(x1)	Drawer left slide (x1)
DR 			
Drawer right slide(x1)			


Part List

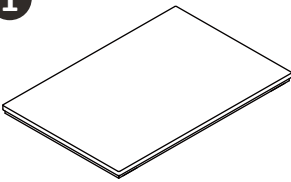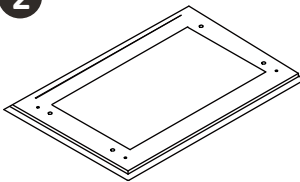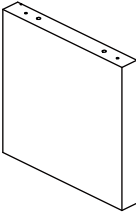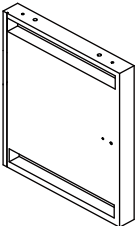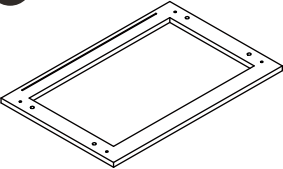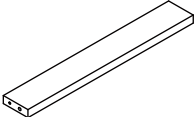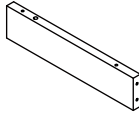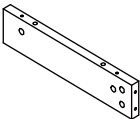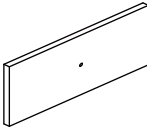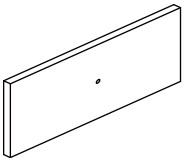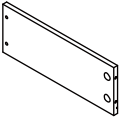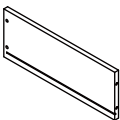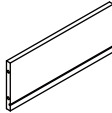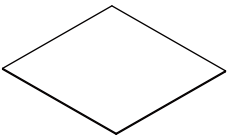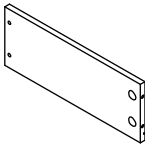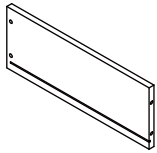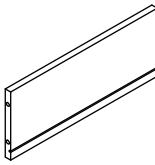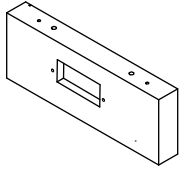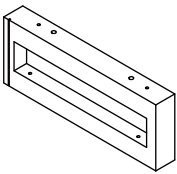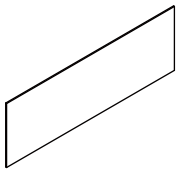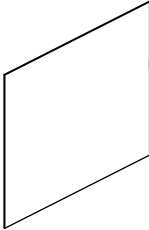1 	2 	3 	4 
Top panel (x1)	Bottom panel (x1)	Bottom left side panel (x1)	Bottom right side panel(x1)
5 	6 	7 	8 
Middle panel(x1)	Connect strip (x1)	Leg panel (x1)	Leg panel (x1)
9 	10 	11 	12 
Leg panel (x1)	Leg panel (x1)	Top drawer front panel (x1)	Bottom drawer front panel (x2)
13 	14 	15 	16 
Top drawer left panel(x1)	Top drawer right panel(x1)	Top drawer back panel(x1)	Drawer bottom panel(x3)
17 	18 	19 	20 
Bottom drawer left panel(x2)	Bottom drawer right panel(x2)	Bottom drawer back panel(x2)	Top side panel with charging hole (x1)
21 	22 	23 	
Top side panel(x1)	Top back panel (x1)	Bottom back panel (x1)	

Come in 1 box

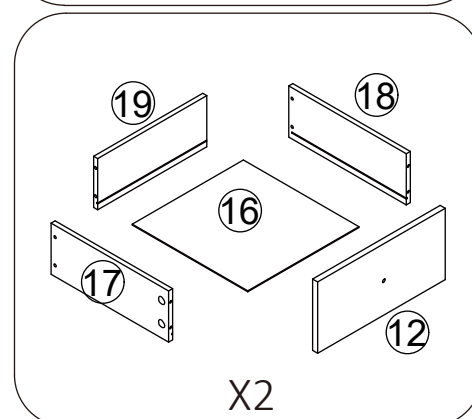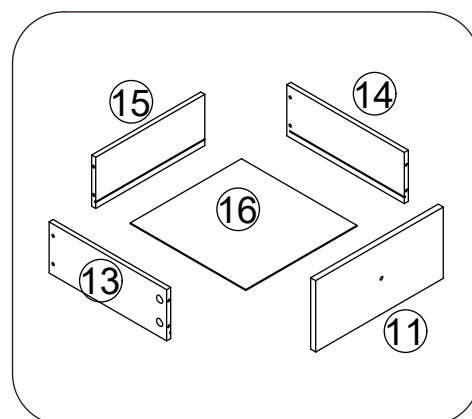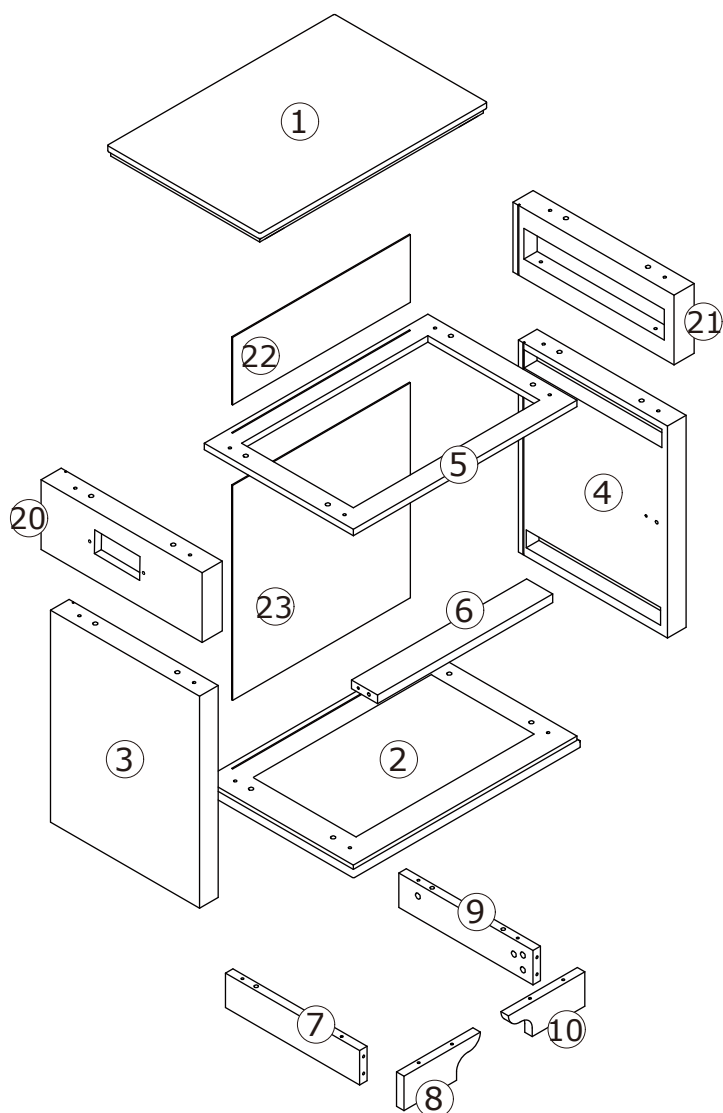

 
Tips: This illustration shows how the CAM fastening system works. DO NOT OVER TIGHTEN

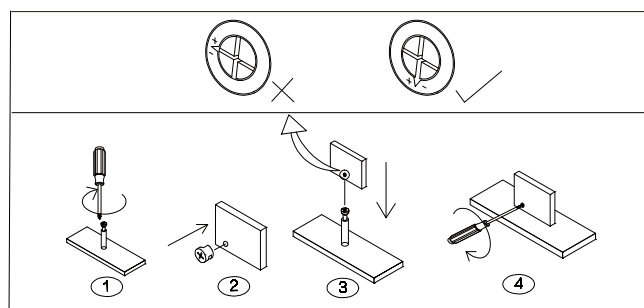



**TOOLS NEEDED FOR ASSEMBLY: DRILLER & HANDHELD SCREWDRIVER (NOT INCLUDED)
THE USE OF POWER SCREWDRIVER IS NOT RECOMMENDED**

STEP 1

Disassemble the Metal slide (J) into two parts: J-1 and J-2.






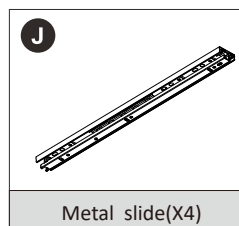


Hardware disassembly example

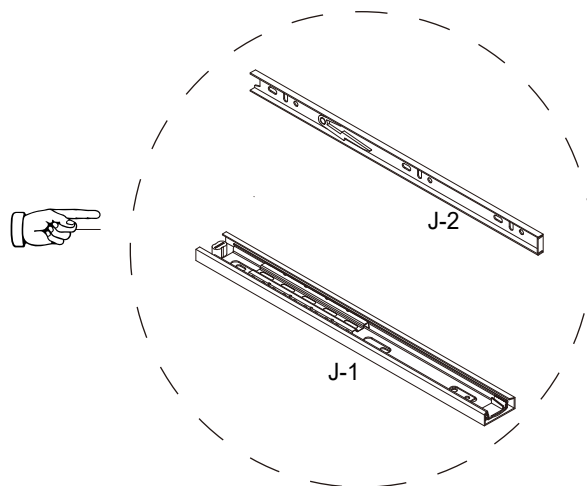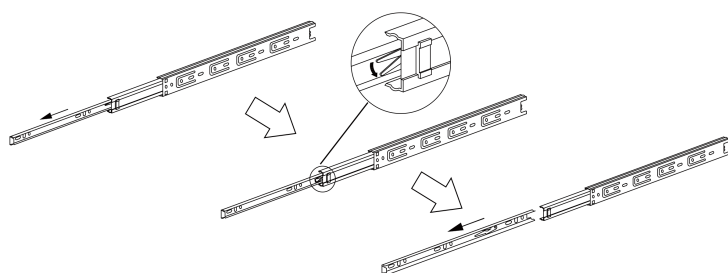



STEP 2

1. Fix the metal slide (J-1) with short screw (K) in the correct hole position on the bottom left side panel (3).
2. Screw the cam bolt (A) into the bottom left side panel (3) as shown below.

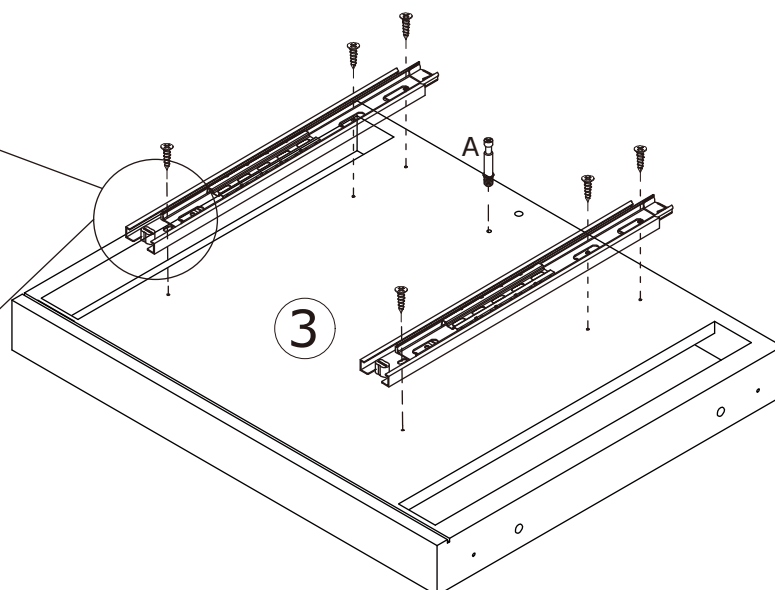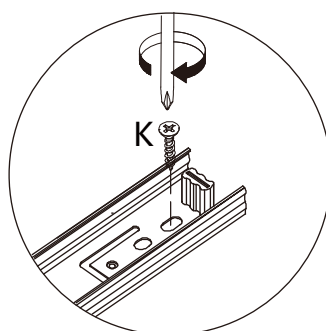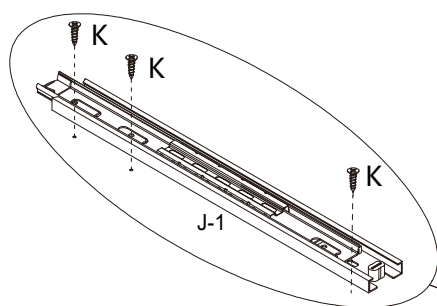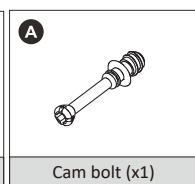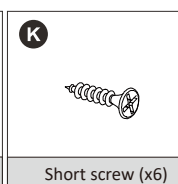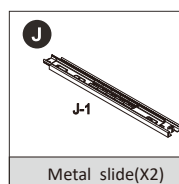



STEP 3

1. Fix the metal slide (J-1) with short screw (K) in the correct hole position on the bottom right side panel (4).
2. Screw the cam bolt (A) into the bottom right side panel (4) as shown below.

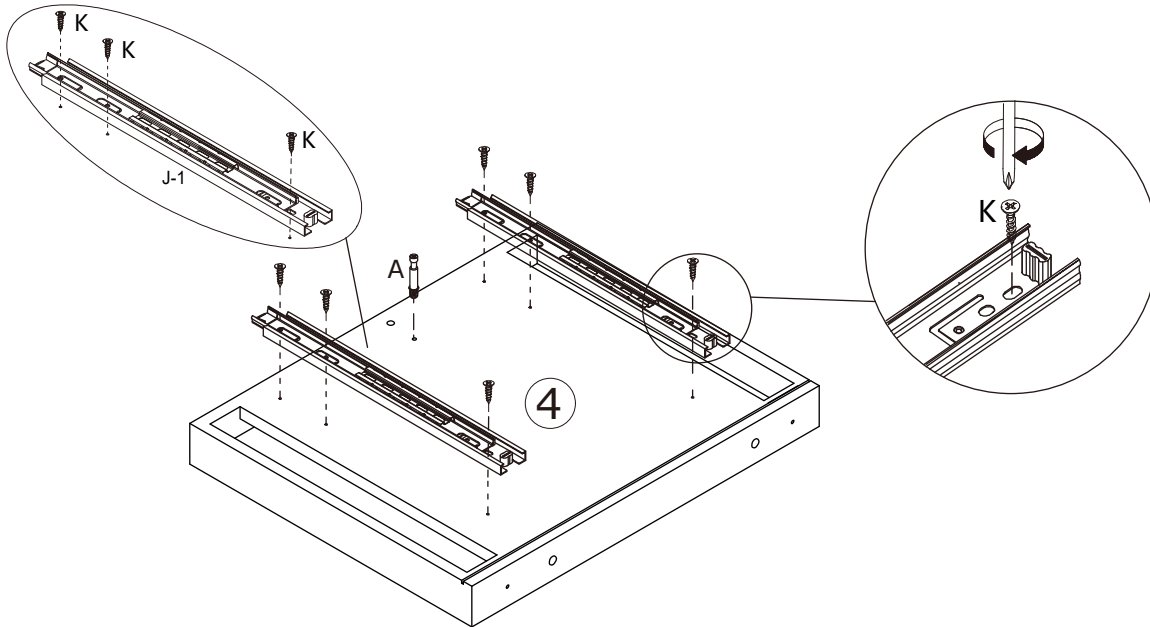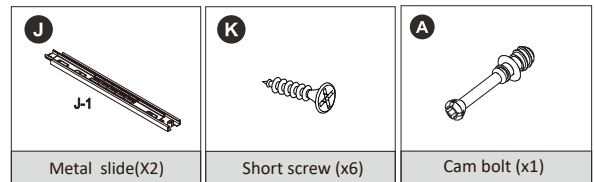

STEP 4


- Attach the connect strip (6) to the bottom left side panel (3) and the bottom right side panel (4) with short wood dowel (E) and cam lock (B).

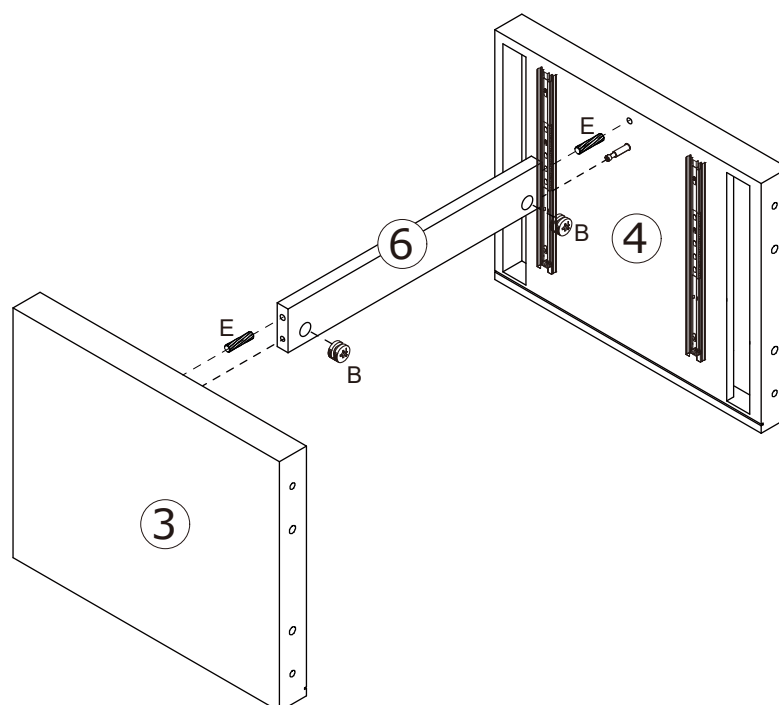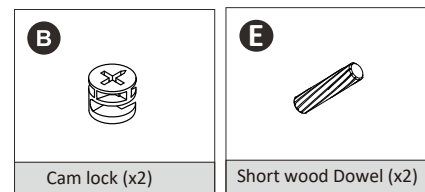

STEP 5

Insert the short wood dowel (E) and install the bottom panel (2) with washer (H), long bolt (F) and allen wrench (I) as shown below.


E	F
	
Short wood dowel (x4)	Long bolt (x4)
H	I
	
Washer (x4)	Allen wrench (x1)

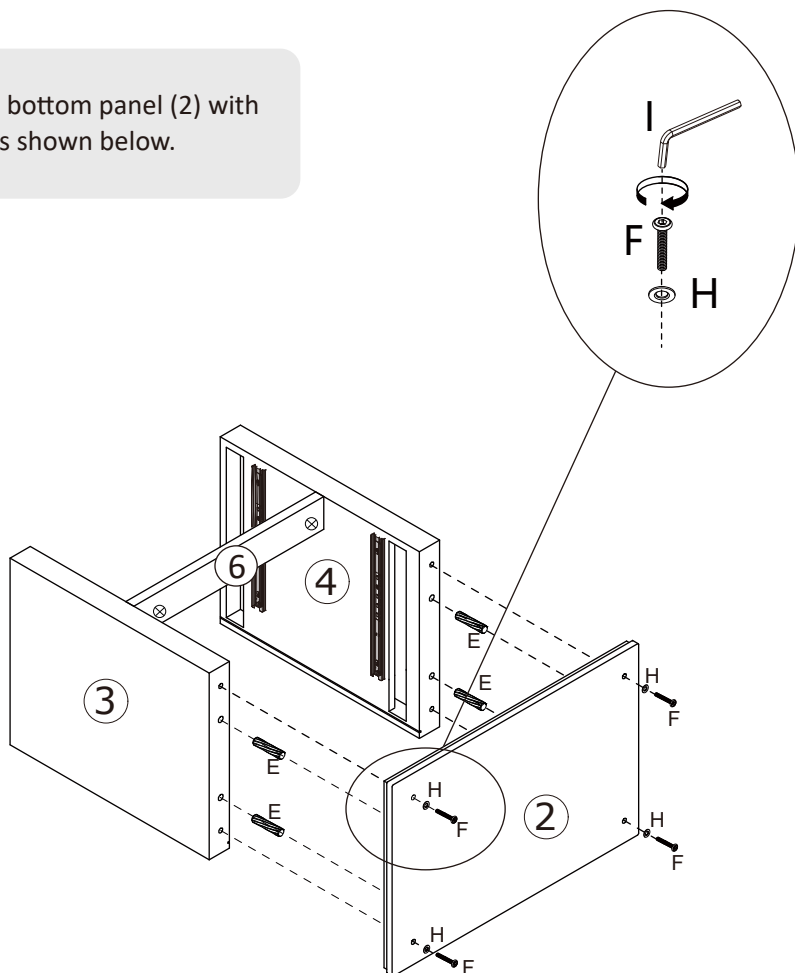

STEP 6



1. Screw the cam bolt (A) into the leg panels (8) & (10).
2. Connect the leg panel (7) to the leg panel (8) and connect the leg panel (9) to the leg panel (10) using the cam lock (B).

A	B
	
Cam bolt (x4)	Cam lock (x4)

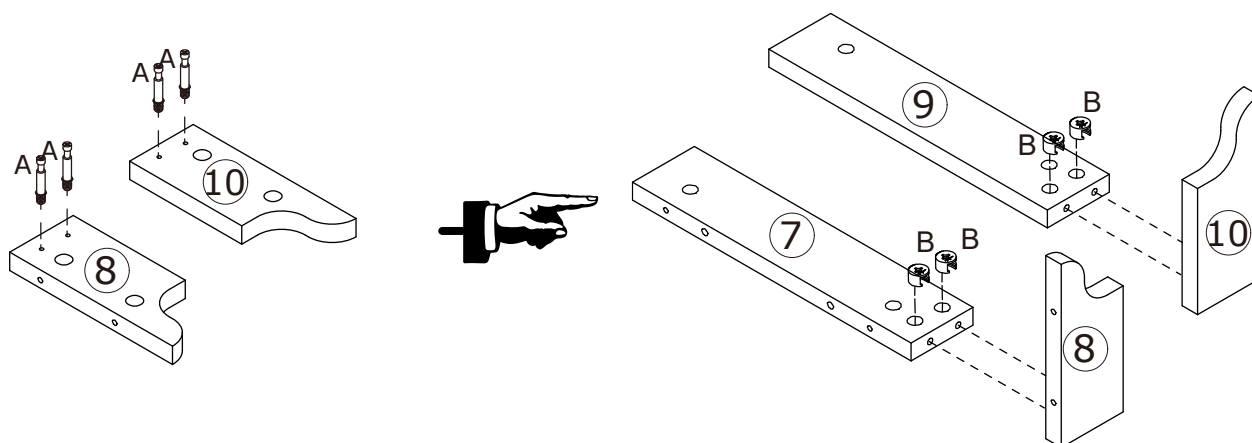



STEP 7

1. Place the bottom panel (2) downside up and screw the cam bolt (A).
2. Connect the leg panels (7) & (8) & (9) & (10) to the bottom panel (2) with the short wood dowel (E) and cam lock (B) as shown below.

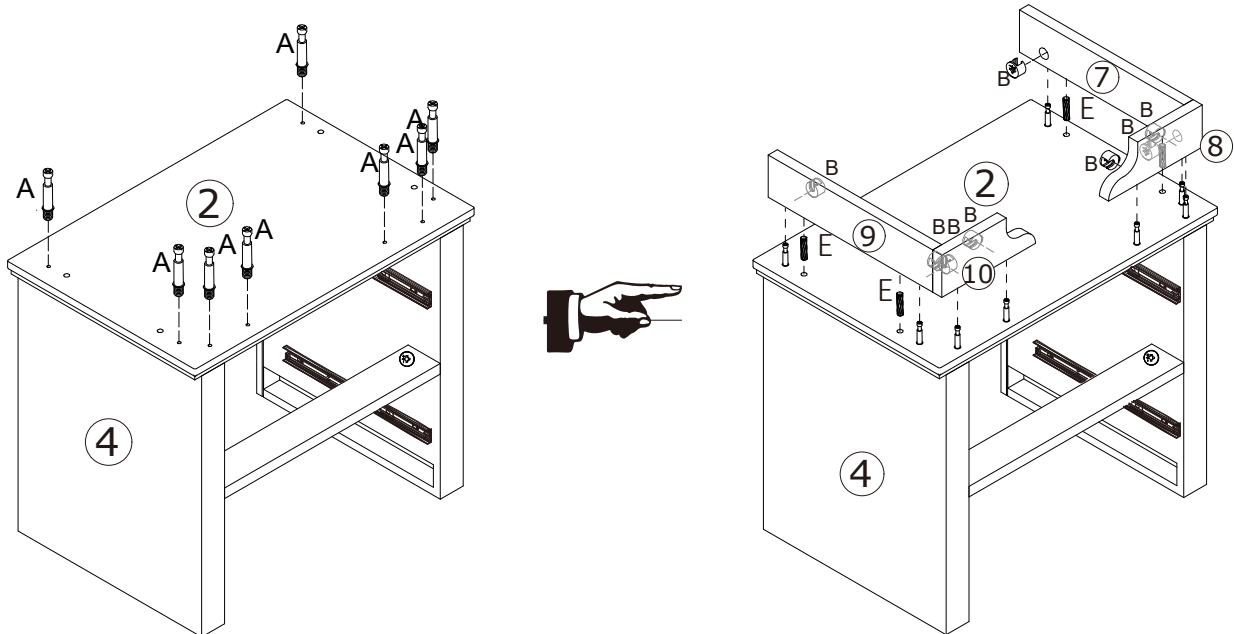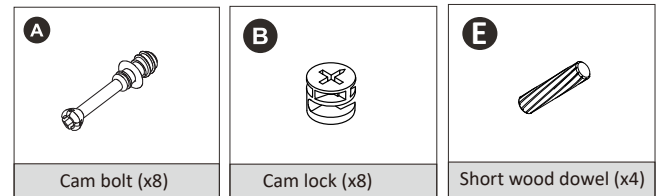

STEP 8

1. Insert the bottom back panel (23) to the cabinet as shown below.
2. Attach the middle panel (5) and insert the long wood dowel (D) as shown below.

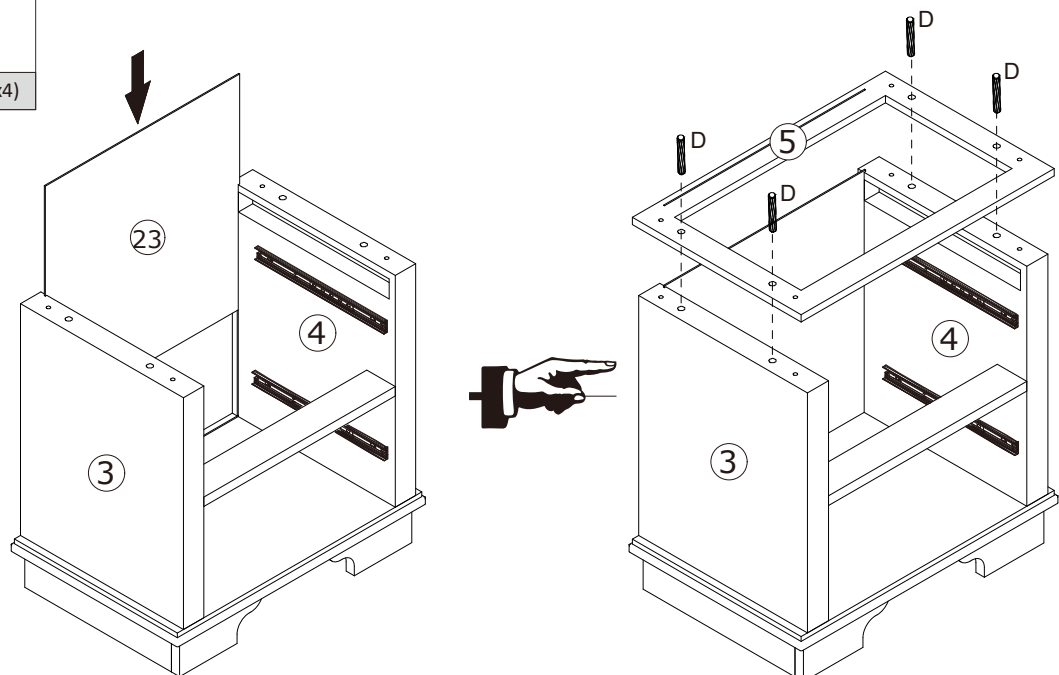
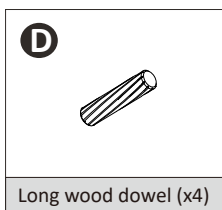


STEP 9

Insert the short wood dowel (E) to the top panel (1) and attach the top side panel (20) & (21) to top panel (1) with washer (H), short bolt (G) and allen wrench (I) as shown below.


Note:

Please determine based on actual usage whether the top side panel with the charging hole (20) should be installed on the right or left side.

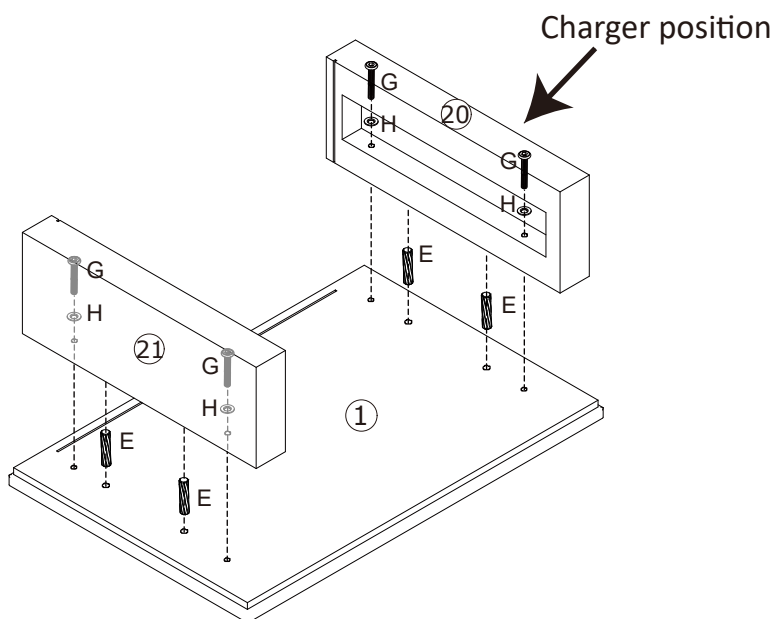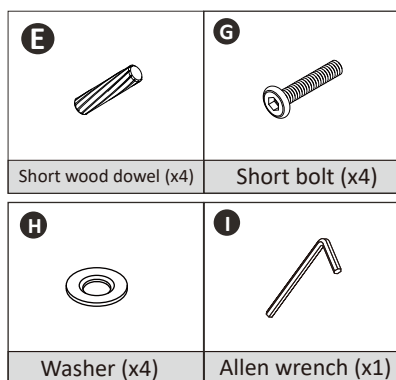

STEP 10


Insert the top back panel (22).

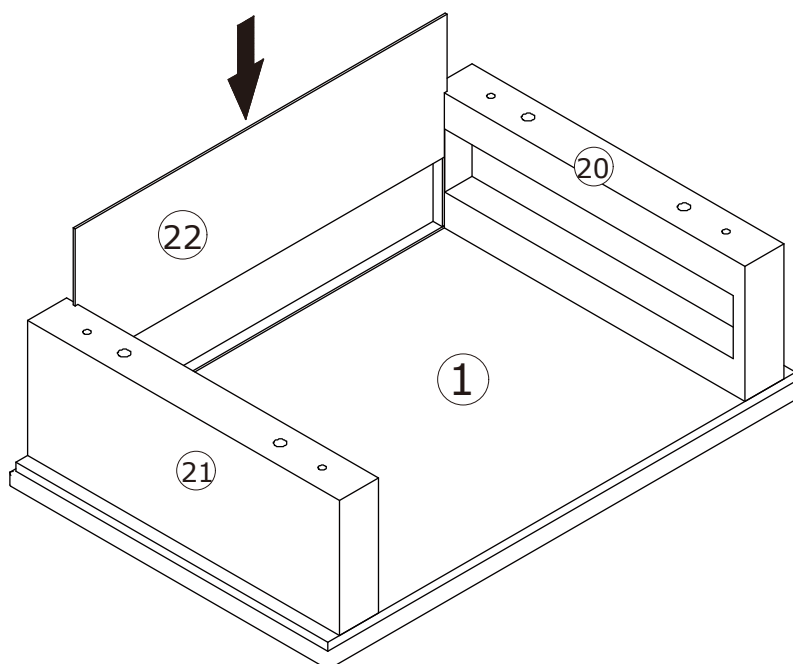

STEP 11


1. Connect the assembled top panel in Step 10 with the assembled cabinet in step 8 using washer (H), long bolt (F) and allen wrench (I) as shown below.
2. Install the cabinet left slide (CL) and cabinet right slide (CR) with short screw (K), and pay special attention to fix them in the correct hole position as shown below.


F 	H 	I 	K 	CL 	CR 
Long bolt (x4)	Washer (x4)	Allen wrench (x1)	Short screw (x6)	Cabinet left slide (x1)	Cabinet right slide (x1)

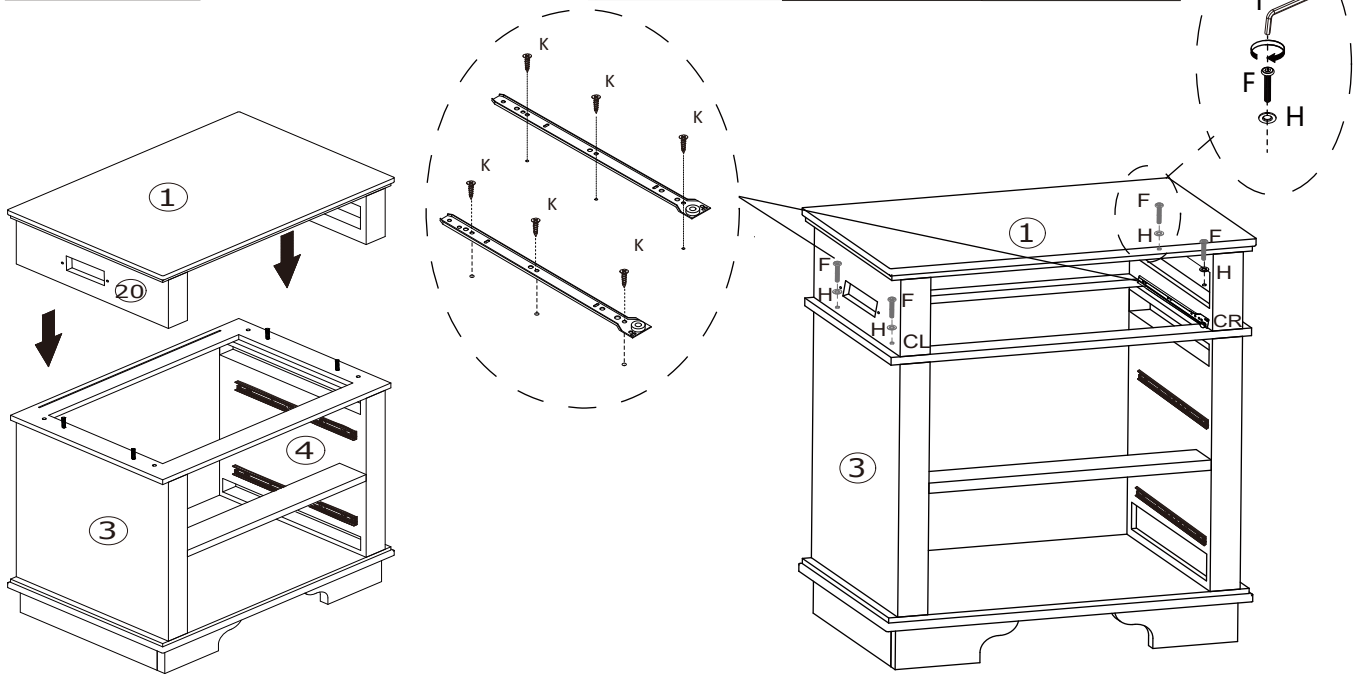

STEP 12



Install the power strip (Q) into the top side panel with charging hole (20) with the short screw (K).

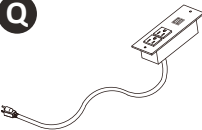Q 	K 
Power strip (x1)	Short Screw (x2)

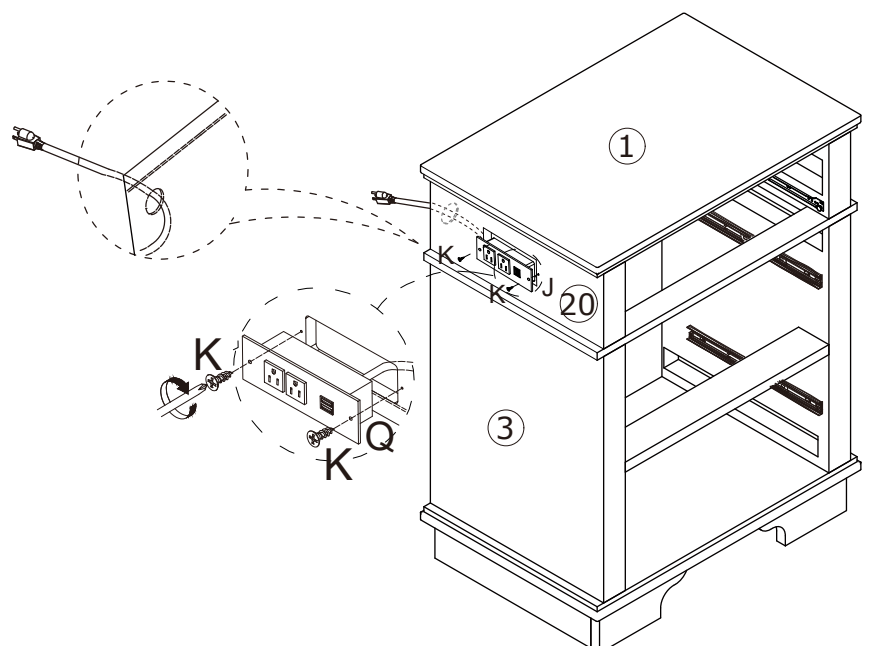



STEP 13

Screw the cam bolt (A) into the top drawer front(11) and the bottom drawer front(12).

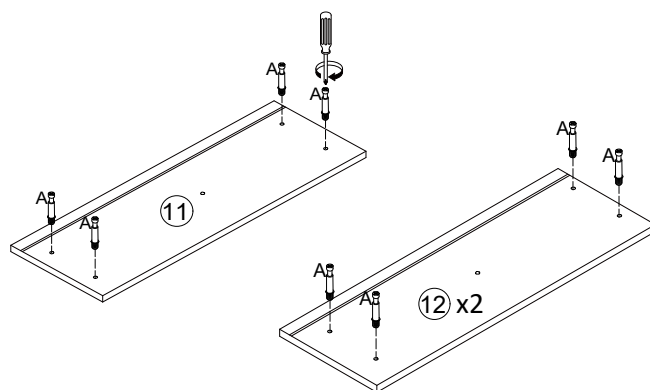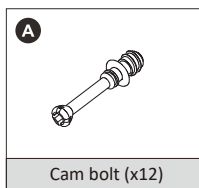



STEP 14

Attach the top drawer left panel (13) and the top drawer right panel (14) to top drawer back panel (15) with long screw (C) as shown below.

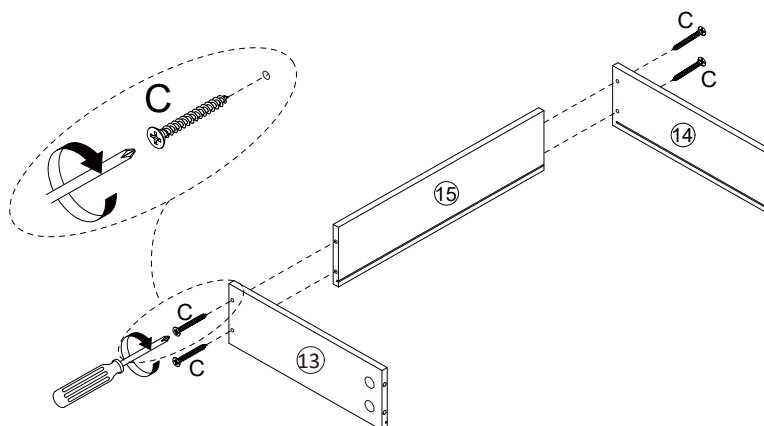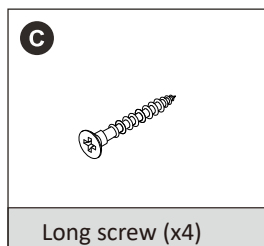

STEP 15


1. Insert the drawer bottom panel (16) as shown below.
2. Install the top drawer front panel (11) with cam lock (B).
3. Install the knob & screw (L).

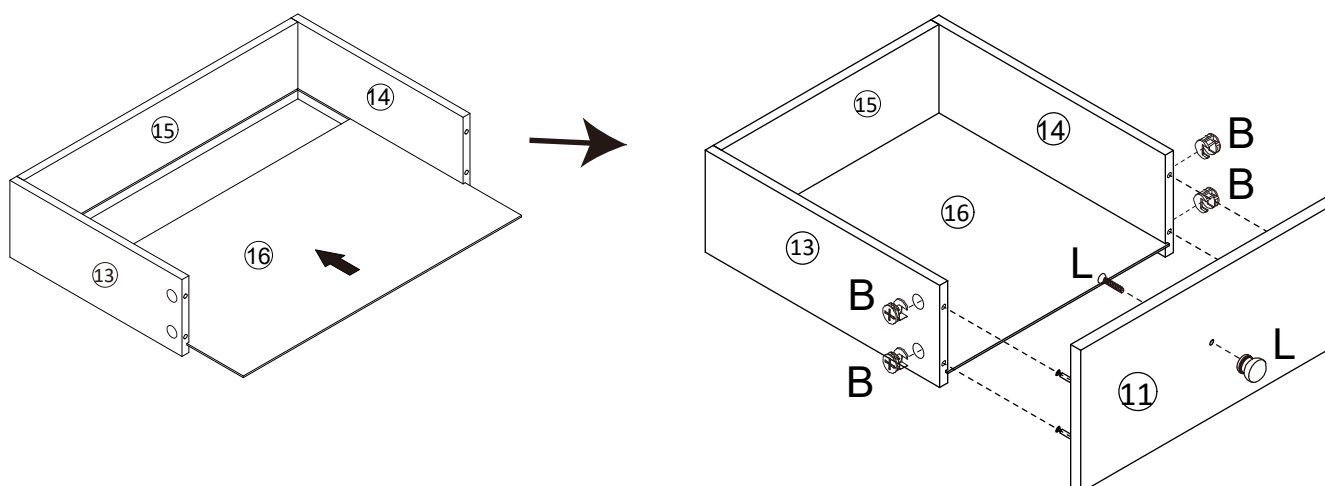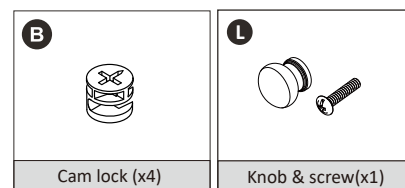

STEP 16

Fix the drawer left slide (DL) and drawer right slide (DR) with short screw (K) in the correct hole position on the drawer side panels (13) & (14) as shown below.


DL	DR	K
Drawer left slide (x1)	Drawer right slide (x1)	Short Screw (x6)

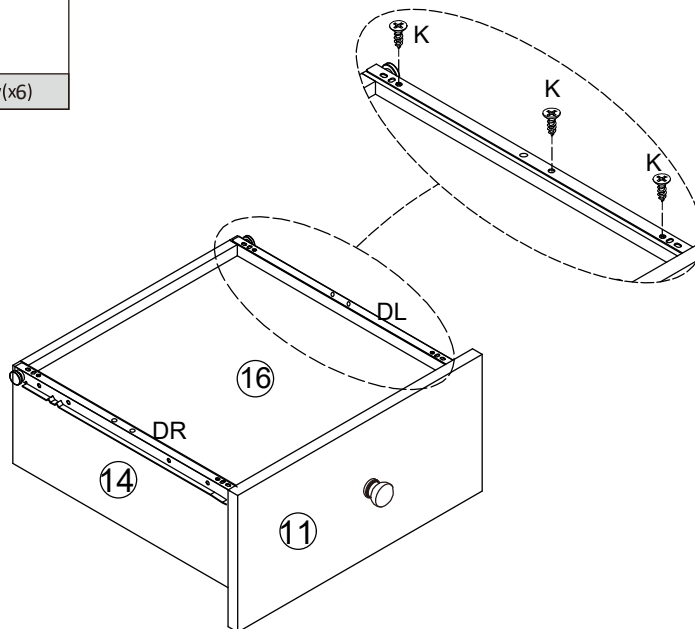

STEP 17



1. Attach the bottom drawer left panel (17) and bottom drawer right panel (18) to the bottom drawer back panel (19) with long screw (C) as shown below.
2. Repeat the previous step.

C
Long screw (x8)

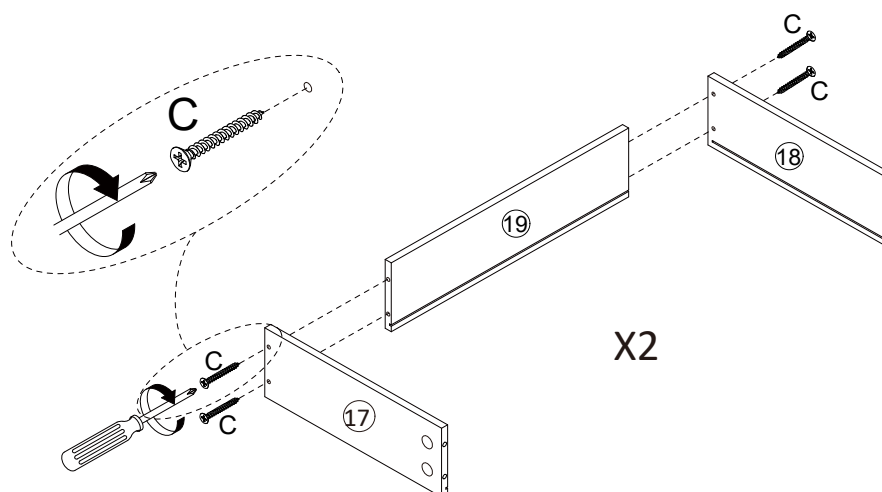



STEP 18

1. Insert the drawer bottom panel (16) as shown below.
2. Install the bottom drawer front panel (12) with cam lock (B).
3. Install the knob & screw (L).
4. Repeat the previous step.

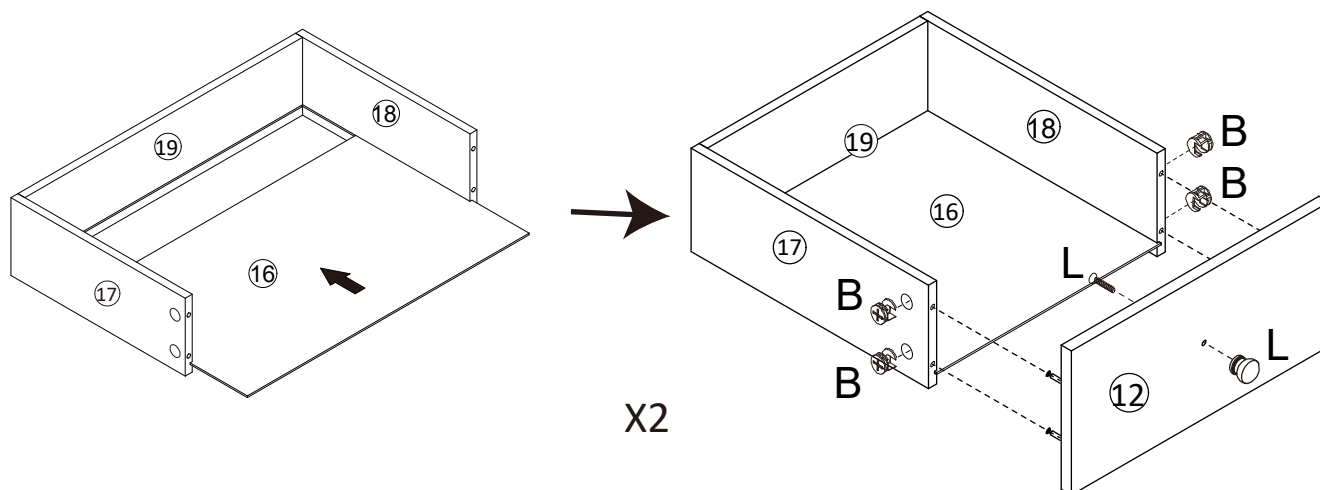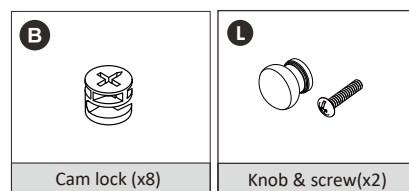

STEP 19

1. Fix the metal slide (J-2) with short screw (K) in the correct hole position on the drawer side panels as shown below.
2. Repeat the previous step.

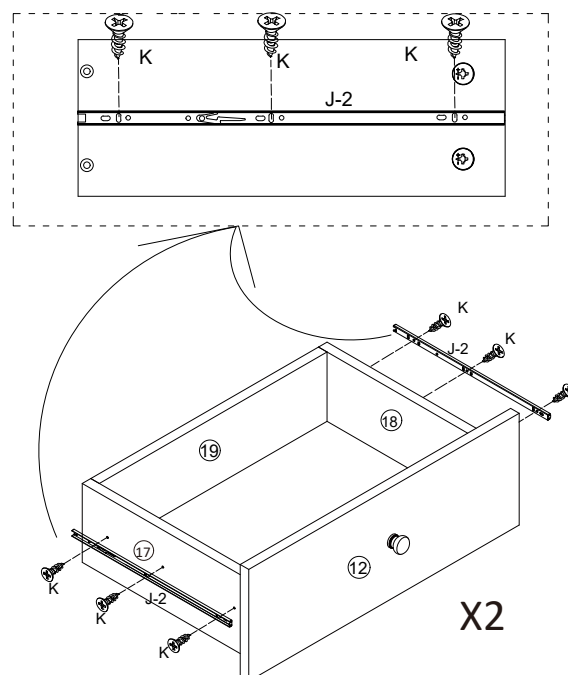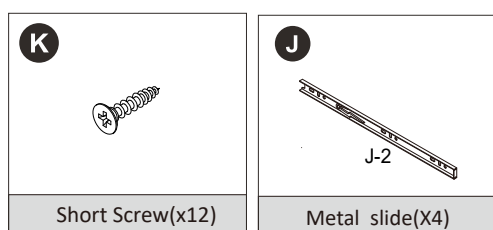


STEP20

1. Align the slides on the drawer and cabinet.
2. Push the drawer so that the drawer slide engages with the inside tracks of the cabinet slide.

Note:

The first slide of the drawer may require a little more force. But once the slides engage the drawer should slide smoothly.

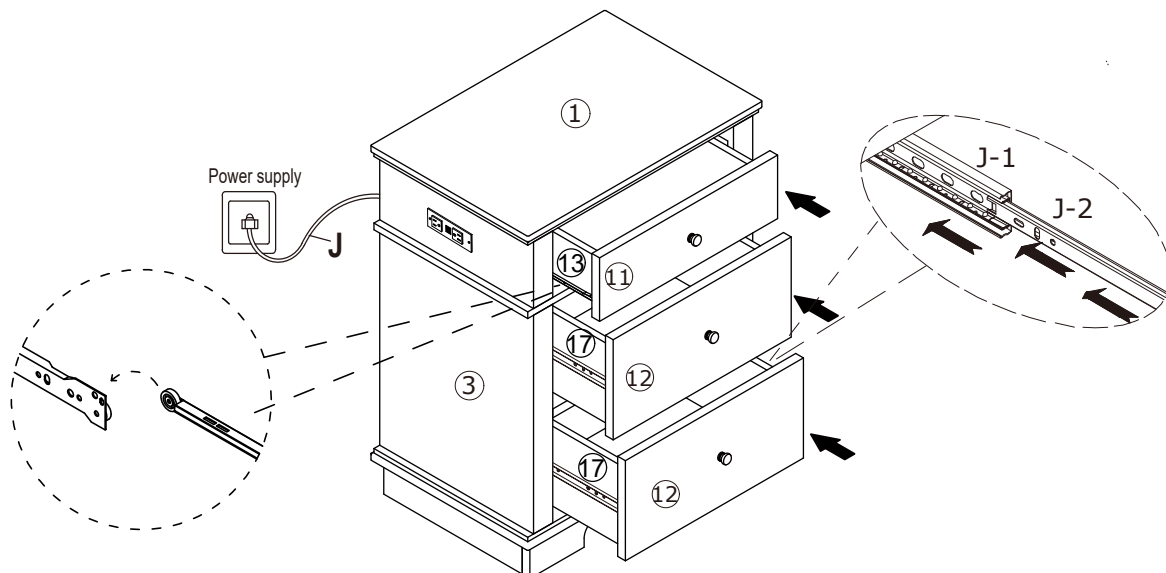

STEP21

1. Attach the plastic bracket (M) to the back of the top back panel with short screw (K).
2. Drill a hole slightly smaller than anchor (P) into drywall and gently tap the anchor into the hole.
3. Insert eyelet screw (O) into anchor (P).
4. Secure the nightstand to the wall with the cable tie (N).

