





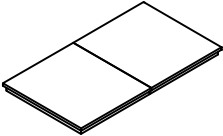


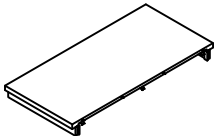

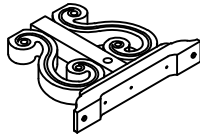

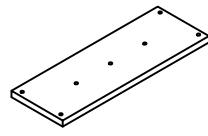


ASSEMBLY INSTRUCTIONS

 
DINING TABLE

A Table Top  1 pc	B Table Leaf  1 pc	C Leg  2 pcs	D Mounting Plate  2 pcs
E Stretcher  1 pc	F Trim (Locked on both sides of the E)  2 pcs	G Bolt 5/16" x 2"  6 pcs	H Lock Washer 5/16" x 12mm  6 pcs
I Flat Washer 5/16" x 19mm  6 pcs	J Bolt 1/4" x 2"  8 pcs	K Lock Washer 1/4" x 10mm  8 pcs	L Flat Washer 1/4" x 19mm  8 pcs
M Allen Wrench 4mm  1 pc			

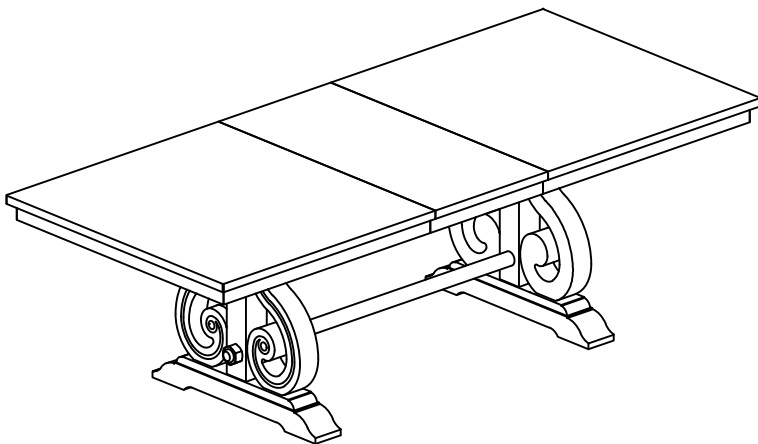


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Place the Leg (C) down on a smooth carpeted surface. Attach the Mounting Plate (D) to the Leg (C) by using Bolt (G), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (M). Then, remove the Trim (F) from both sides of the Stretcher (E).

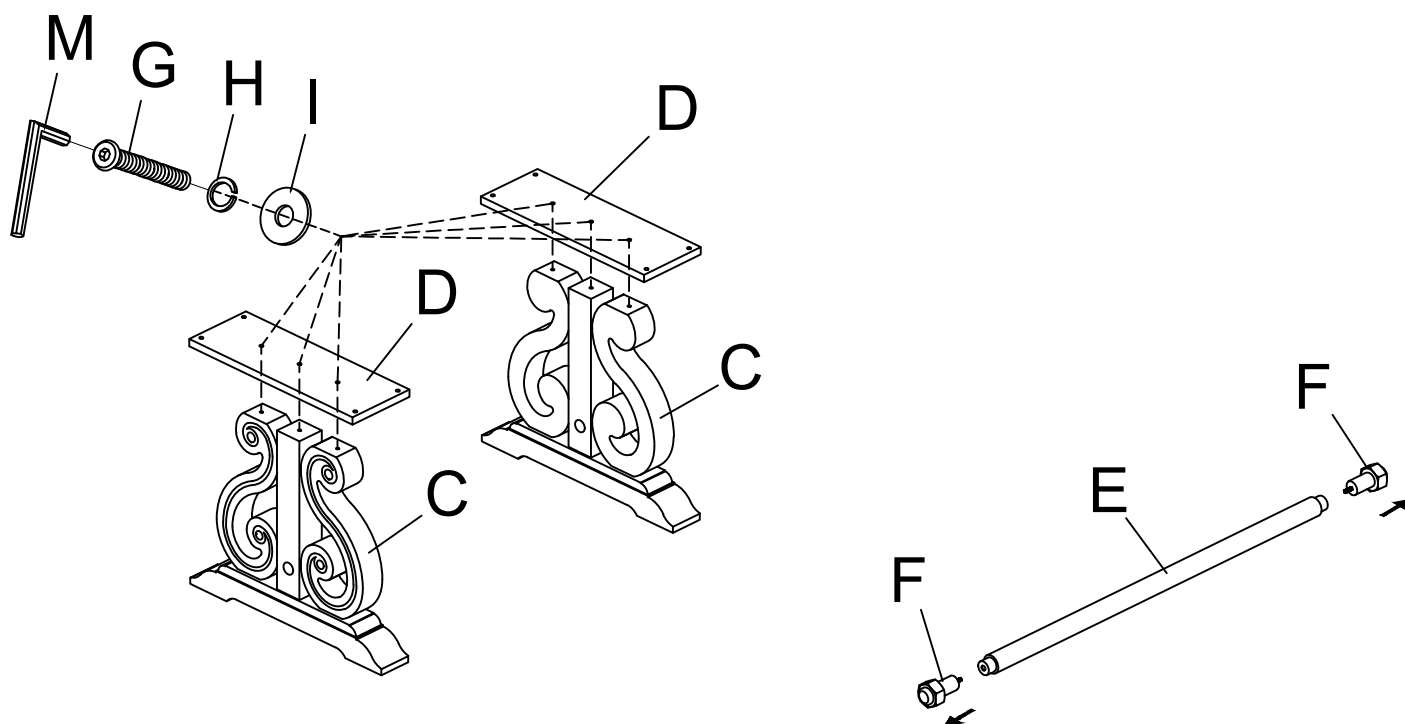


- 2** Place the Table Top (A) upside down on a smooth carpeted surface. Attach the Mounting Plate (D) to the Table Top (A) by using Bolt (J), Lock Washer (K) and Flat Washer (L) with the Allen Wrench (M).

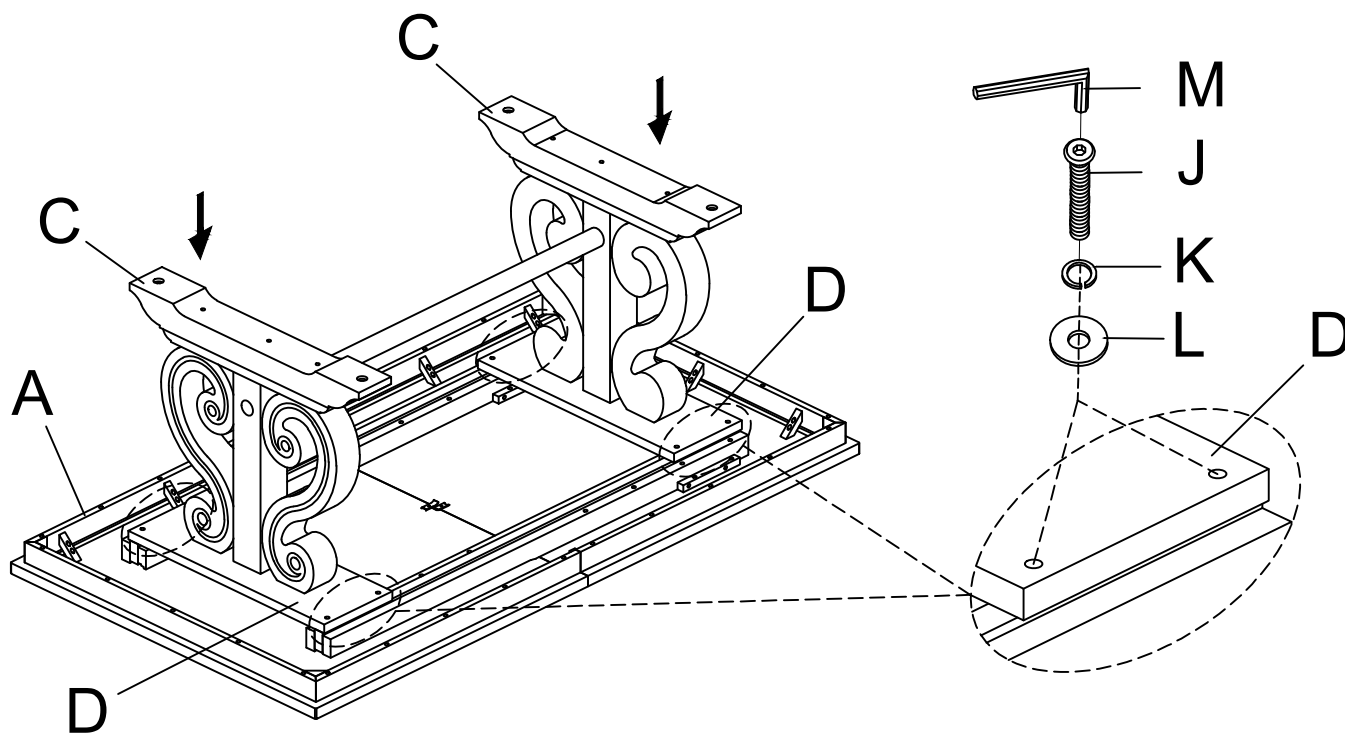

-
- 3** Place the Stretcher (E) between the Leg (C) and secure it with the Trim (F).

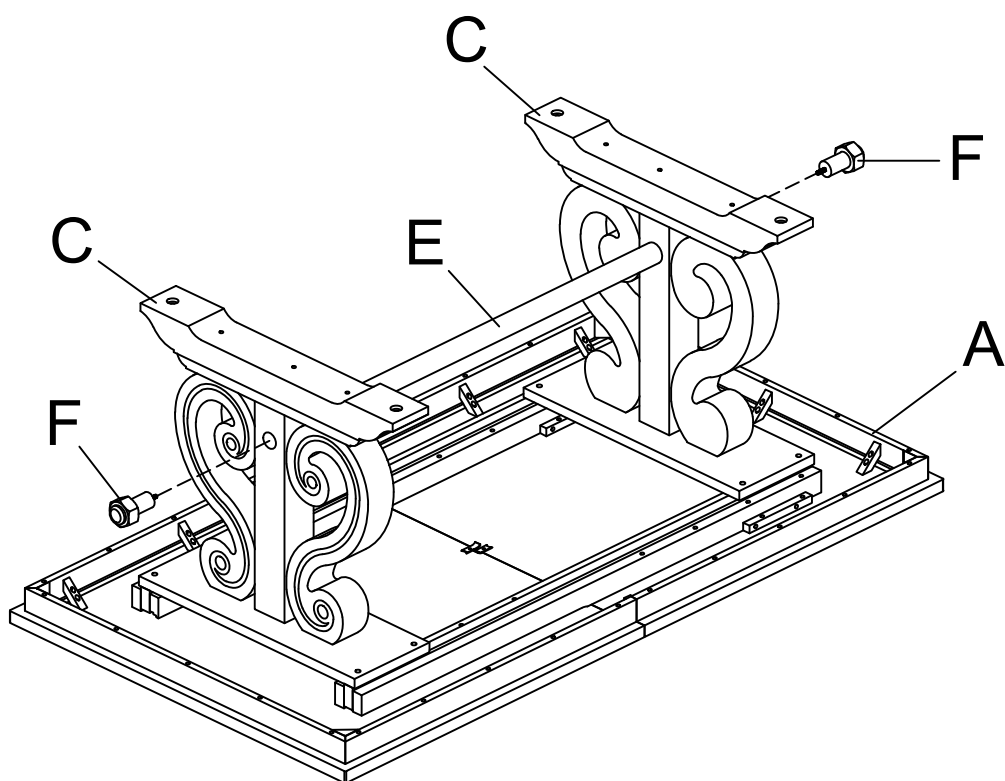

-
- 4** Open the Table Top (A) and place the Table Leaf (B) on the slides.

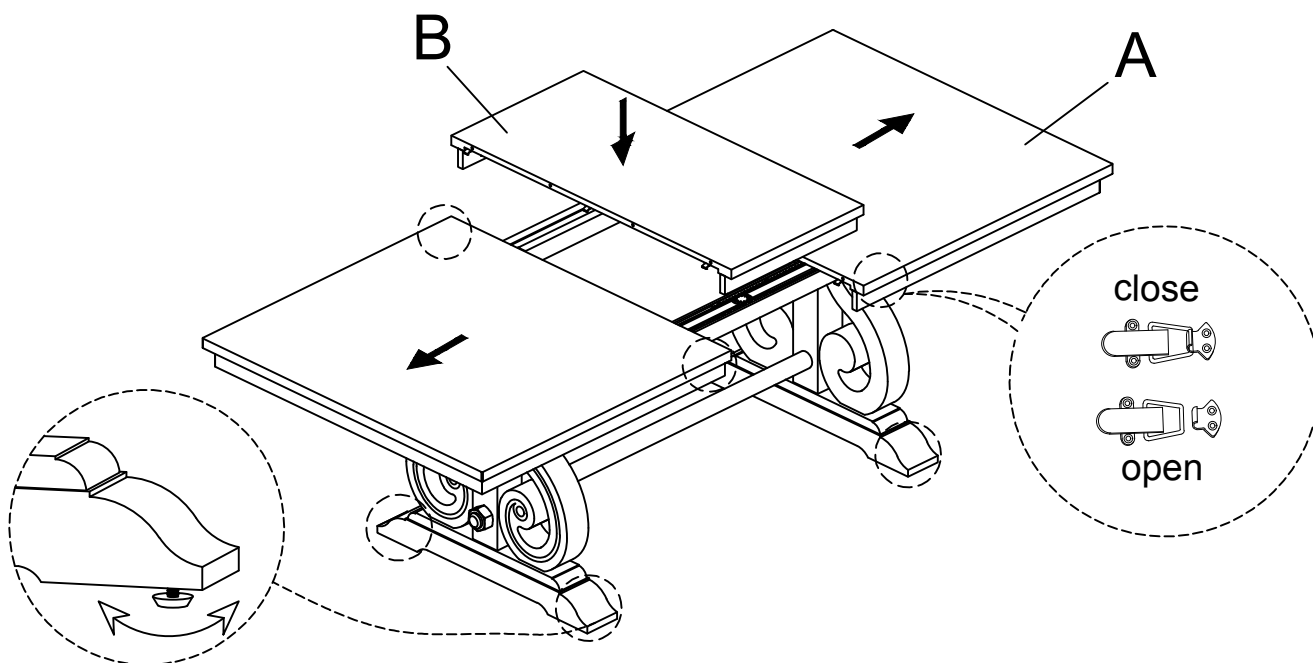

Adjust the levelers to balance the table.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.