



NICEC



Designed in California, USA

JERSEY DISPLAY FRAME

User Manual



What's In The Box

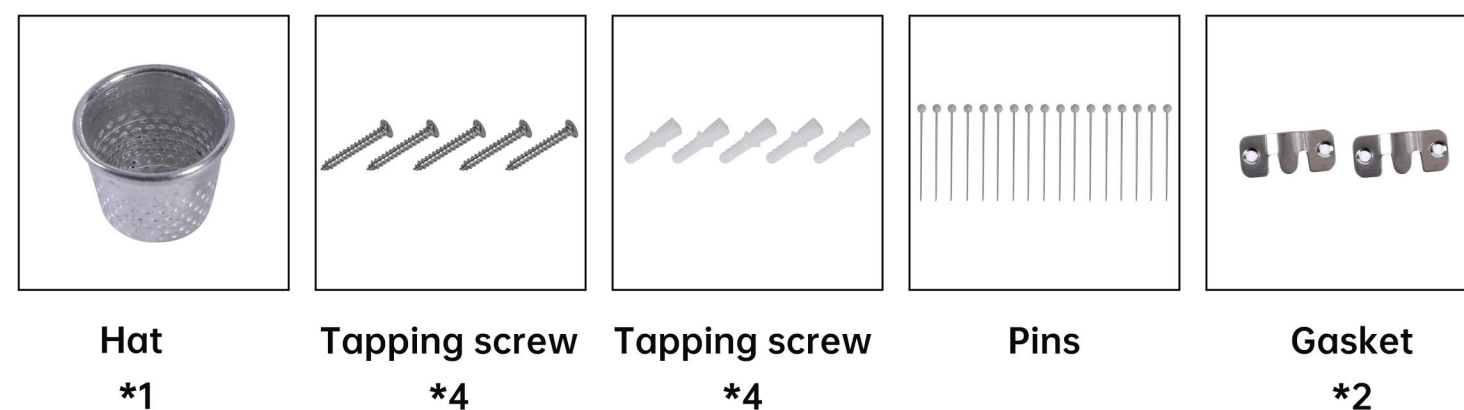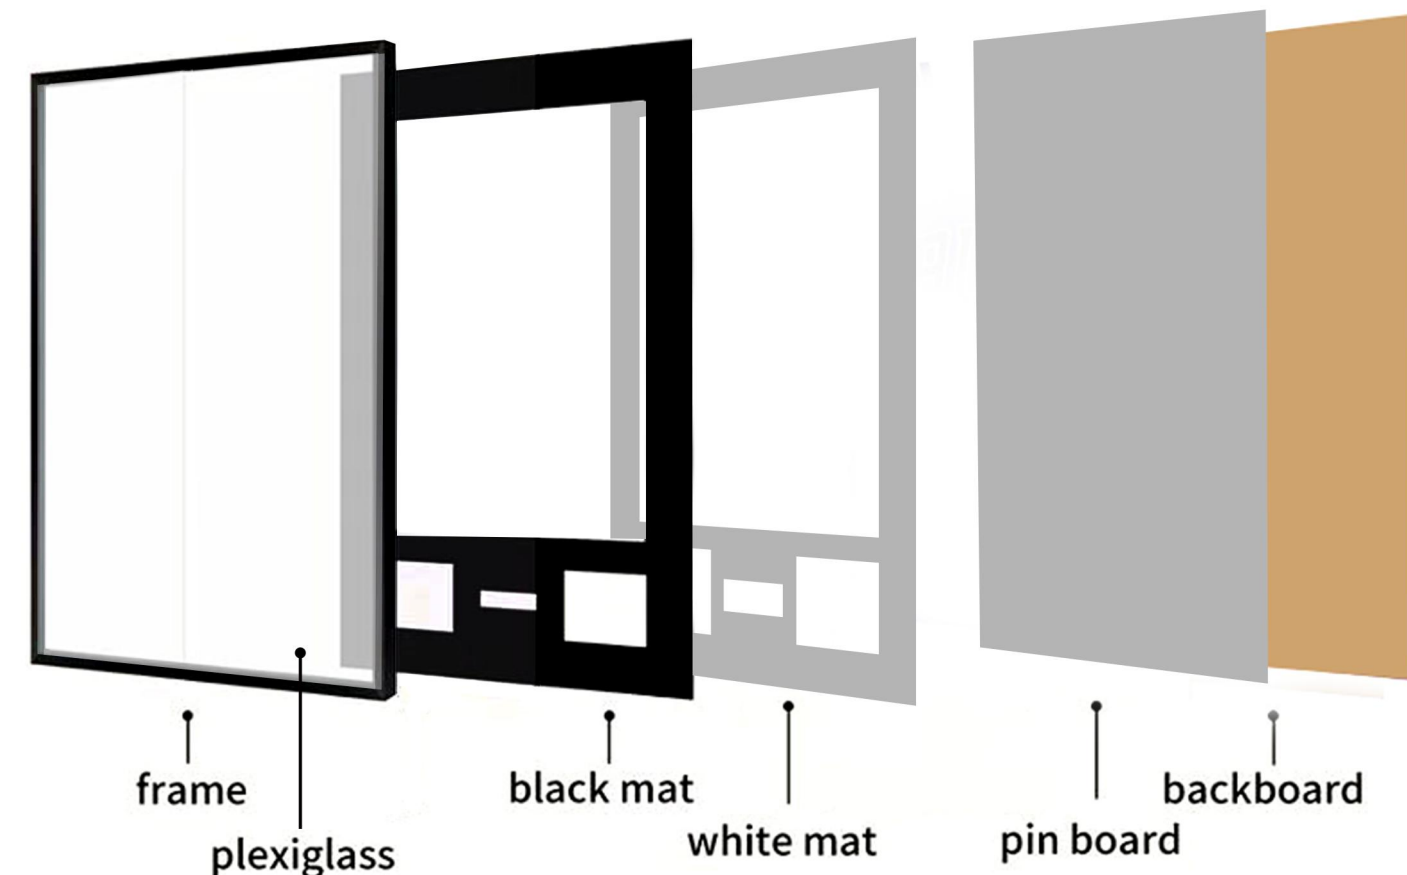

Important Tips:

The brown protective films are on both sides of the acrylic panel. Please remove gently before using

Installing Jersey Onto The Frame



1. Attach your display photos to the corresponding spaces on the mat.



2. Lay your jersey flat on the pin board.




3. Slide the pin board into the jersey.



4. Use the provided thimbles to pin the excess fabric.




5. Place the mat and pin board layers into the jersey frame in order; Lock the frame and mount it.

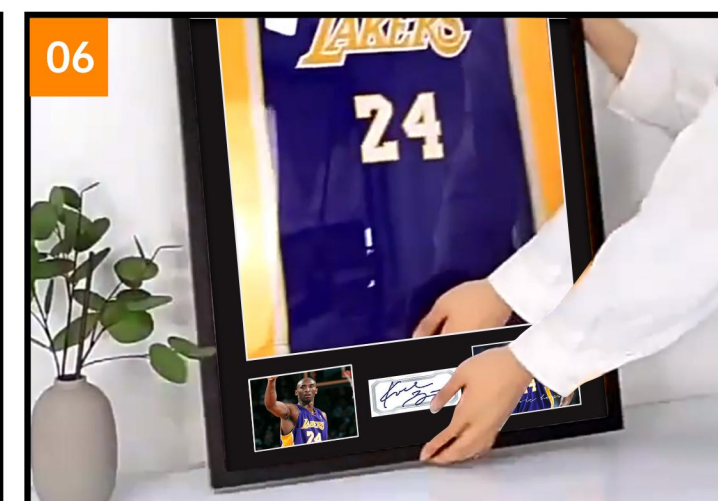


6. Your jersey and photo display is now complete.

Mounting The Frame On The Wall

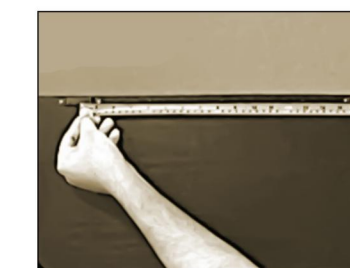


1

Measure the distance between the two sawtooth hangers behind the frame

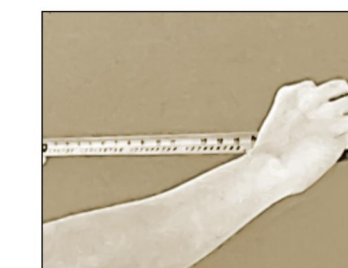


2

Mark the left and right end points of this distance on the wall at the same horizontal level

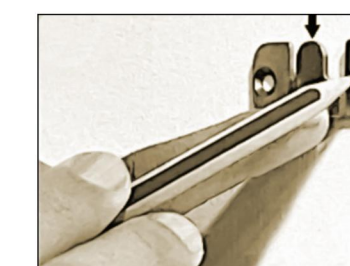

3

Align the heavy-duty hook horizontally so the center of the hook match the each point mark on the wall; Mark the two screw holes for both sides

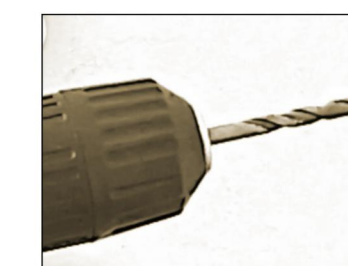


4

Drill the screw holes and insert wall plug



5

Screw the two heavy-duty hooks onto the wall

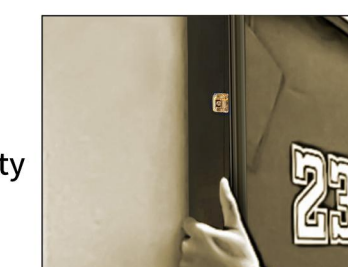

6

Mount the frame

NICE CHOICE INC

6610 DOOLITTLE AVE, RIVERSIDE, CA 92503

Tel: +1- 562-888-5868

Mobile: +1- 310-989-7562

www.nicec.net

Need help? Contact Us:

:562-888-5868

:310-989-7562

:service@nicec.net