


UNIVERSAL INSTALLATION MANUAL FOR ELECTRIC HEIGHT-ADJUSTABLE DESKS




Parts List


Before proceeding with installation, please verify all components against the provided parts list to ensure you have received all necessary parts.

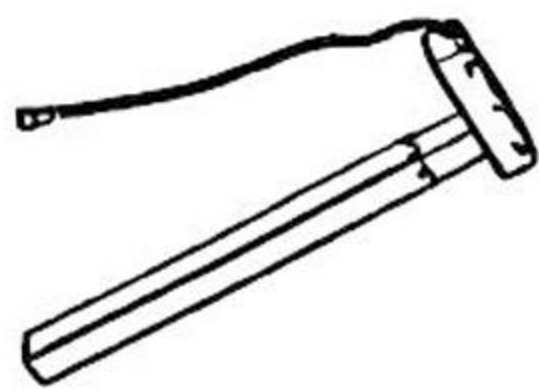

A (x2) - Lifting Columns

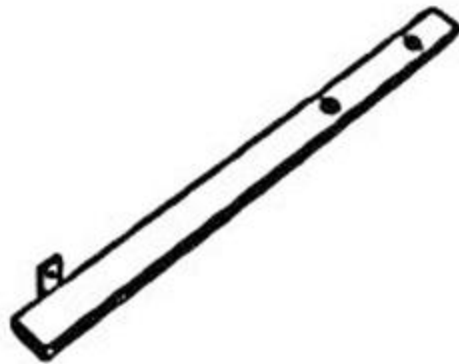


B (x4) - Cross Beams

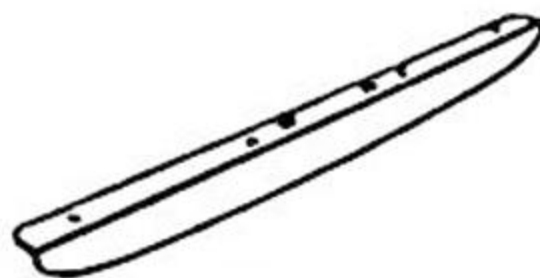


C (x2) - Side Wings




D (x2) - Connecting Rods

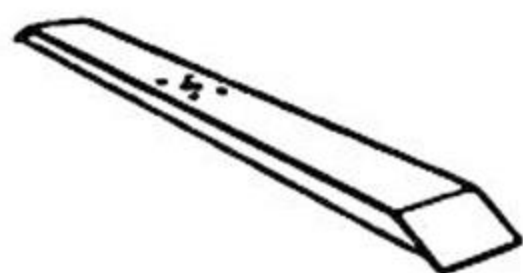

E (x2) - Base Table Legs

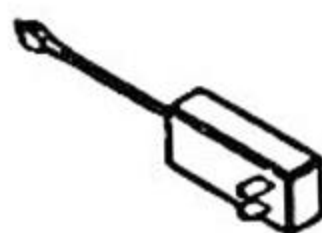

F (x1) - Adapter

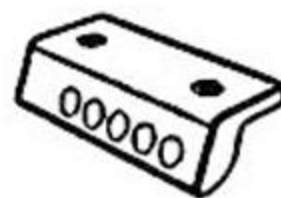

G (x1) - Controller



H (x1) - Extension Cable

Screw Accessory Kit



S-G (x1)



S-E (x1)



S-A (x16)
M6x14 Screws



S-B (x14)
ST5x16 Screws



I (x12)
Anti-vibration Pads



J (x4)
Foot Pads



Electrical Safety Precautions:

This product is electrically powered. Please read the electrical safety precautions carefully to avoid risks such as burns, fire, or electric shock.



Do not clean the product with water while it is powered on.



Do not operate the product in humid environments or if electronic components come into contact with liquids.



Do not disassemble or install product components while it is powered on.



Do not operate the product if the control box emits abnormal noise or odor. Do not modify the designated power unit or control box.





Do not operate the product if the power cord or power plug is damaged.

Note: To ensure safety, please have two people work together during installation. For ease of assembly, place the components on a flat surface.
The diagrams provided in this manual are for reference only. Please refer to the actual product for details.


1. Install the Table Legs

- Screw the foot pads (J) into the pre-threaded holes on the bottom of the table leg (E). (Do not fully tighten; adjust the tightness according to the actual flatness of the floor to prevent the table from wobbling.)
- Attach the table leg (E) to the lifting column (A) using four M6x14 screws (S-A).
- Repeat the above steps to install the other table leg.

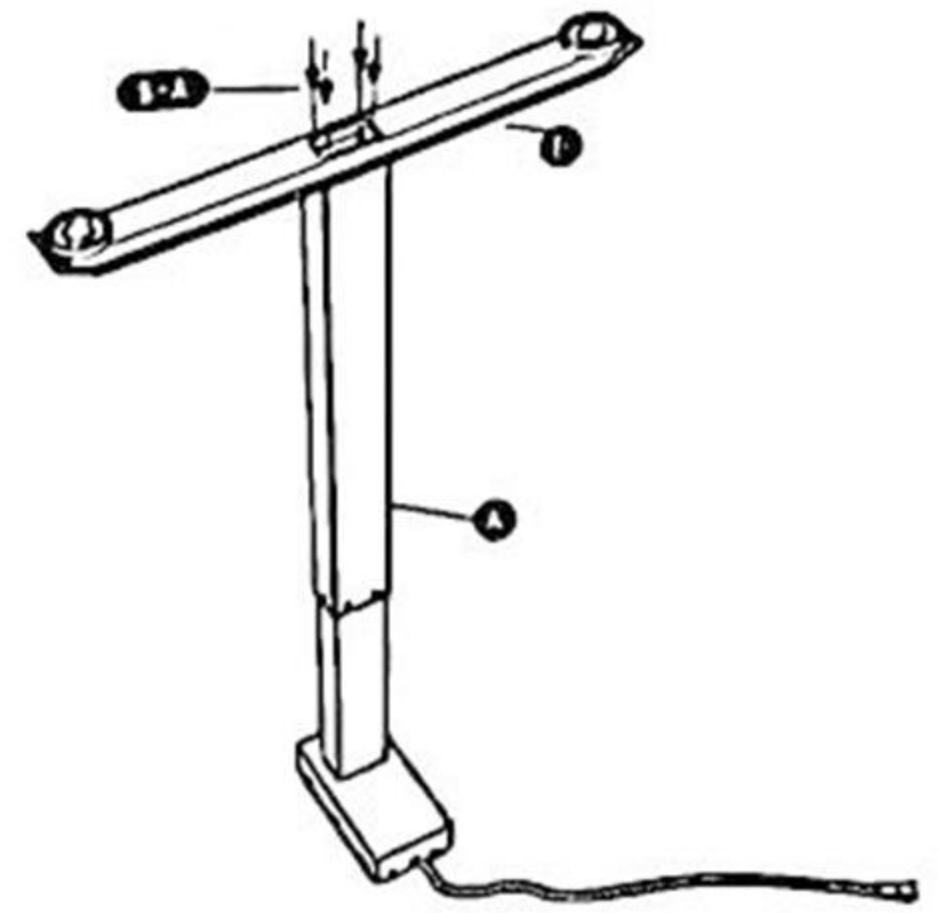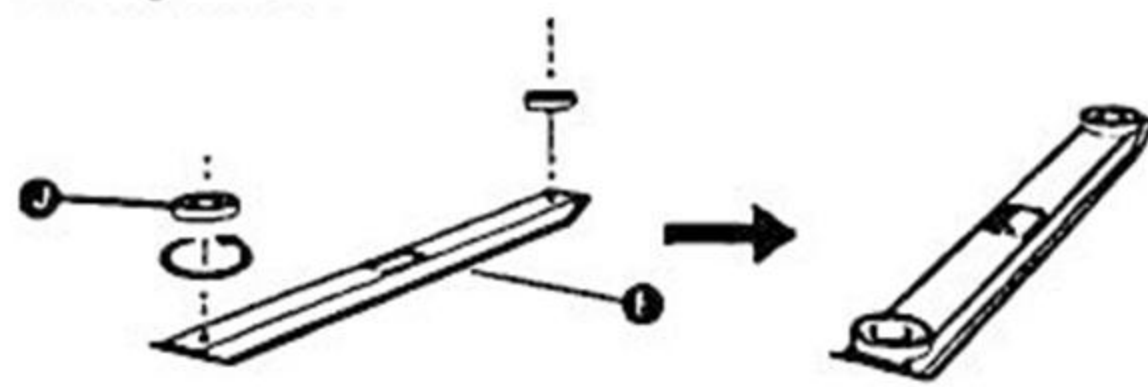


2. Install the Cross Beams

- Attach the cross beam (B) to the lifting column with the mounting bracket facing inward and the side with two screws facing downward.
- Use the hex key (S-G) to tighten the four M6x14 screws (S-A).
- Repeat the above steps to install the other cross beam.

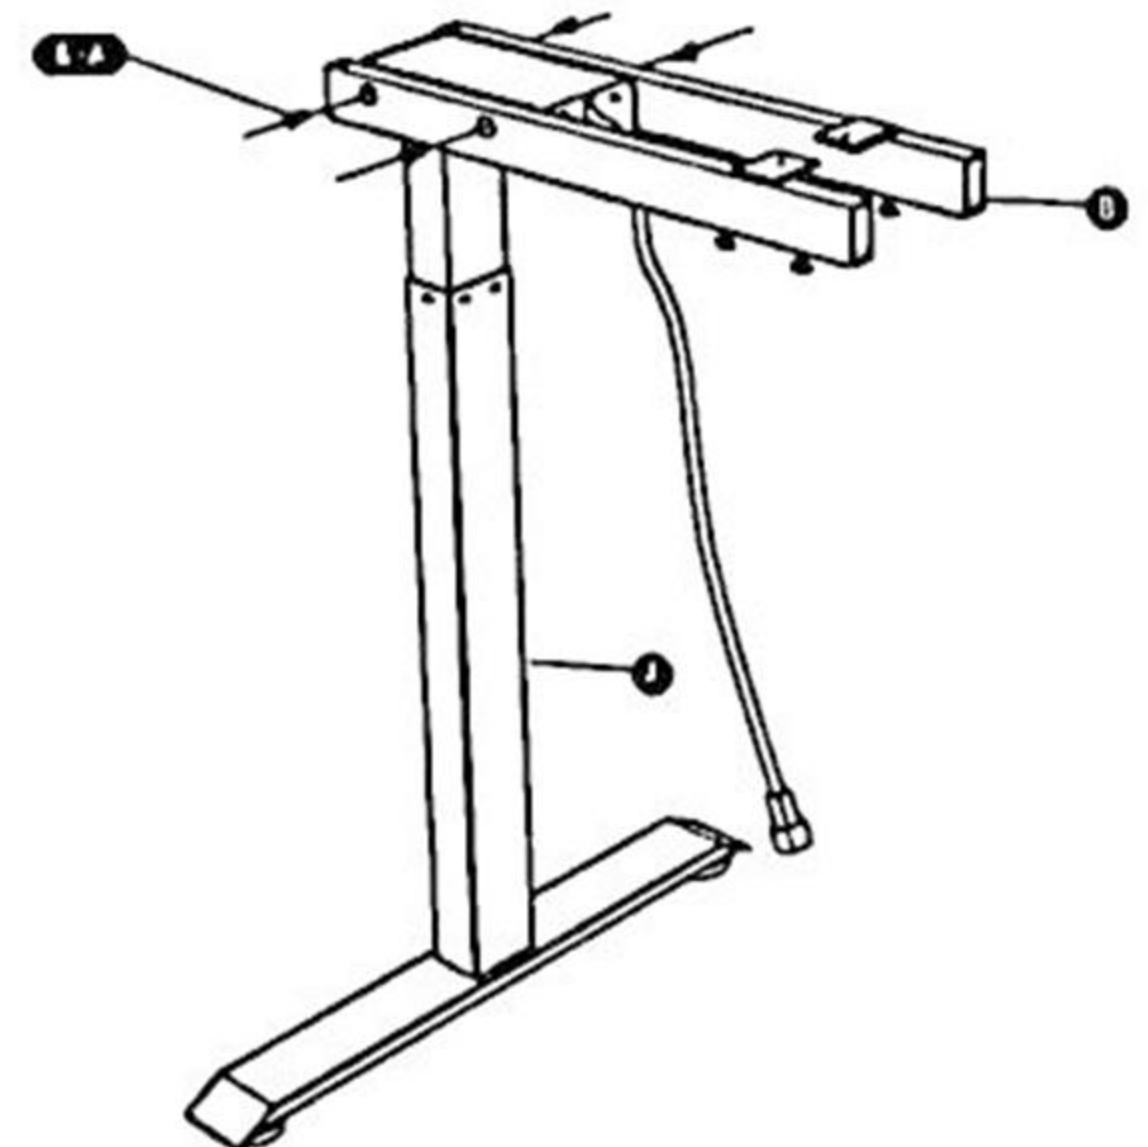


3. Install the Connecting Rods

- Slowly insert the connecting rod (D) into the cross beam, ensuring that the slotted side faces the inside of the cross beam.
- In the same manner, install the connecting rod into the other cross beam.
- After adjusting to the desired length, tighten the pre-installed screws at the bottom of the cross beams to secure them in place. Do not overtighten.

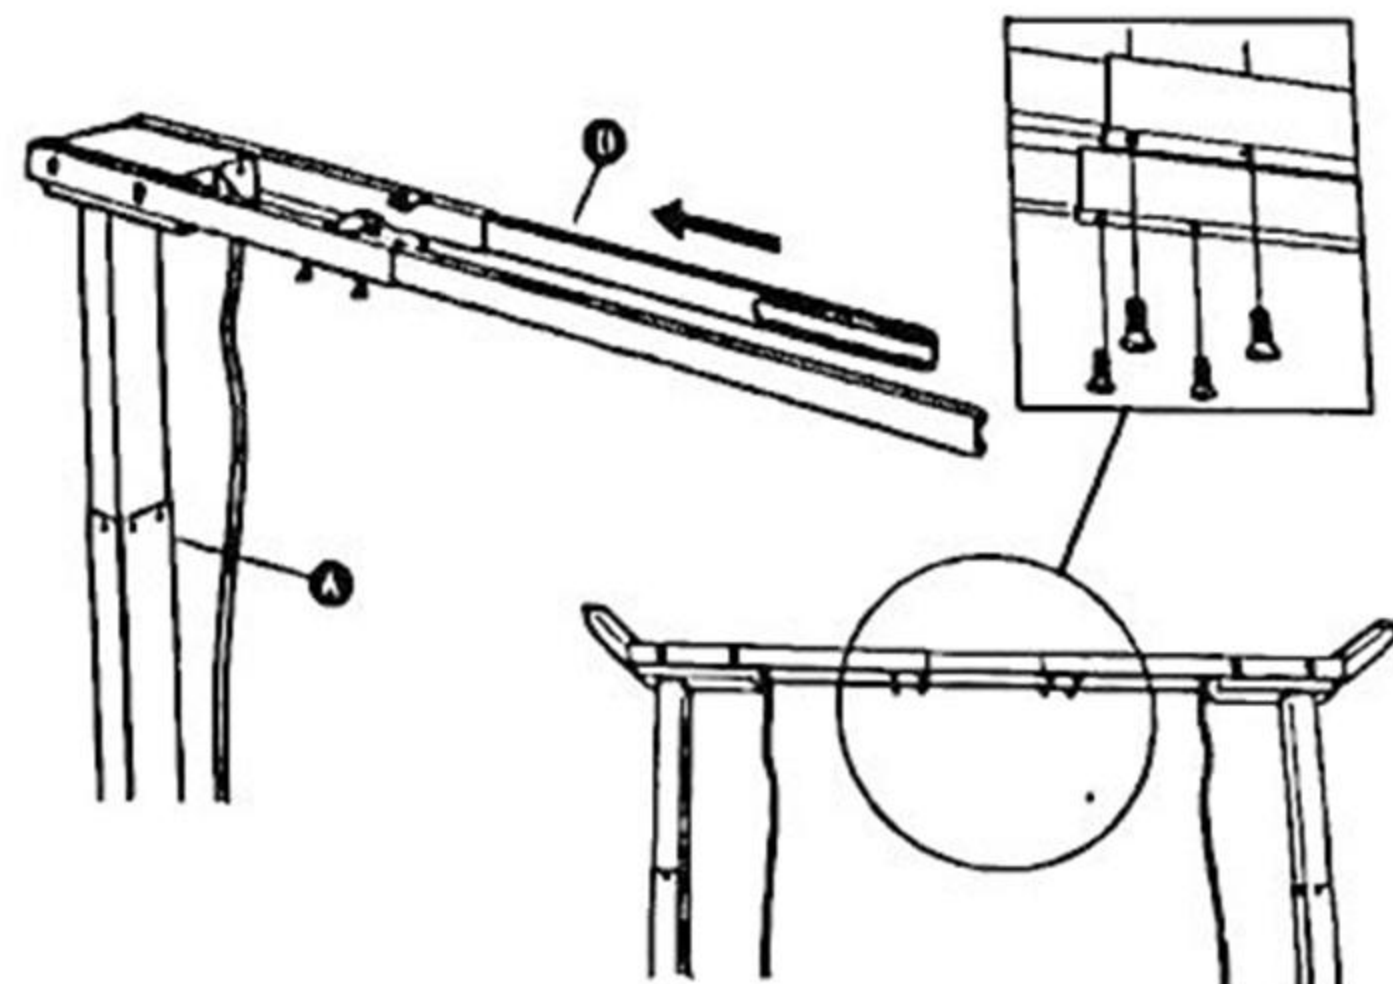


Install the side wings

1. Remove the pre-installed screws, attach the wing to both ends of the crossbeam, and tighten the two pre-installed screws using an Allen wrench.
2. Repeat the above steps to install the second wing.

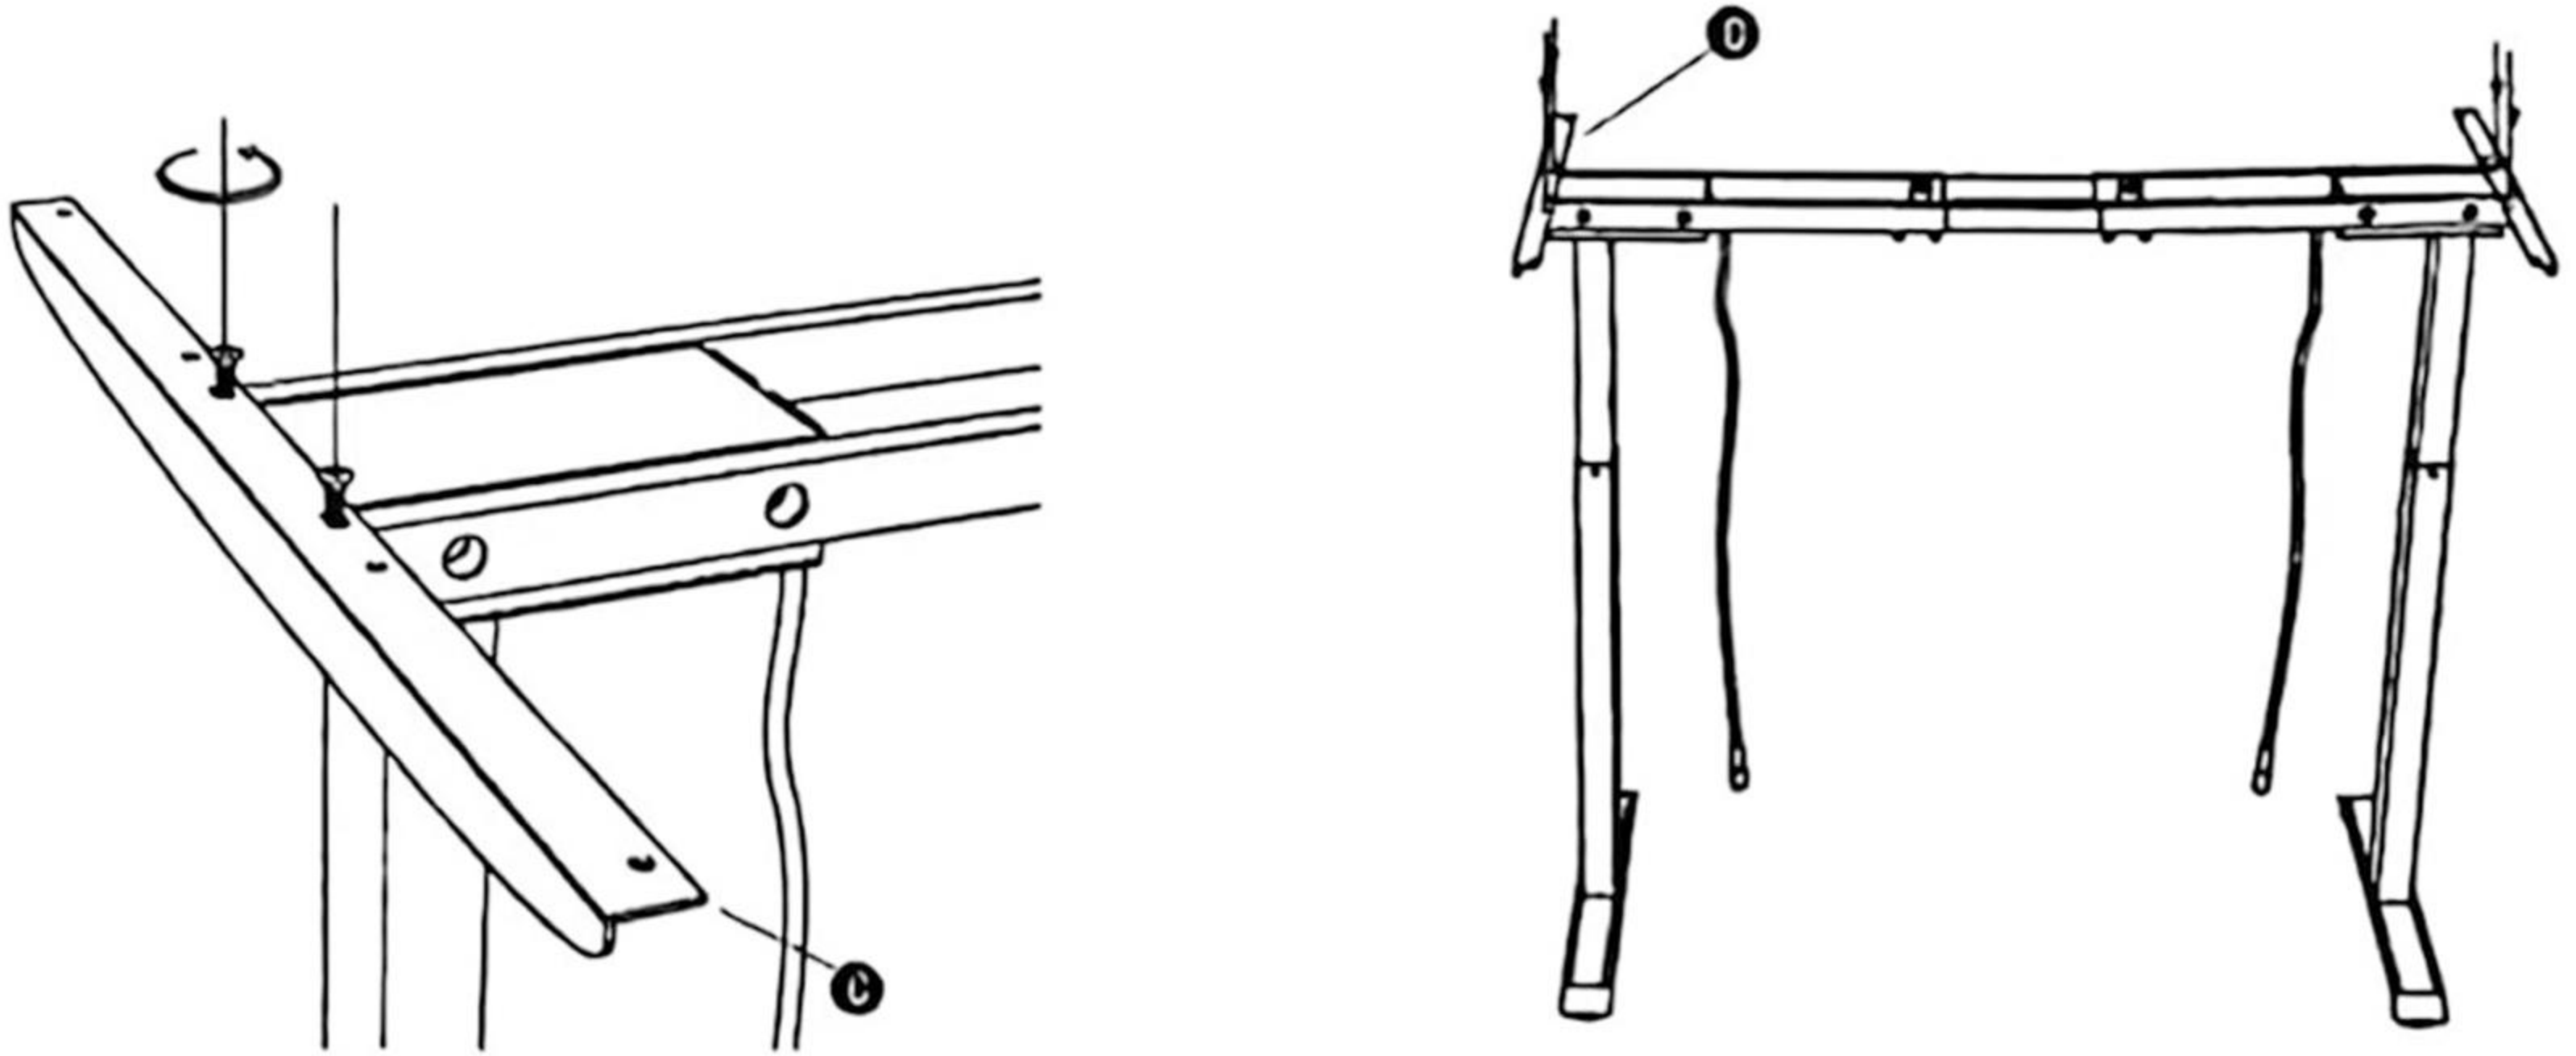

Install the vibration-dampening pads

Install the anti-vibration rubber pads (I) onto the wings and the crossbeam.

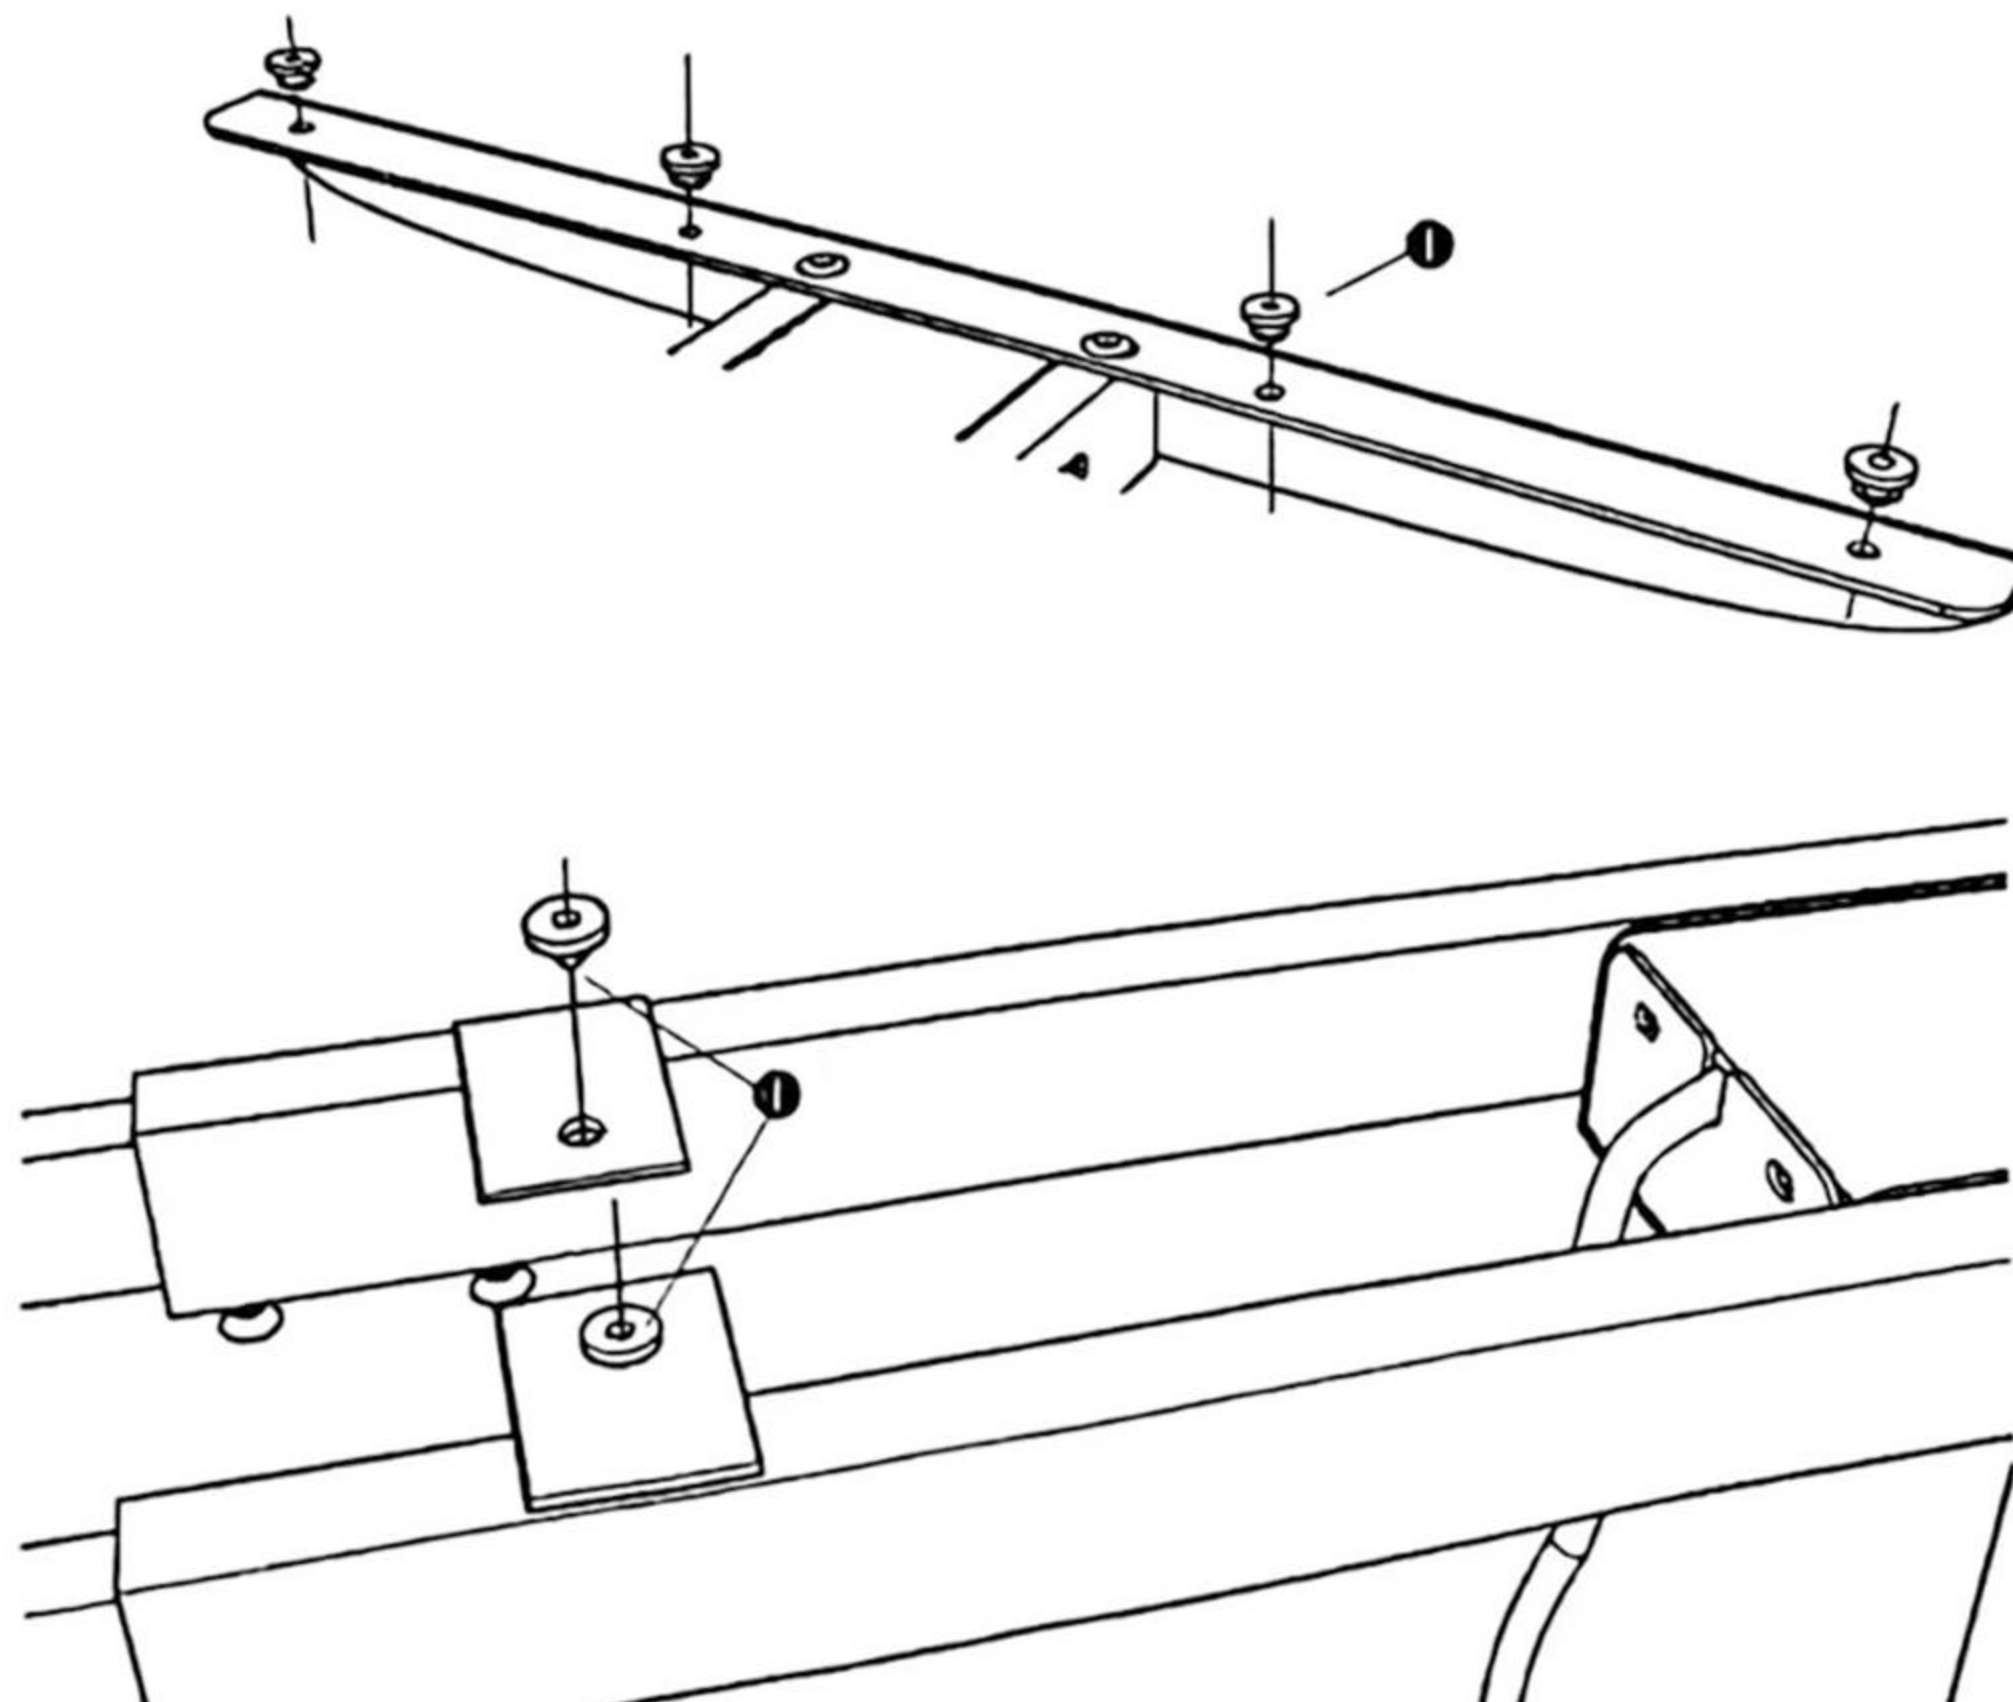



Install the tabletop

Carefully place the tabletop (not included) upside down on a soft mat or clean floor surface.

Slightly loosen the screws on the underside of the crossbeam.

Adjust the position of the crossbeam according to your tabletop size, ensuring the frame is centered perfectly beneath the tabletop, then tighten the bottom screws to secure the frame in place.

As shown in the diagram, attach the frame to the tabletop using 12 ST5×16 screws.

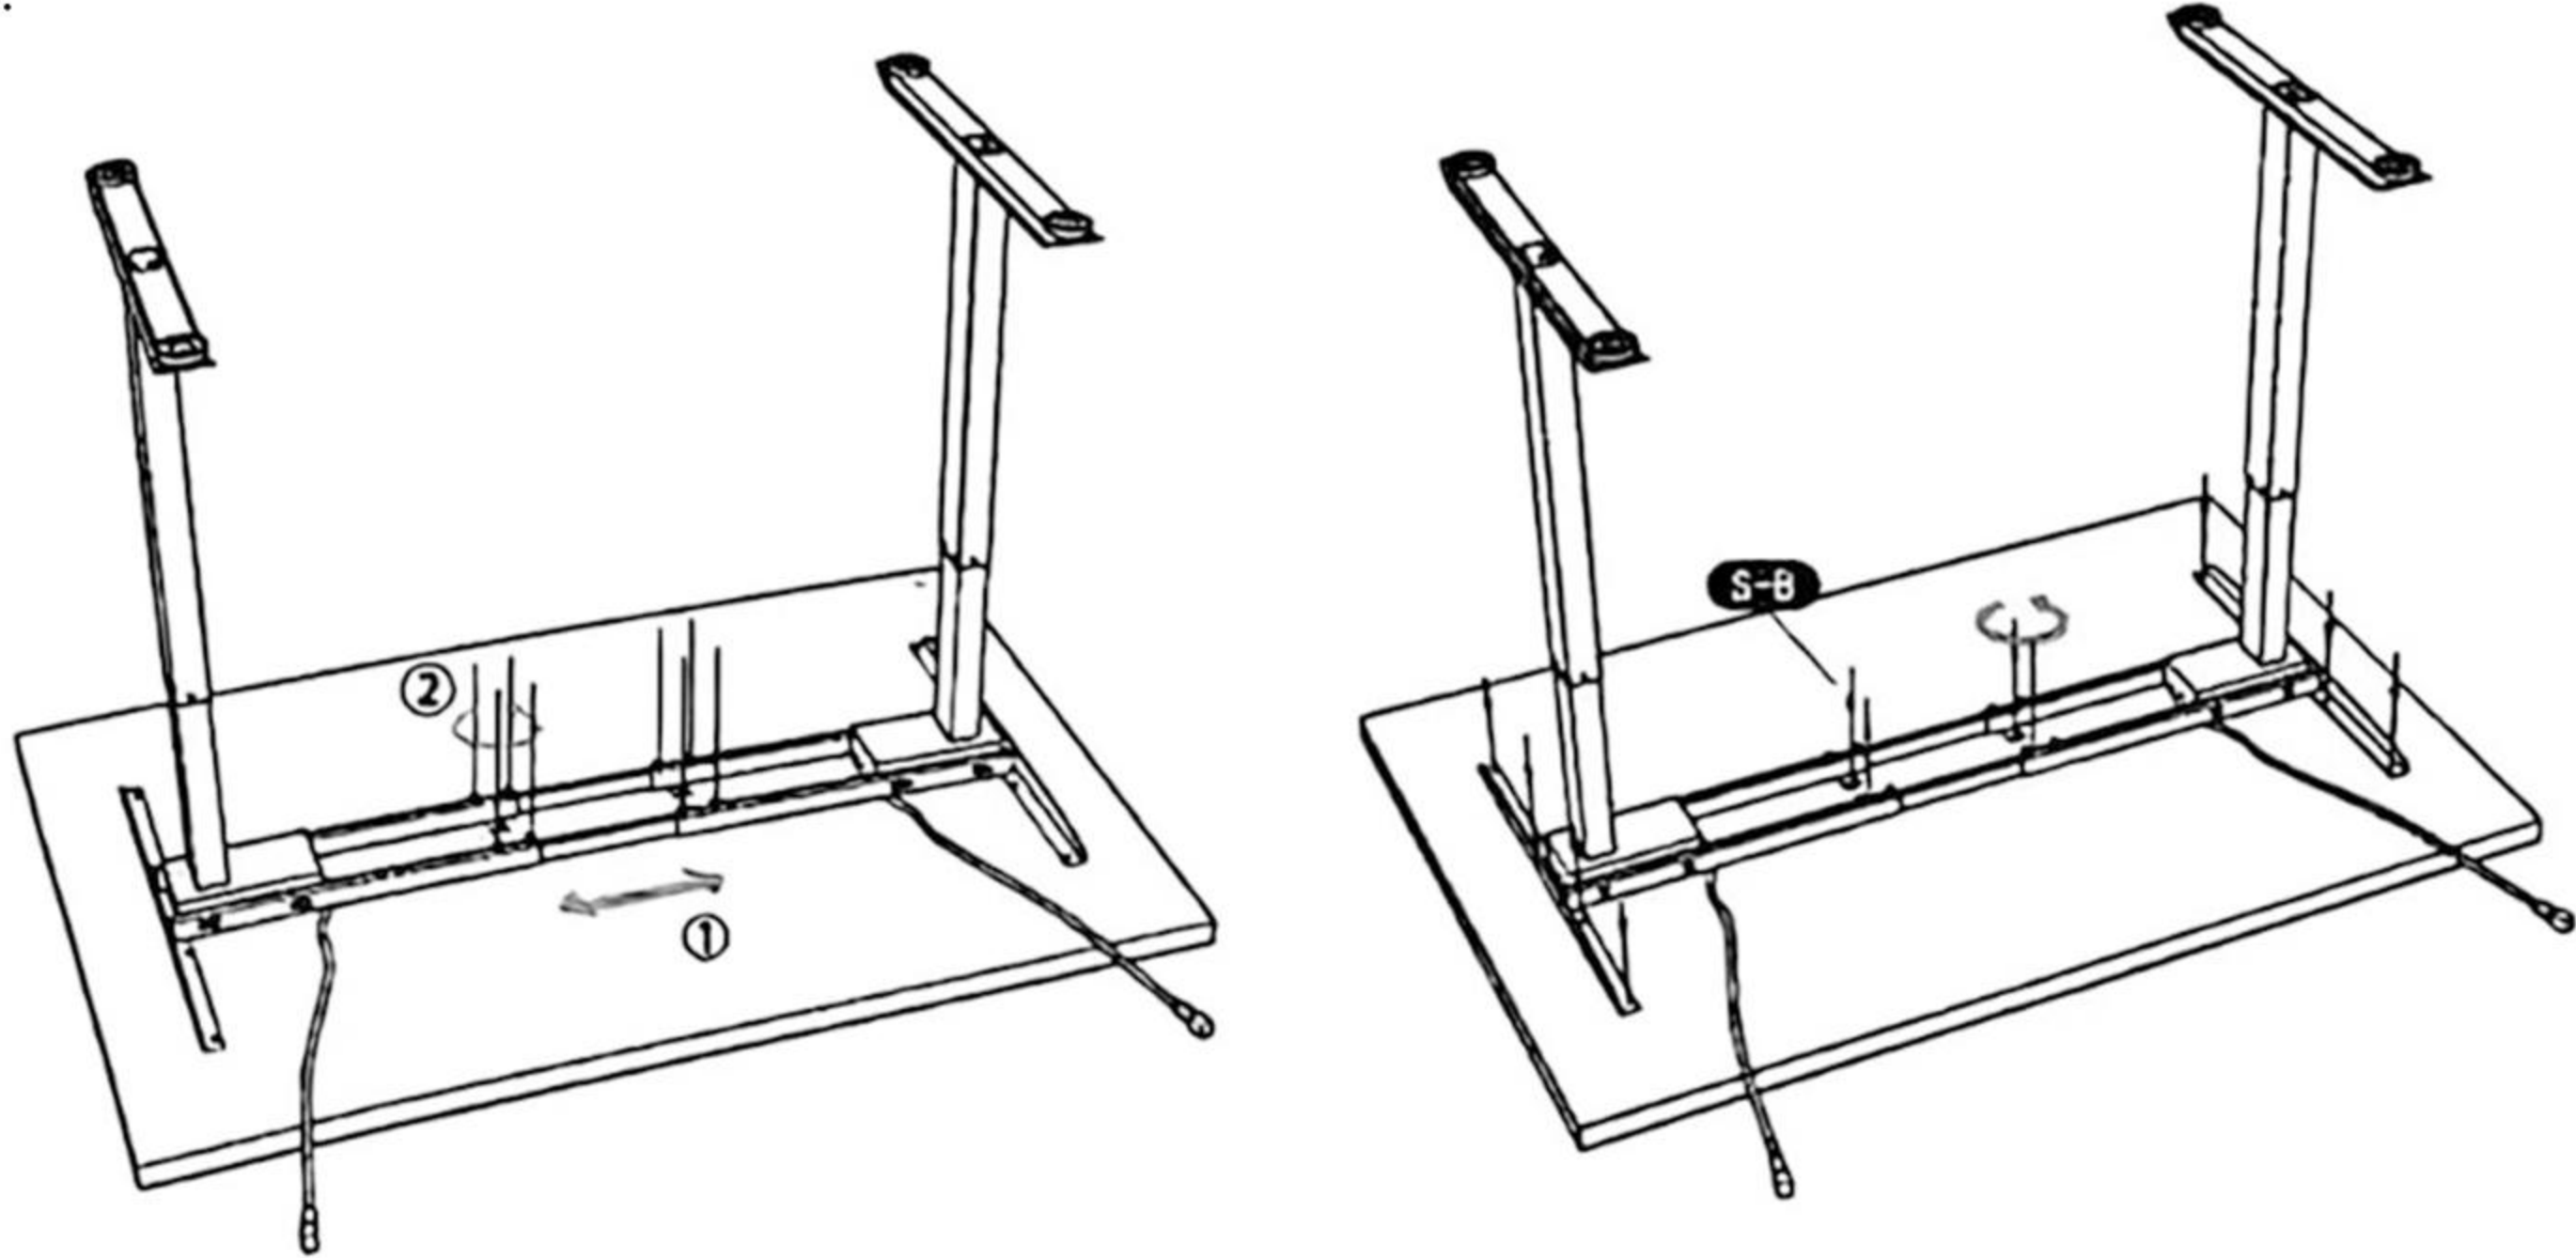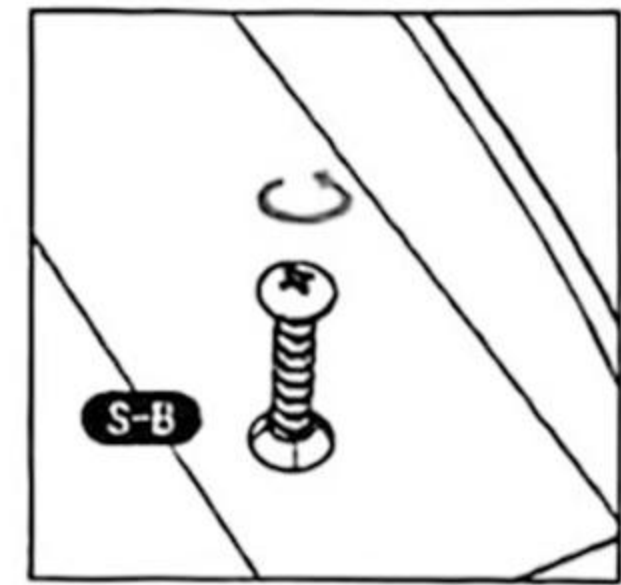

Connect the wiring and install the controller.

1. Connect the controller (G) to the power adapter (F).

2. Connect the controller (G) to the motor. If the cable is too short, use the extension cord (H).

3. Secure the control box to the tabletop using two ST5×16 screws (S-B). Installation is now complete.

