

- Never leave the unit unattended when it is operating.
- The Mains Lead ⑦ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- Do not use the Frother outdoors.
- Do not place the Frother close to a heat source.
- Ensure that the Mains Lead ⑦ is not near any hot surface.
- Pull the plug (do not pull Mains Lead ⑦) to disconnect from mains socket.
- Do not pull the Mains Lead ⑦ to move the appliance.
- It is not recommended that the Frother be used with an extension lead. If this cannot be avoided, ensure that the extension lead is of the correct rating.
- Do not use the Frother with any base or accessories other than those supplied.
- As the Frother becomes hot during use, take care when handling it and use only the handle to lift. Hot milk can cause scalding.
- The Frother should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not use the Frother to heat liquids other than milk.
- Do not use the Frother with a timer or programming device.
- Do not switch on or attempt to operate the Frother if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the Frother yourself - contact Judge Customer Services at the address given in the warranty section.
- DO NOT IMMERSE ANY PART OF THE FROTHER IN WATER, EXCEPT THE IMPELLER ④.
- Should the Frother accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- Please keep your purchase receipt.

Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power	Capacity
Judge Milk Frother	JEA31	220 - 240V	50Hz	600W	75 - 300ml



Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE CUSTOMER SERVICES, HORWOOD,
AVONMOUTH WAY,
BRISTOL,
BS11 9HX, GREAT BRITAIN

sales@horwood.co.uk www.judgecookware.co.uk
Tel: 0117 940 0000



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY

JUDGE Milk Frother



Instruction Manual

Model No. JEA31

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE AND RETAIN FOR LATER REFERENCE.

UNPACK YOUR MILK FROTHER CAREFULLY AND REMOVE TEMPORARY PACKING PIECES, LABELS AND STICKERS.

Identifying the parts

(with *Part Numbers* for customer replaceable items)



- | | |
|---------------------------------------|------------------------------|
| 1. Frother body
(<i>JEA31FB</i>) | 5. Lid
(<i>JEA31L</i>) |
| 2. Handle | 6. Base
(<i>JEA31B</i>) |
| 3. ON/OFF switch/pilot light | 7. Mains lead |
| 4. Impeller
(<i>JEA31I</i>) | 8. Mains plug |

How it works

The Frother heats milk, while whisking it into a full and creamy froth with a rotating impeller. The temperature of the milk is limited to prevent boiling and so retain its flavour. Once frothed, the milk is ideal for use in Latte or Cappuccino coffee, milk chocolate and other milky drinks.

Before first use

1. Remove any labels or swingtickets.
 2. Wash the inside of the Frother Body ① and the Impeller ④ with liquid detergent and warm water, rinse and dry.
 3. Wipe the outside of the Frother Body ① with a cloth, using detergent and water.
- DO NOT IMMERSE ANY PART OF THE FROTHER IN WATER, EXCEPT THE IMPELLER ④.

How to set up

Ensure that the Frother is disconnected from the electricity supply before assembly.

1. Place the Impeller ④ over the lug at the bottom of the inside of the Frother Body ①.
 2. Position the Base ⑥ on a dry, level and stable surface, away from direct heat.
- The Mains Lead ⑦ should be positioned so as not to cause an obstruction or to overhang the edge of the surface. The Frother should not be positioned directly below a mains socket.
3. Place the Frother Body ① on the Base ⑥.
 4. Remove the safety cover from the Mains Plug ⑧.

How to use

1. Ensure that the ON/OFF Switch ③ is in the OFF position, with the 0 symbol down.
 2. Remove the lid ⑤.
 3. Pour the required amount of cold milk into the Frother, ensuring that the level is between the MIN 75ml and MAX 300ml marks.
- The best results will be obtained using full cream milk.
 - If the milk level is too low, this could damage the Frother through overheating; if the level is too high, milk could overflow, which can also cause damage and present a risk of electric shock.
 - The lower the milk level, the more the milk will be heated and the more it will be frothed. For hotter, more frothed, milk, use less than 100ml.
4. Replace the lid ⑤.
 5. Insert the Mains Plug ⑧ into a mains socket and switch on at the socket.

6. Set the ON/OFF Switch ③ to the ON position, with the I symbol down; its pilot light will illuminate and the Frother will begin to heat the milk and whisk it with its rotating impeller.
- After one or two minutes, when the milk has reached the preset temperature, the Frother will switch off automatically and the pilot light will extinguish.
7. Set the ON/OFF Switch ③ to the OFF position, with the 0 symbol down. Switch off the mains socket and remove the Mains Plug ⑧.
- The milk remains frothy for quite a long time. However, for best results, use the frothed milk immediately.
 - Do not attempt to reheat the milk in the Frother, as it will cause milk to stick to the bottom.

Cleaning & Care

- The Frother should be cleaned after every use.
 - Allow the Frother to cool completely before cleaning.
1. Wash the inside of the Frother Body ① and the Impeller ④ with liquid detergent and warm water, rinse and dry.
 2. Wipe the outside of the Frother Body ① with a cloth, using the detergent and water.
- DO NOT IMMERSE ANY PART OF THE FROTHER IN WATER, EXCEPT THE IMPELLER ④.
 - Do not place the Impeller ④ in the dishwasher
 - Do not use harsh abrasive cleaners or a brush with metal bristles.
 - When the Frother is not in use, store in a dry place.

Cautions

- Before use, check that your mains power supply corresponds to the voltage shown in this manual (also shown on the rating plate of the Frother, located on the underside of the Frother Body ①).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always keep the appliance out of the reach of children.
- Do not connect the Plug ⑧ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.