

DINING TABLE

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

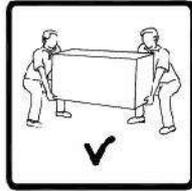

ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

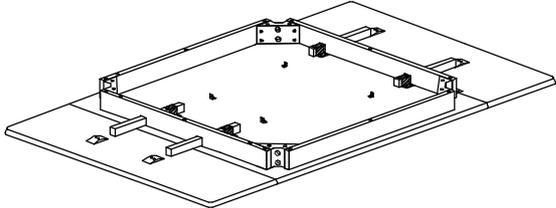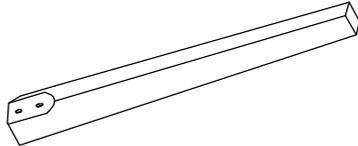
	PART NAME	FIGURE	QTY
A	TOP		1PC
B	LEG		4PCS

HARDWARE IDENTIFICATION


	HARDWARE NAME	FIGURE	QTY
1	ALLEN WRENCH (M4 x 63MM - BLK)		1PC
2	BOLT (M6 x 60MM - RBW)		8PCS
3	LOCK WASHER (1/4" - BLK)		8PCS
4	FLAT WASHER (5/16" - RBW)		8PCS

ASSEMBLY INSTRUCTIONS


STEP 1

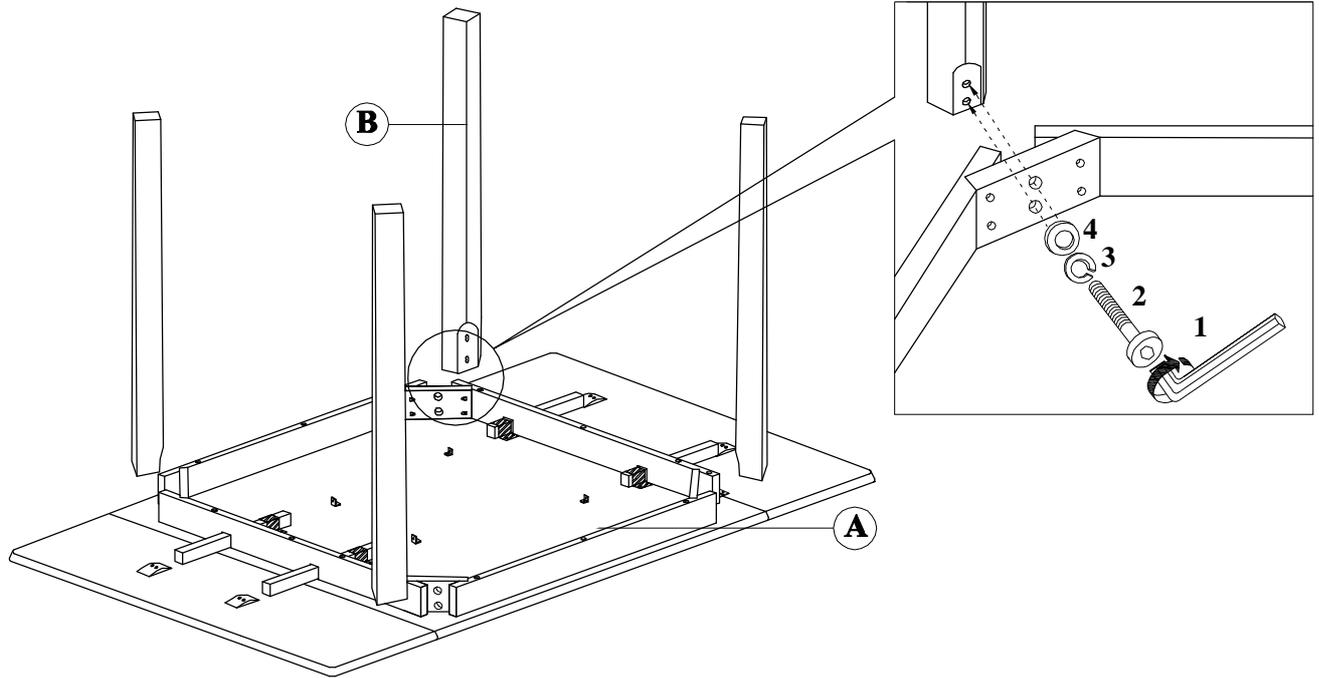

STEP 2

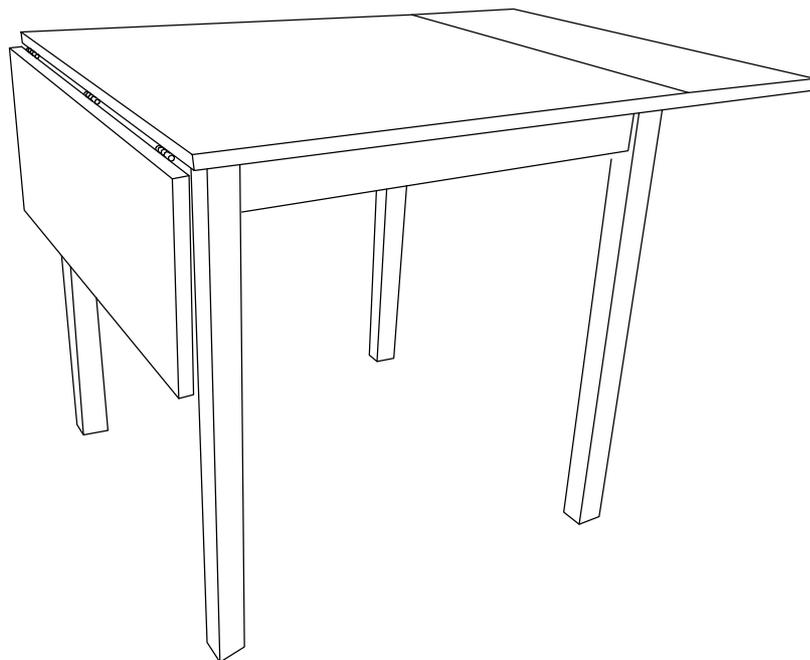

PUSH IN THE WOOD RUNNER TO FOLD DOWN THE LEAF.

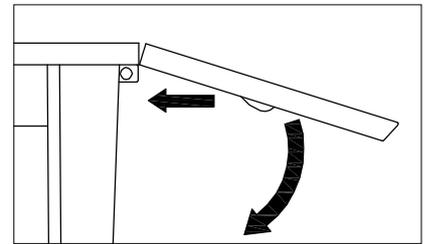

PULL OUT THE WOOD RUNNER TO HOLD THE LEAF IN PLACE.

