
### CONSOLE

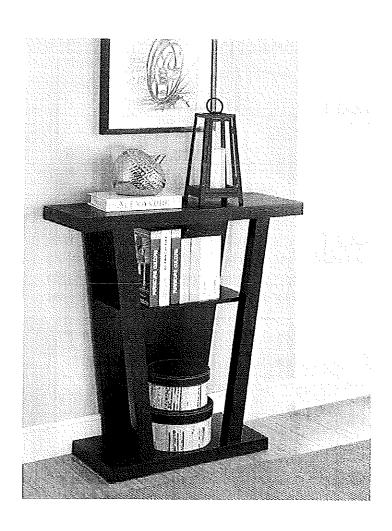


#### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### Warning I !

- 1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

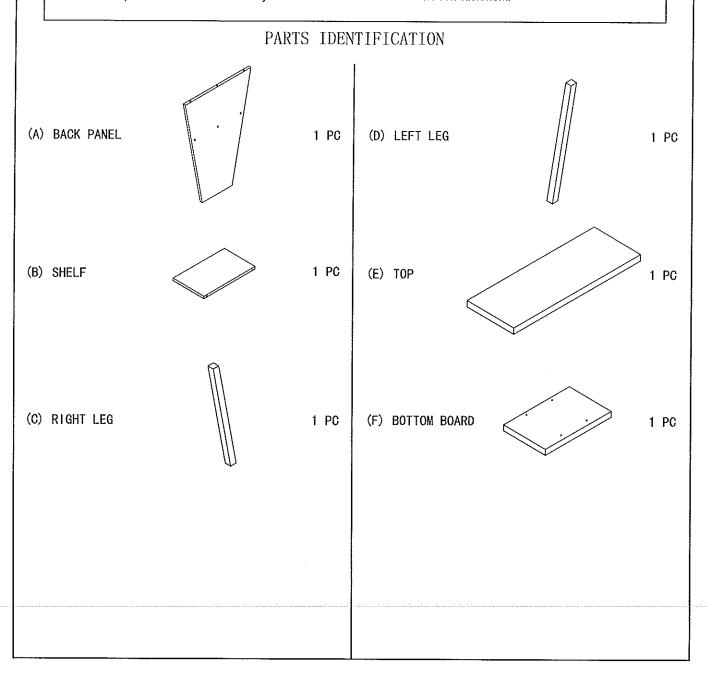

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	CAM BOLT L=29mm	<b>⊕</b> ⇒)	4 pcs
2	CAM LOCK ∅15mm		4 pcs
3	DOWEL ∅8×25mm		3pcs
4	CONNECTING PIECE	0 0	2sets
5	FULL-THREAD ROD ∅8×70mm	0=======	2pcs
6	HAMMER BOLT ⊘6×65mm	<u> </u>	2pcs
7	HAMMER NUT ∅10×15mm	<b>©</b>	2pcs
8	ALLEN WRENCH M4		1pc
9	LARGE STICKER ∅45mm	0	2pcs
10	SMALL STICKER ∅15mm	0	2pcs
11	OPEN END WRENCH M13	83	1pc
12	THREADED SCREW ∅7x58mm		2pcs
13	MEDIUM WOOD SCREW ∅4×40mm	(8)2000000>	2pcs
14	ANTI-TIP HARDWARE		1 pc
15	SMALL WOOD SCREW Ø4x25mm	(8)2222200-	l pc
16	LARGE WOOD SCREW ∅5×40mm	<b>(</b> )mmmmm>	1 pc
17	PLASTIC WALL ANCHOR ∅8×40mm	( *******	1 pc
18	GLUE 10g		1 pc

