 

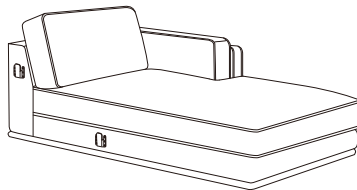


ASSEMBLY INSTRUCTION

LEFT ARM LOVESEAT AND RIGHT ARM CHAISE

A Left Arm Loveseat **B** Right Arm Chaise **C** Outside Leg

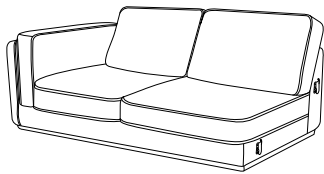

1 pc

 
 
D Center Leg

1 pc

E Bolt
25/64" * 2-23/64"

5 pcs

F Lock Washer
25/64"




3 pcs

G Flat Washer
25/64"

5 pcs


H Allen Wrench
5/16"

5 pcs

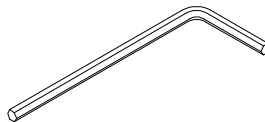

5 pcs


1 pc

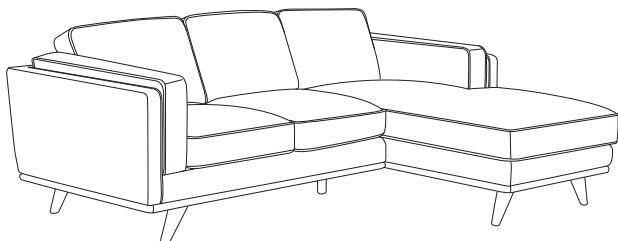


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Upside down the Left Arm Loveseat (A) on a carpeted or padded area. Take out 2pcs Outside Leg (C) and 2pcs Center Leg (D) from the foot box.

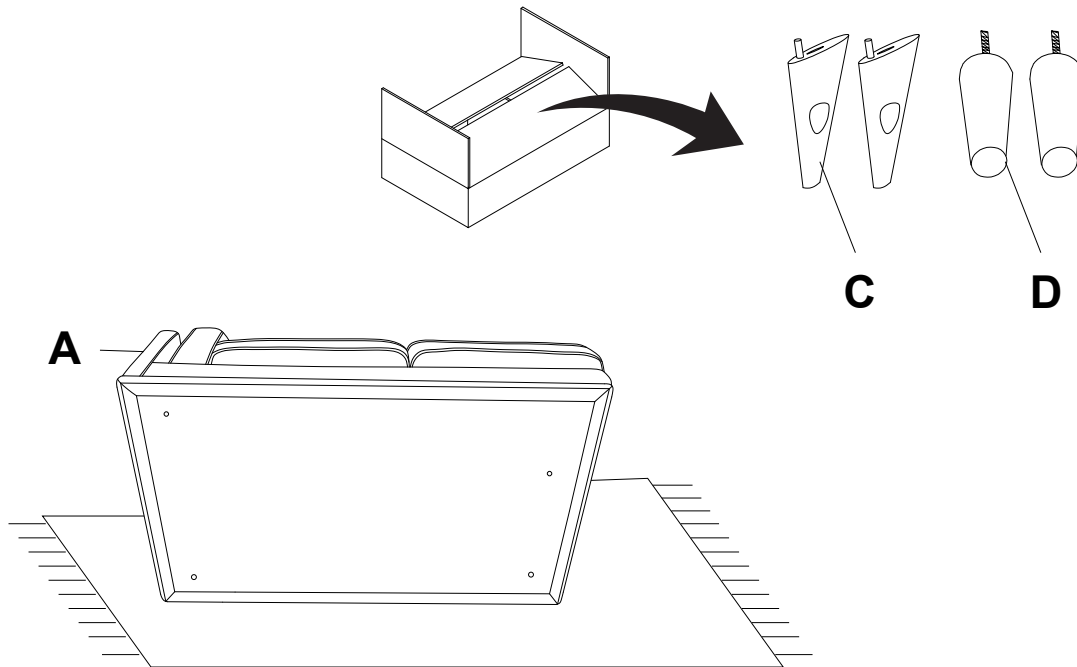
**2**

Tighten each Center Leg (D) in a clockwise direction.

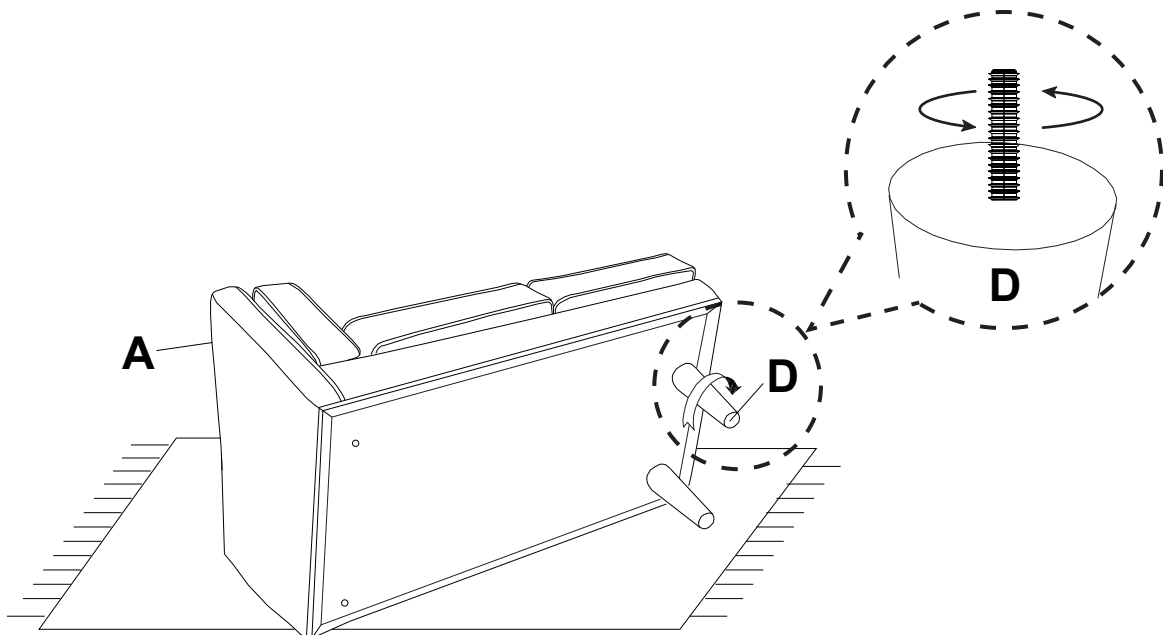


3

Tighten each Outside Leg (C) by Bolt (E), Lock Washer (F) and Flat Washer (G) with Allen Wrench (H) in a clockwise direction.

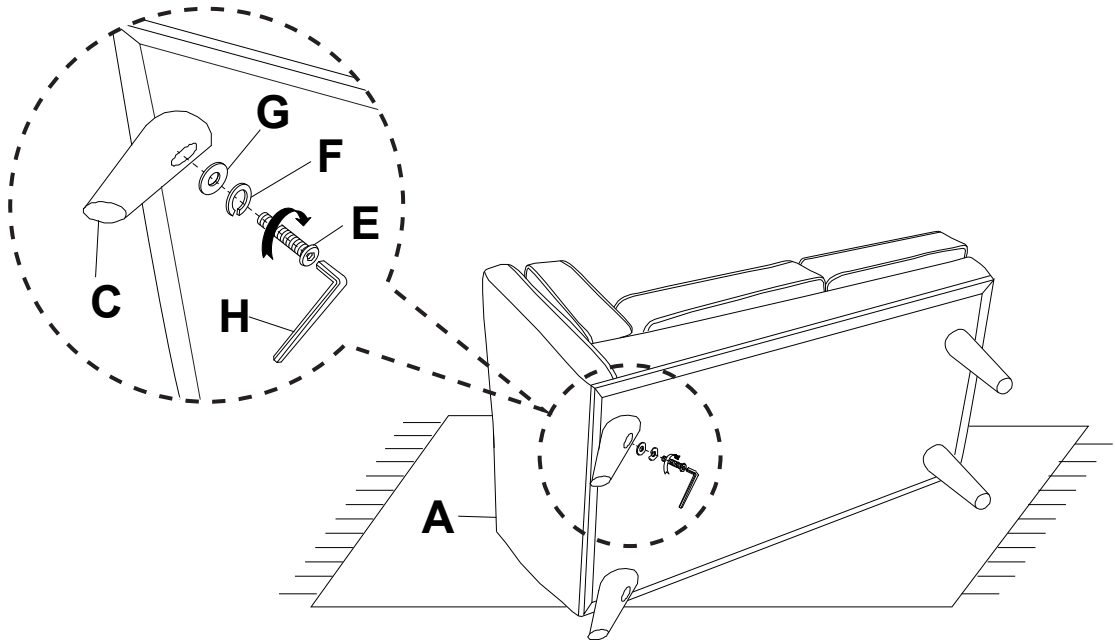
**4**

Upside down the Right Arm Chaise (B) on a carpeted or padded area. Take out 3pcs Outside Leg (C) and 1pc Center Leg (D) from the foot box.

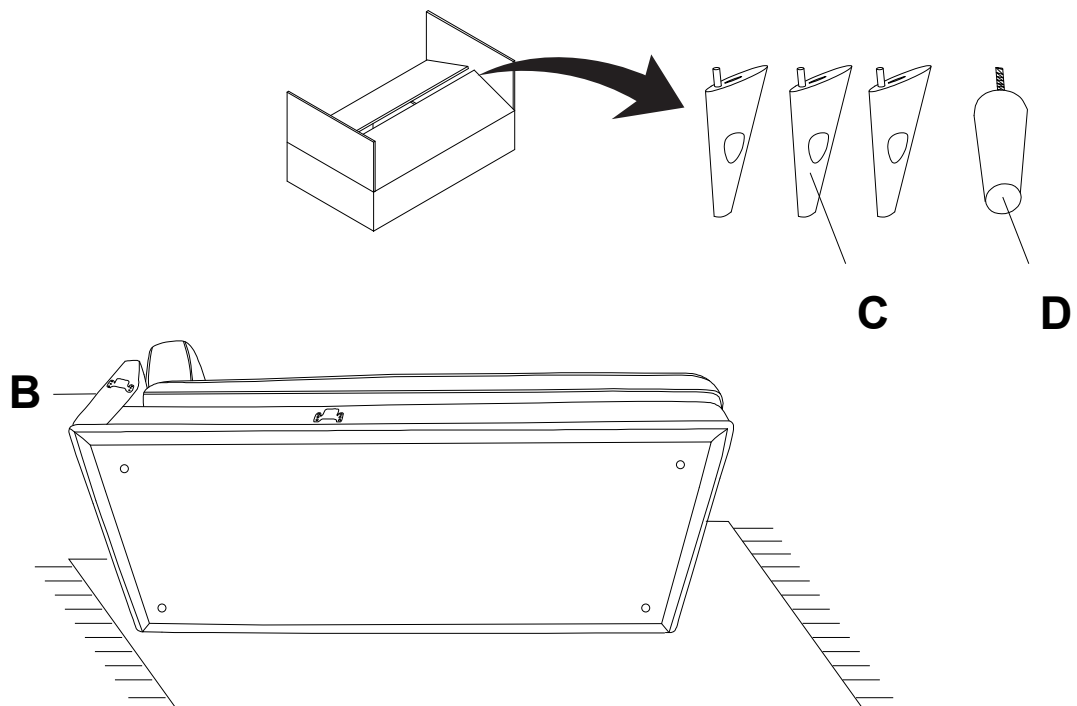


5

Tighten each Outside Leg (C) by Bolt (E), Lock Washer (F) and Flat Washer (G) with Allen Wrench (H) in a clockwise direction.

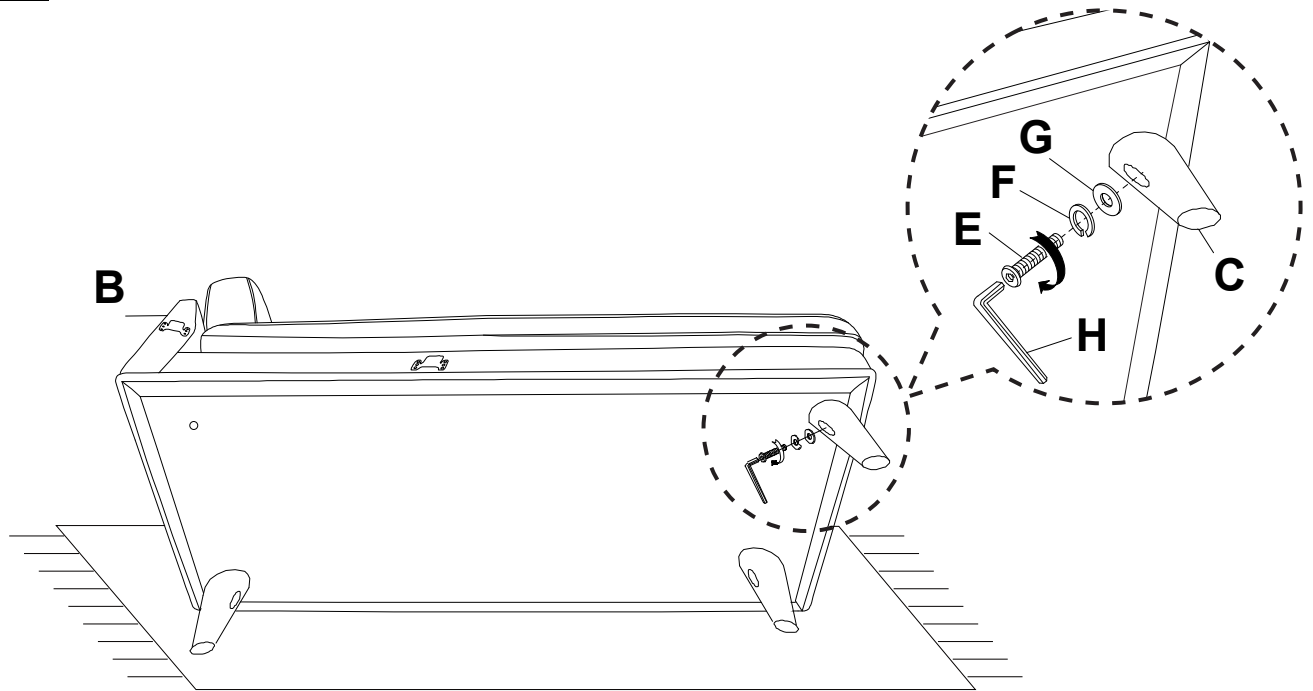
**6**

Tighten the Center Leg (D) in a clockwise direction.

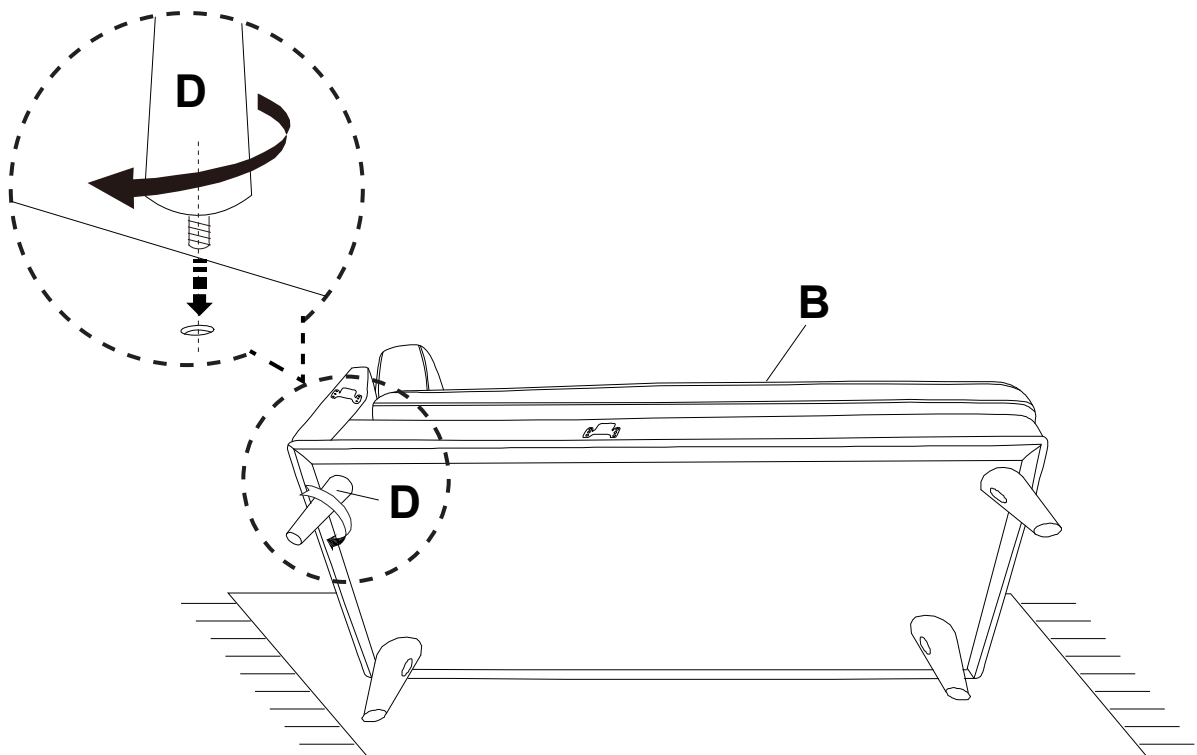

7

Two people are required to move left arm loveseat to connect with right arm chaise.

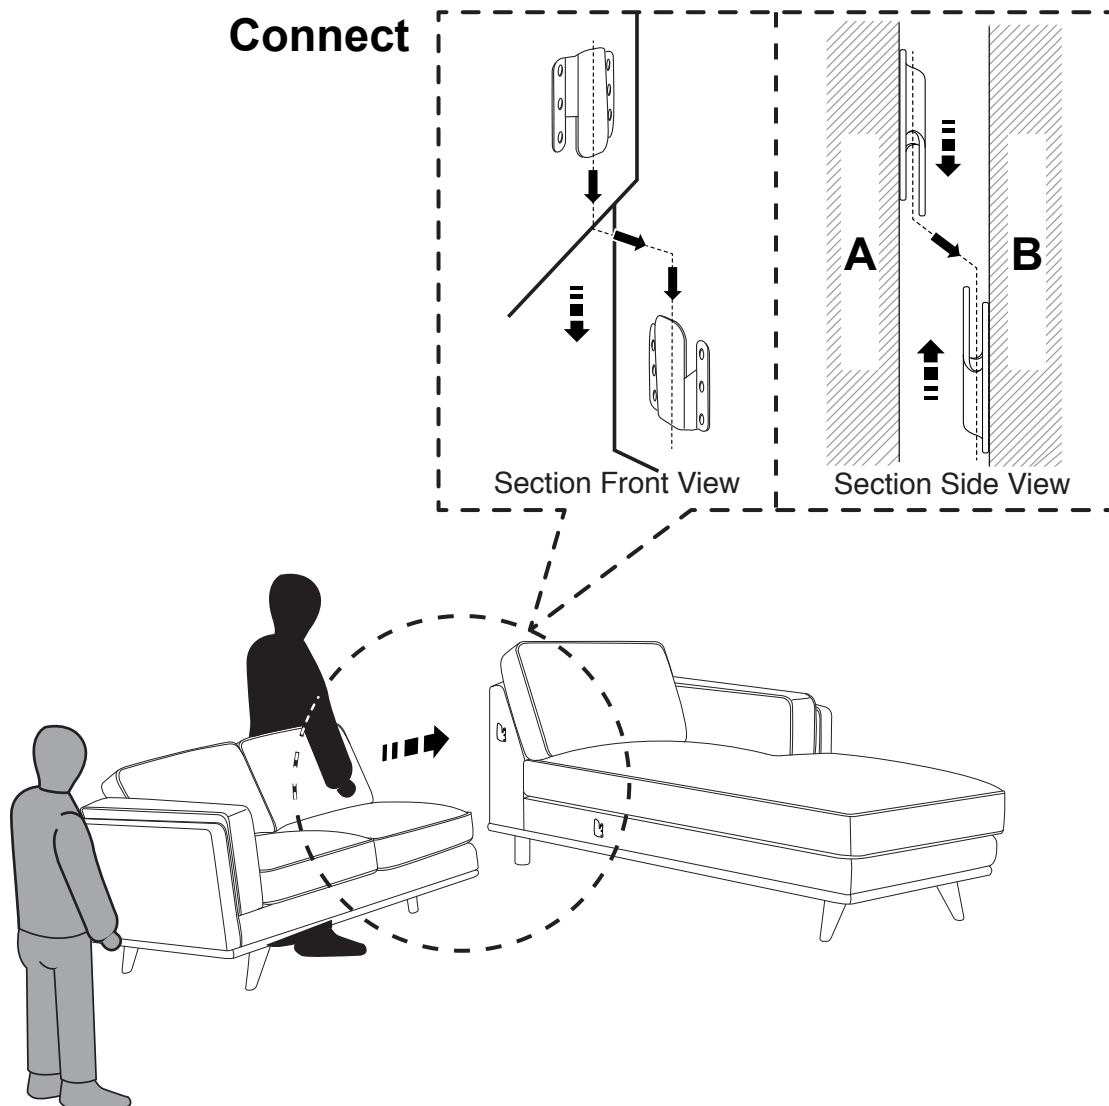

Cleaning & Care

Treat surface with care. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.