 


---

# Glass Door Accent Cabinet

#22600/#22601/#22602/#22603

## ASSEMBLY INSTRUCTIONS

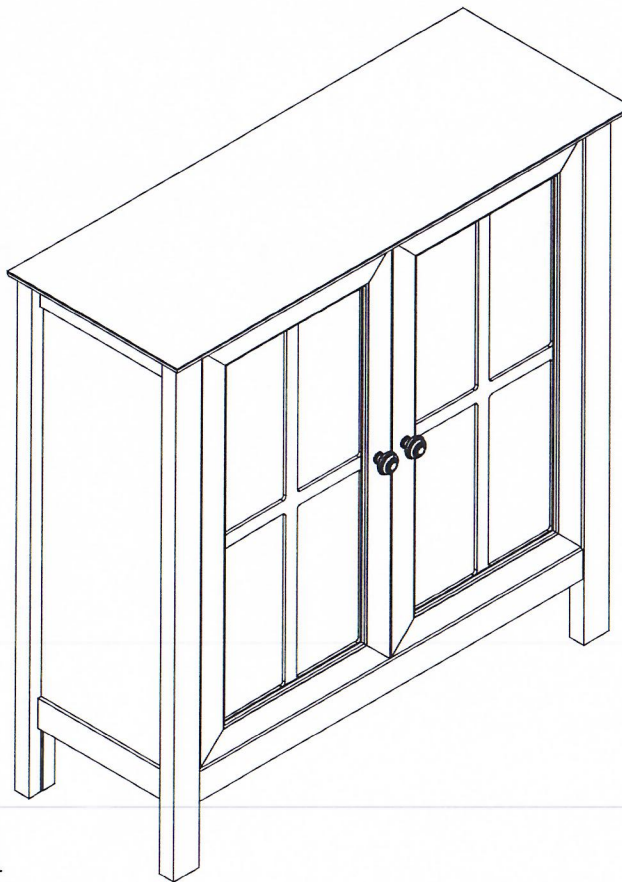

 **American**  
Furniture *Classics*

### PLEASE READ

Thank you for purchasing this quality product. A list of PARTS and INSTRUCTIONS are included to assist you. Unpack and identify all parts included on the Parts List and Hardware List. If parts are missing, please DO NOT return this item to the store. For faster service please contact customer service.

**Customer Service Department at:**

 
**Phone: 1-888-673-9080**

**FAX: 1-417-673-9081**


Email: [service@americanfurnitureclassics.com](mailto:service@americanfurnitureclassics.com)

For efficient and speedy service, please indicate the model number and code letter of part (s) needed.


## PARTS -PIECES

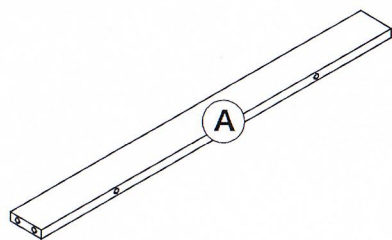


BACK RAIL

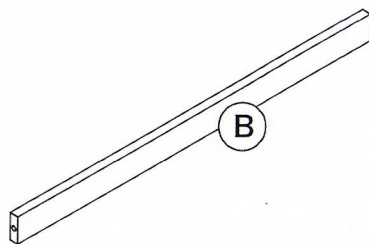 


BOTTOM FRONT TRIM

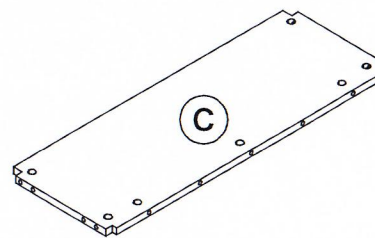 


BOTTOM

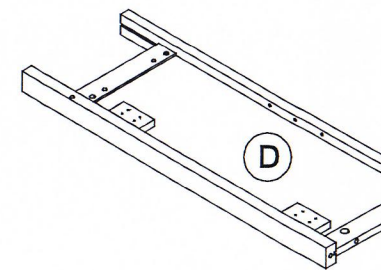 


RIGHT SIDE PANEL

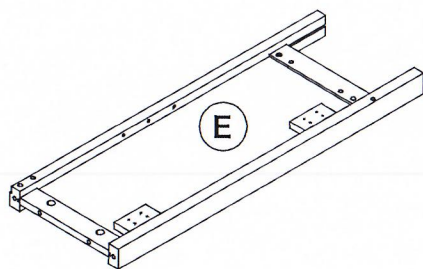 


LEFT SIDE PANEL

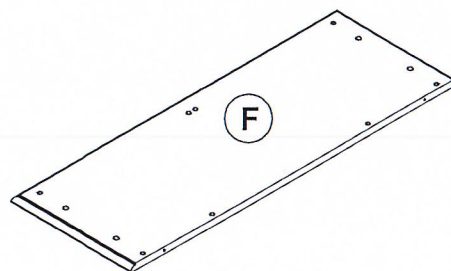 

TOP PANEL

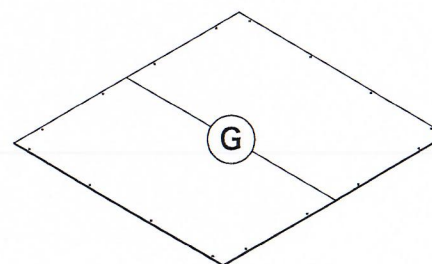 


BACK PANEL

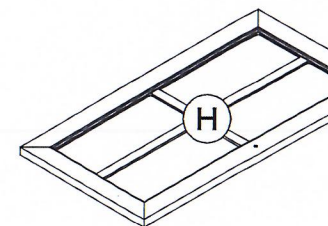 


DOOR PANEL X 2


## PARTS -PIECES

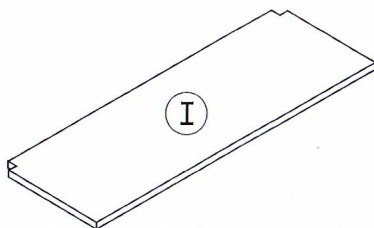 


ADJUSTABLE SHELF

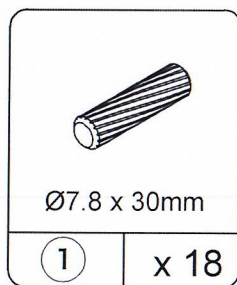 


WOOD DOWEL

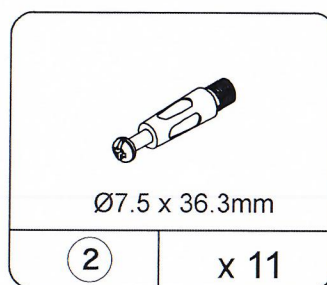 


CAM BOLT

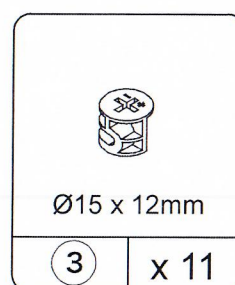 

CAM

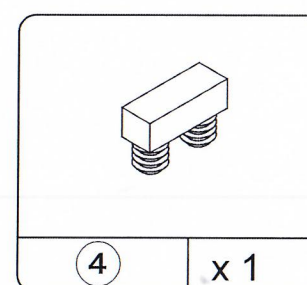 


DOOR STOP

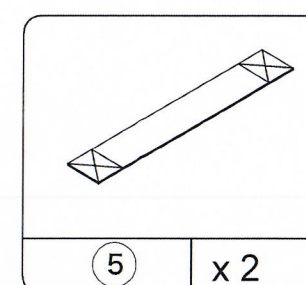 


FABRIC STRAP




## PARTS -PIECES

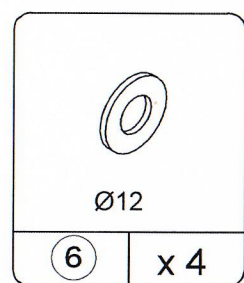 


METAL WASHER

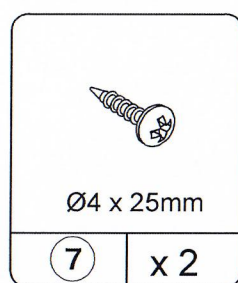 


SCREW

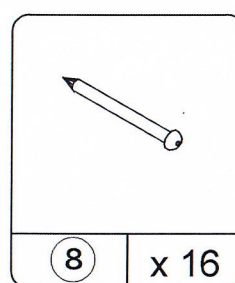 


NAIL

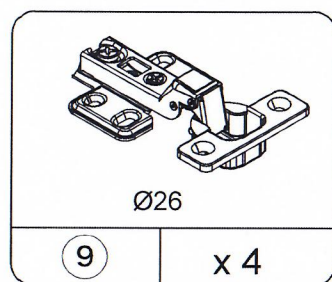 


HINGE

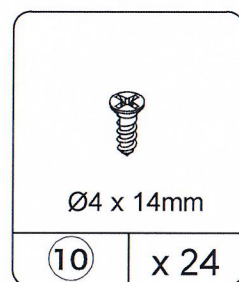 


SCREW

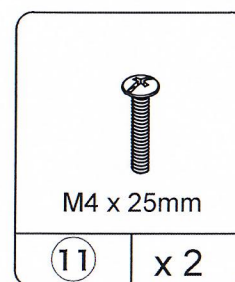 


SCREW

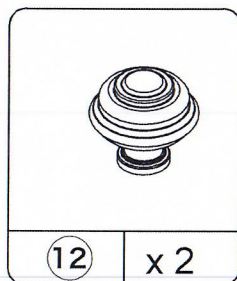 


HANDLE

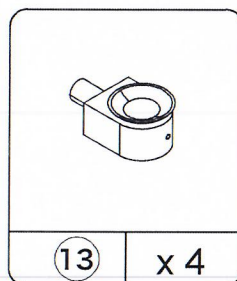 

SHELF PIN

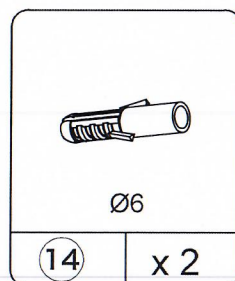 


WALL ANCHOR



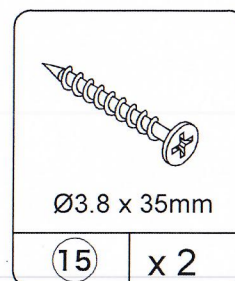 


SCREW








This illustration shows how the CAM fastening system works.

    Esta ilustración muestra como funciona el sistema de fijación de leva.

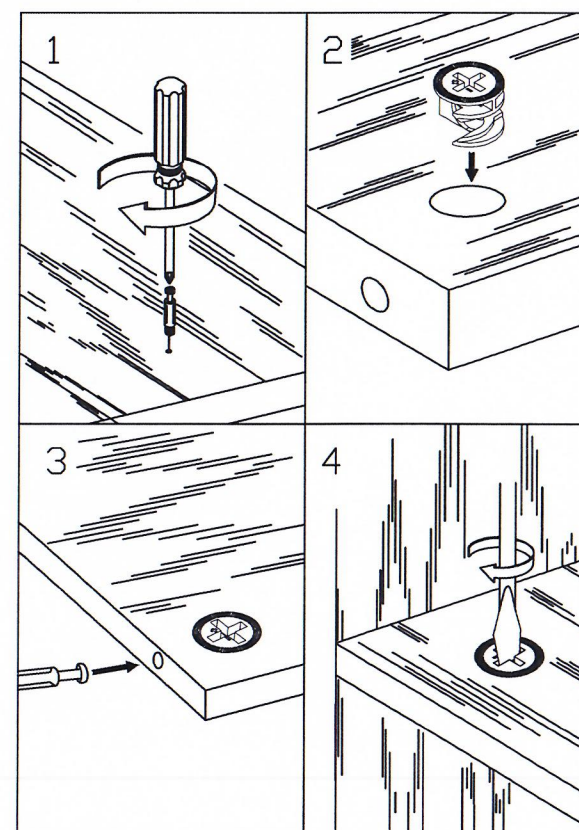

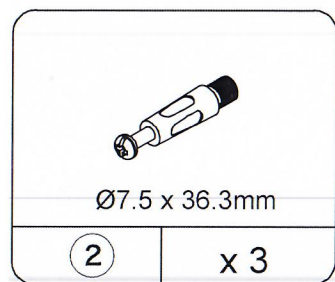
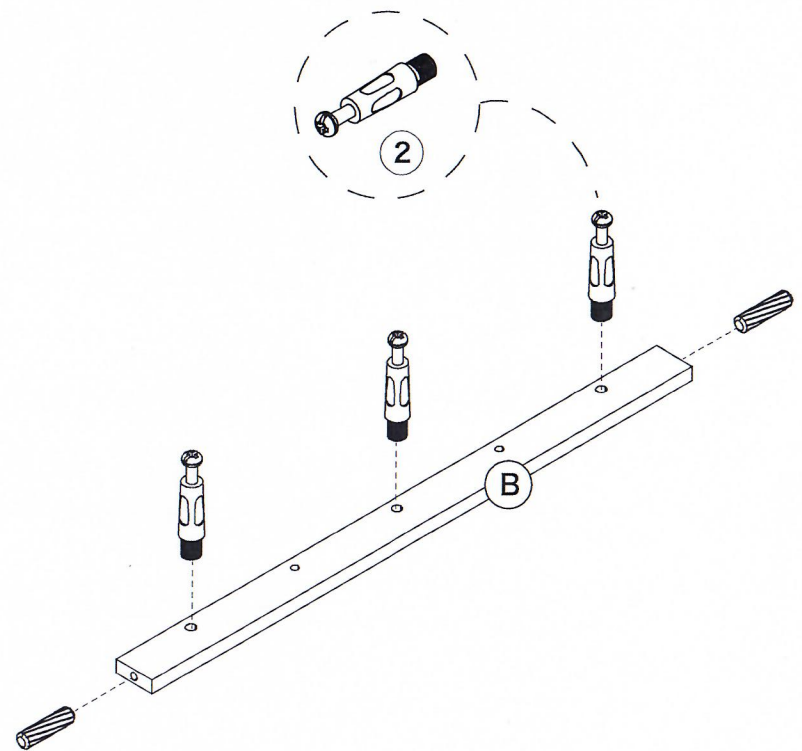
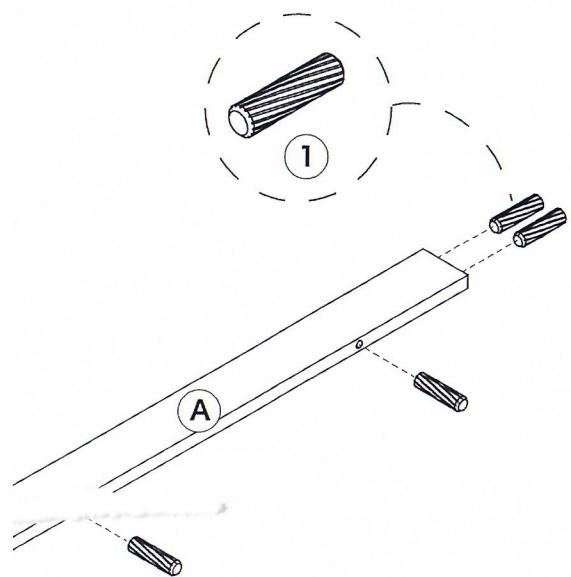


# 2

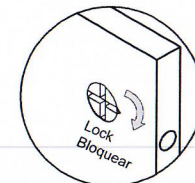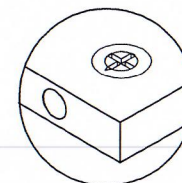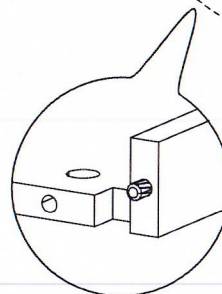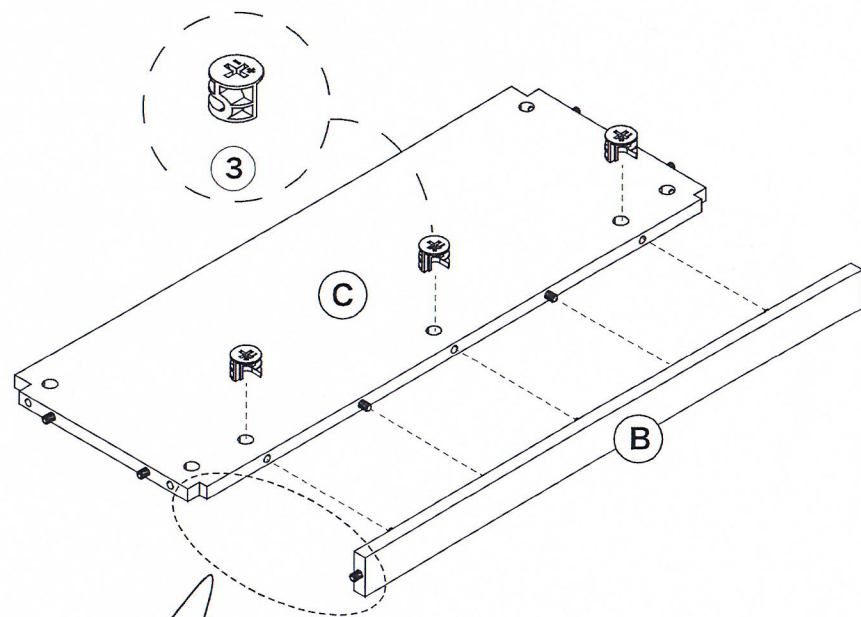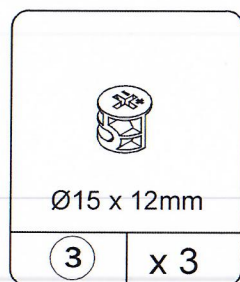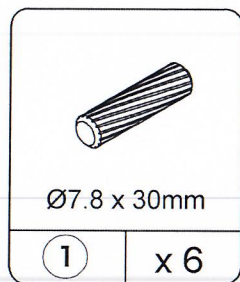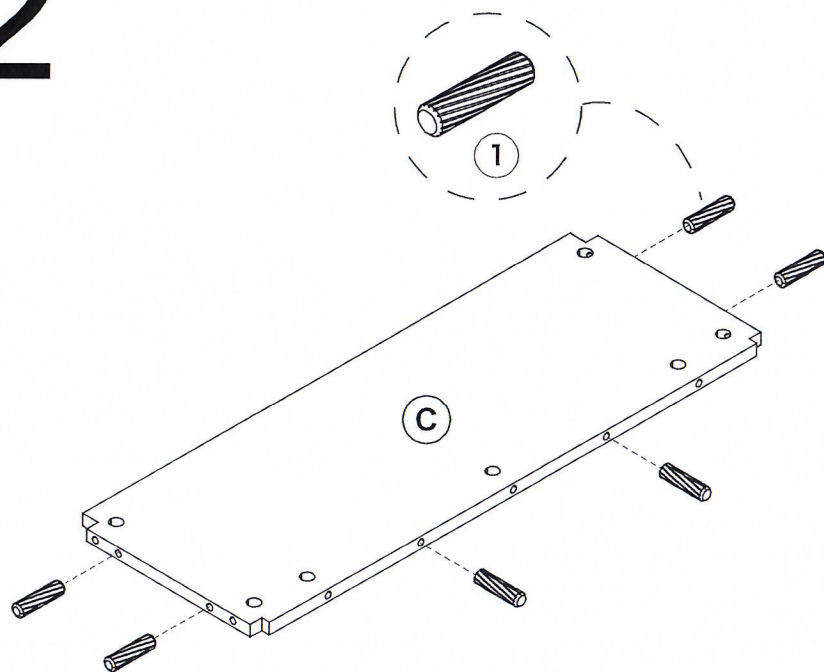       






Proper orientation of cam lock  
La orientación apropiada para el seguro de bloqueo

# 3

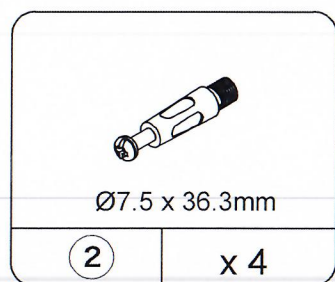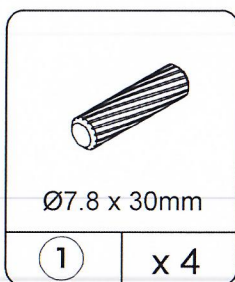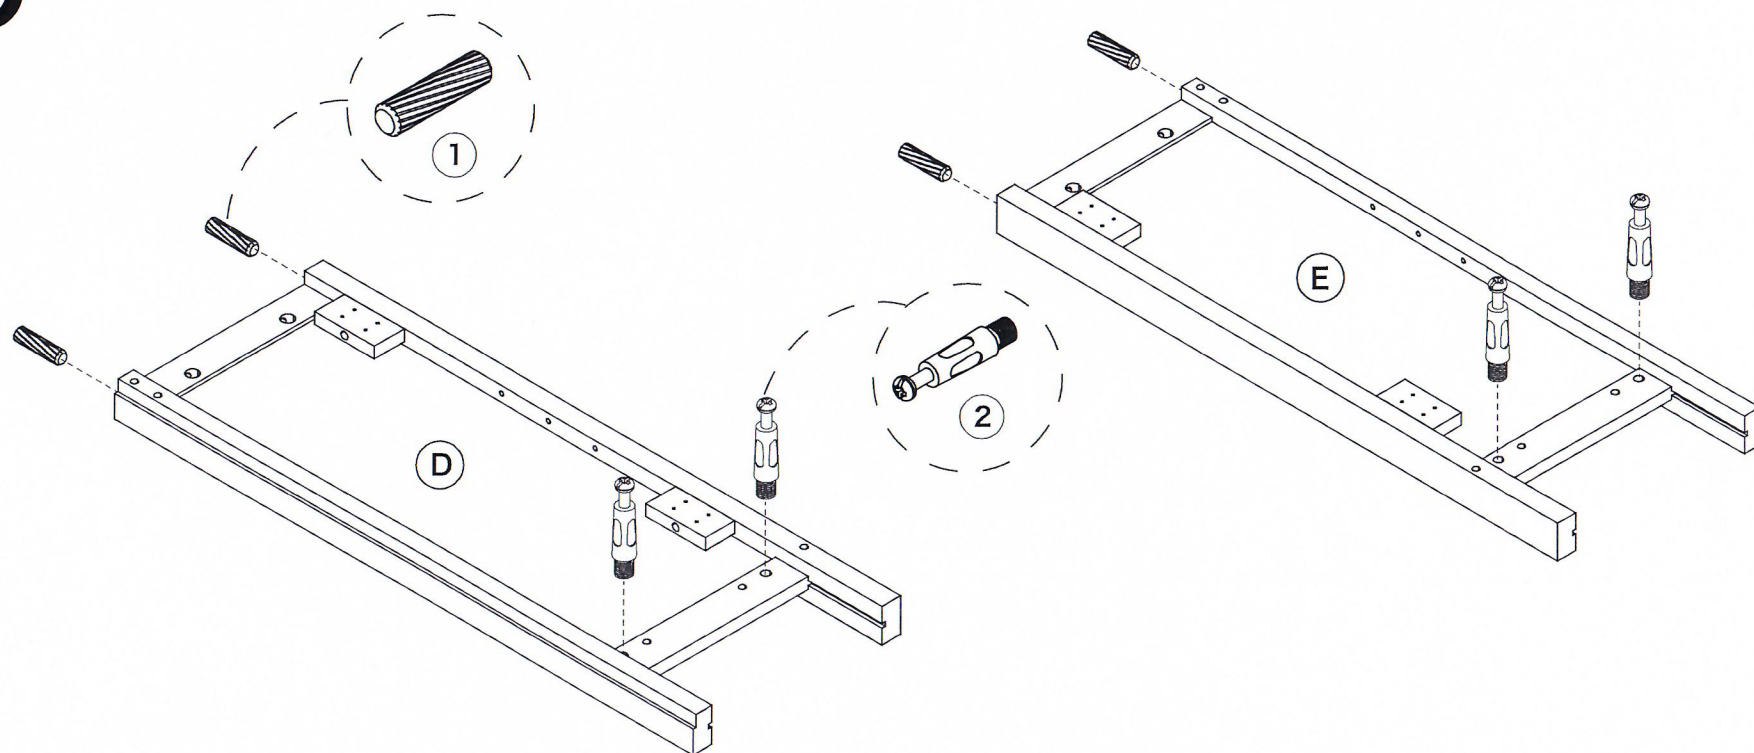   










# 4

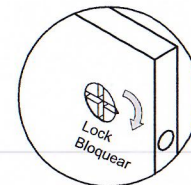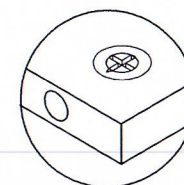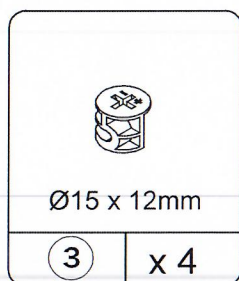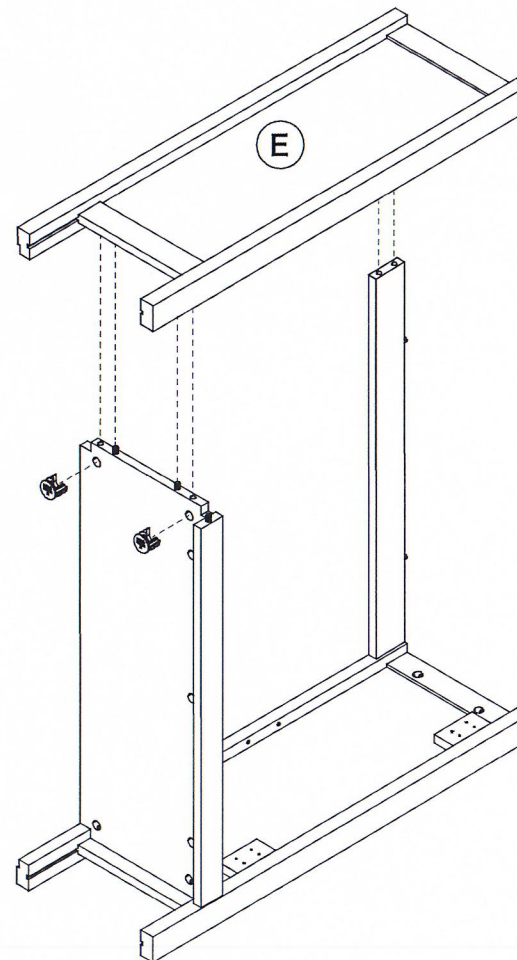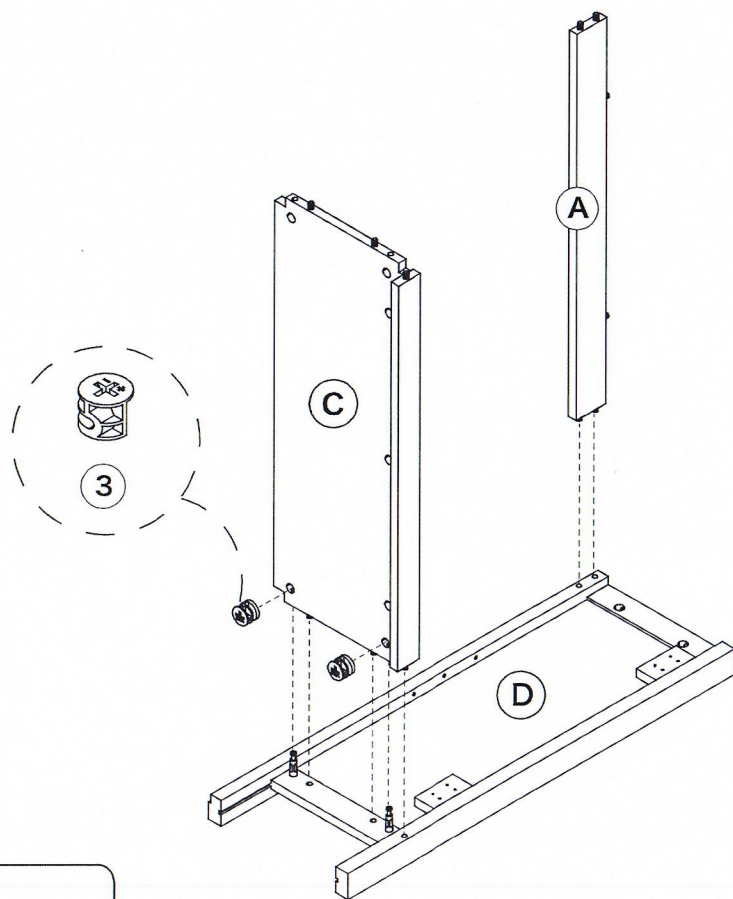     







Proper orientation of cam lock  
La orientación apropiada para el seguro de bloqueo





# 5

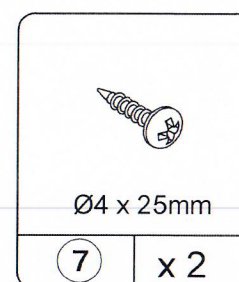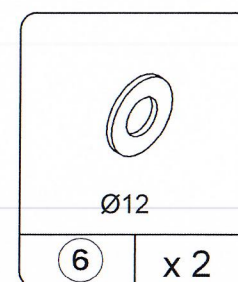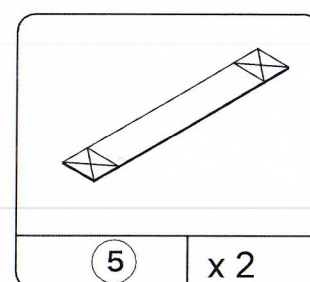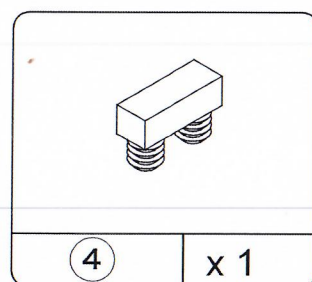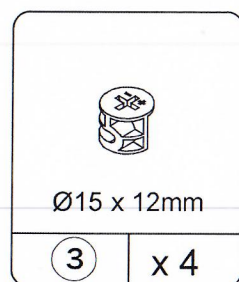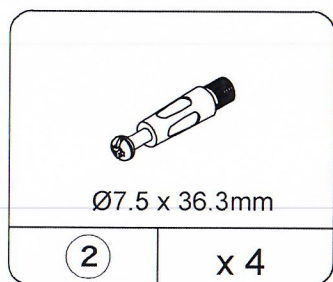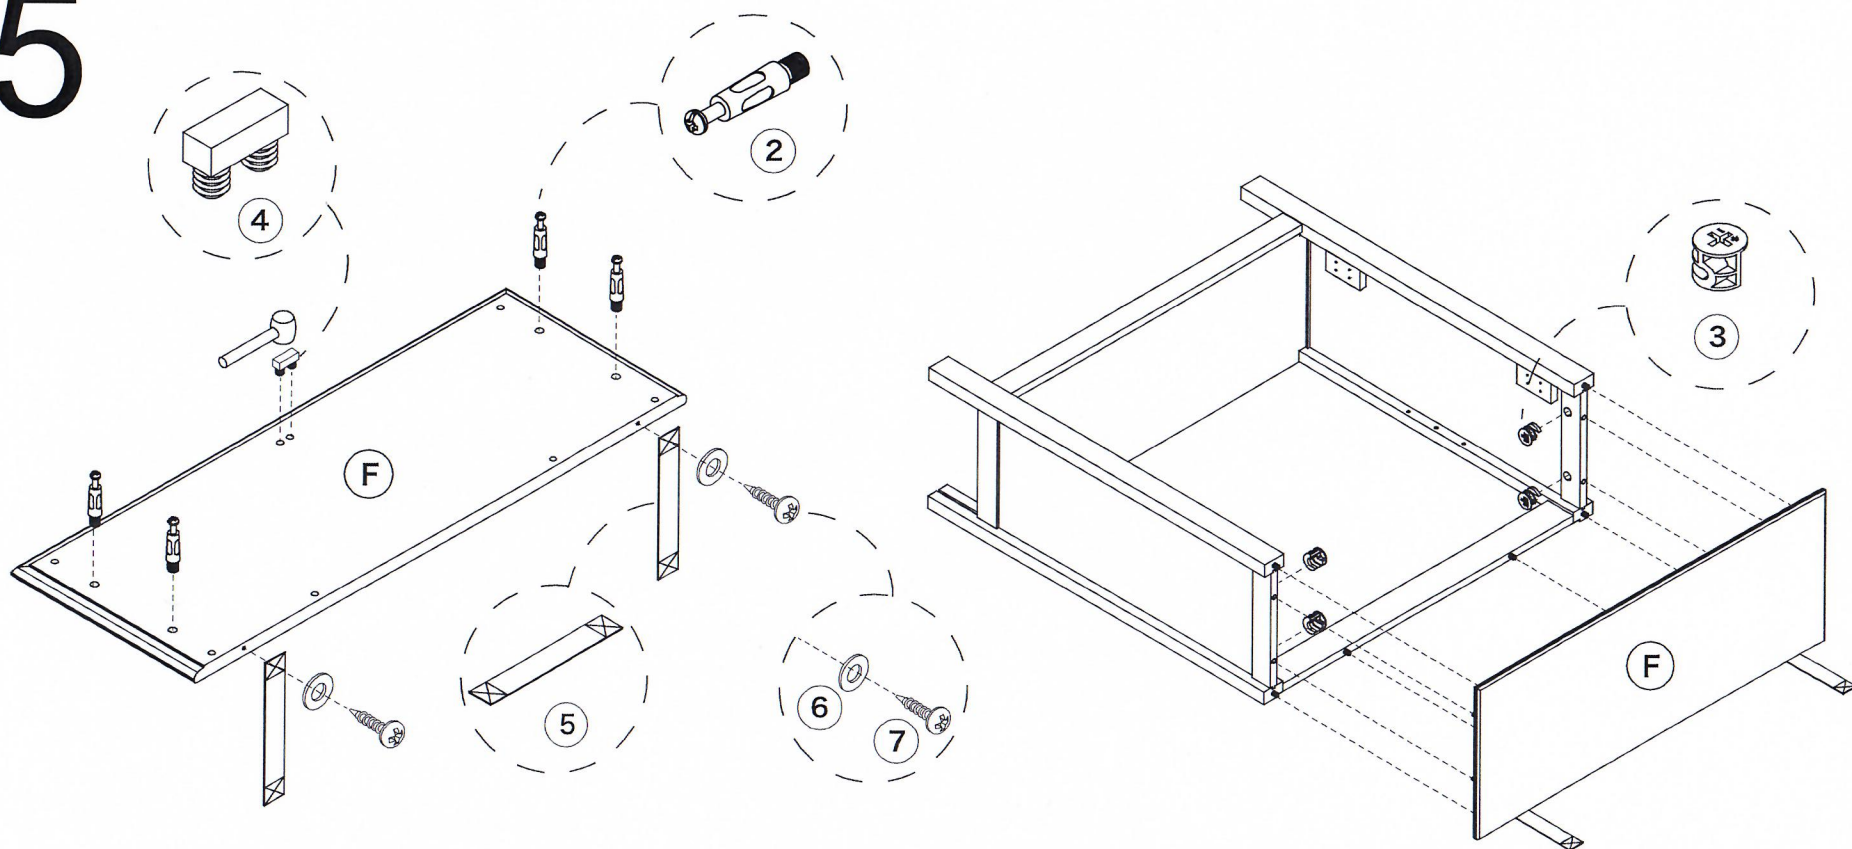       

# 6

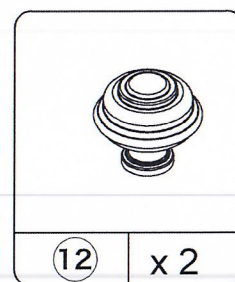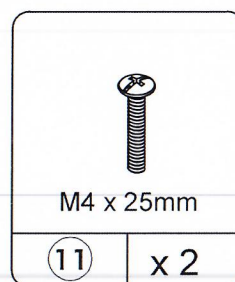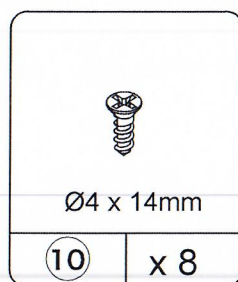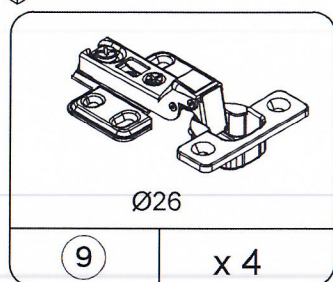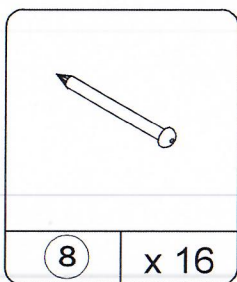     
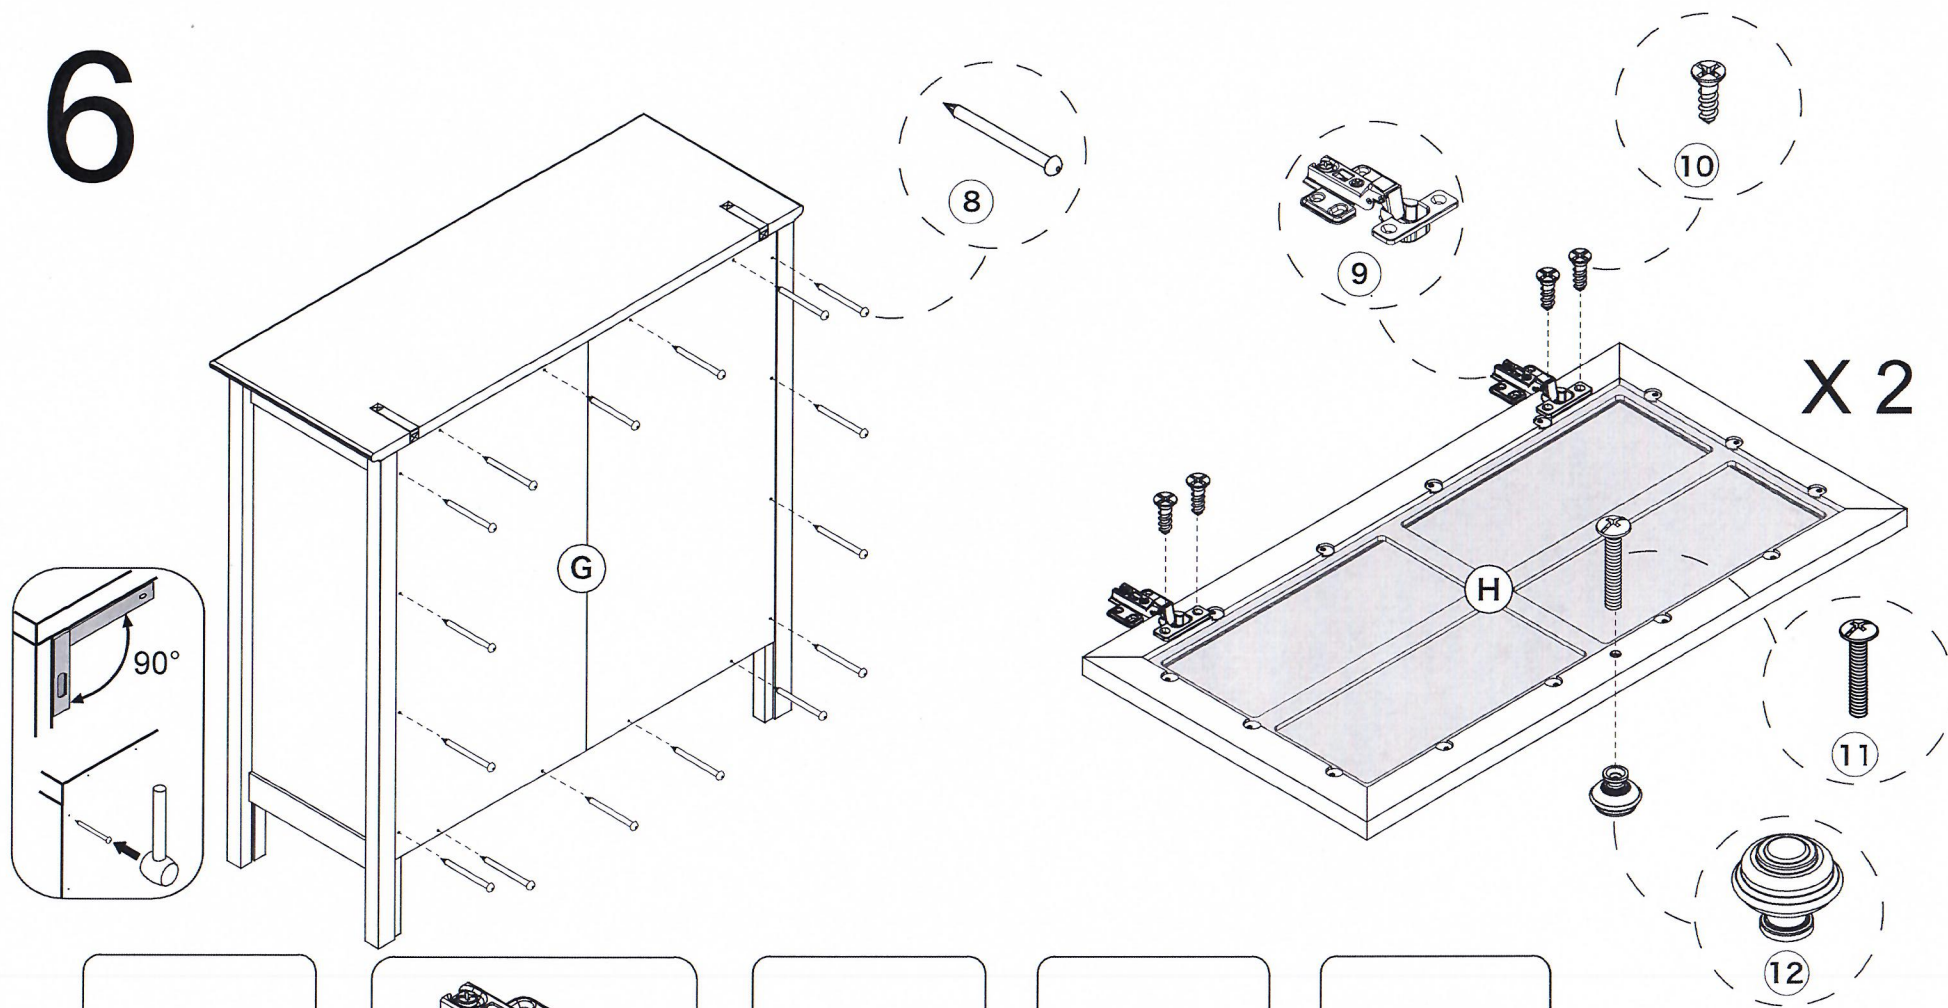 


# 7

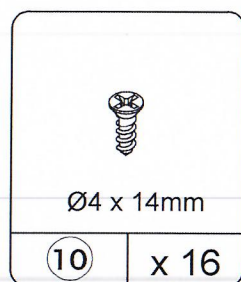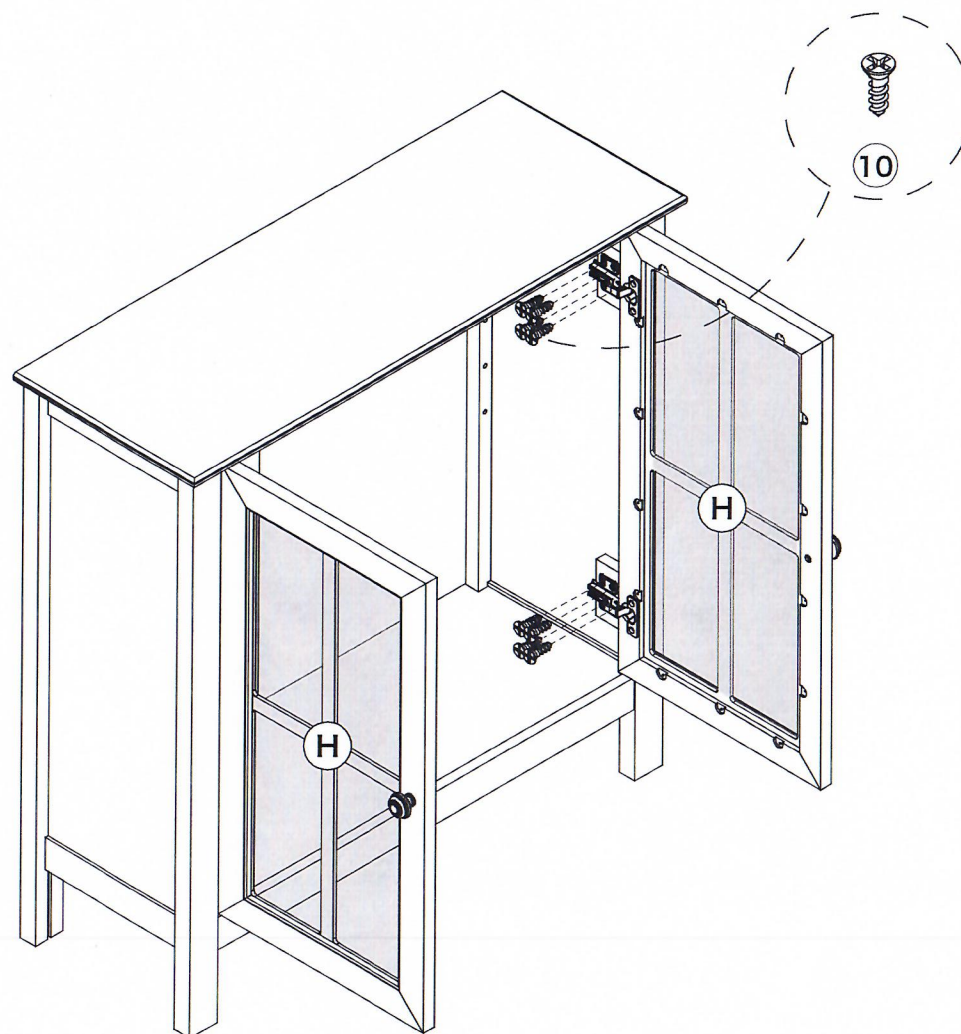  











# 8

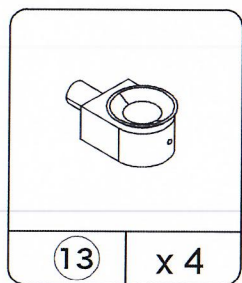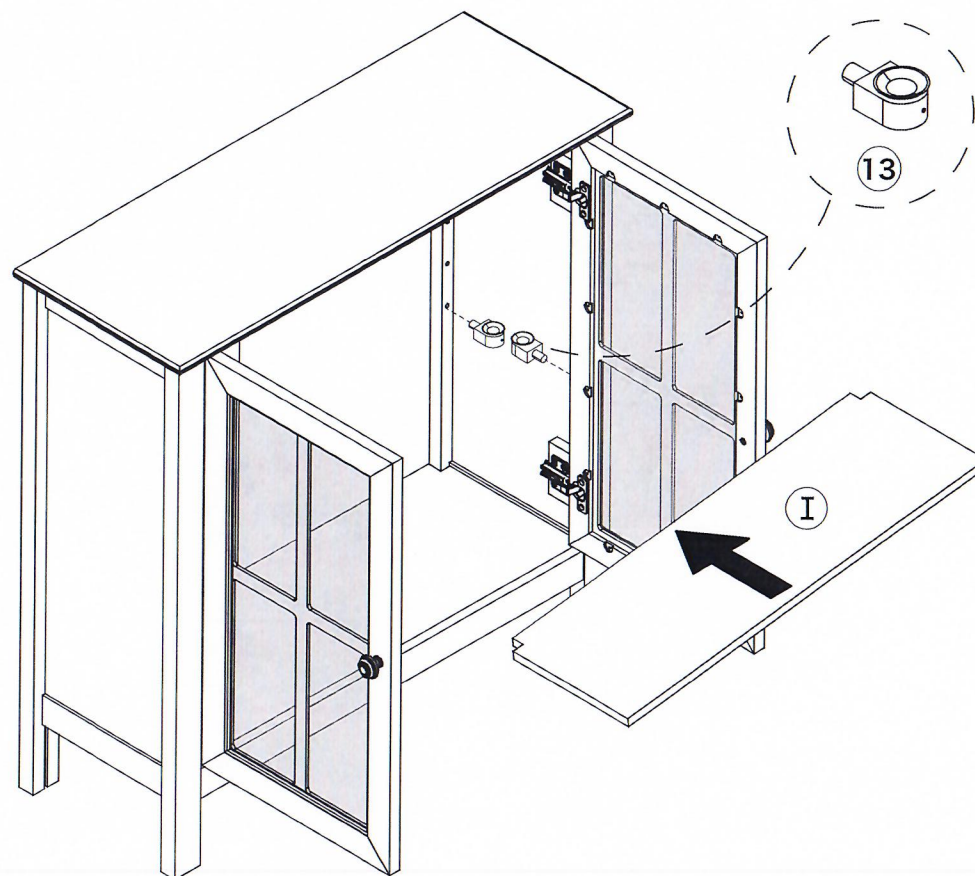  





# 9

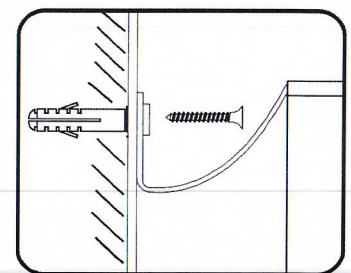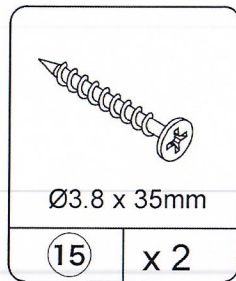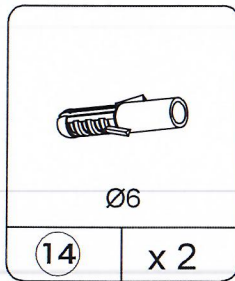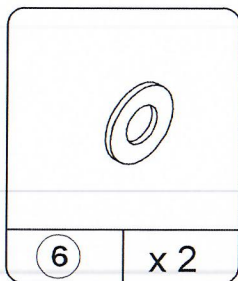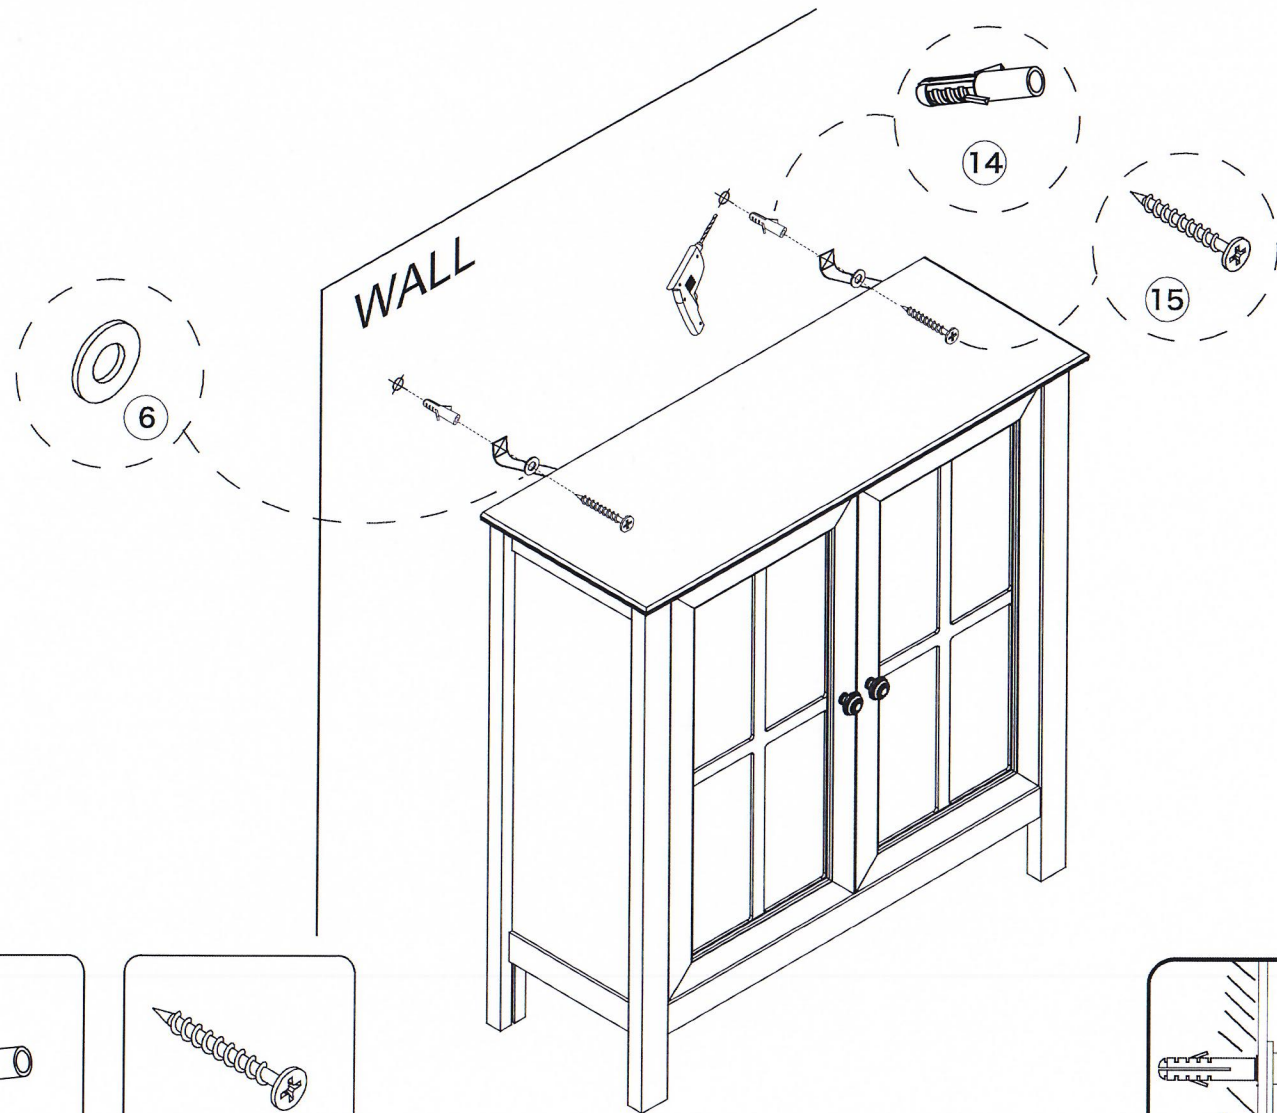     

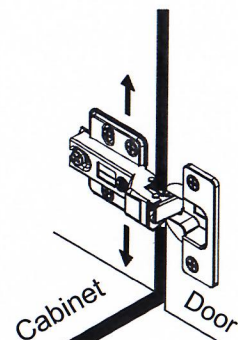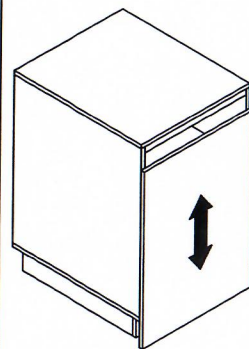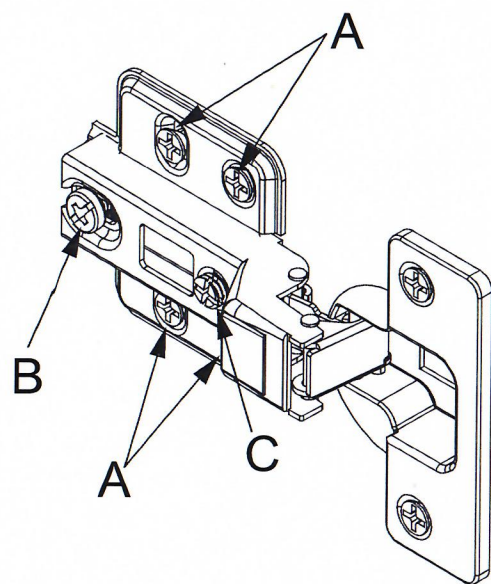   



## To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

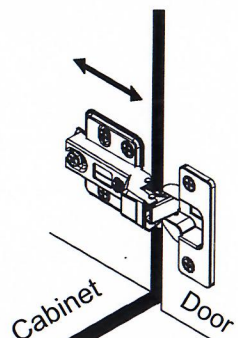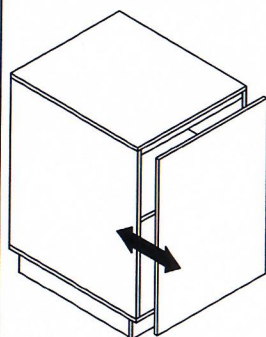

## To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

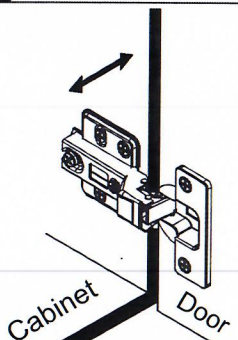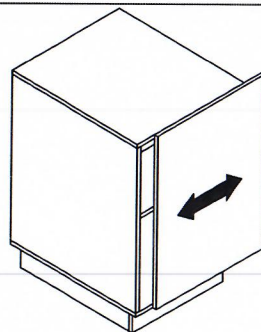

## To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.