


# ASSEMBLY INSTRUCTIONS

## DINING CHAIR

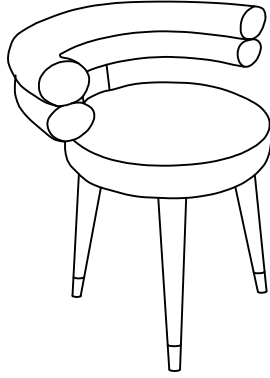

### + Do Not Use PowerTools



### + Suggested Adults



**NOTE:** For questions about parts or assembly please call us

- 1 Read instructions cover to cover.
- 2 Save all packaging until assembly is completed.

### 1 IMPORTANT SAFETY INFORMATION

**Do not** assemble the product if any of the following parts arrived damaged:

**Part ①** Cushion

**Part ②** Leg

**Do not** assemble if any of the following Hardware parts are missing:

**Part A** Bolt 5/16"\*1"

**Part B** Flat washer 5/16"

**Part C** Spring washer 5/16"


**Part D** Allen wrench 5/16"

### 2 IMPORTANT ASSEMBLY INFORMATION


**Assembly Step** If loosening persists, Please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

### + Parts Included

① Cushion 1PC

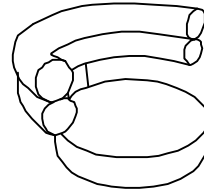

② Leg 4PCS

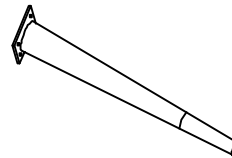

### + Hardware Included

A Bolt 5/16"\*1"  
16PCS

B Flat washer 5/16"  
16PCS



C Spring washer 5/16"  
16PCS

D Allen wrench 5/16"  
1PC



# ASSEMBLY INSTRUCTIONS

## DINING CHAIR

1

