 
 
 
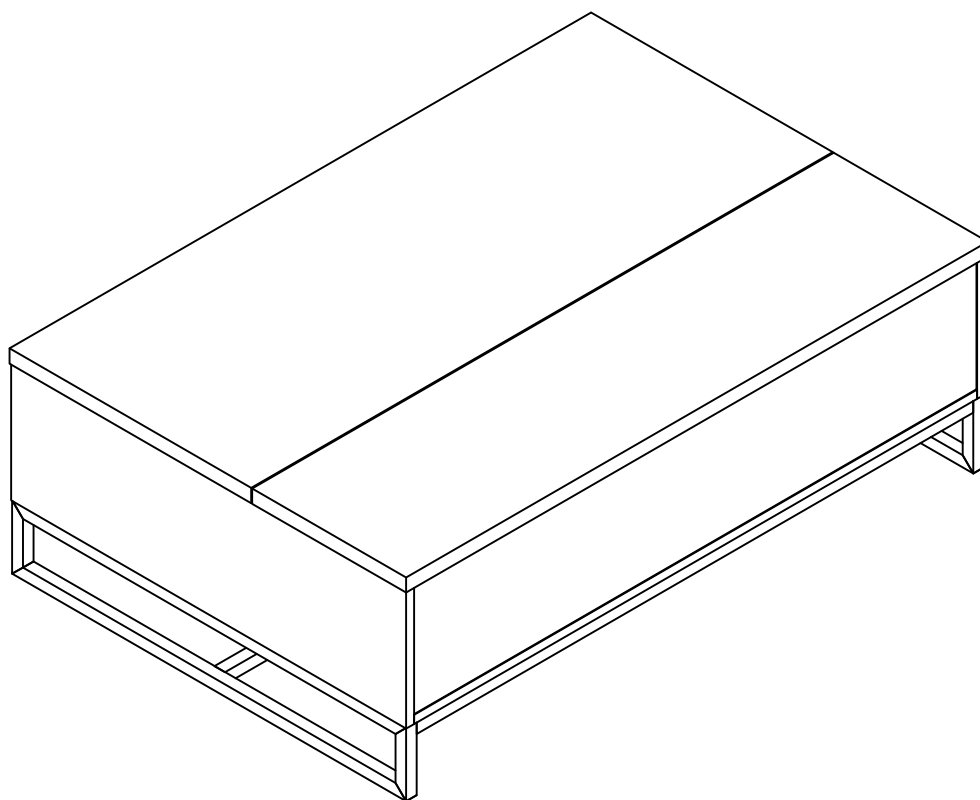 













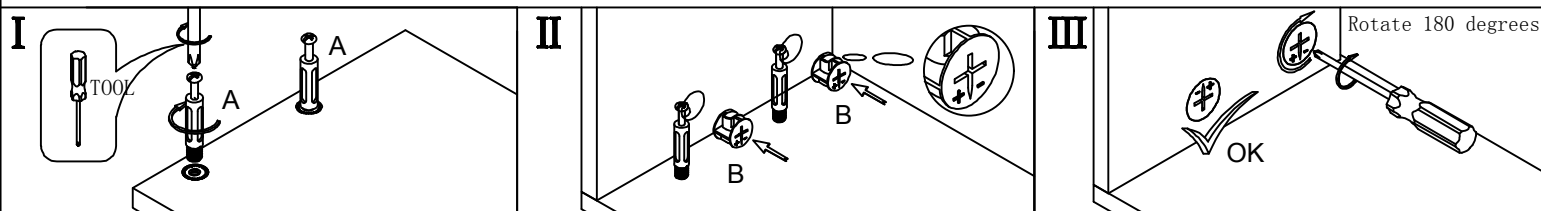


Disassembly and installation of accessories











A 48+2	B 48+2	C 48	D 16+2	E 8	F 4	G 1
						
Ø6*35mm	Ø15*11.5mm	Ø8*40mm	M3.5*14mm	M4*35mm	M6*12mm	
H 1	I 16	J 1	K 6			
						
M4	M8*12mm	M5	Ø20*3mm			

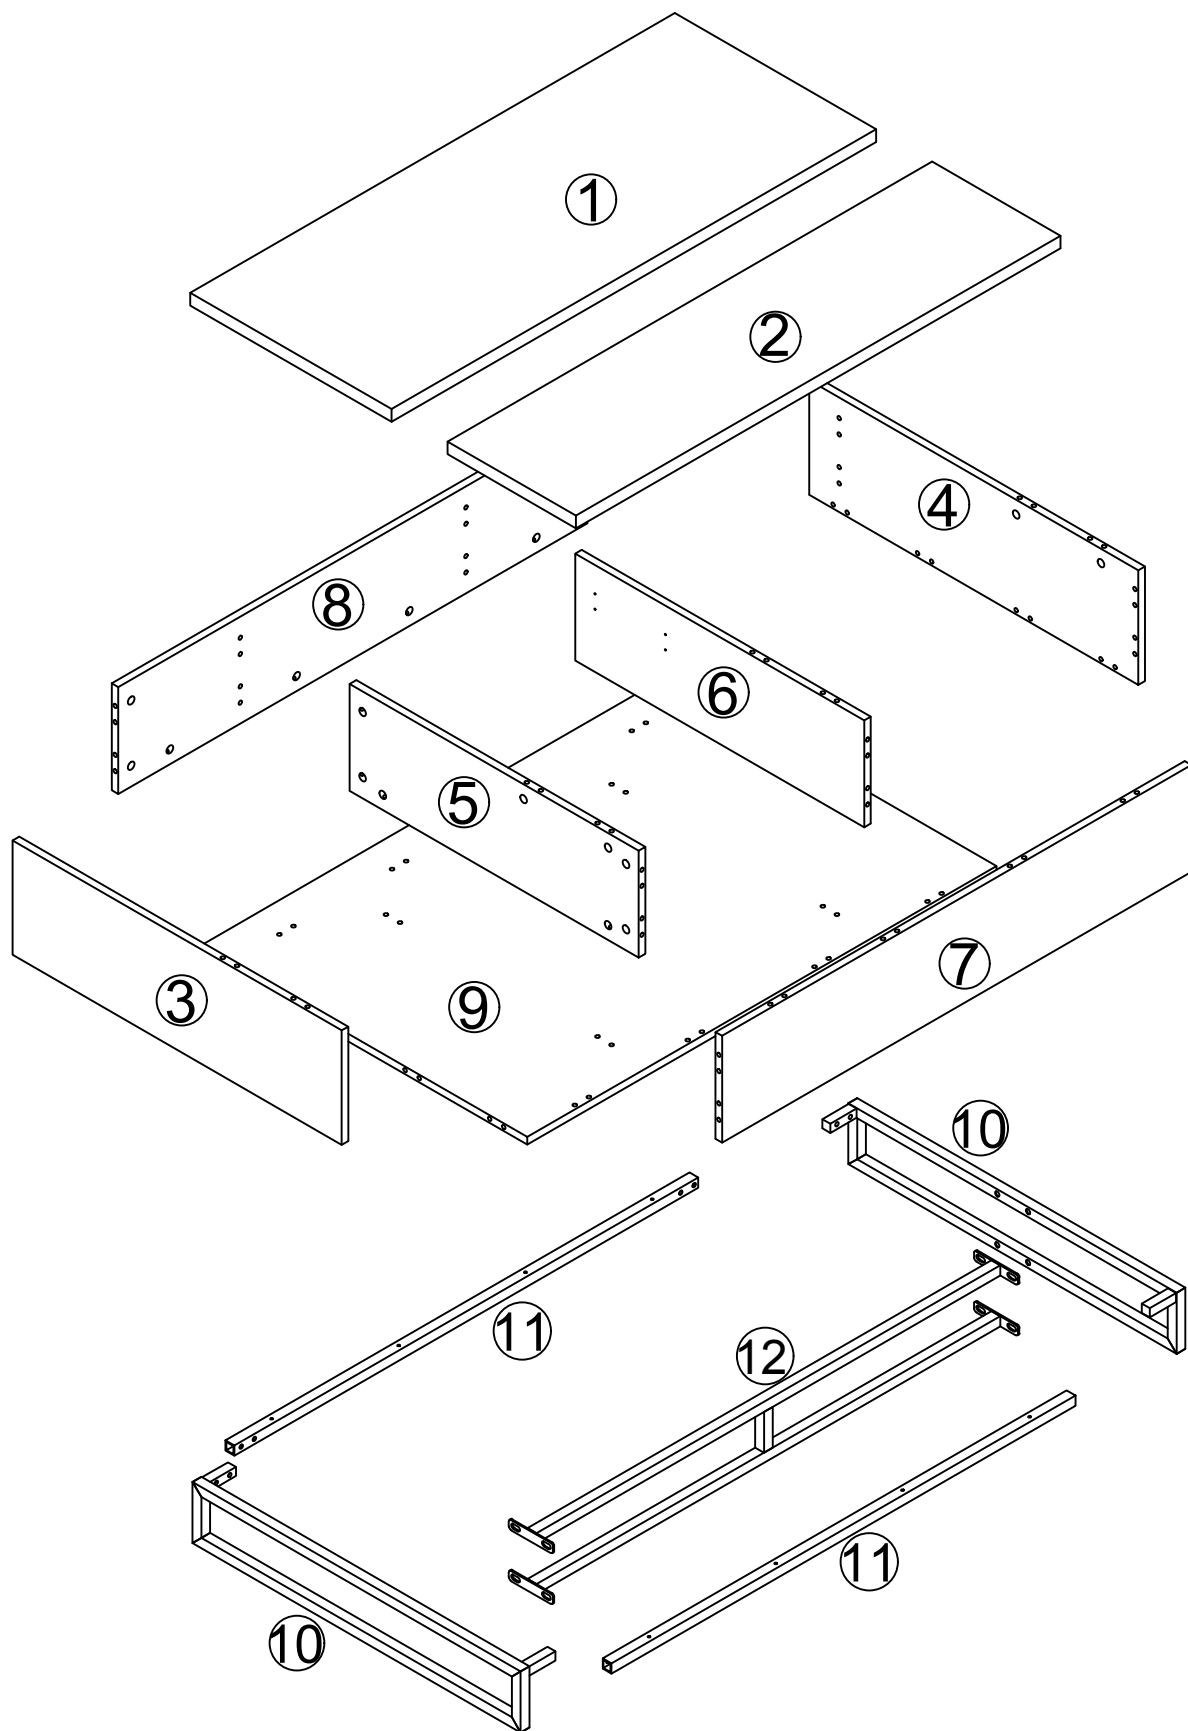

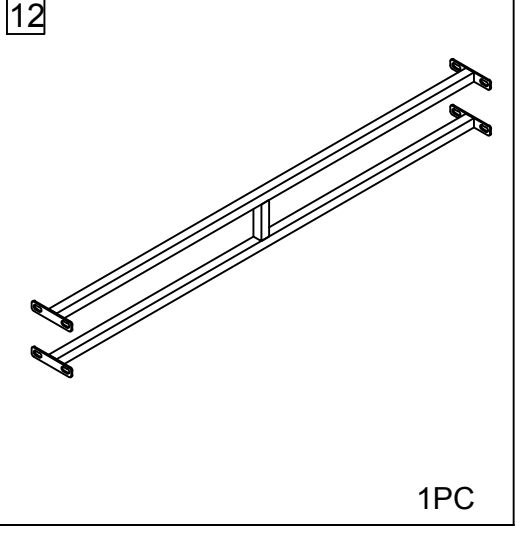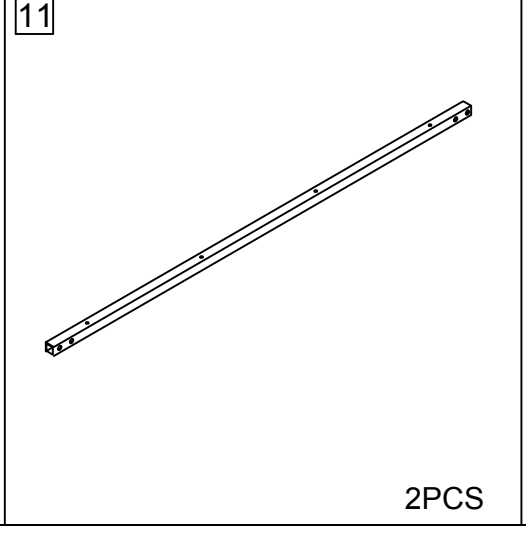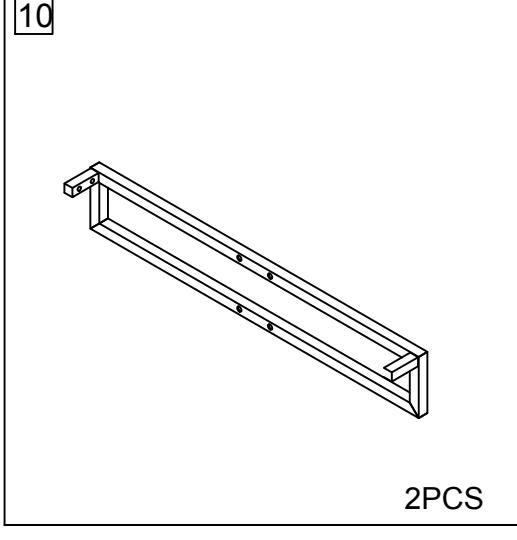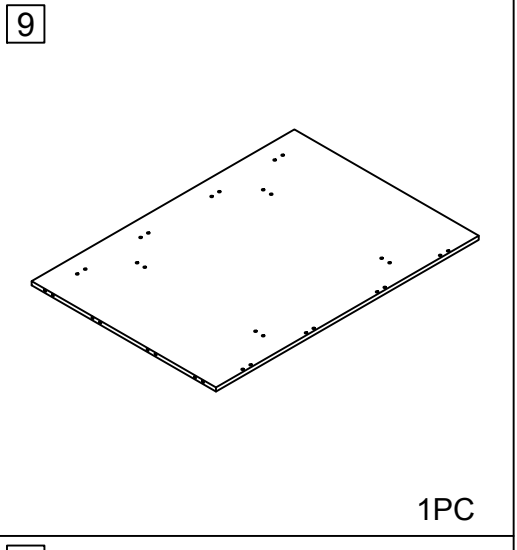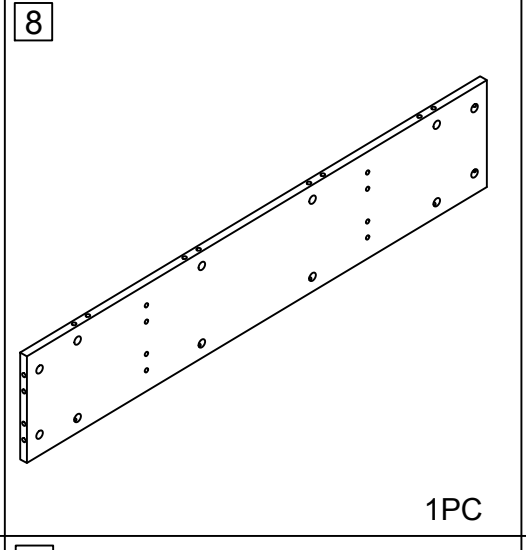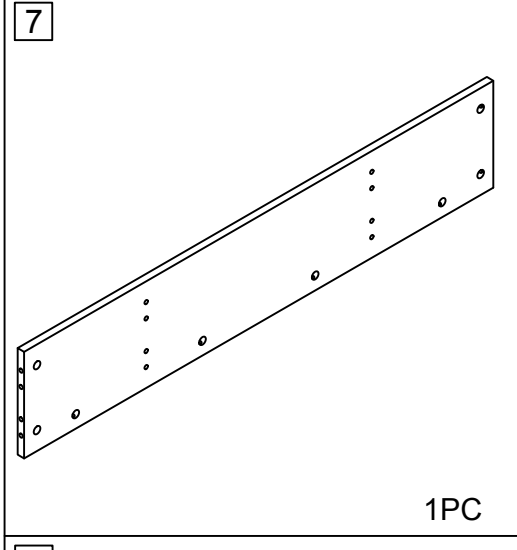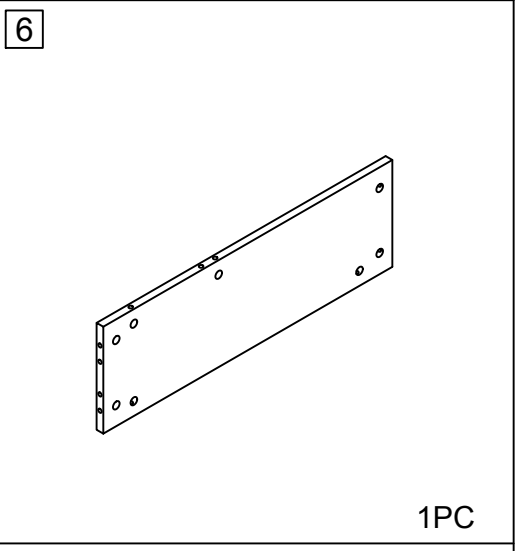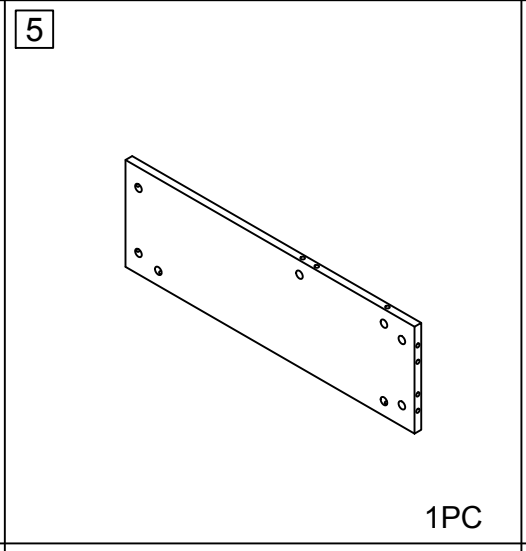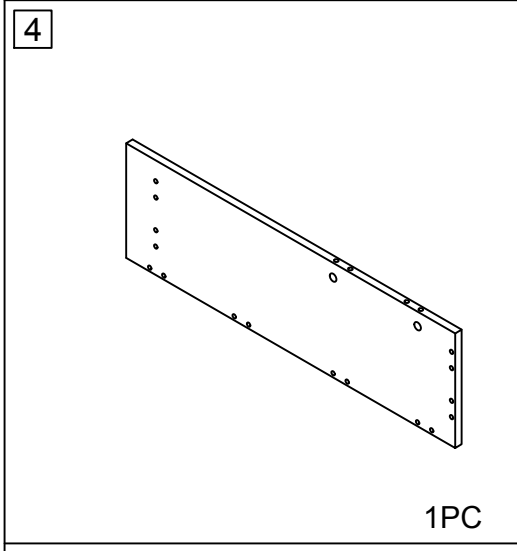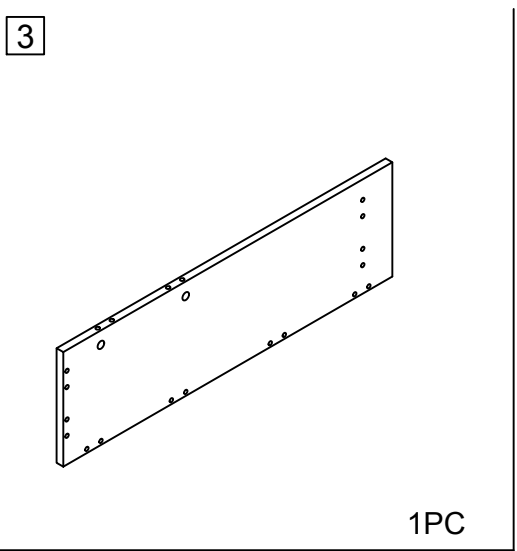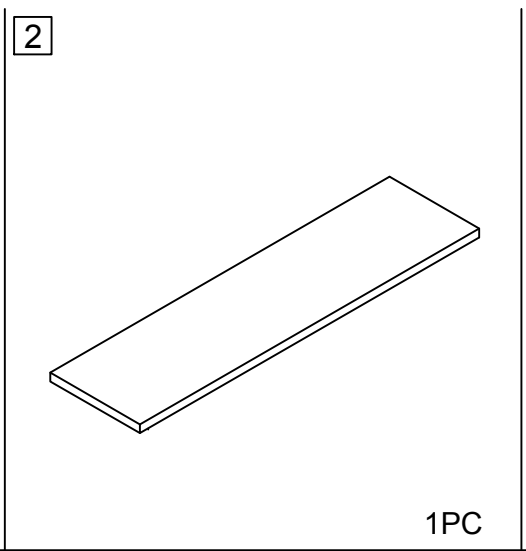           
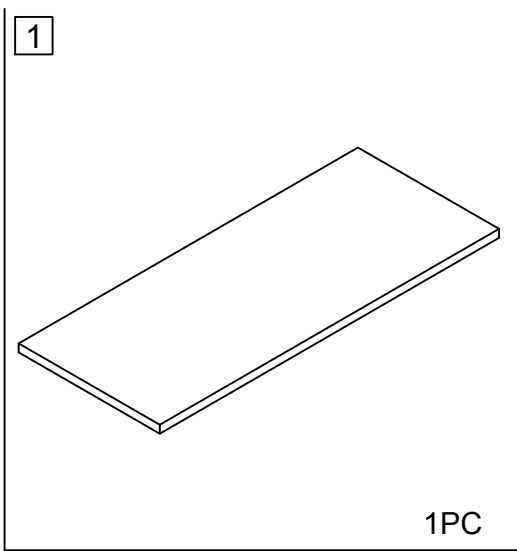 


STEP 1

        Make sure the screws are loose
before pressing

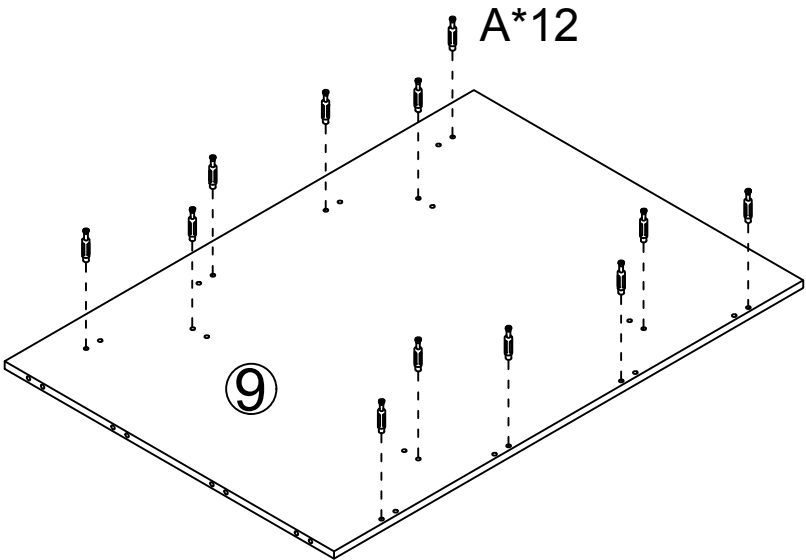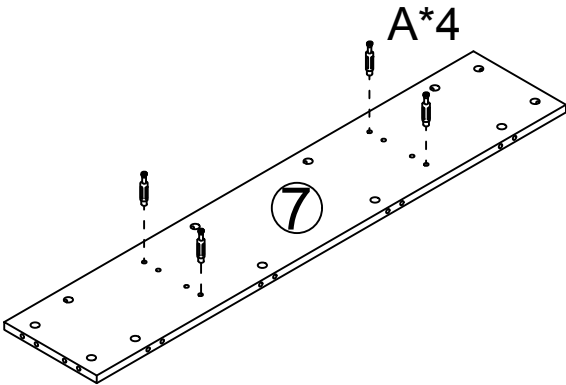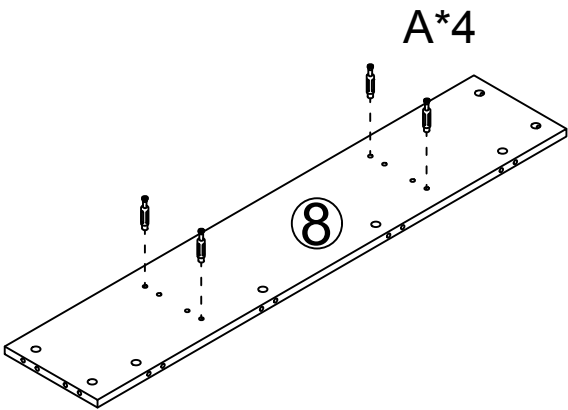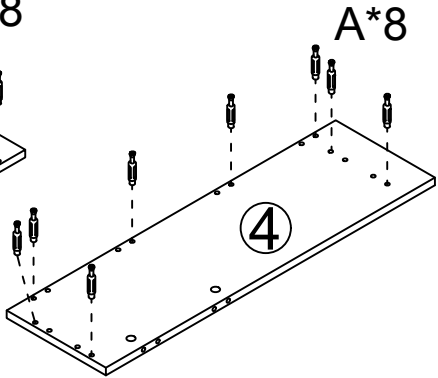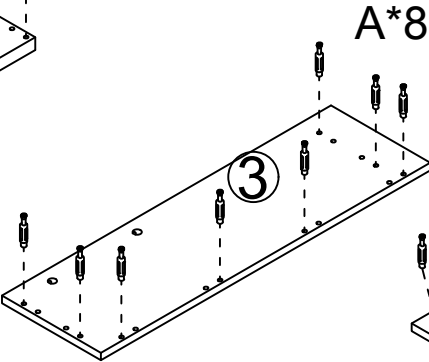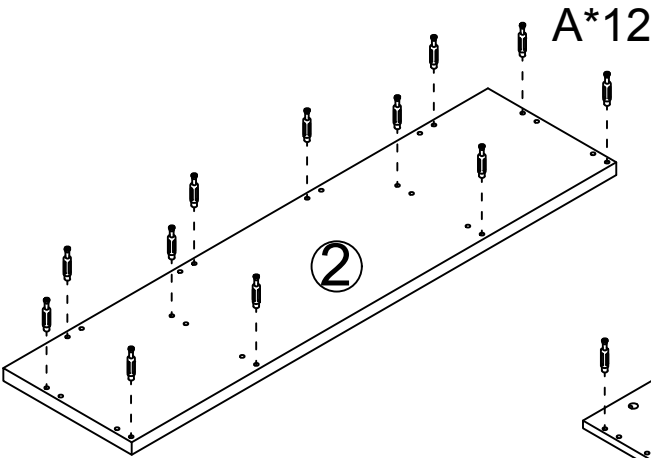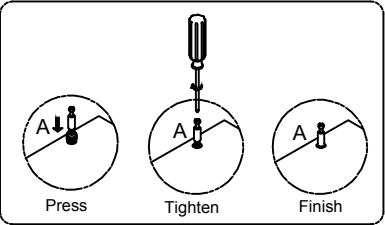
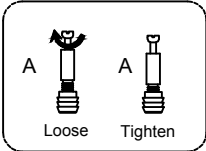


  STEP 2

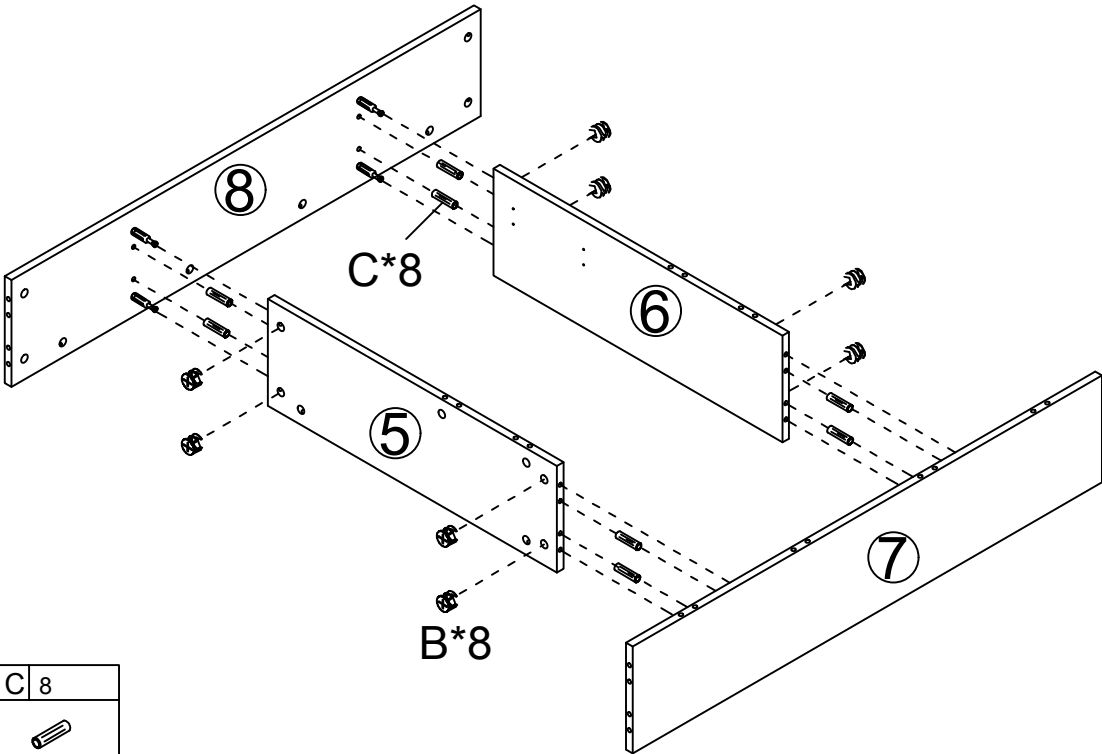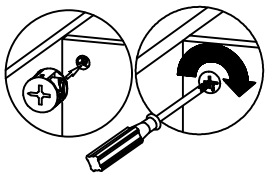


B 8	C 8
	
Ø15*11.5mm	Ø8*40mm

  STEP 3

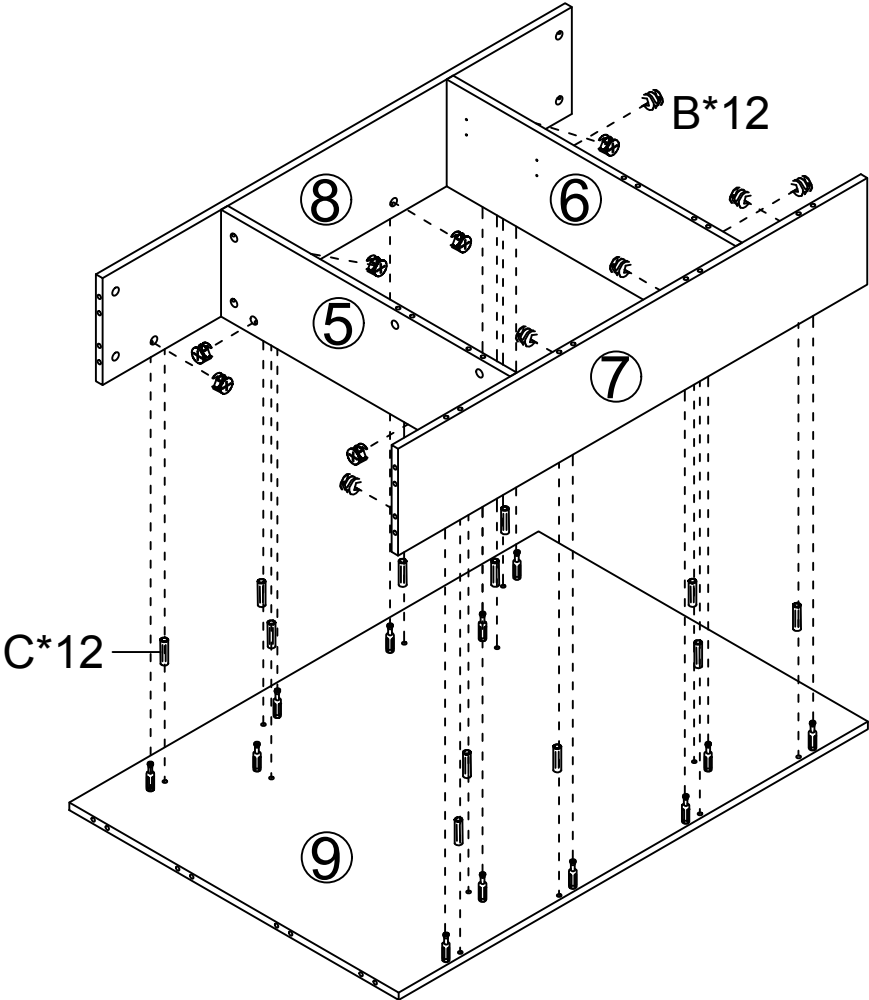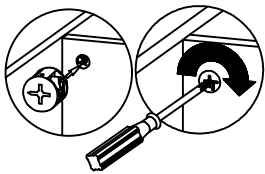


B 12	C 12
	
Ø15*11.5mm	Ø8*40mm

 STEP 4

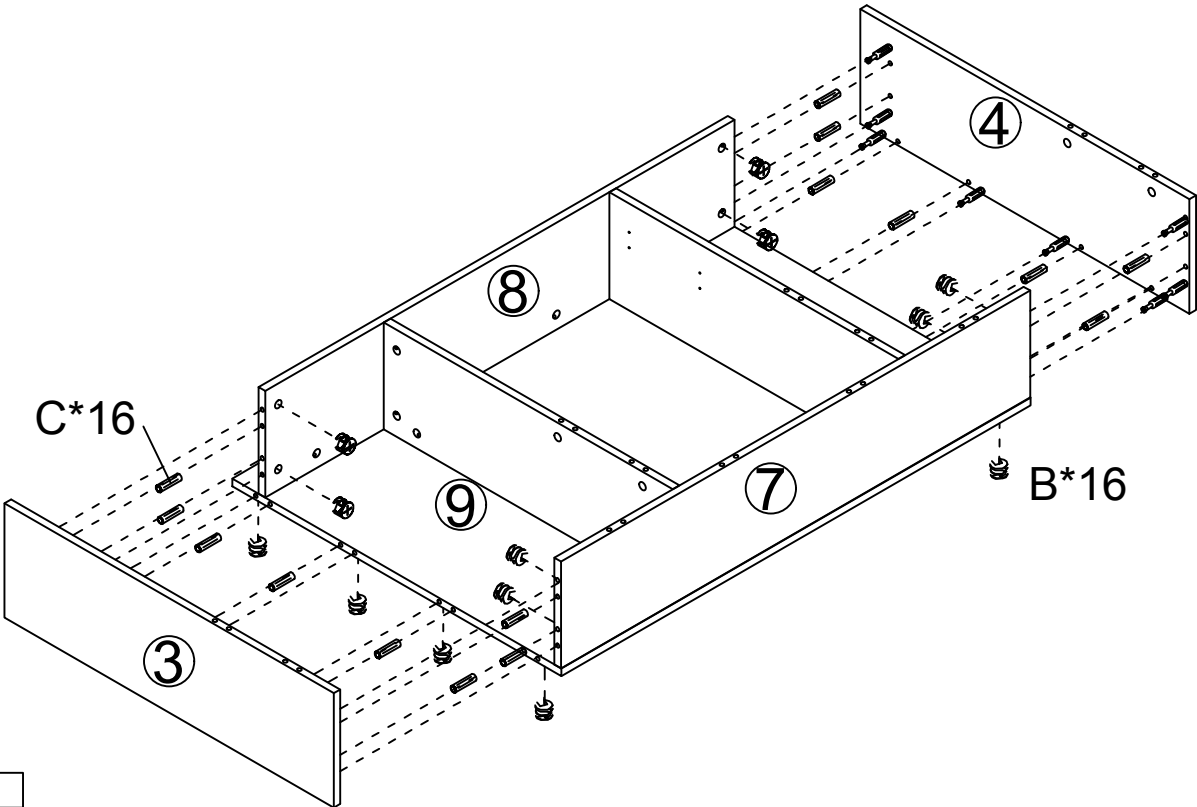


B 16	C 16
	
Ø15*11.5mm	Ø8*40mm

 STEP 5

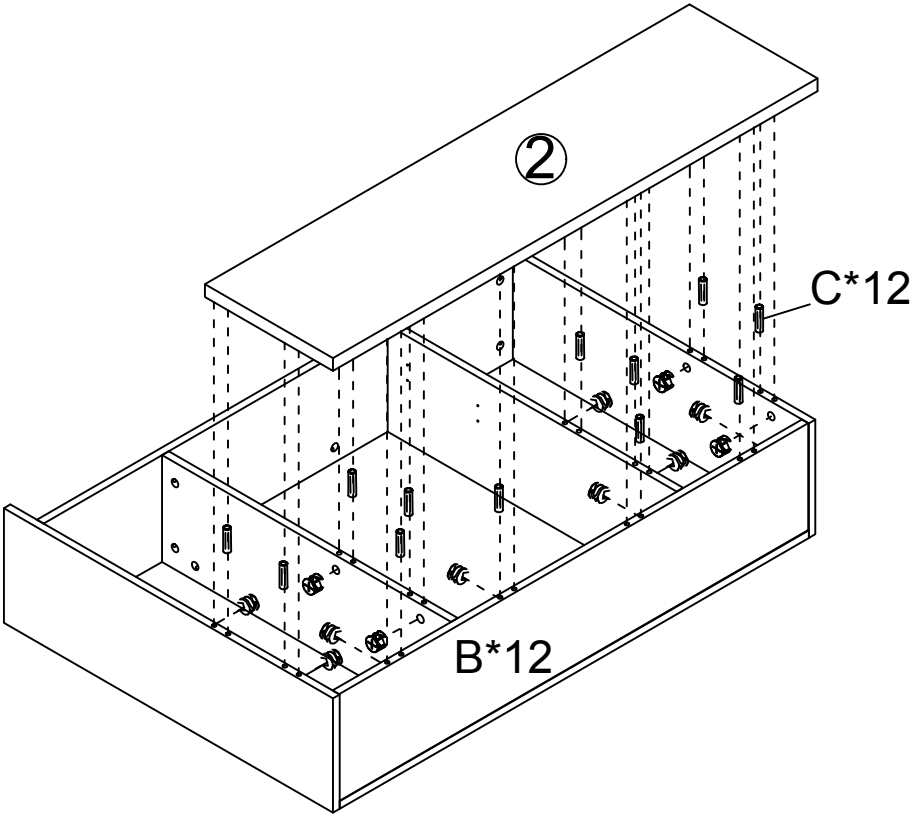


B 12	C 12
	
Ø15*11.5mm	Ø8*40mm

 STEP 6

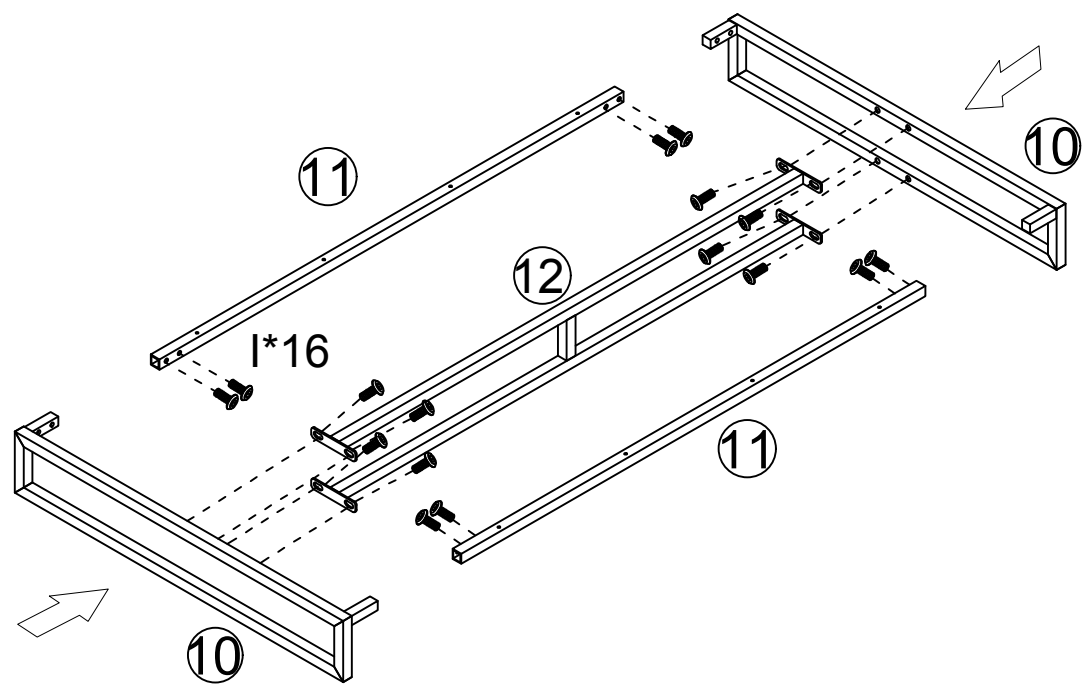


I	16	J	1
			
M8*12mm		M5	

 STEP 7

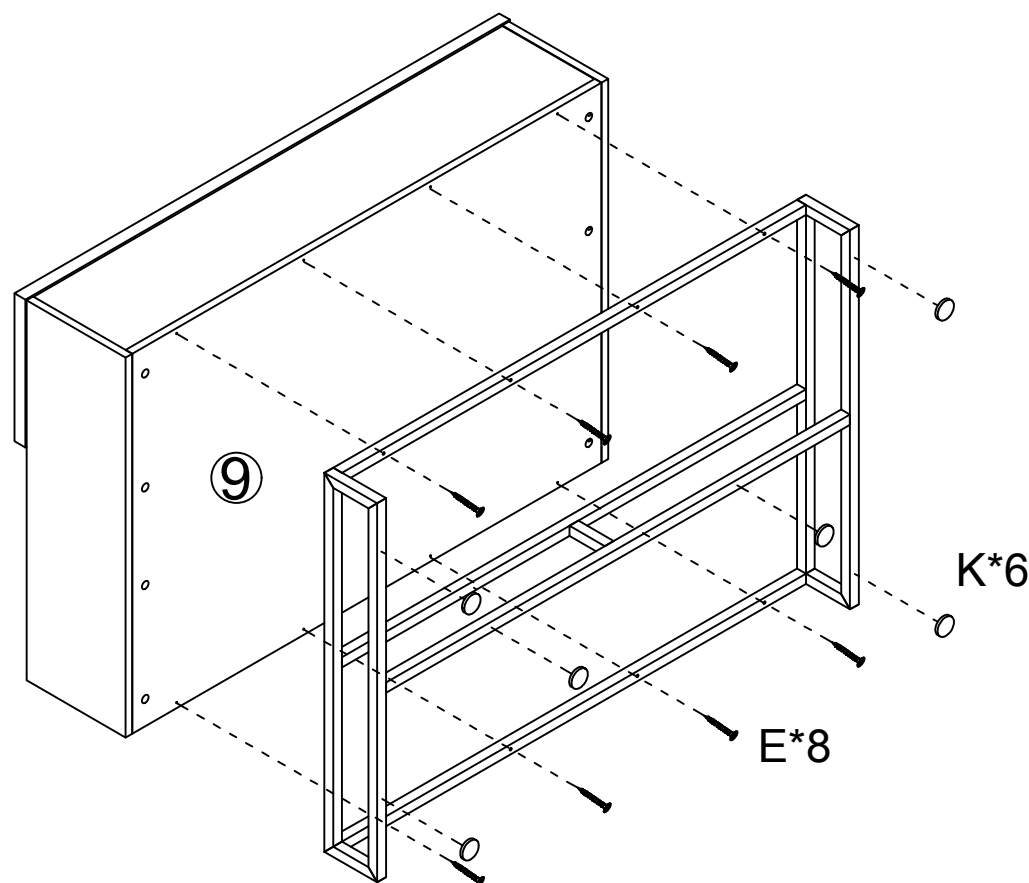


E	8	K	6
			
M4*35mm		Ø20*3mm	

 STEP 8

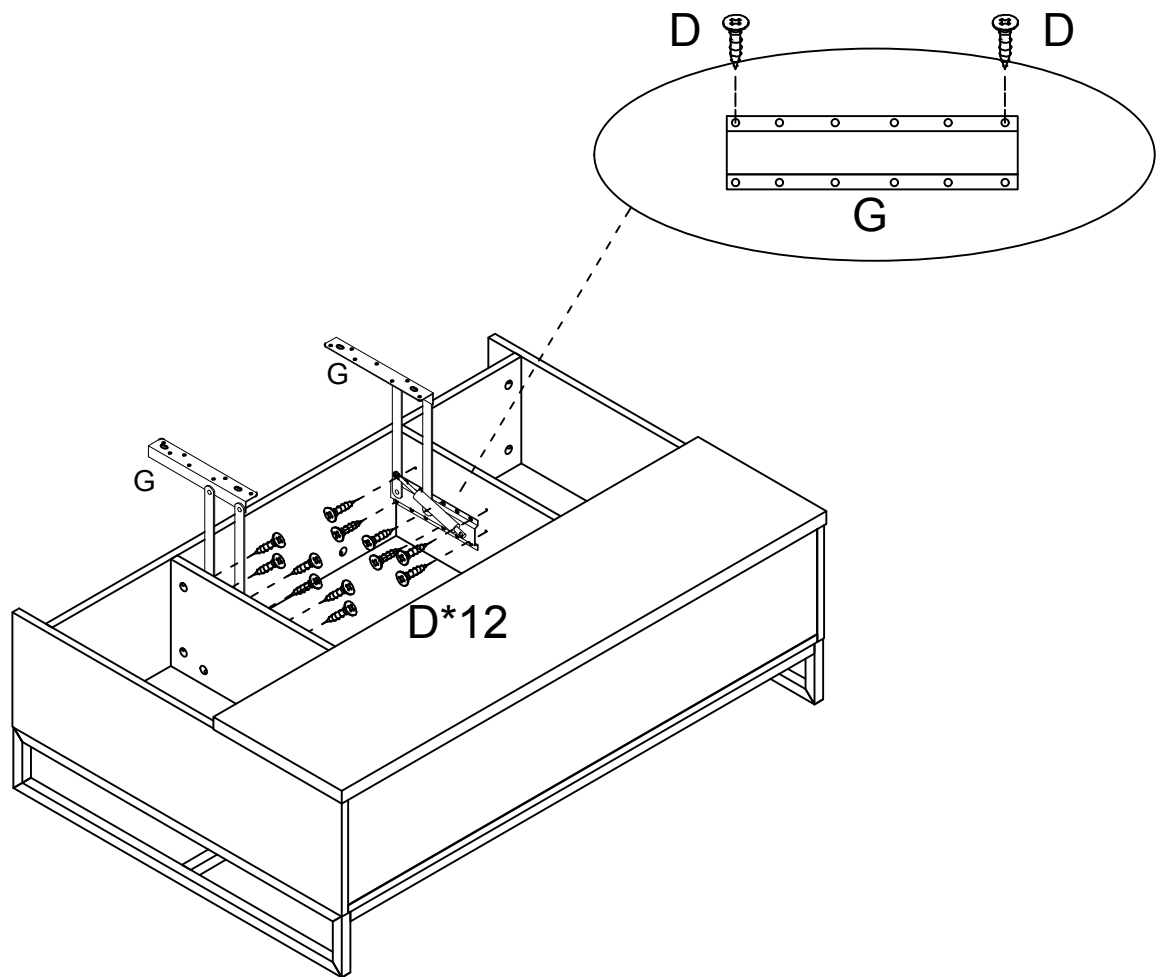

D 12	G 1
	
M3.5*14mm	

 STEP 9

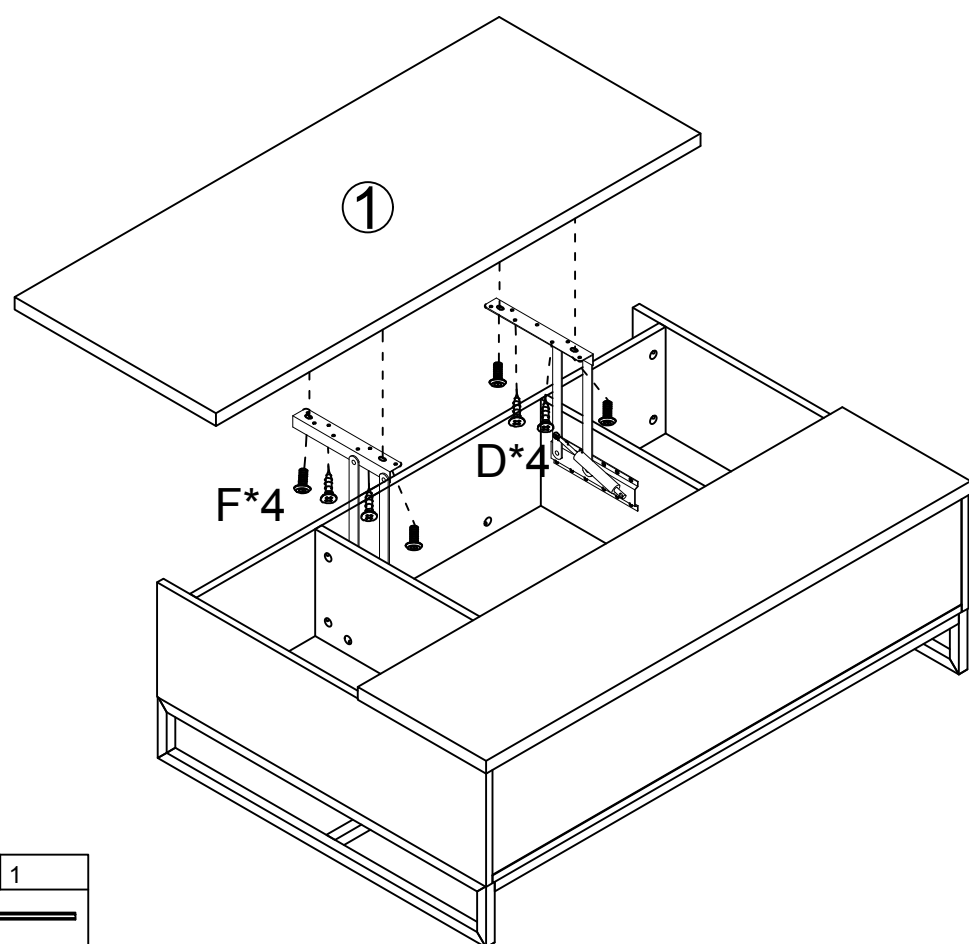

D 4	F 4	H 1
		
M3.5*14mm	M6*12mm	M4