 
 


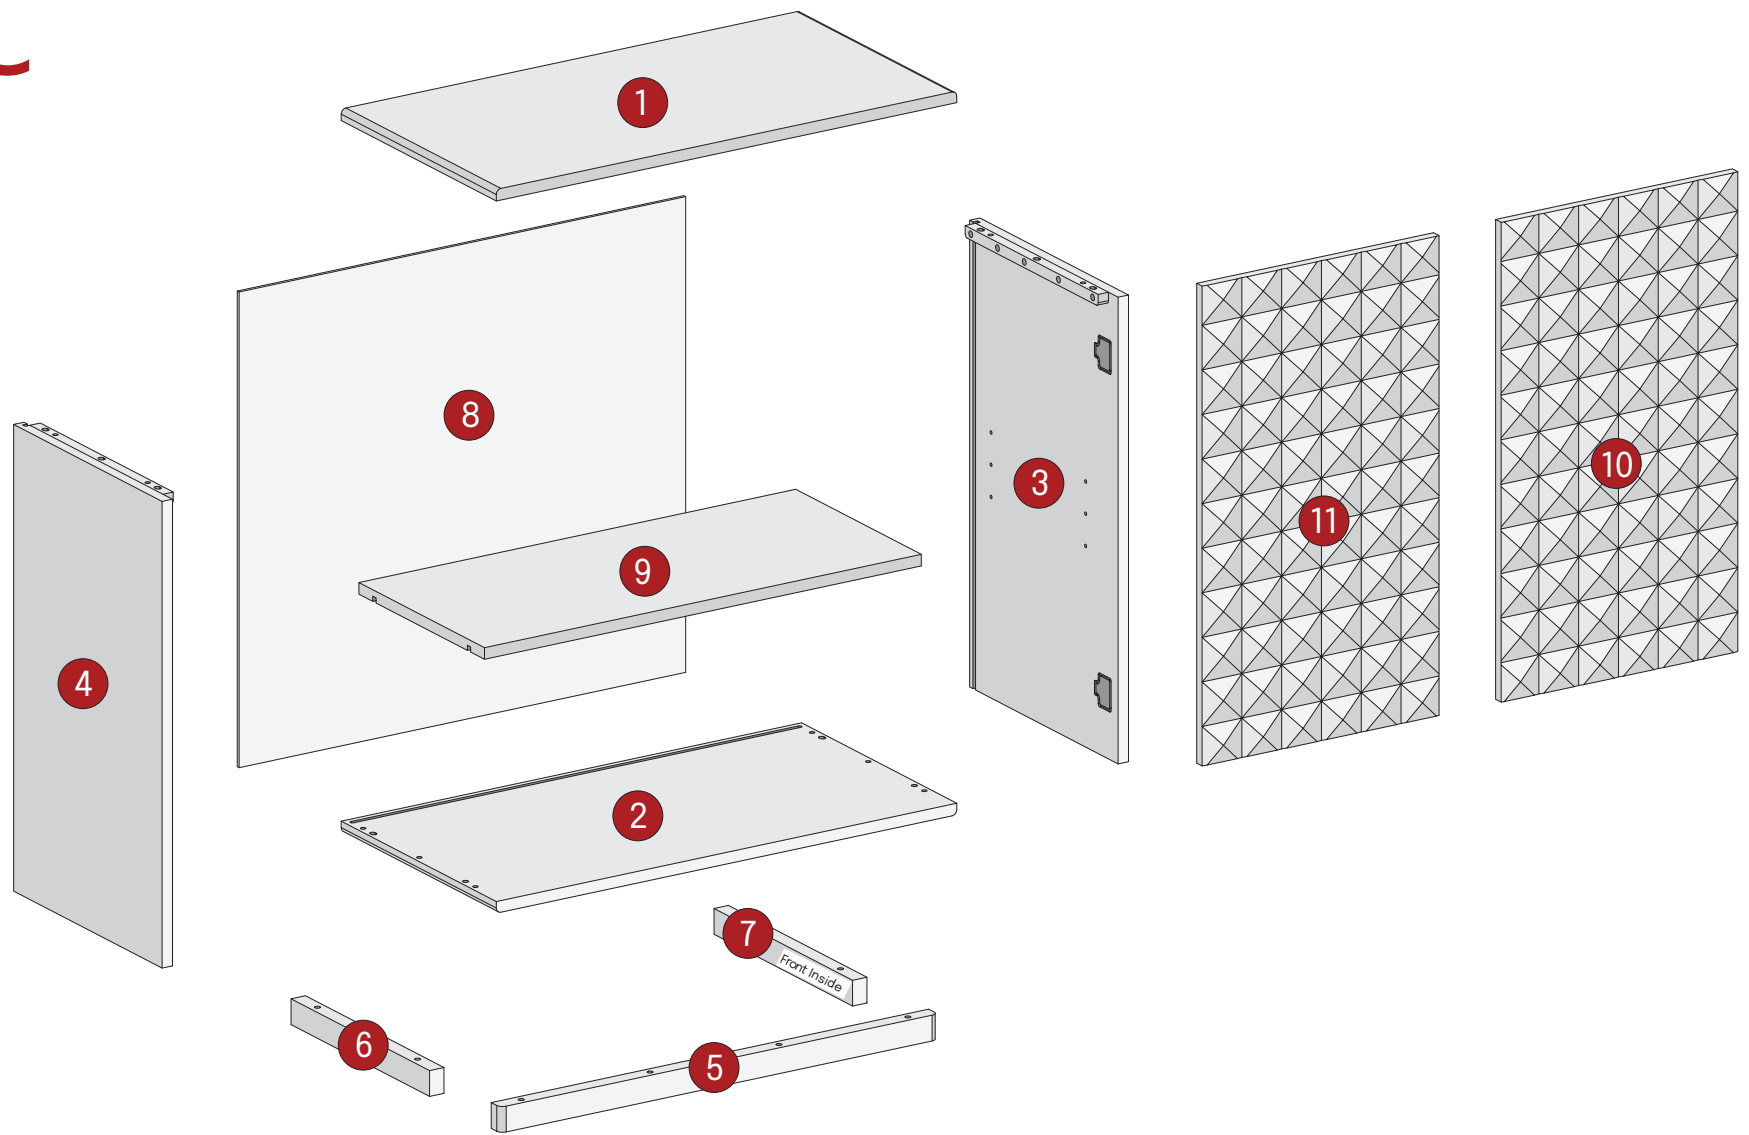


ASSEMBLY INSTRUCTION

SAPA/ VEIL/ MOSSIC STORAGE CHEST 2 DOORS

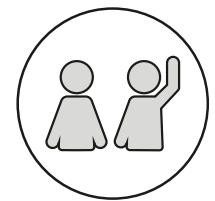


TEAM ASSEMBLY RECOMMENDED

 
SAPA

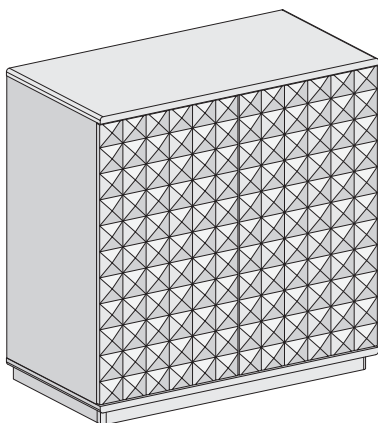

VEIL

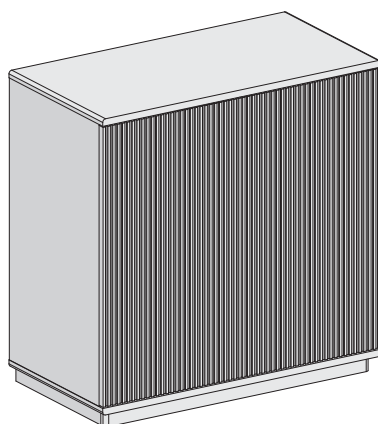 

MOSSC

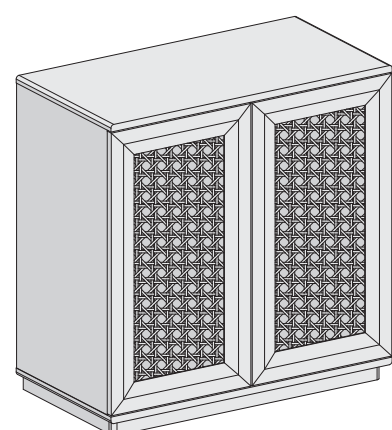 

NTC
furniture

www.ntcfurniture.com
www.ntchomestore.com

Return Policy

Thank you for choosing NTC. We are committed to providing high-quality products that are designed to withstand heavy daily use by the most demanding users. When you purchase NTC products, you can be assured that you are receiving authentic products that meet our rigorous standards.

 
NTC is not responsible for normal wear and tear, products used commercially, or failures caused by accidents, abuse, alteration, modification, misuse, or improper care.

 
We provide the following warranties:




30-day satisfaction warranty across our product line. Specific warranties for each item. Please refer to your User Manual for the exact coverage. If you encounter any technical issues while installing or configuring our products, please contact our qualified staff for professional assistance. Replacement parts or products will be sent at our discretion if the defect is the result of any fault on our side. You must provide proof of purchase, with the date of purchase, as well as photos of the defective merchandise. Photos may be used to determine the cause of defects and for future quality control. If you wish to return a purchased product, please refer to our Return Policy.

For any questions, comments, or concerns, please contact NTC store or reach out to us via email at:
customerservice@ntcfurniture.com

Components

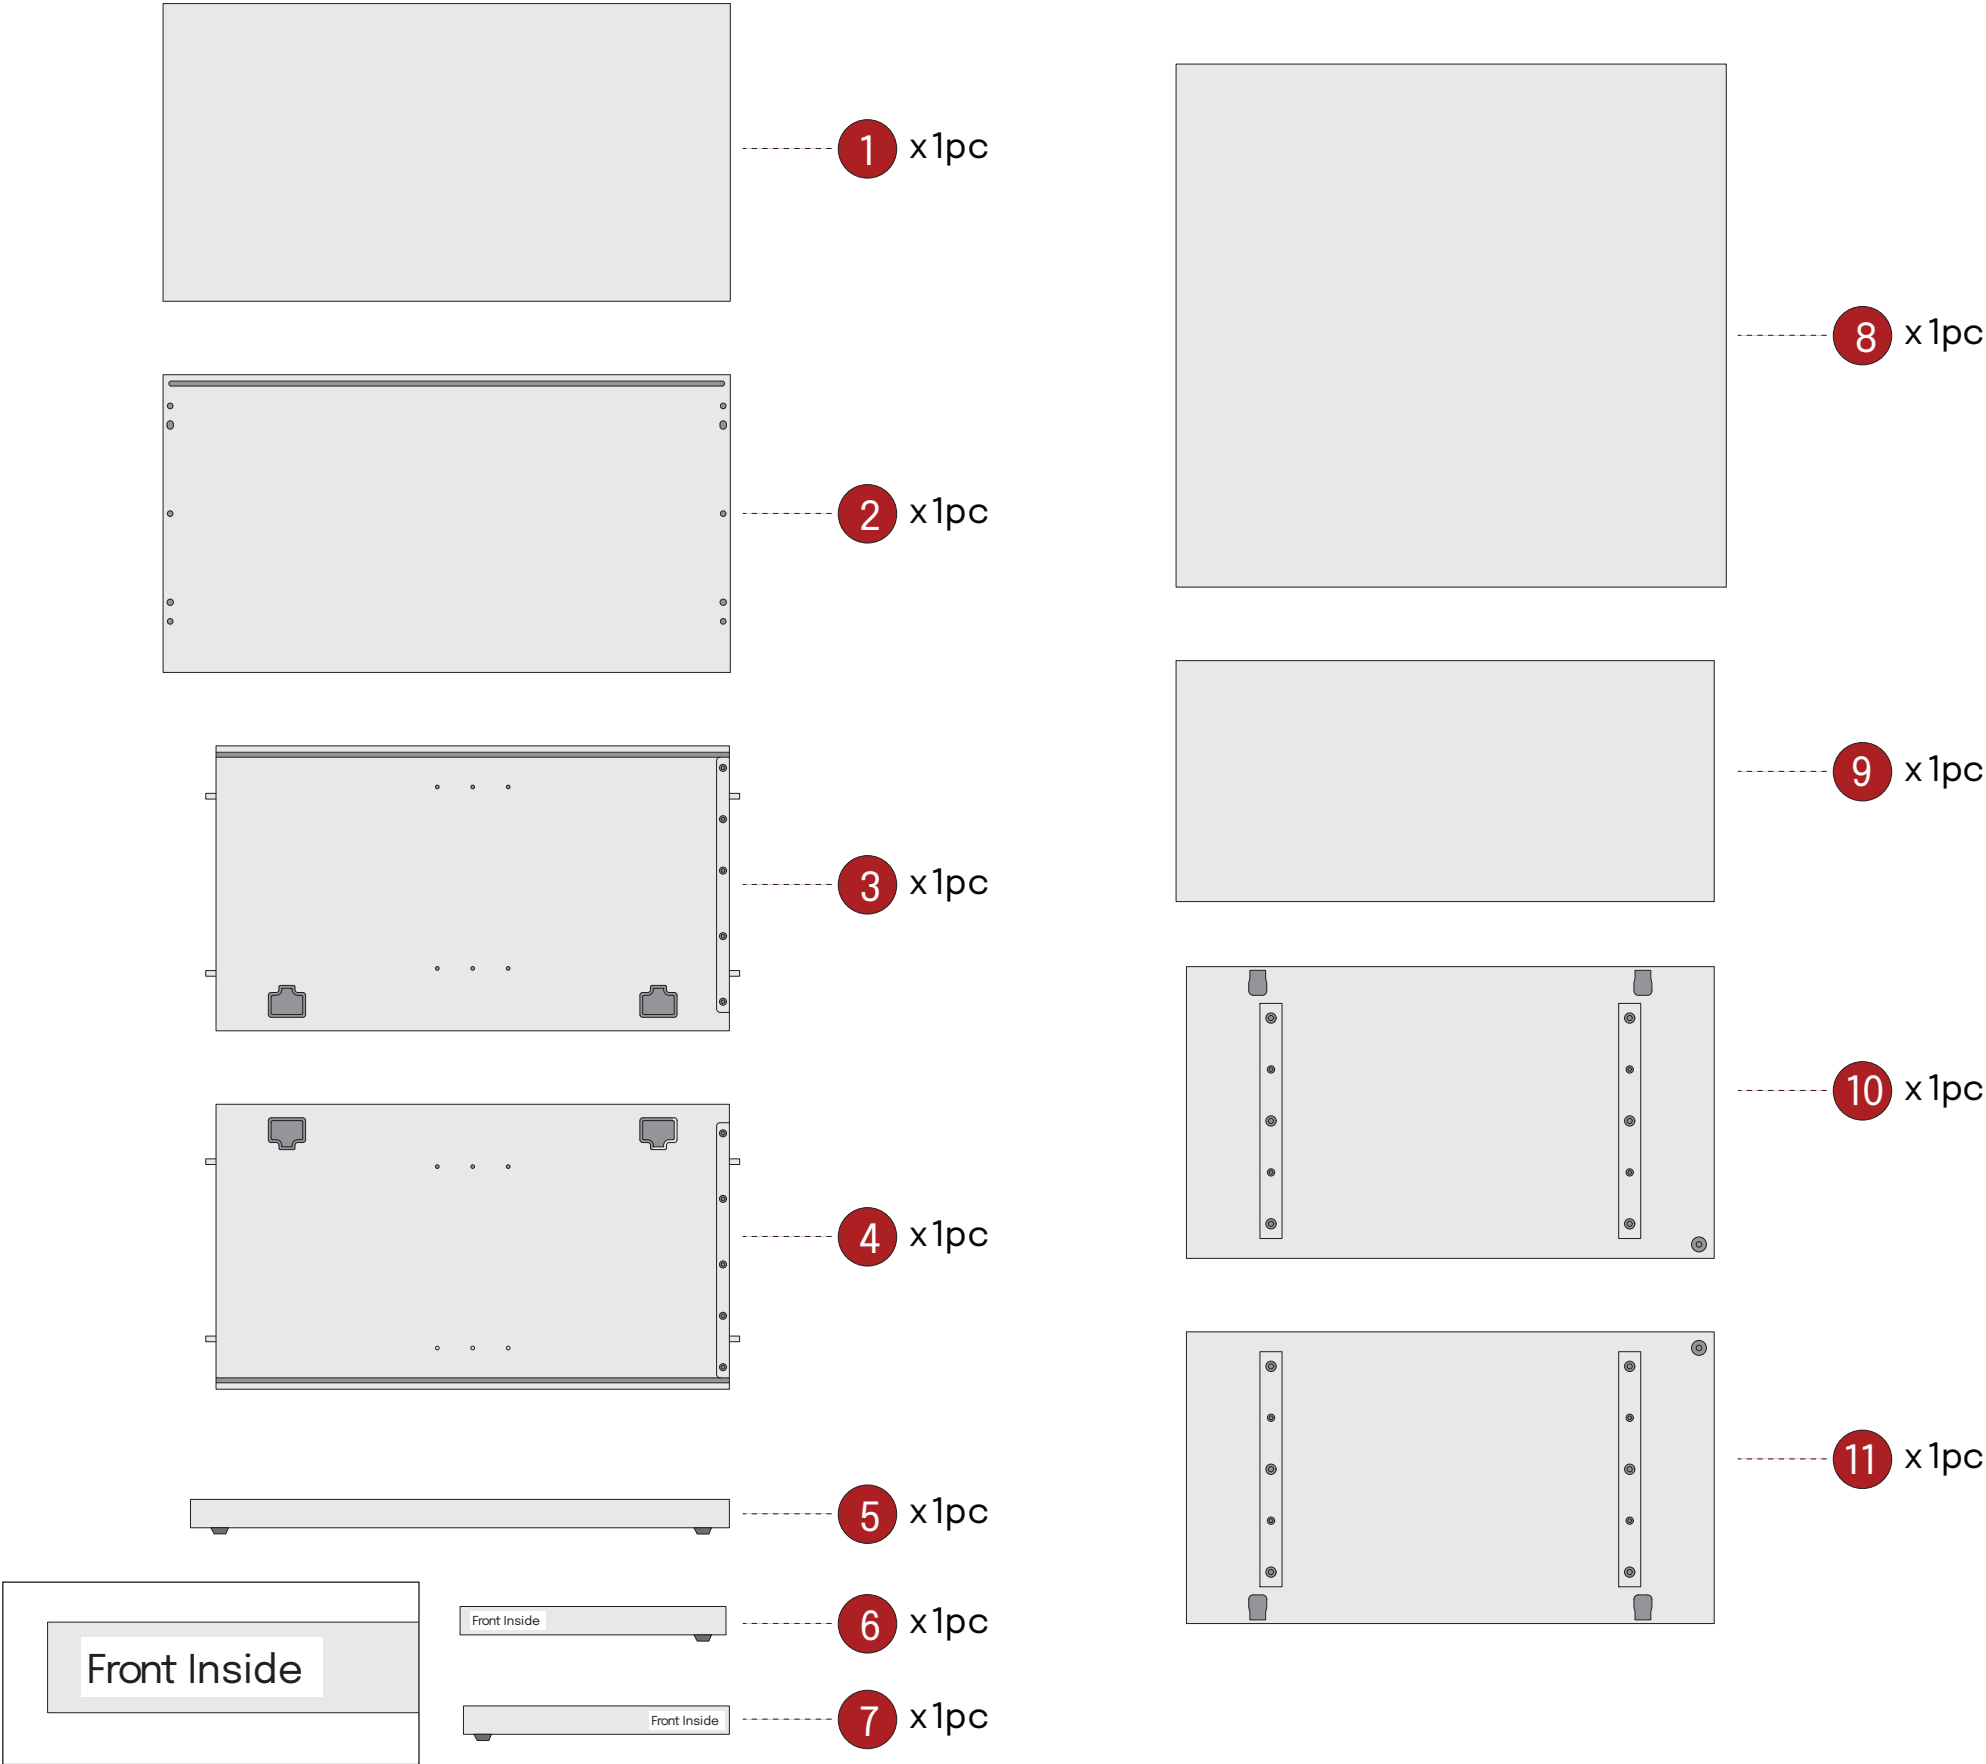

HARDWARE LIST			
A		M6*30 Bolt	6
B		M6*35 Bolt	8
C		M7x40 Screw	6
D		M4 x 15 Screw	24
E		Shelf Pin	4
F		Door Hinge	4
G		M4 Allen Key	1
H		M4 x 20 Screw	4
I		Wedge Bracket	4

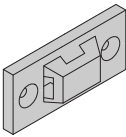   
ANTI-TIP PART			
A		Bracket	4
B		M4x15 Screw	4
C		M8 x 38 Plug	4
D		M4x40 Screw	4
E		Strap	2

Ensure that all parts and hardware are available before beginning assembly.


Follow each step carefully to ensure the proper assembly of this product.

Two people are recommended for ease in the assembly of this product.

 
A Phillips head screwdriver, pencil, hammer and tape measure is required for the assembly of this product.

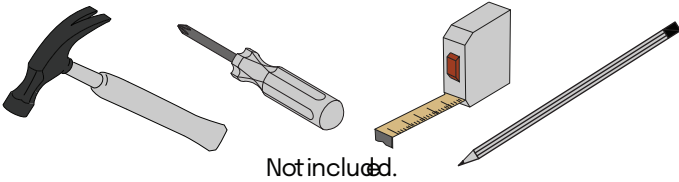

 
Power tools should not be used to assemble this product.

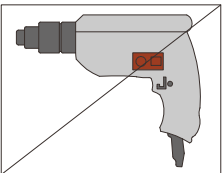


1

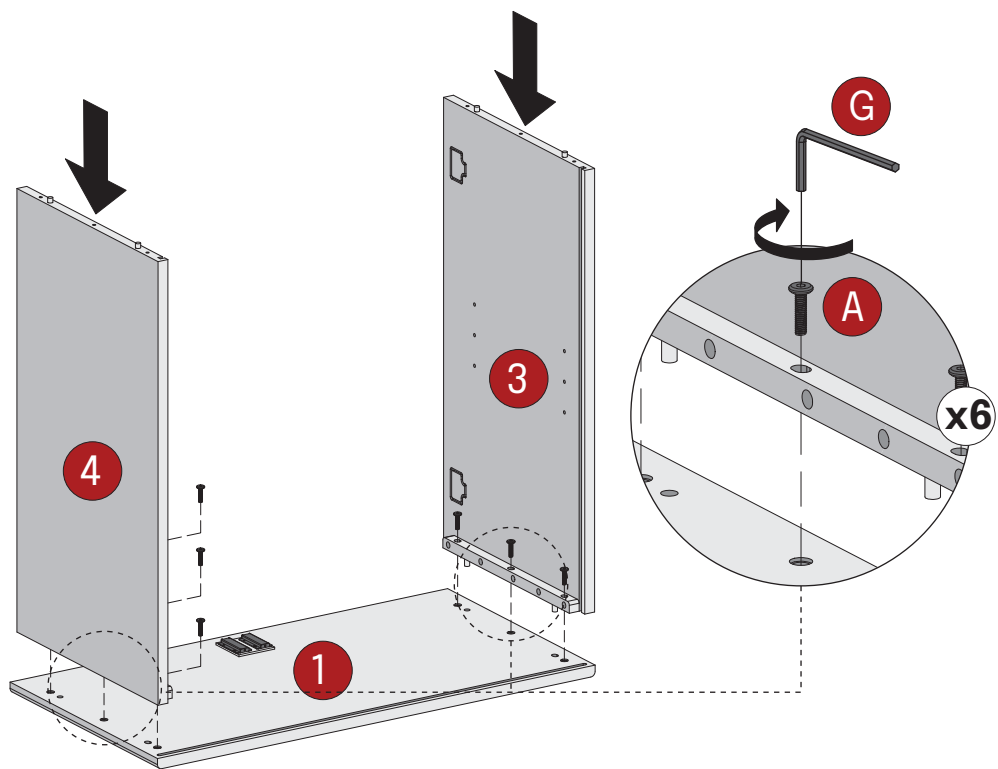 


2

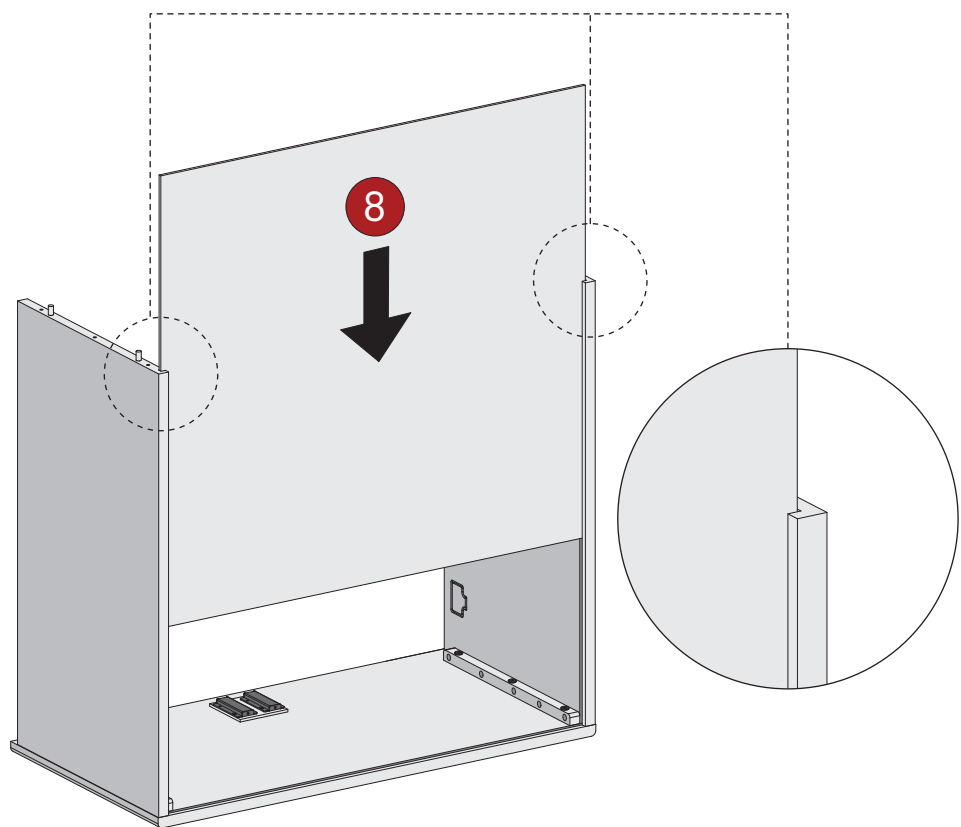 


3

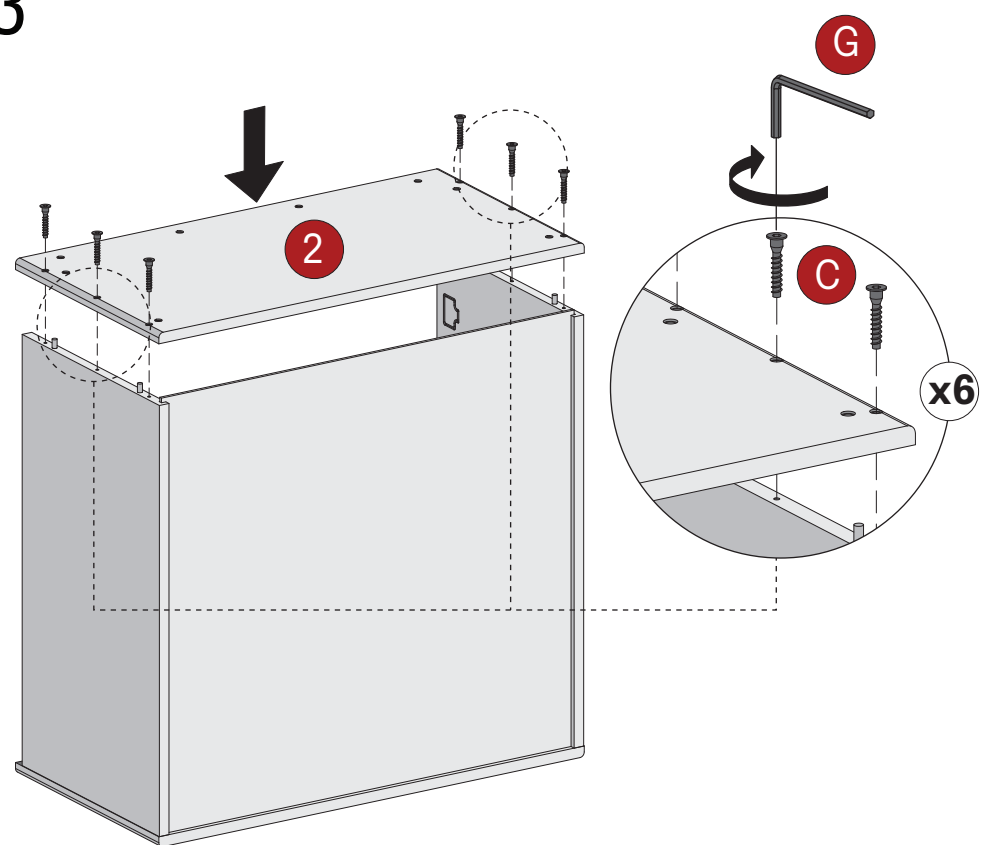 


4

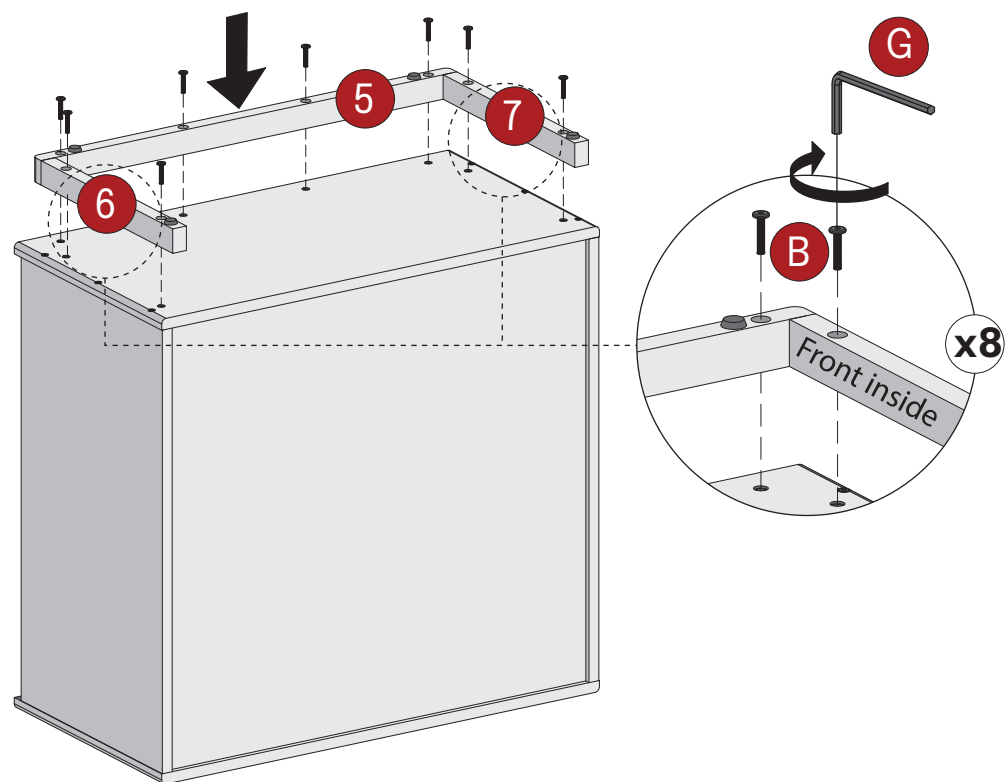 


5

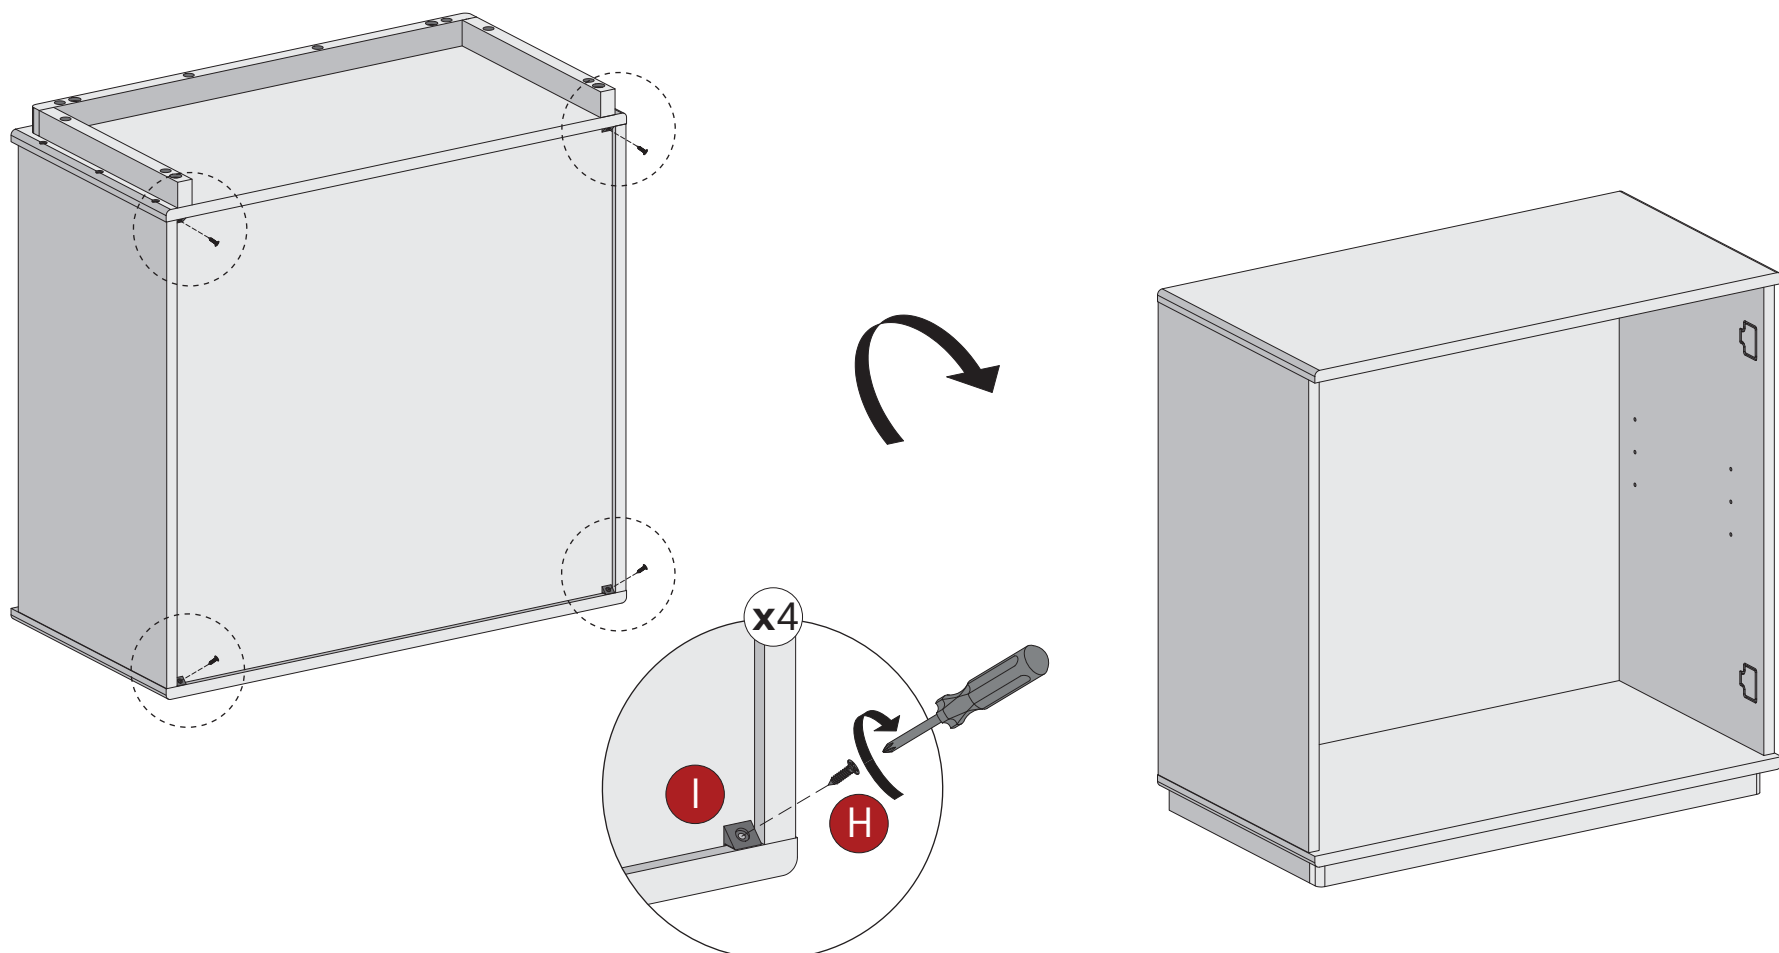 


6

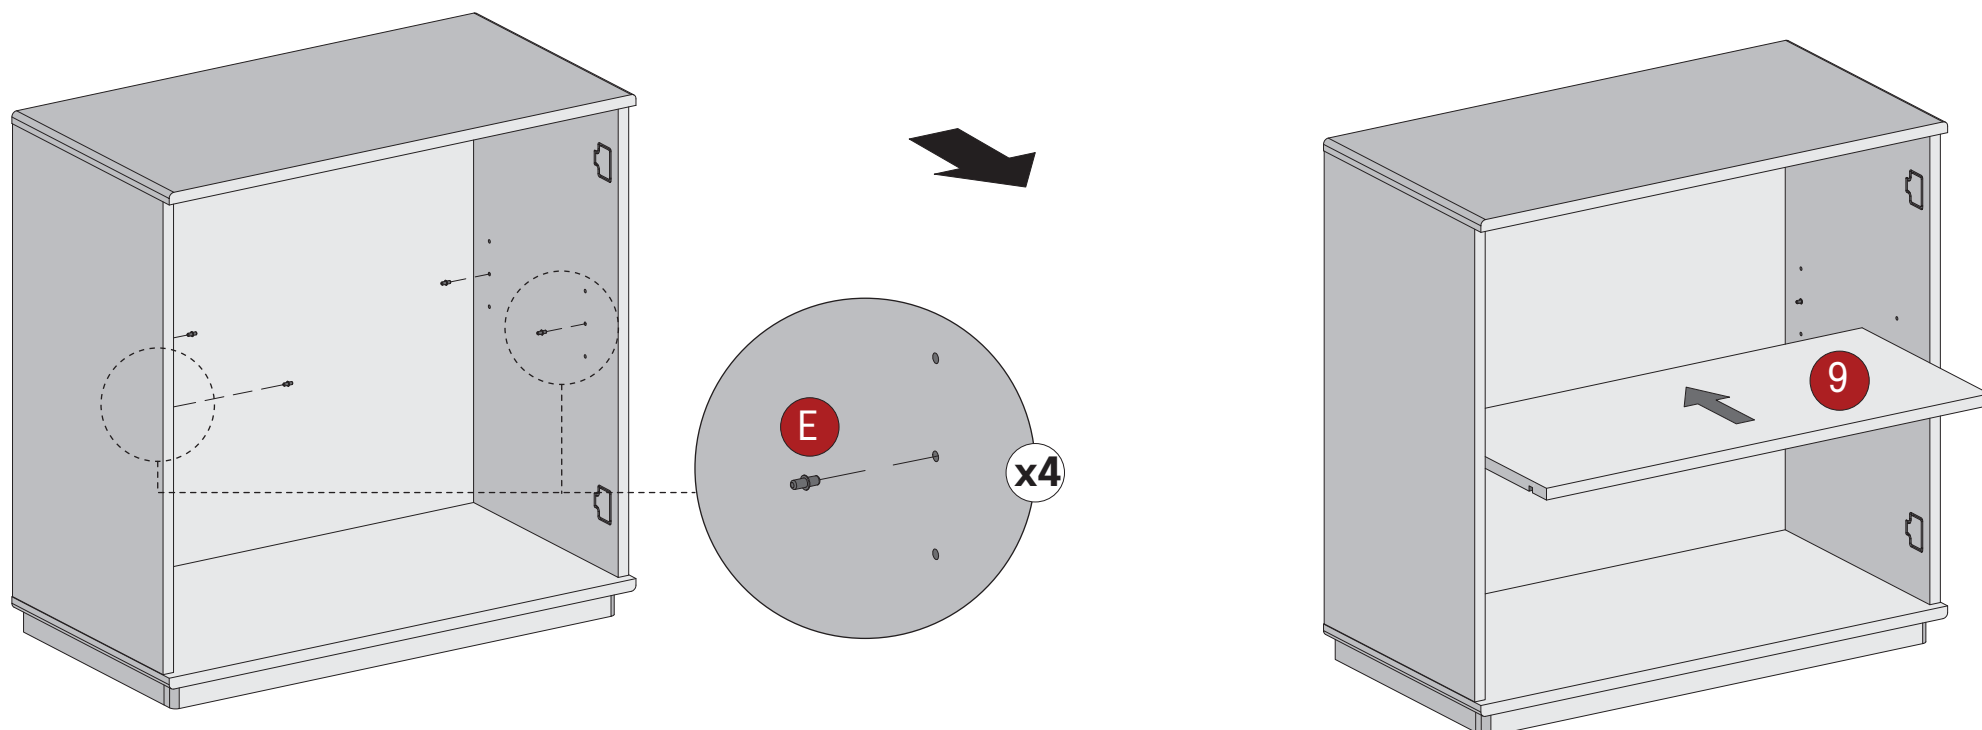 



7

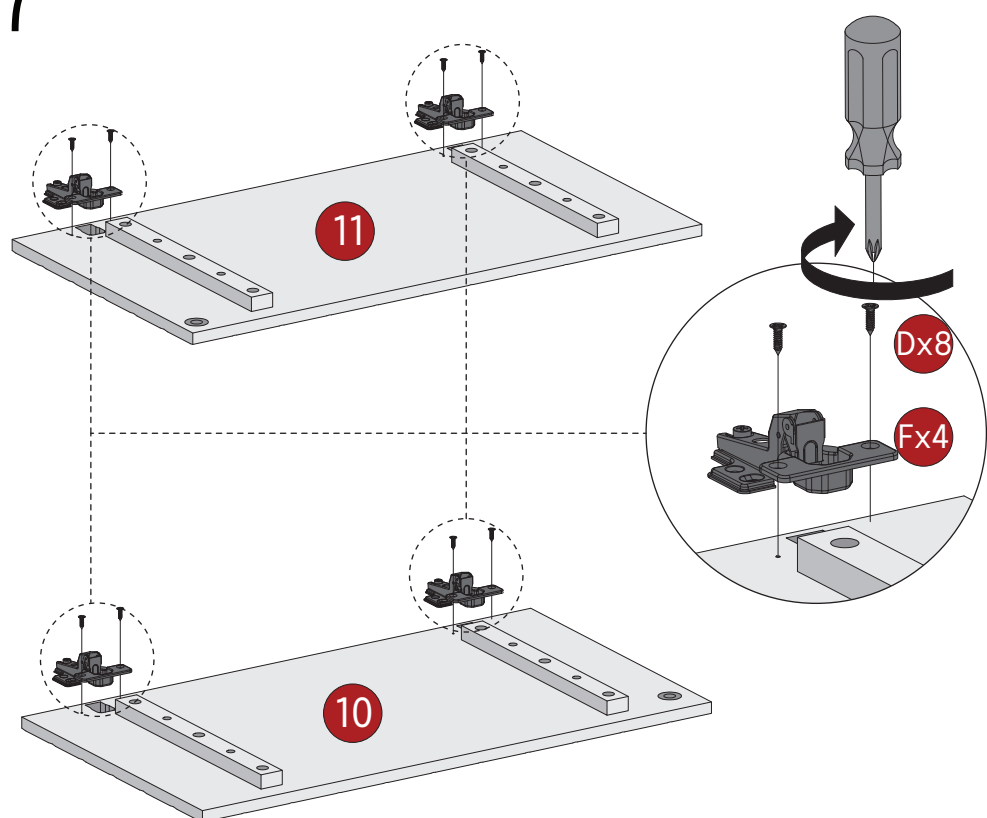 

8


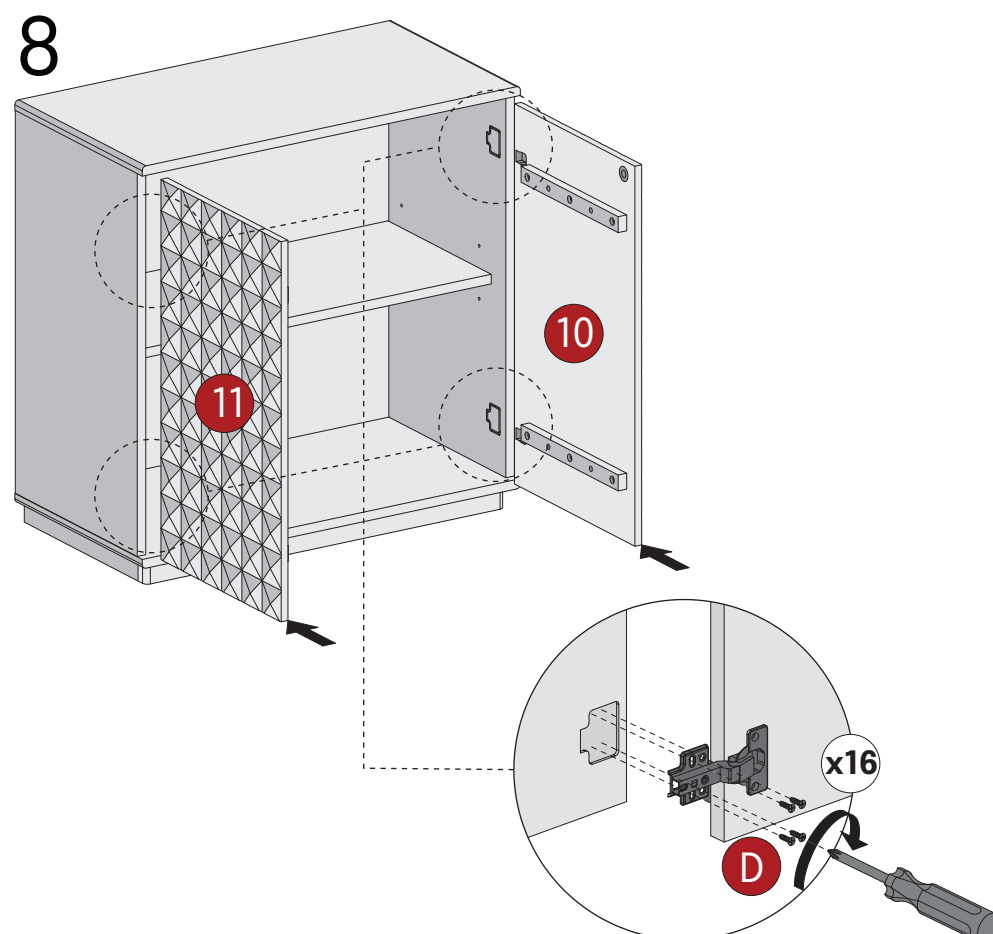 


9

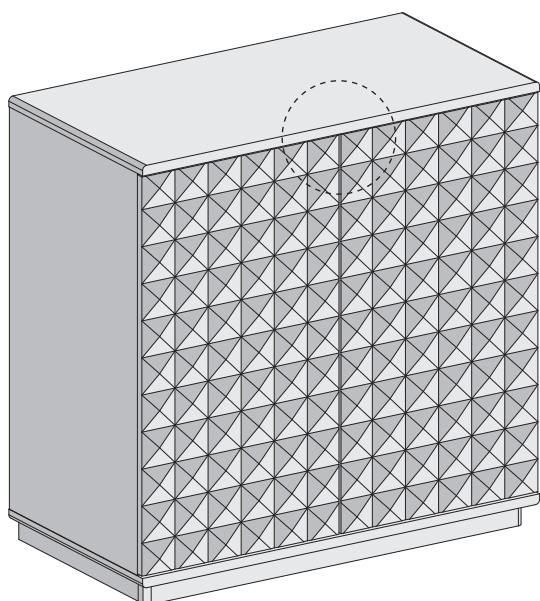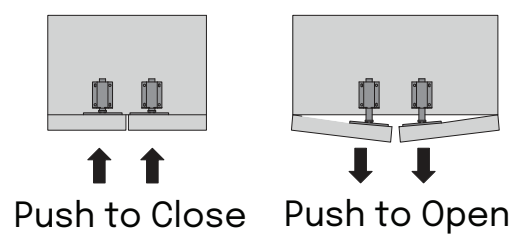  



Regarding the installation and adjustment of the door hinge:

  1. Use the "waist round hole" marked with a triangle to adjust the position of the door panel (ensure that the gap between the door panel and the upper and lower panels is consistent).
2. Use the screw at the back end of the hinge to adjust the front and back position of the door panel (ensure that the front of the door panel is in the same plane as the upper and lower panels).

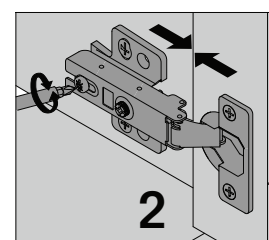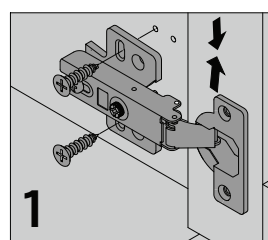

3. Use the screw at the front end of the hinge to adjust the left and right position of the door panel (ensure that the left and right sides of the door panel are in the same plane as the upper and lower panels).

  4. After completing these three steps, secure the other two screws on the hinge.

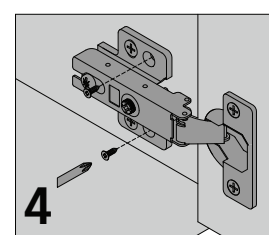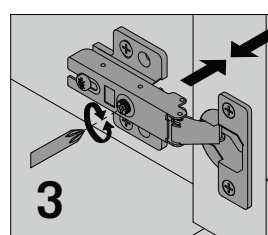

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability - Place the furniture in its final position on a level surface.

If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers - These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

