

STEP 4

- 4.1 Attach Panel (A) to assembled unit and tighten Cam-Lock Nut(3) using screwdriver.
- 4.2 Cover Cam-Lock with Round Sticker (6).
- 4.3 Unfold Bin(7) and slide into the storage.

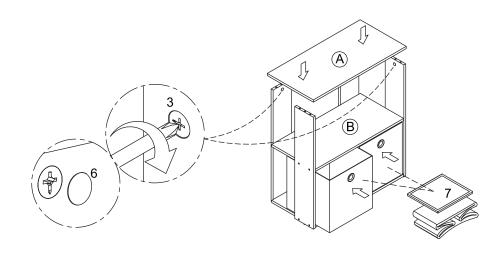

Recommended Maximum Weight

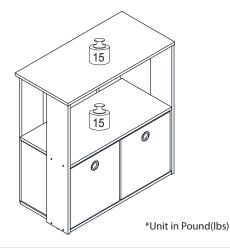

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.


>Put heavier items on lower shelves.

Assembly Instruction








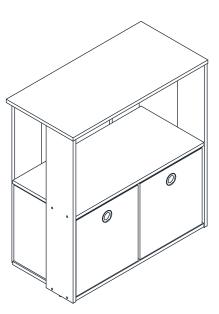

No	Hardware List	Qty
1	M6x20mm Dowel	8pcs
2	M4x32mm Screw	16pcs
3	Cam-Lock Nut	4pcs
4	Cam-Lock Screw	4pcs
5	Nail Leg ()	4pcs
6	Round Sticker	4pcs
7	Non-Wooven Bin	2pcs

No	Parts List		Qty
Α	Top Panel		1pcs
В	Shelf Panel	\Diamond	2pcs
С	Side Leg		2pcs
D	Back Leg	1	2pcs

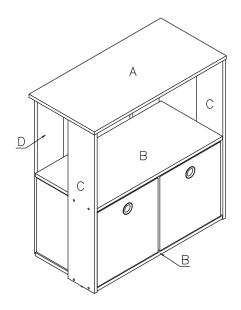


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


STEP 1

- 1.1 Install Dowel(1) & Nail Leg(5) into Panel(C)&(D), as shown.
- 1.2 Insert Cam-Lock Nut(3) into the pre-drilled holes on Panel (C) & (D).
- 1.3 Insert Cam-Lock Screw(4) into the pre-drilled holes on Panel(A).

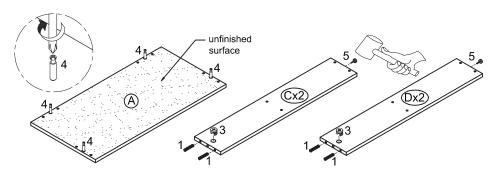

STEP 2

Attach Panel(C) to Panel(B) with Screw(2).

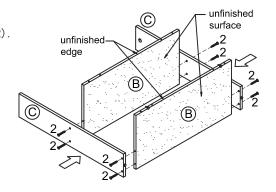

STEP 3

Attach Panel (D) to assembled unit with Screw (2).

