


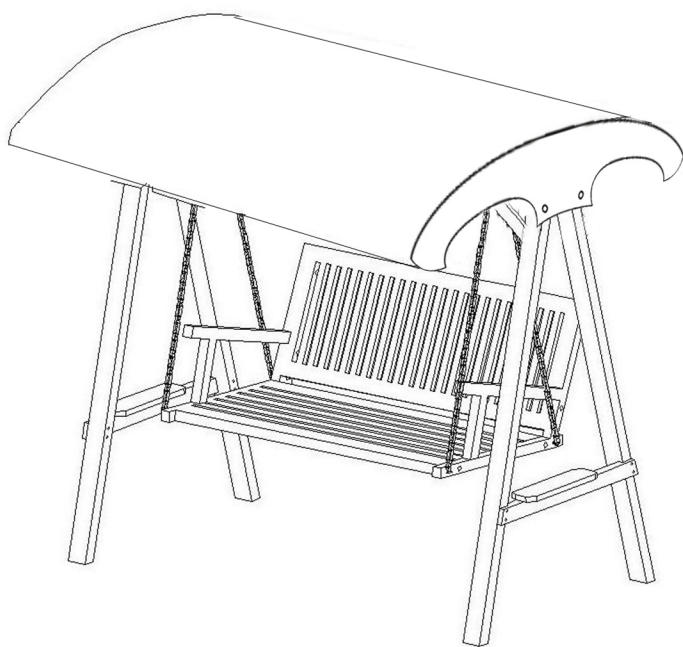

Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS

 
Part List



A1 2PCS



A2 2PCS



B 2PCS



C 2PCS



D 1PC



E1 2PCS



 
E2 2PCS




F 4PCS



G 2PCS



H 1PC

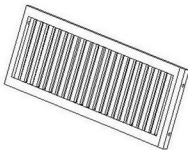

I 1PC



J 2PCS



K 1PC



M 27PCS



P M10*160MM 2PCS



Q M10*140MM 2PCS



R M10*100MM 8PCS



R1 M10*105MM 8PCS



S M10*130MM 2PCS



T M10*110MM 4PCS



U M6*30MM 4PCS



81PCS



W 6PCS



X M10*90MM 2PCS




Y M10*50MM 4PCS




Z M10*120MM 4PCS

Assembly Instructions

STEP 1

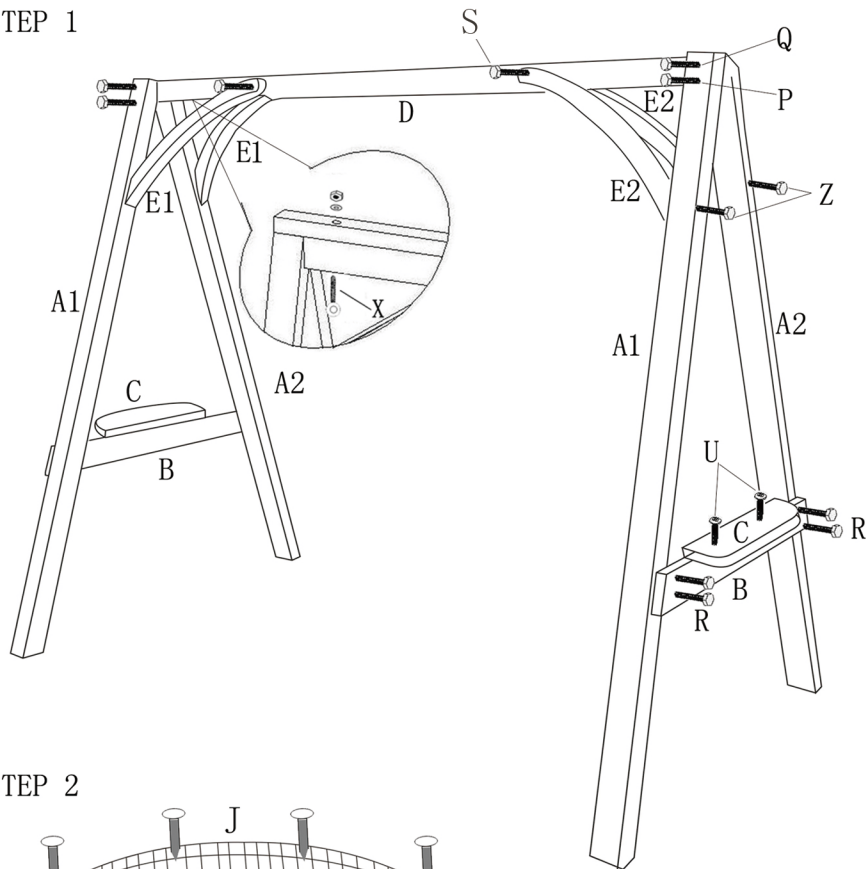


STEP 2

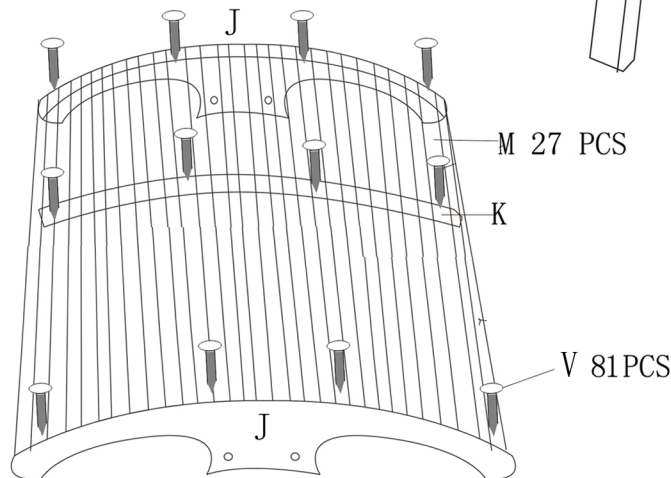


Assembly Instructions

STEP 3

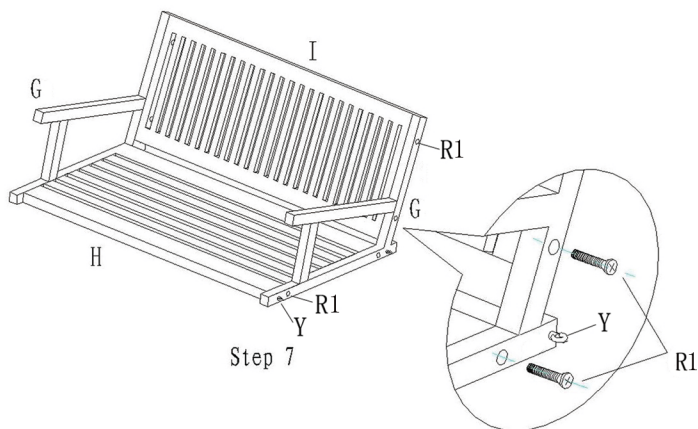

STEP 4

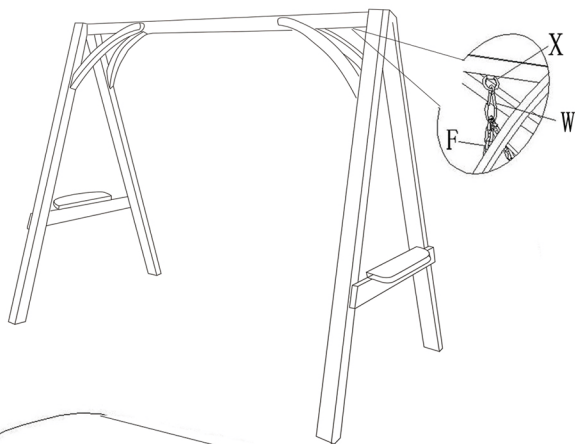

STEP 5

