 


wayfair® | LED Gimbal Recessed Downlight



The LED Gimbal Recessed Downlight features a 30° adjustable gimbal with 360° rotation for precise directional lighting. Its low-profile, canless design installs directly into the ceiling without a traditional recessed housing. The included metal junction box provides a convenient, code-compliant solution for both new construction and remodel installations.


Application: Ideal for living rooms, kitchens, bedrooms, offices, schools, conference rooms, hospitals, and other residential and commercial spaces.

SPECIFICATIONS


Product Size	4" Downlight	6" Downlight
Wattage	9W	12W
Lumens	720 LM	960 LM
Rated Input Voltage	120 V 60Hz AC	
Light Source	COB	
CCT	CCT Selectable: 2700K/3500K/4000K/5000K/6000K	
Finish	White	
Beam Angle	30° Tilting/ 360° Rotation	
Dimming	Triac Dimmable	
Lumen Efficacy	80 Lm/W	
Color Rendering Index	Ra>80	
Power Factor	0.95	
Operating Temperature	-4 ° F ~ +105 ° F / -15 ° C ~ 40 ° C	
Storage Temperature	-4 ° F ~ +105 ° F / -15 ° C ~ +40 ° C	
Ingress Protection	IP 40, Damp Rated	
Rated Life	Lumen Maintenance over 70% @ 50,000+ Hours	
Warranty	5 Years Limited	
Certification	ETL	

FEATURES

• External Driver Box

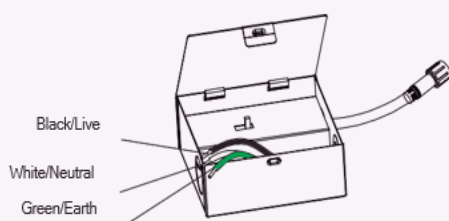


• CCT Selectable

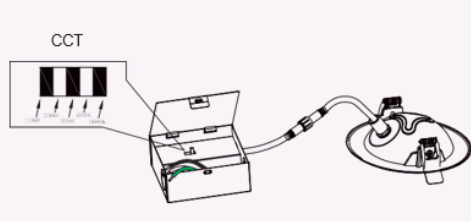



LED Gimbal Recessed Downlight

PRODUCT DIMENSIONS

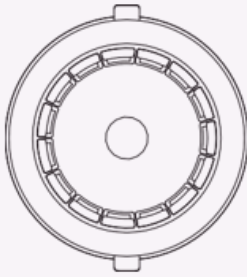

Front View




Side View

Product	4" Downlight	6" Downlight
L1	Ø5.12"	Ø6.81"
L2	Ø4.33"	Ø5.98"
L3	1.61"	1.61"

INSTALLATION GUIDE

Before installation, cut the ceiling opening to the required size

 Ceiling




Hole Cut Size

4" DOWNLIGHT: Ø 4.29" (109mm)


6" DOWNLIGHT: Ø 5.87" (149mm)

Follow the steps below to complete the installation.

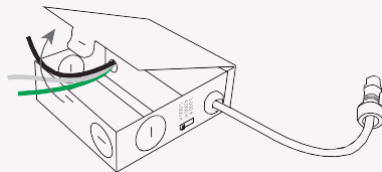


1. Disconnect the Fixture from the J-Box.

Ensure the fixture is disconnected from the J-Box before installation. Open the J-Box.

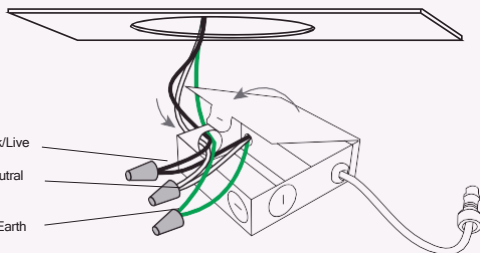


2. Connect the Wires.

Connect the wires according to the wiring diagram shown in Step 2. Secure all wire connections using approved wire nuts to ensure a proper and secure connection. Close the J-Box after completing the wiring.

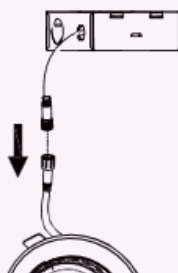


3. Install the J-Box and Connect the Fixture.

Insert the J-Box into the ceiling cutout, leaving the connection cable accessible outside the opening. Connect the fixture to the J-Box by inserting the cable connector and securing it with the locking cap, as shown in Step 3.

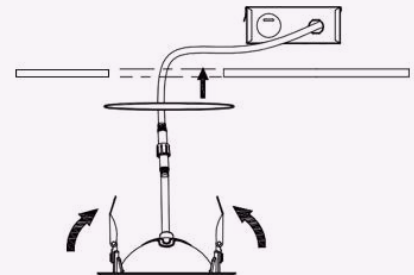

4. Install the Fixture.

Push the spring-loaded clips upward and insert the fixture into the ceiling mounting opening. Release the clips. The spring clips will secure the fixture firmly against the ceiling.

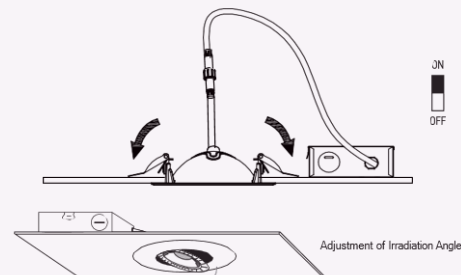

5. Test the Fixture.

After installation is complete, restore power and verify that the fixture operates properly.