




Assembly&Instruction Manual

SPU: SPC000092

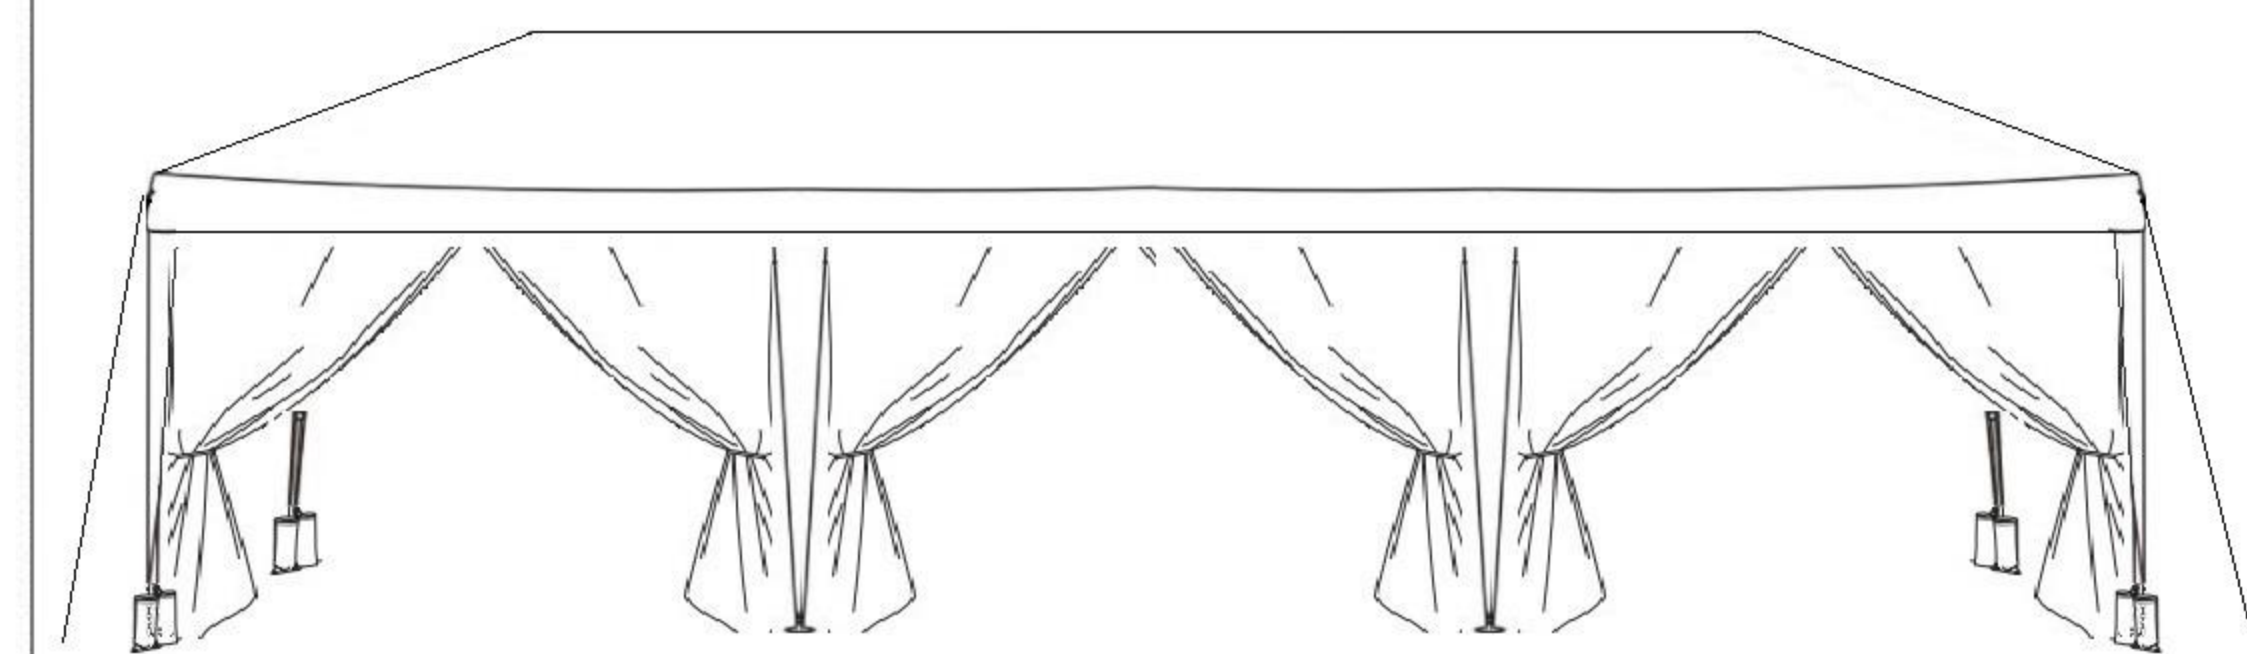

10FTX30FT POP UP CANOPY WITH SIDEWALLS

MADE IN CHINA

Save this manual for future reference

PRECAUTIONS



1. Please unpack the product with care and do not scratch with a knife at will, to avoid damage of tent canopy.
2. Take out the tent from package box carefully, and put it on a dry and flat surface (sand, grass or hard surface).
3. Check if X bar screws are fastened before using the tent.

4. For any bending or deformation of the tent bracket, stop using it immediately and make repairing. Make sure fault is removed before continuing with operation.
5. It is suggested to assemble the tent by 2-3 adults to avoid damaging the bracket.

**Do not try to assemble the tent alone, to avoid any unnecessary pressure to legs. Tents will be damaged if they are not unfolded at the same time.**

6. Avoid hurting your fingers by jamming when assembling/disassembling the tent.
7. Pay special attention to wind prevention when using single tent. When guarder leaves tent temporarily, the tent leg should be descended to the first node, which means, retracting the inner leg into outer leg, in order to effectively prevent damage caused by wind.
8. When multiple tents are used in parallel, the leg pipes of two adjacent tents should be bundled through ribbon or rope, in order to integrate them and ensure higher resistance to wind.
9. Do not bind leg pipes of two tents with adhesive tape, otherwise, the residues of adhesive tape may block the vertical sliding of sleeve on leg pipe.

01

10. Fix the tent via windproof rope. Fix one end of windproof rope on the tent, connect the other end to the stake, and insert the stake at both ends of balanced tent at an angle of 45°.
- When tent is placed on the solid surface, fix the 4 foot pipes with bricks or sand bags, in order to fix the tent.
11. Do not hang any heavy objects on the tent or climb to the top of tent while using the tent, otherwise, severe injury and death may occur.
12. When the tent is used for a long period, remove dust on it via warm and hot soapy water, however, it is not allowed to use a brush to avoid damaging its water-proof layer. (After finishing cleaning, do not store the tent immediately, but put it in dry places for drying. Highlycorrosive cleaning agent is not allowed).
13. Do not use a candle, match or open fire of any form inside or near the tent, for the tent is not fireproof.
14. **Do not assemble the tent in rainy tent can be damaged, windy or snowy days, otherwise, tent can be damaged.** Buyers shall bear the responsibilities, if the tent is erected and damaged in the following weathers.




15. If the tent will not be used for a long period, fold and store it in a dry place. (Do not pack your tent until it is dried completely)
16. Put the folded tent bracket horizontally falling, to avoid personal injury due to falling.
17. Slight color deviation is normal due to the coating difference at the back of canopy and wall.


02

PACKING INCLUDES


Canopy Frame×1pc

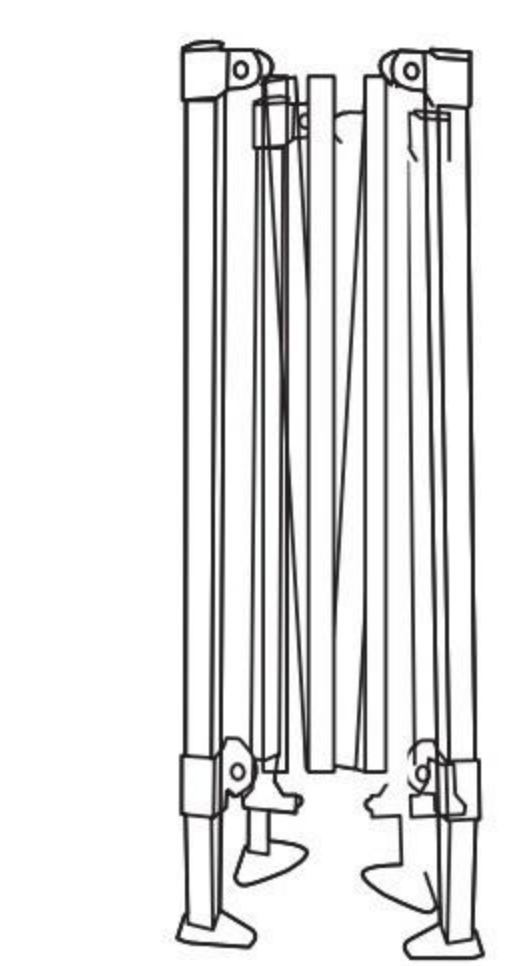


Canopy Top×1pc

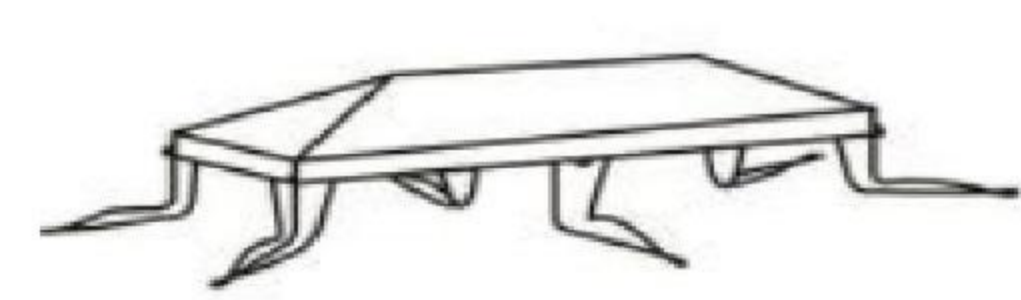


Carry Bag X 1pc

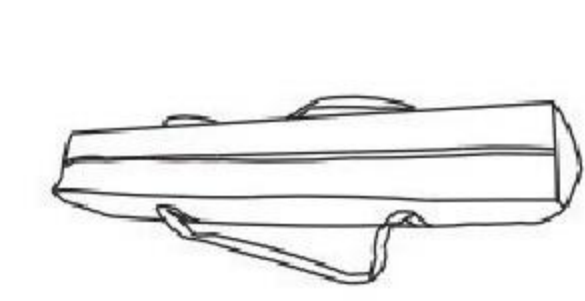


Sandbag×4pcs

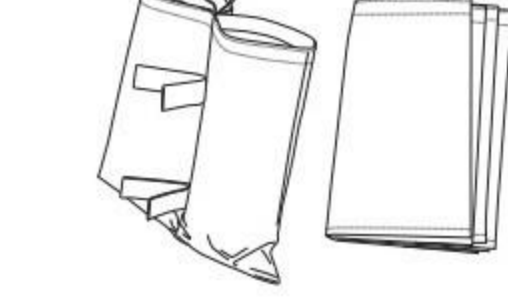


Tent Stake×16pcs

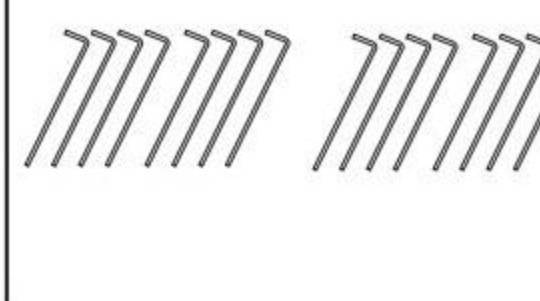


Rope ×8pcs

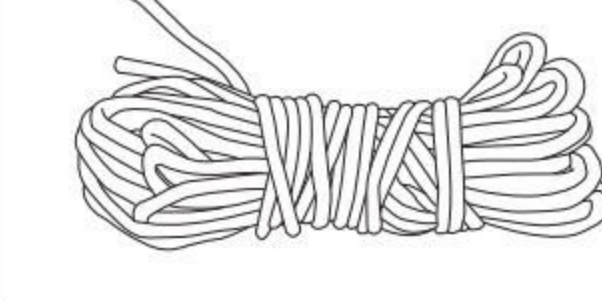

Sidewall with Zipper×3pcs

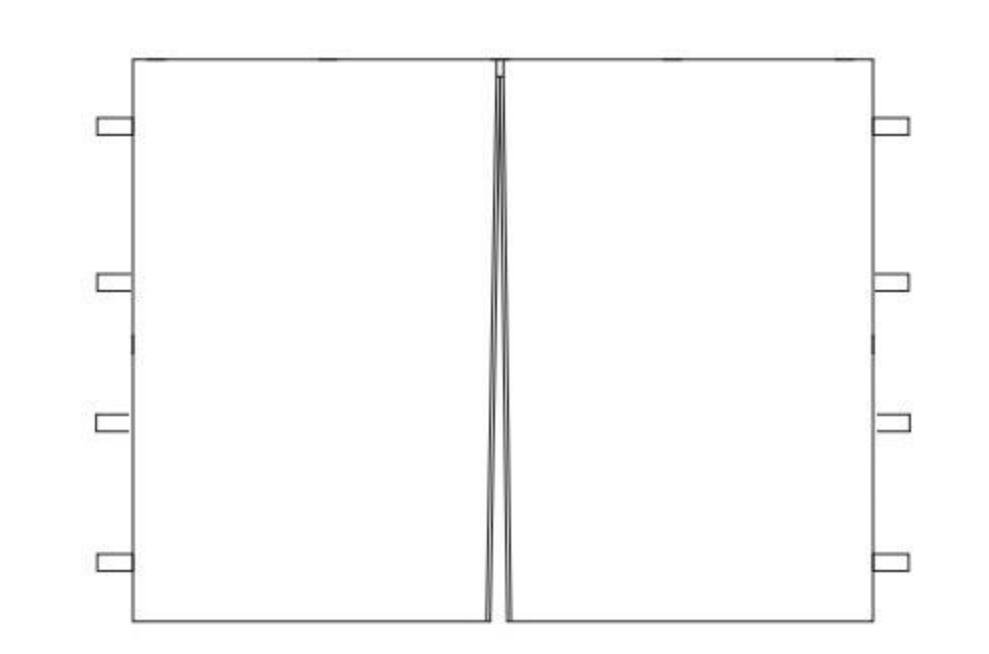

Sidewall with Window ×5pcs


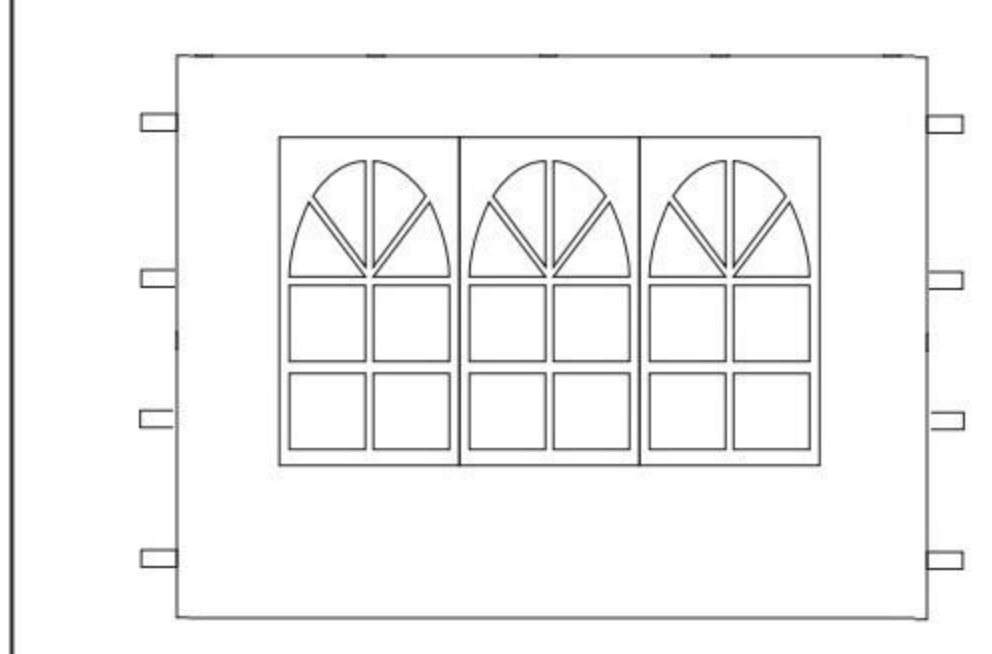


03

Setting Up the Canopy


1 . OPENING THE CANOPY FRAME

With a person on each end, lift and partially pull the canopy frame apart.

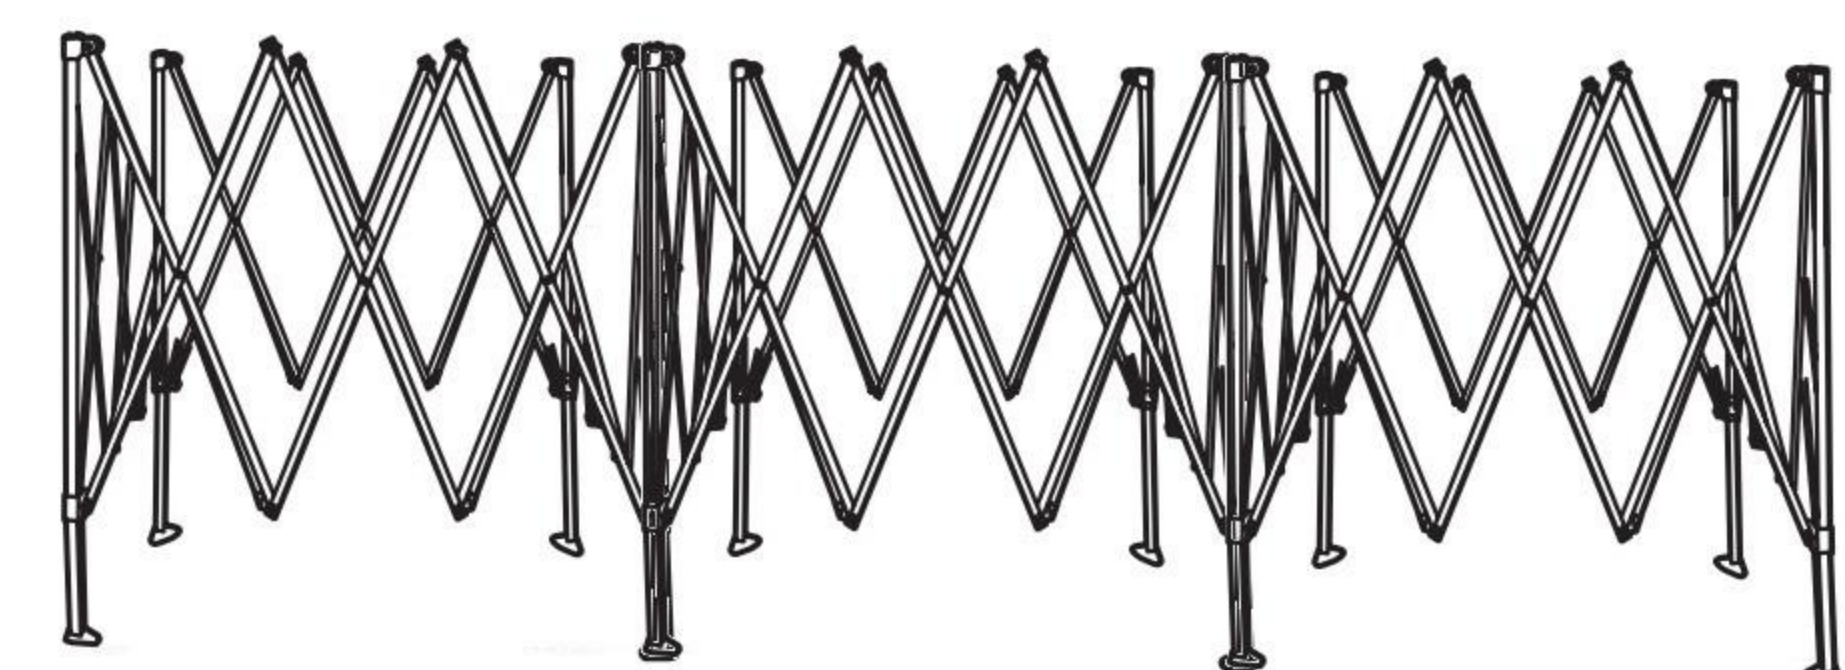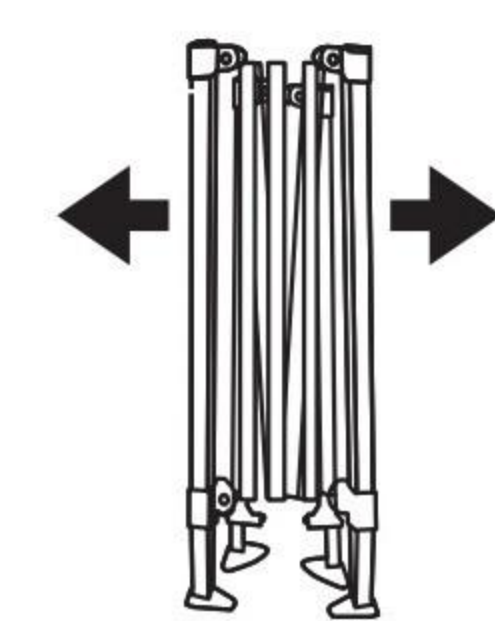

04



2. Place one hand on the upper frame and use the other hand to push the hub straight up until it clicks into the pole.

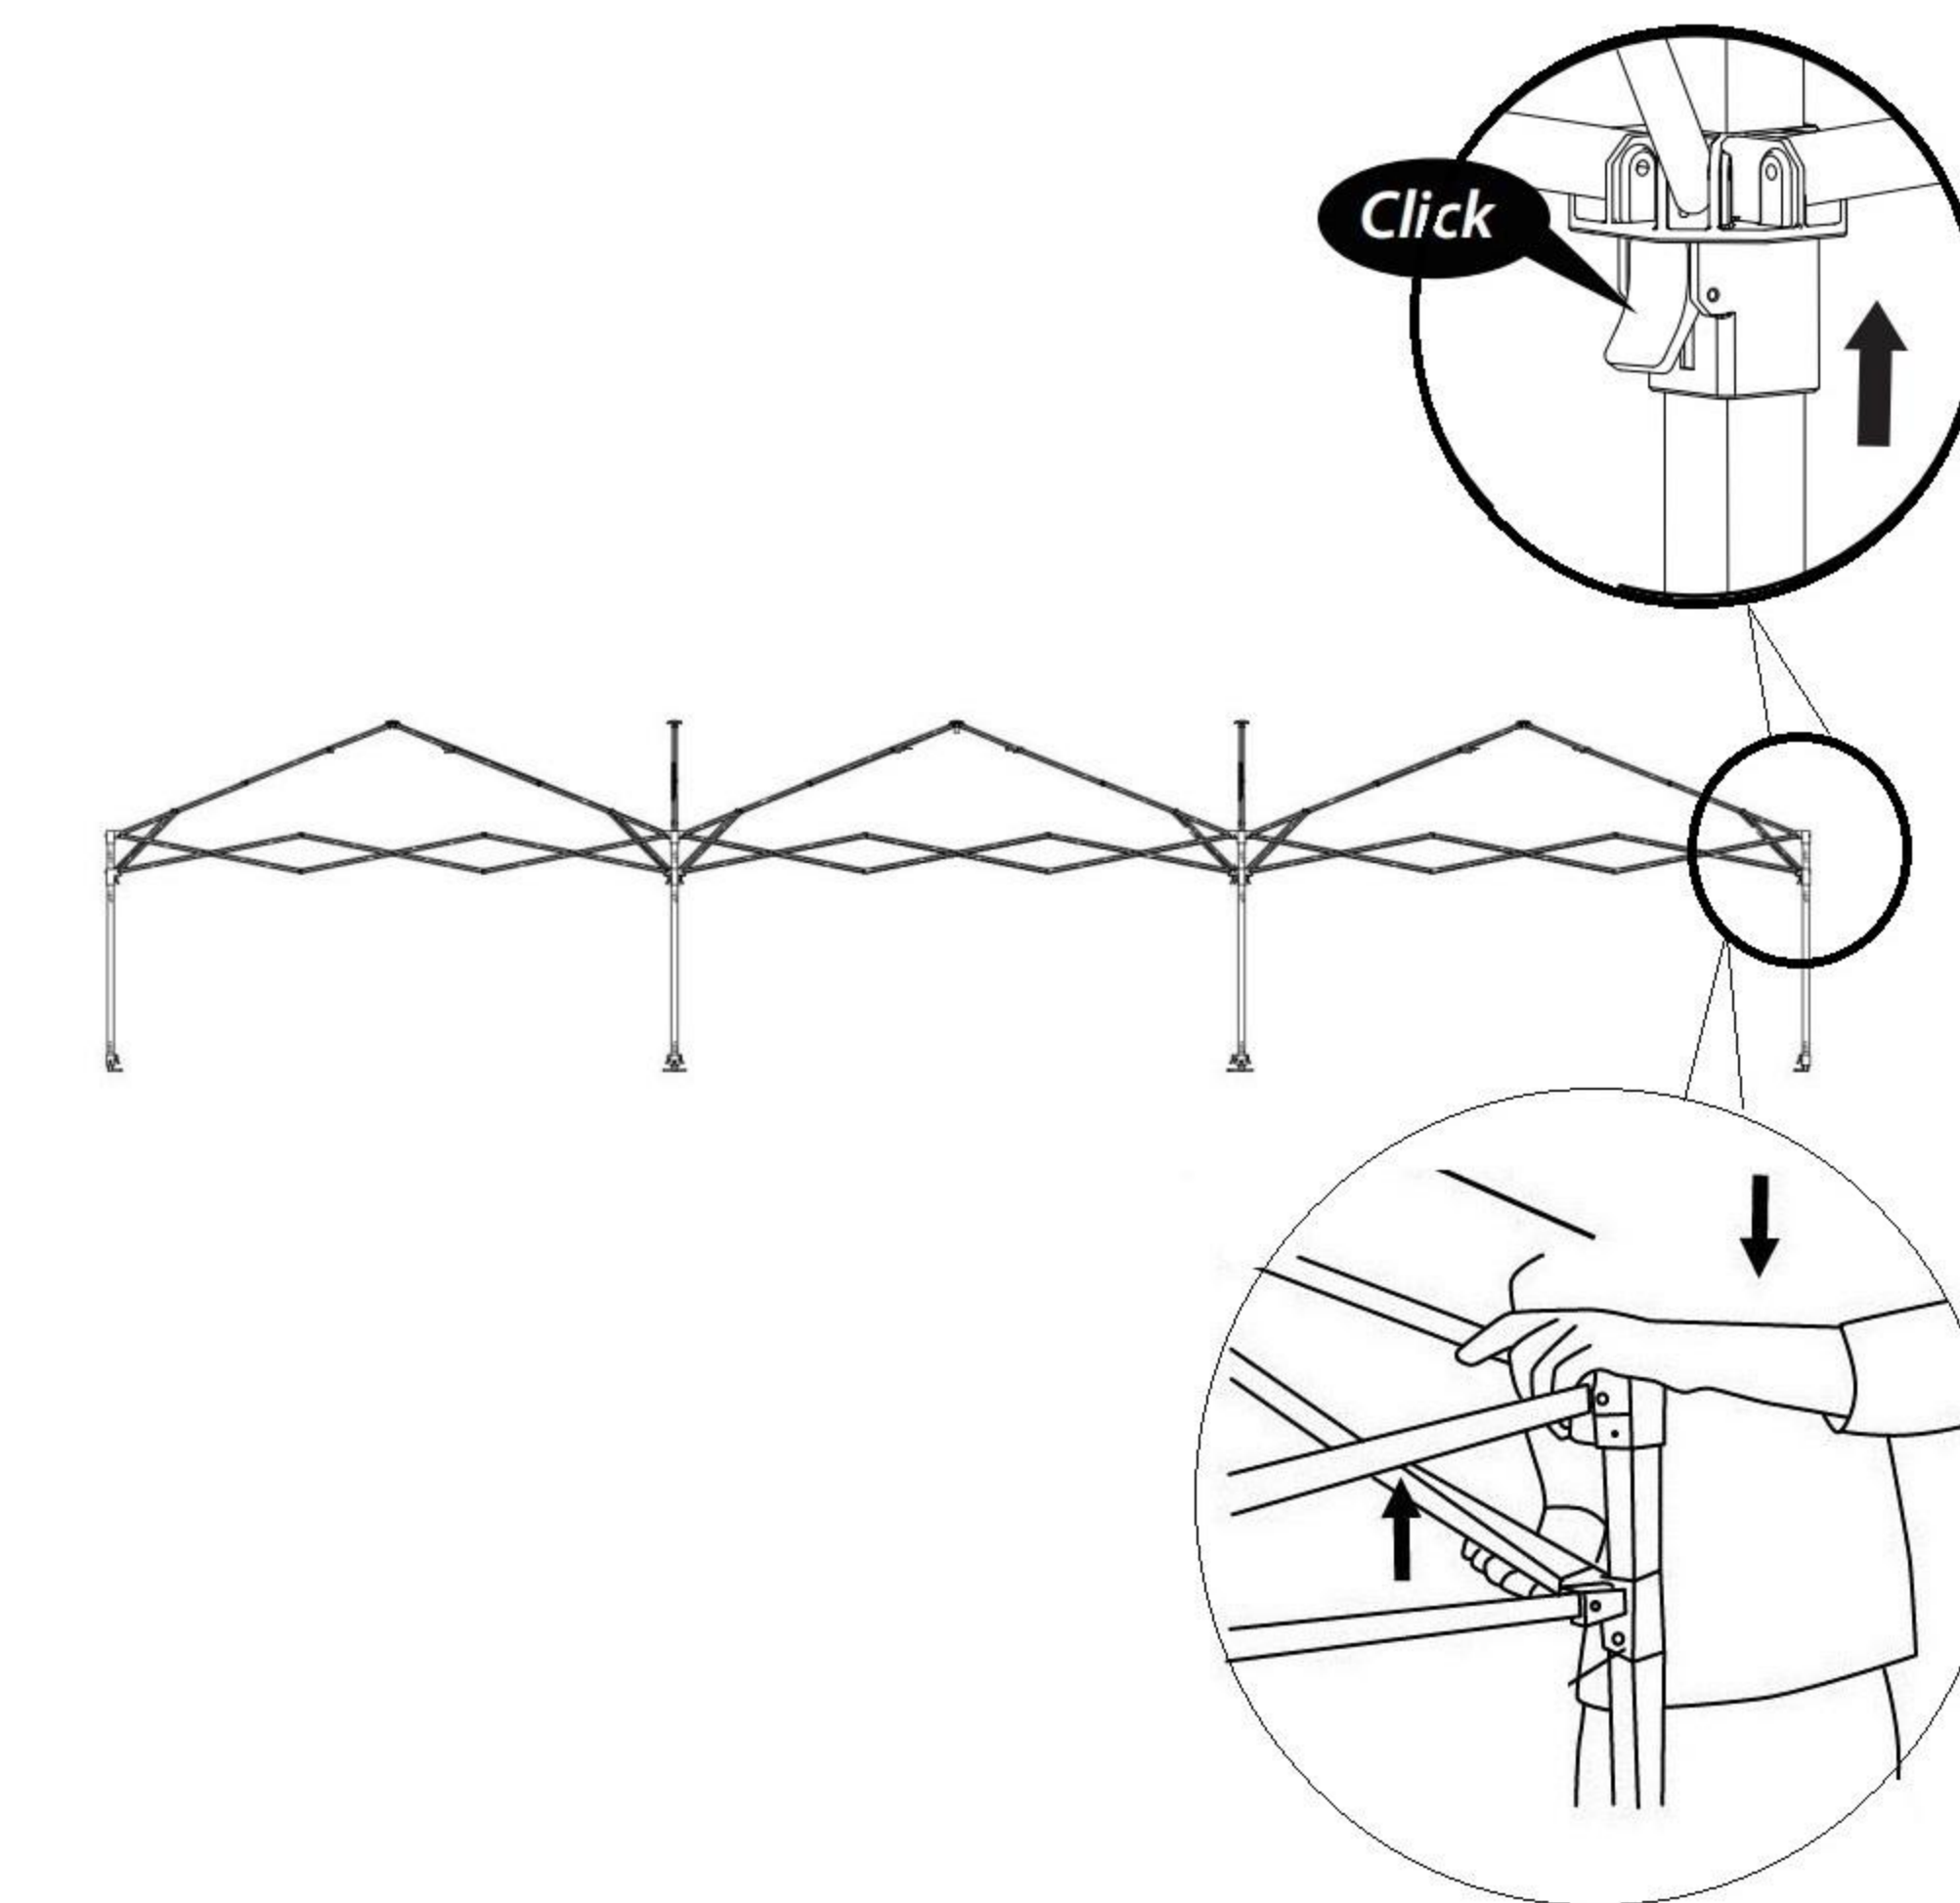

05

ATTACHING THE CANOPY TOP


3.Unfold the canopy top and place on top of the canopy frame. Secure the canopy top to the canopy frame using the Velcro connections.

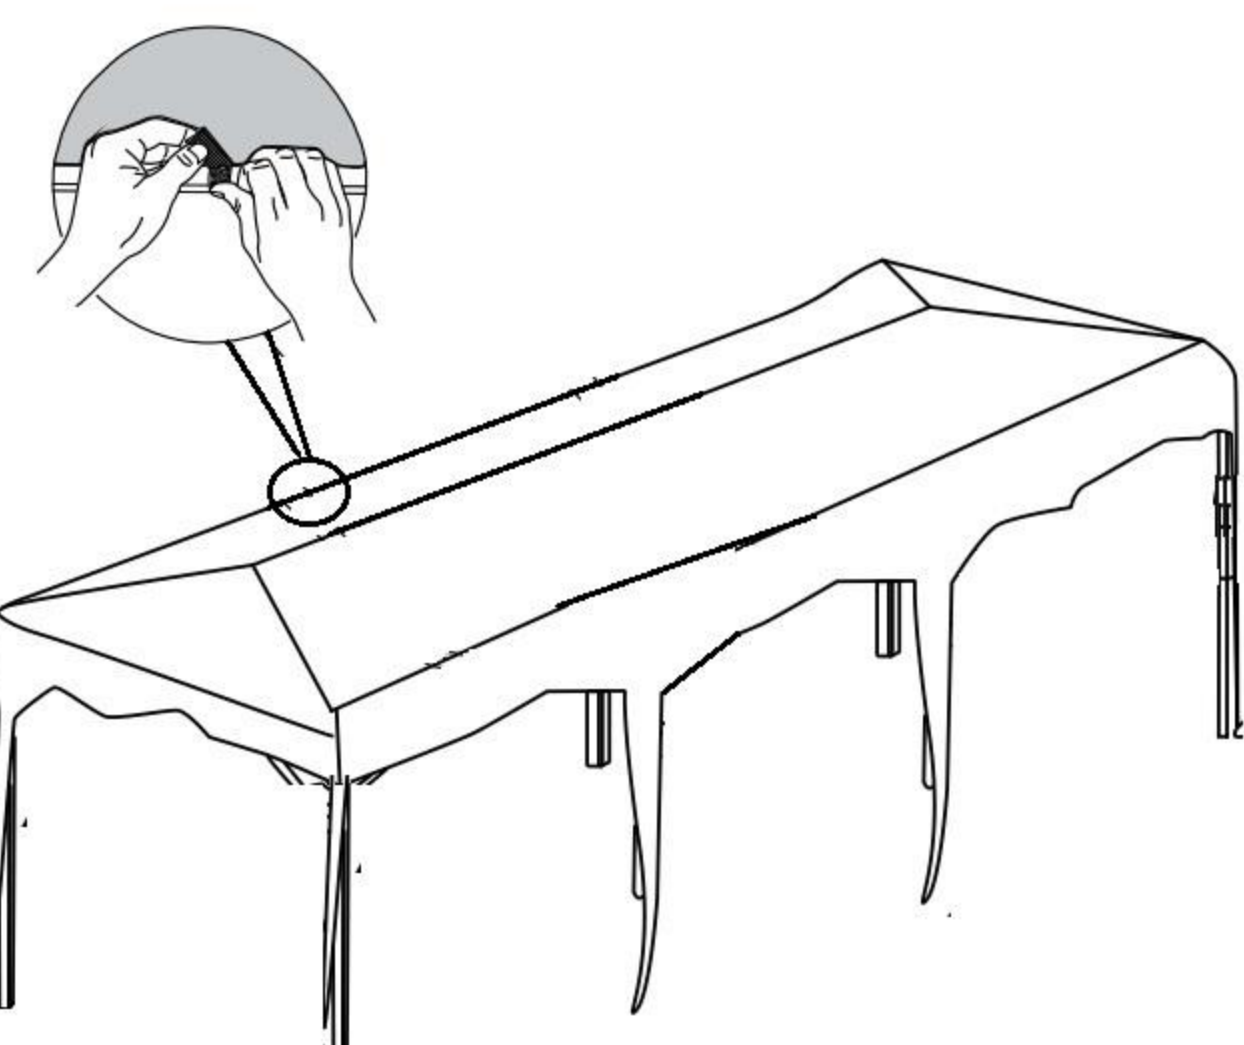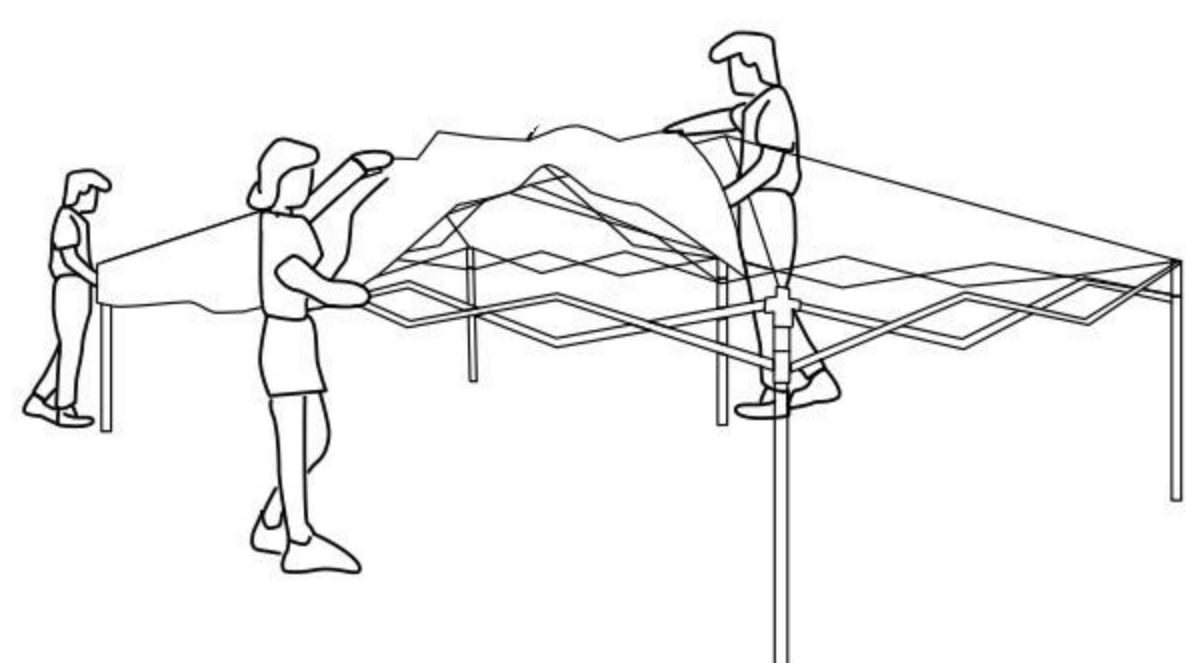


06

ADJUSTING THE CANOPY HEIGHT

4. Press the red button on each leg and raise or lower to adjust the canopy height.


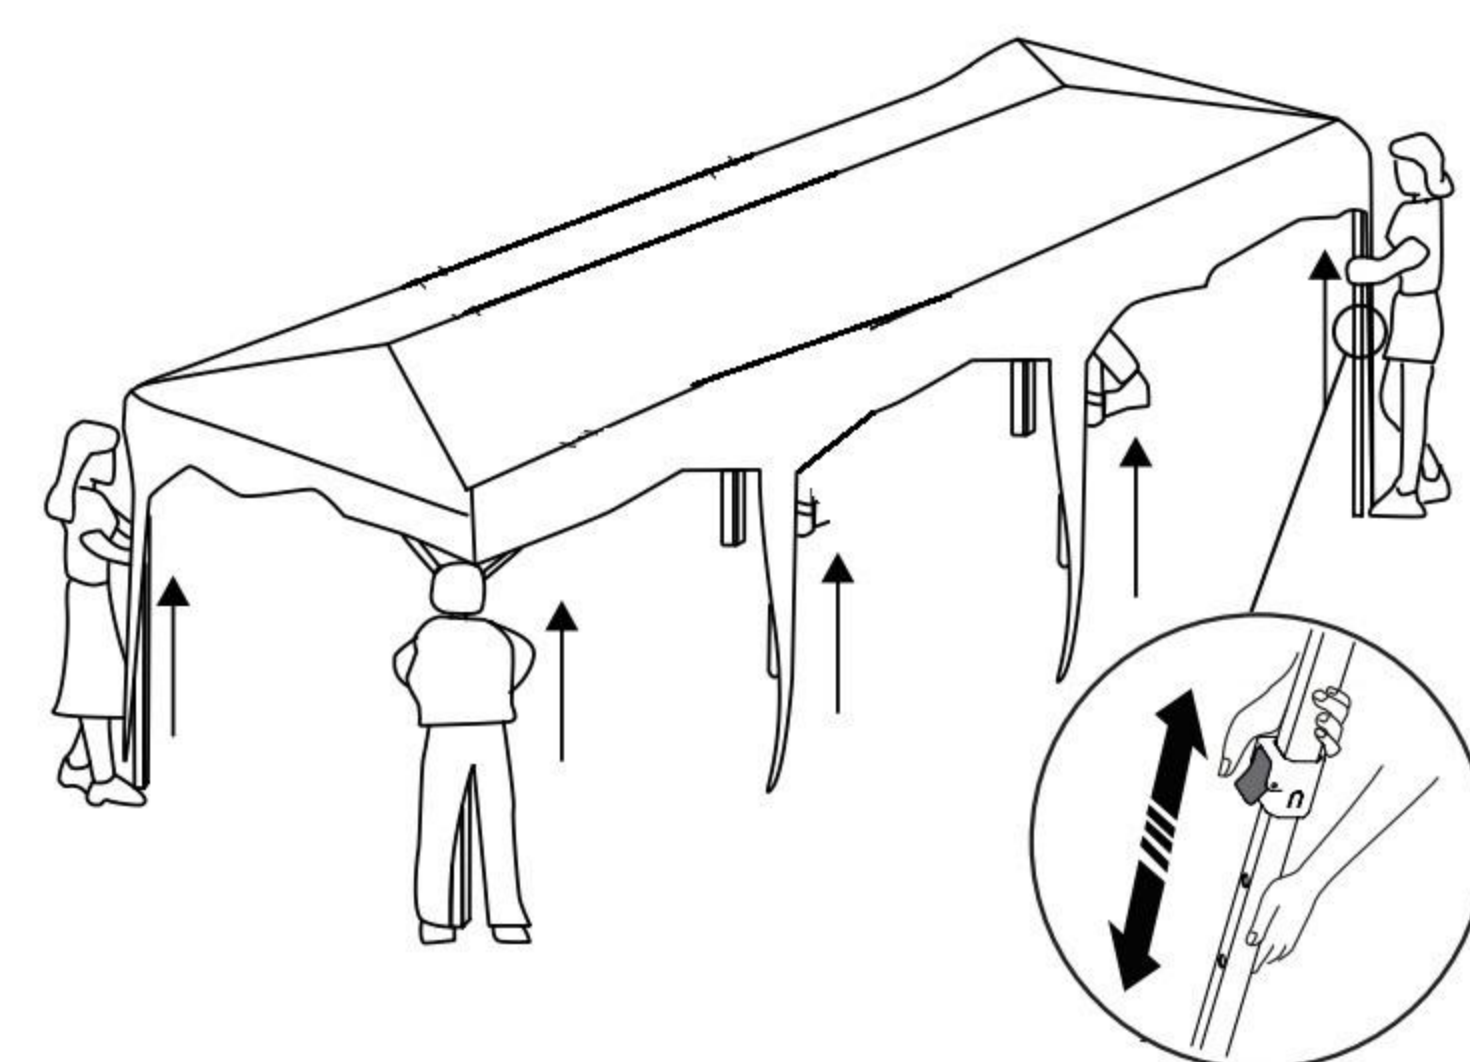


5. Securing the canopy in place

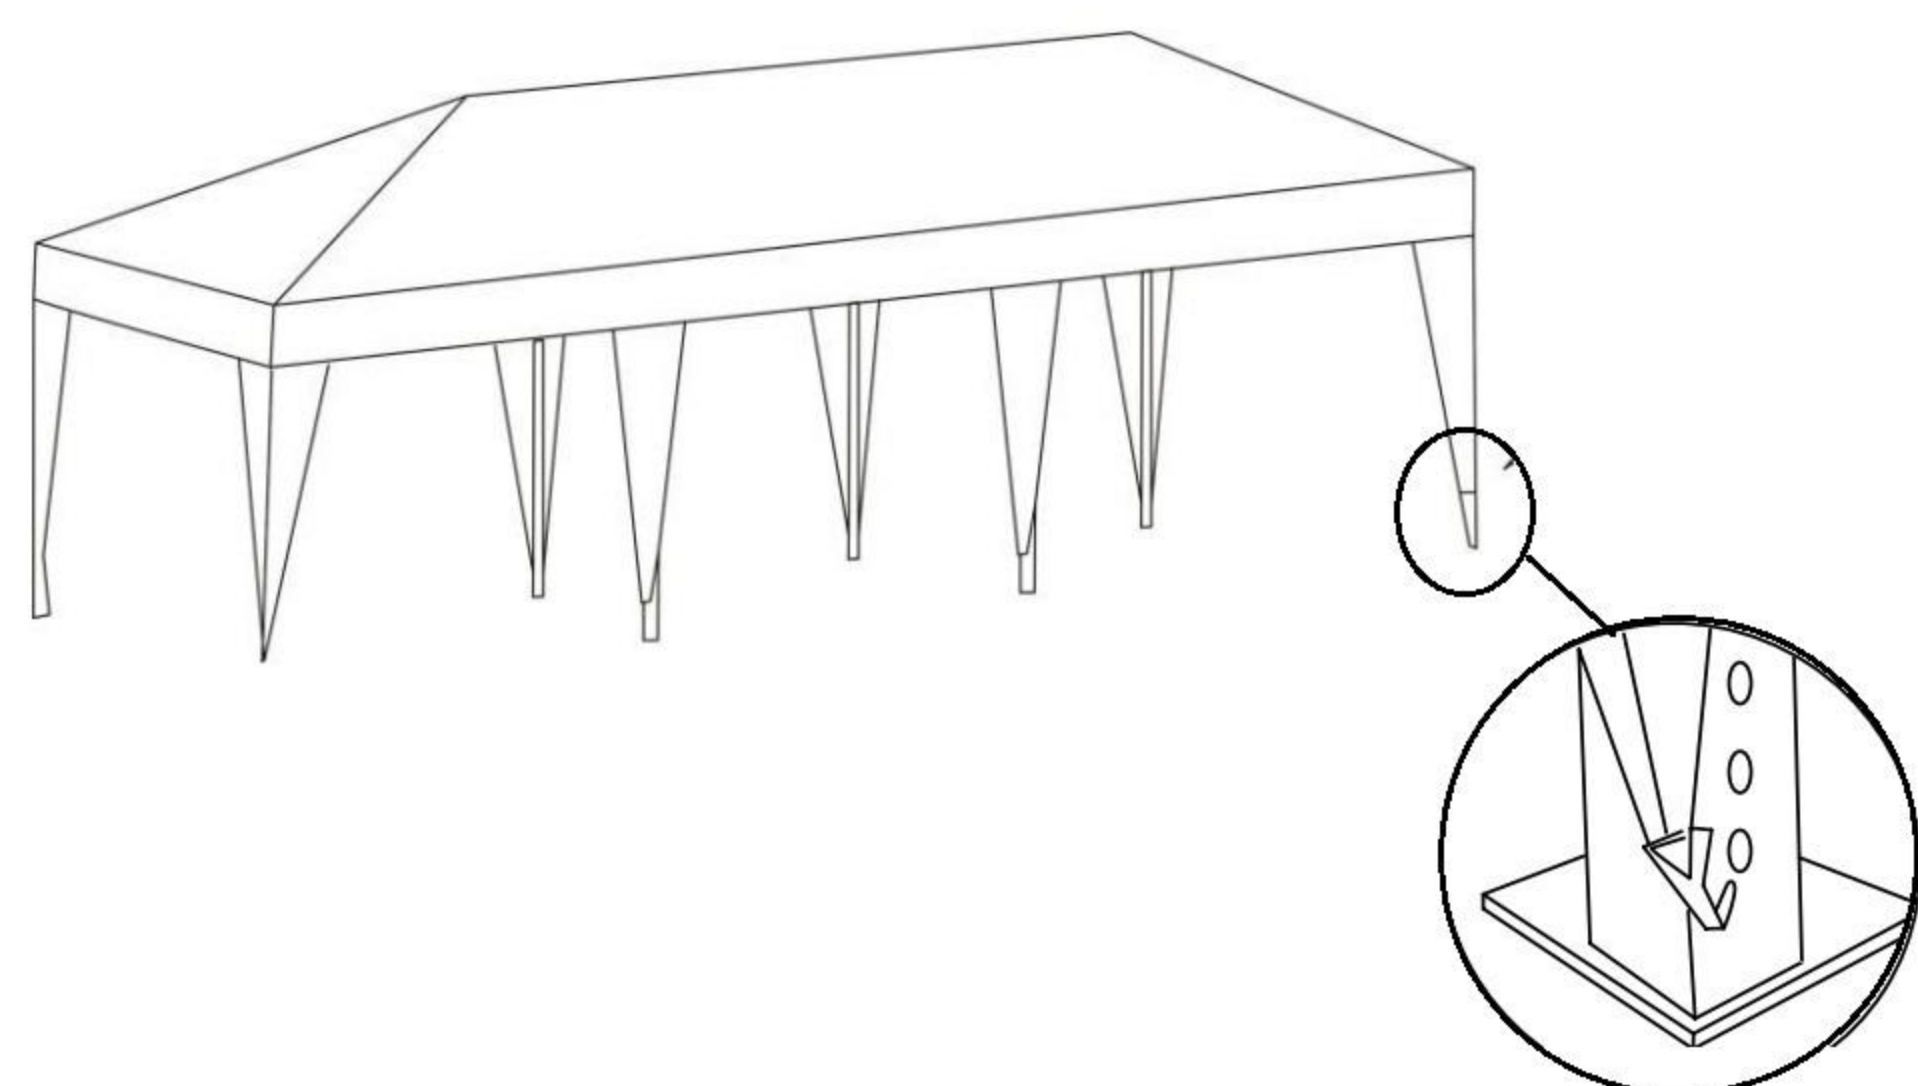


07

6.Attach the sidewall

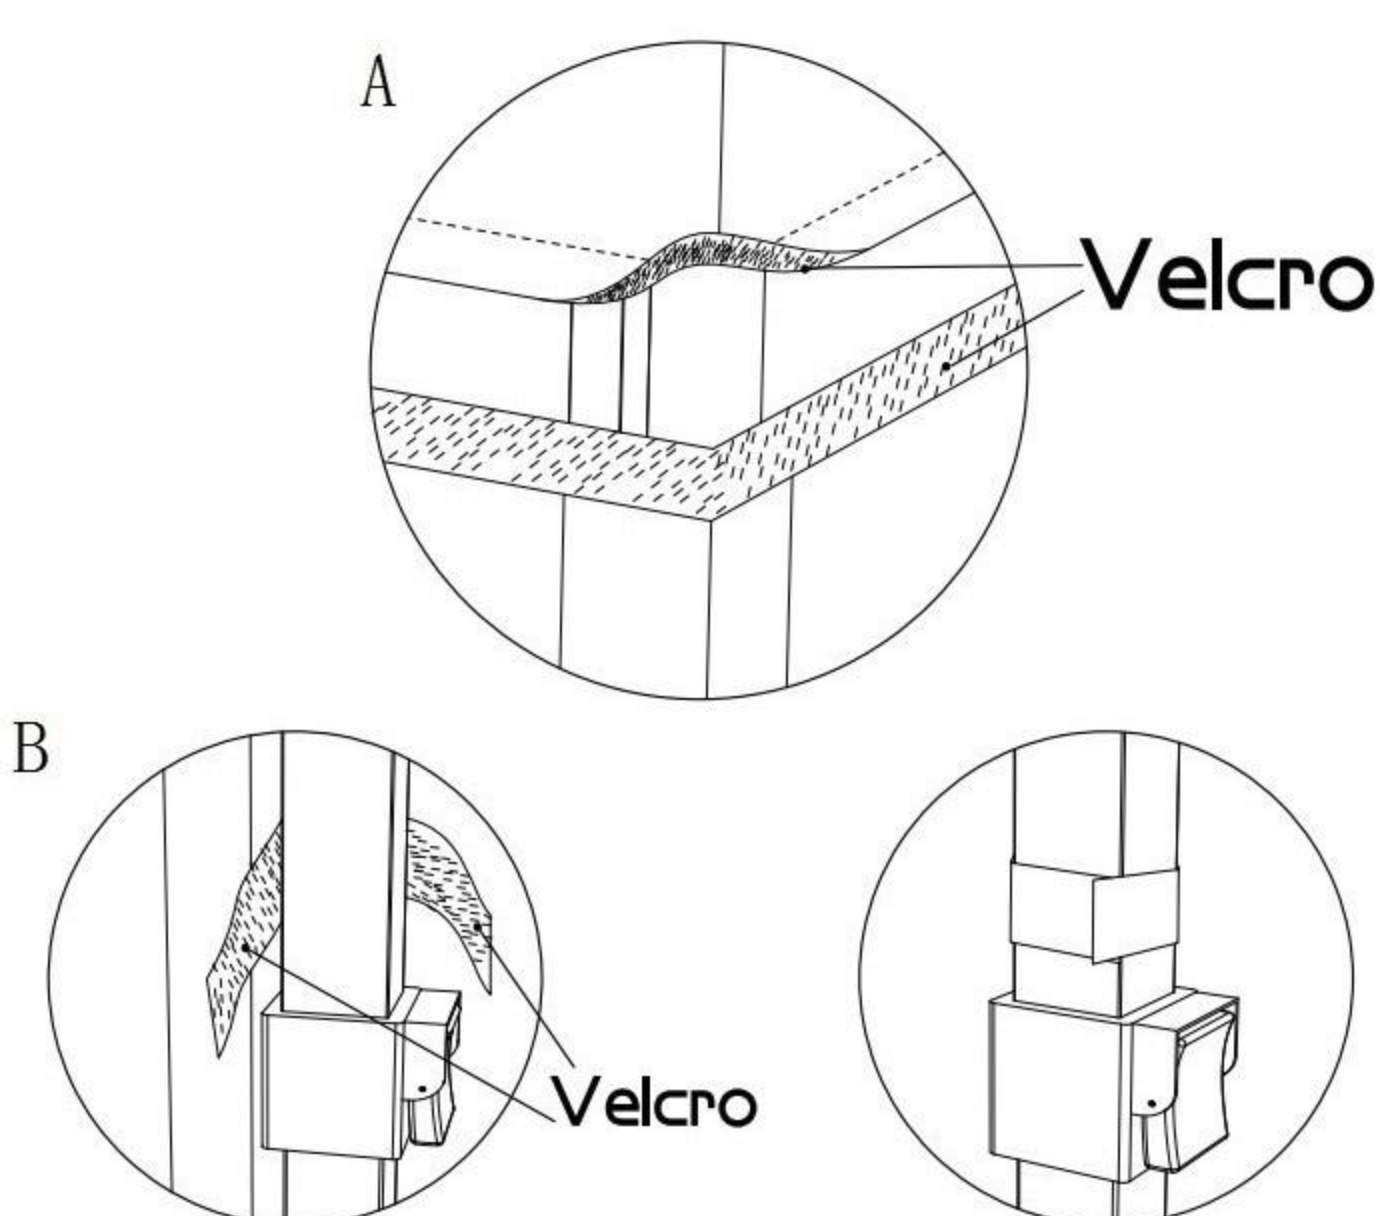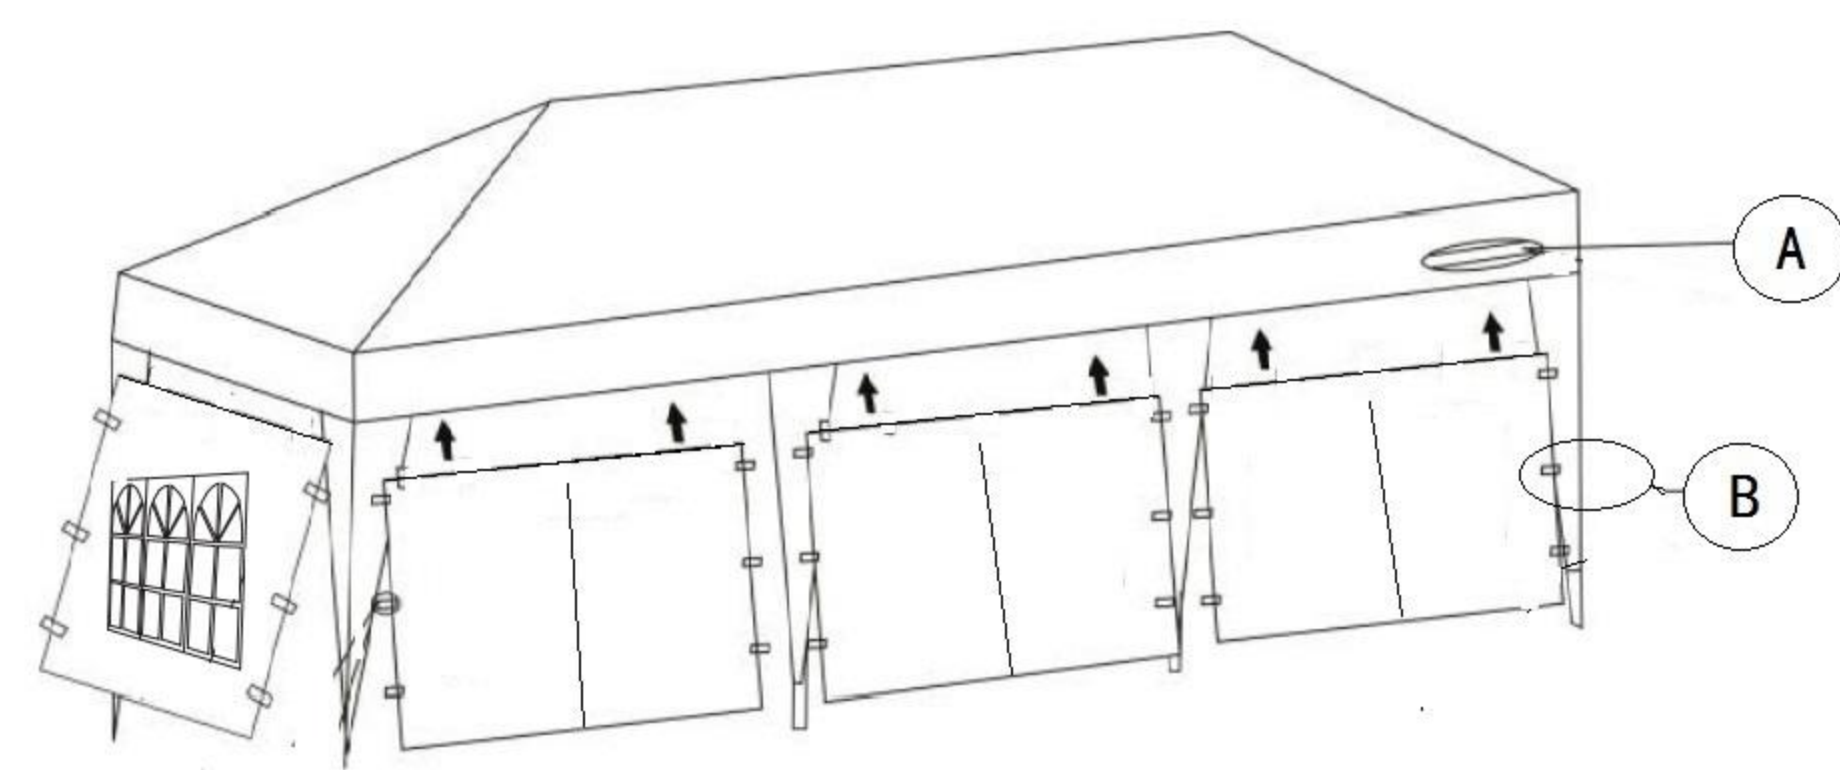


08

- 7.Insert a stake into the foot of each canopy leg. Measure out from the each leg to a proper distance and secure eight stakes to the ground. Tie the pre-attached ropes to the stakes in the ground. Ensure the rope has the proper tension Fill up the sandbags and fix them to each leg

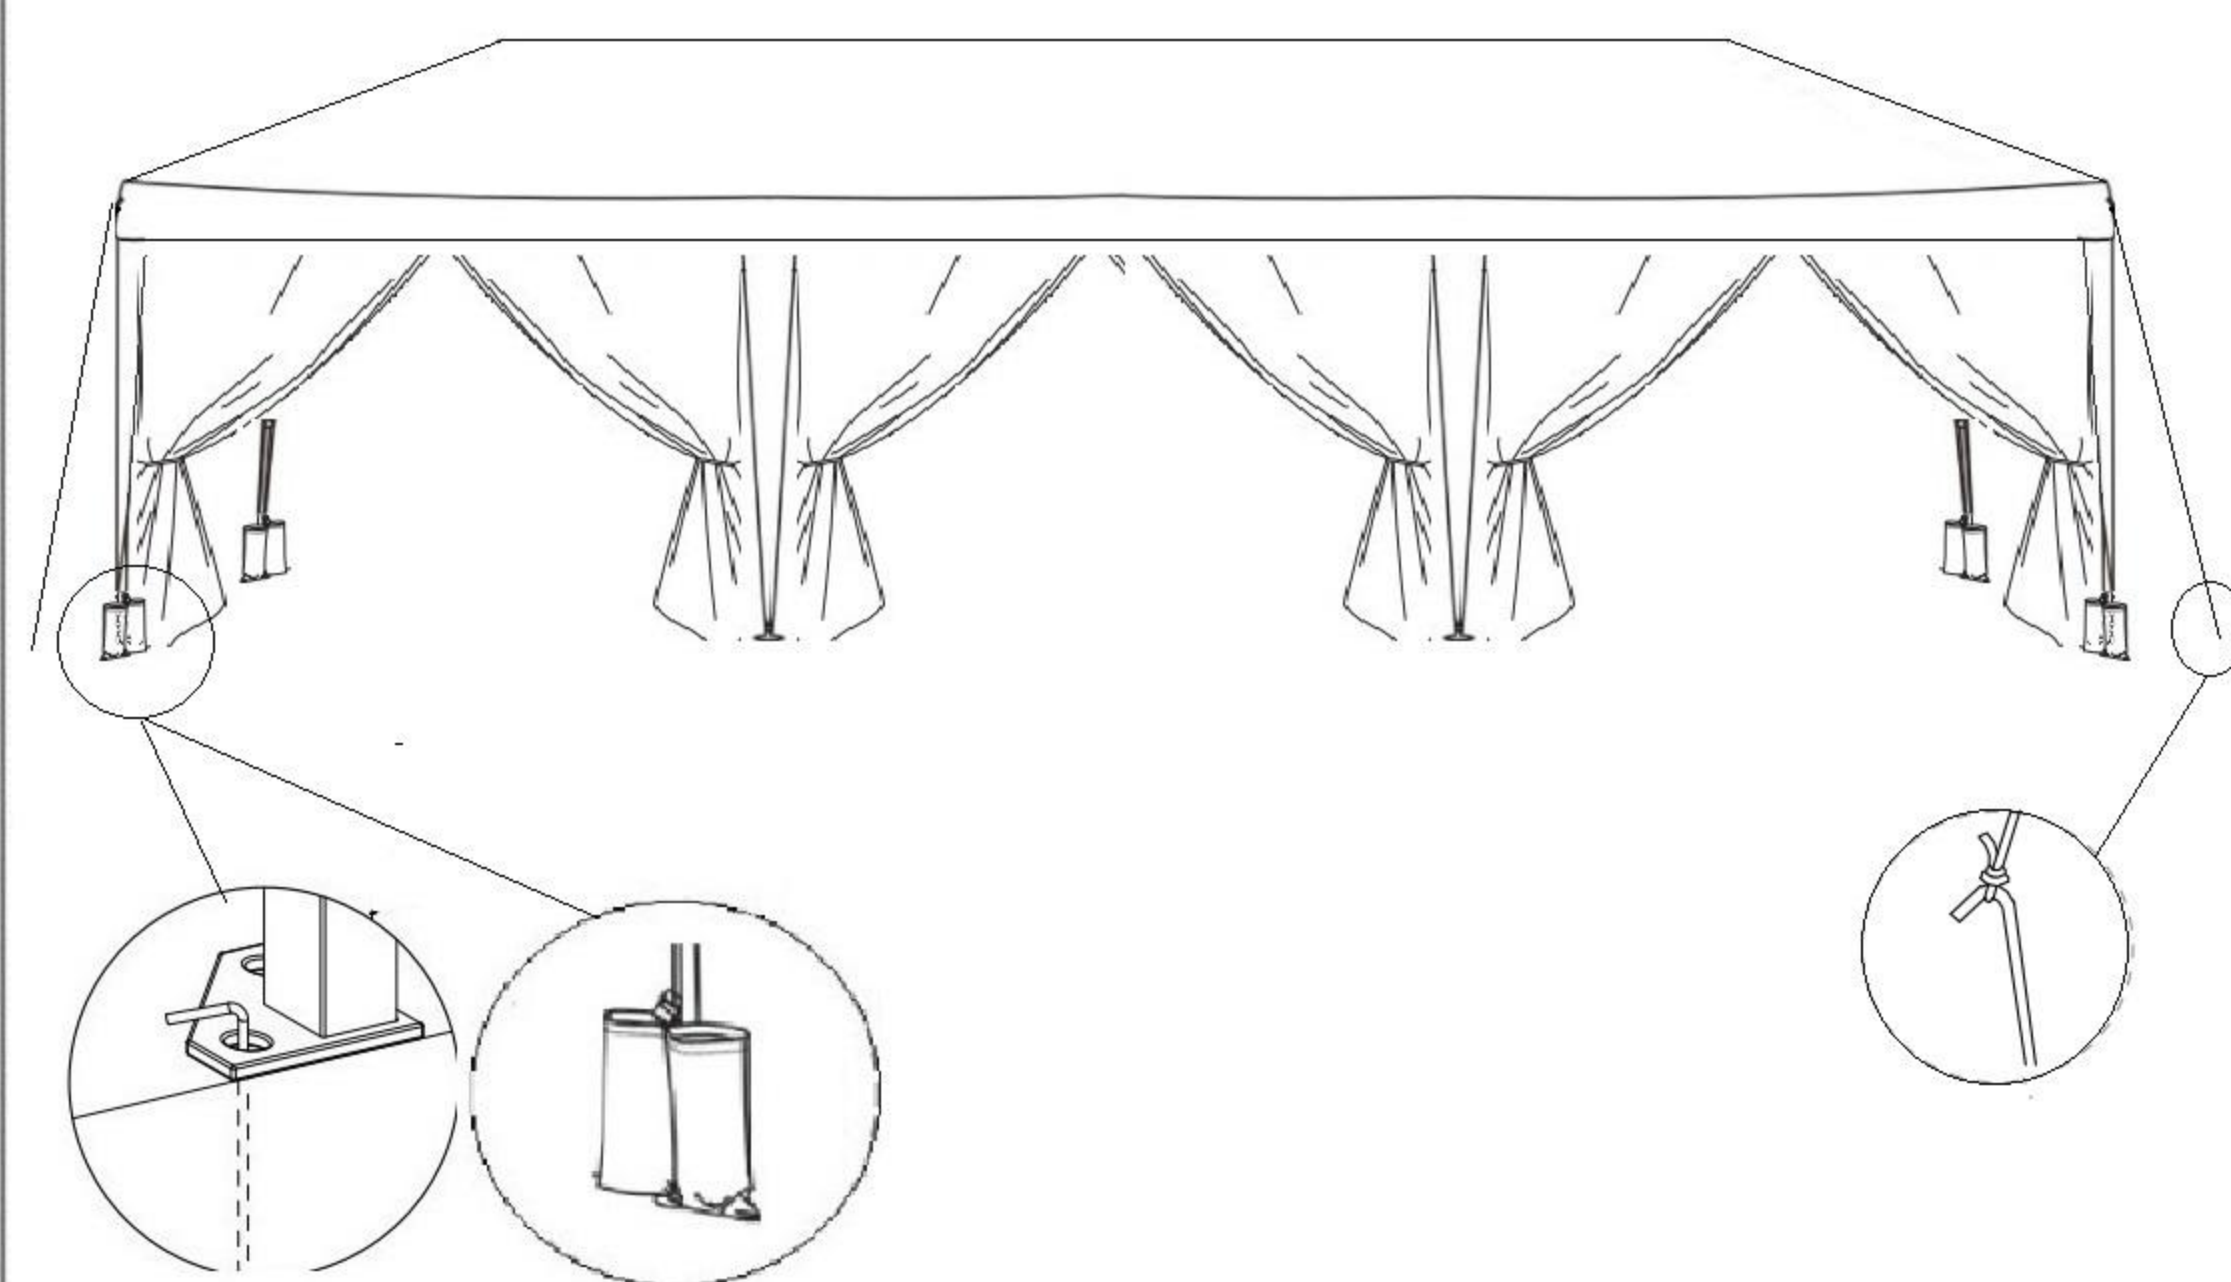


09


TAKE DOWN THE CANOPY

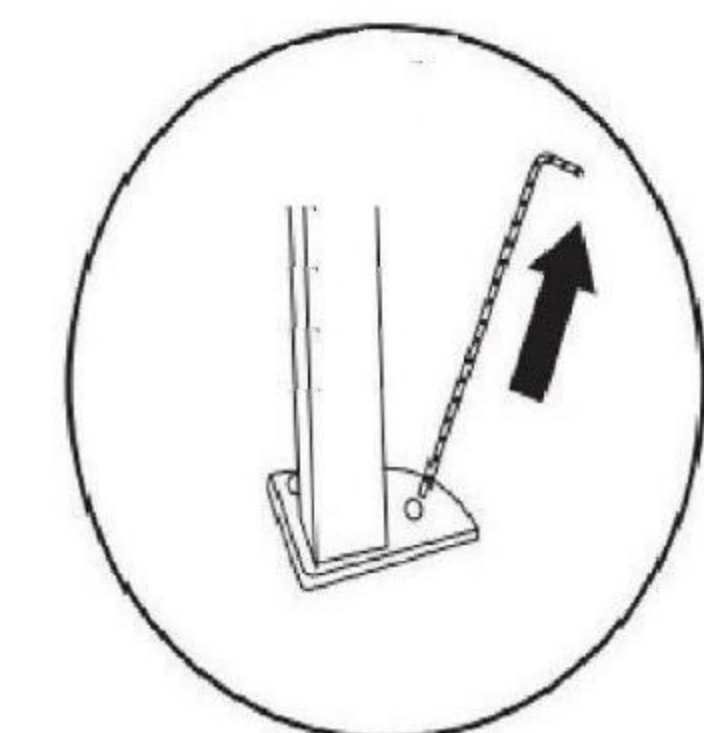


- 1 Pull up all stakes from the ground.

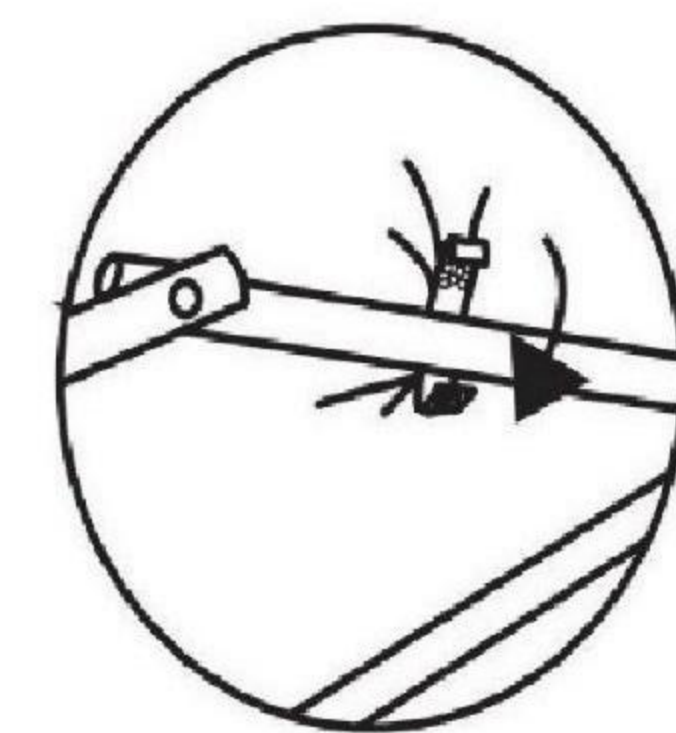

- 2 Remove the sidewall if attached.

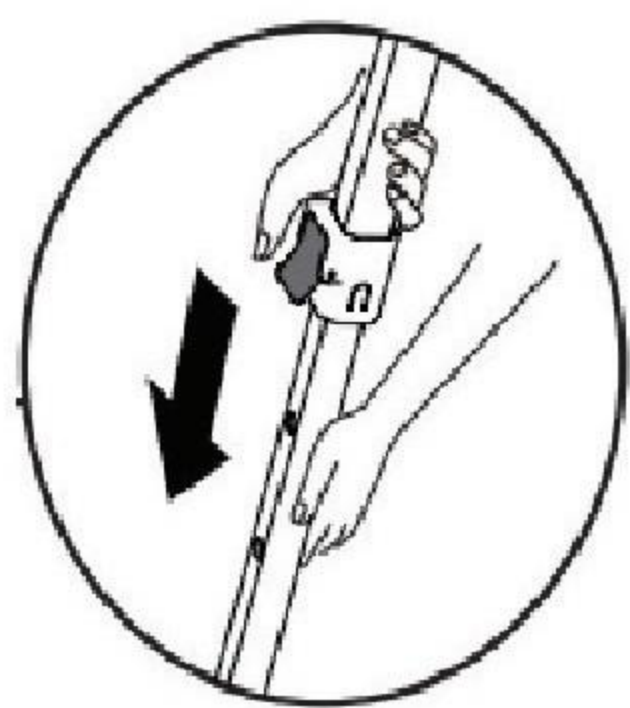


- 3 Press the push button on each leg and retract

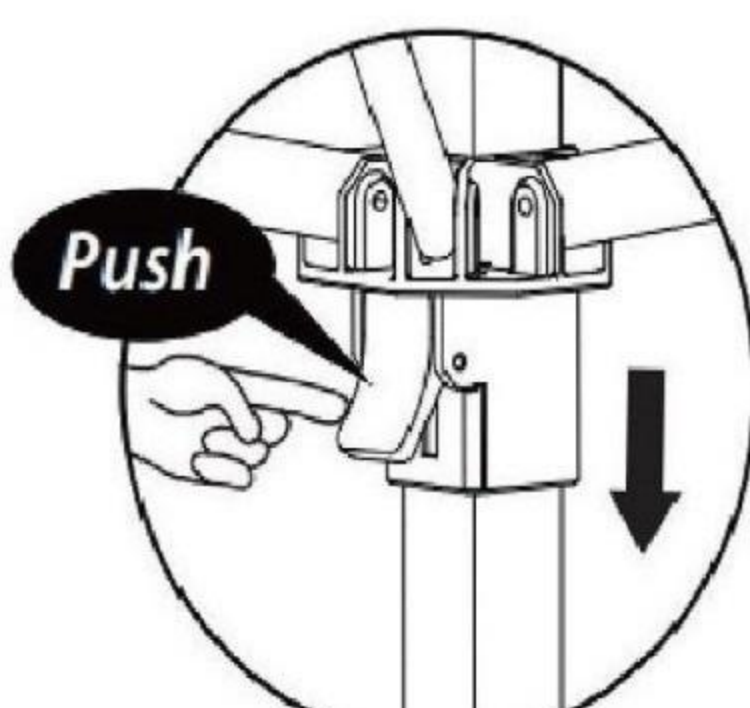


- 4 Push the push button on each slider to unlock the frame.

10

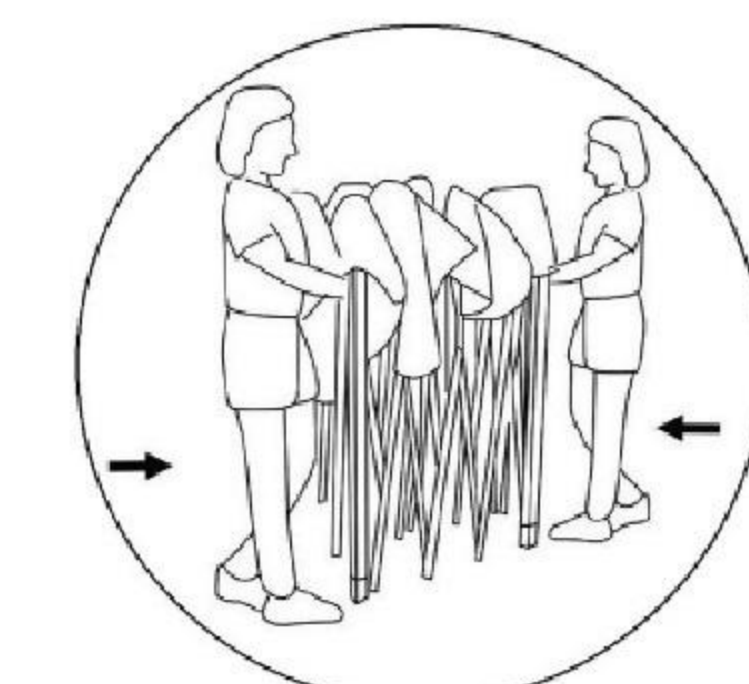

- 5 Push inward and Remove the top

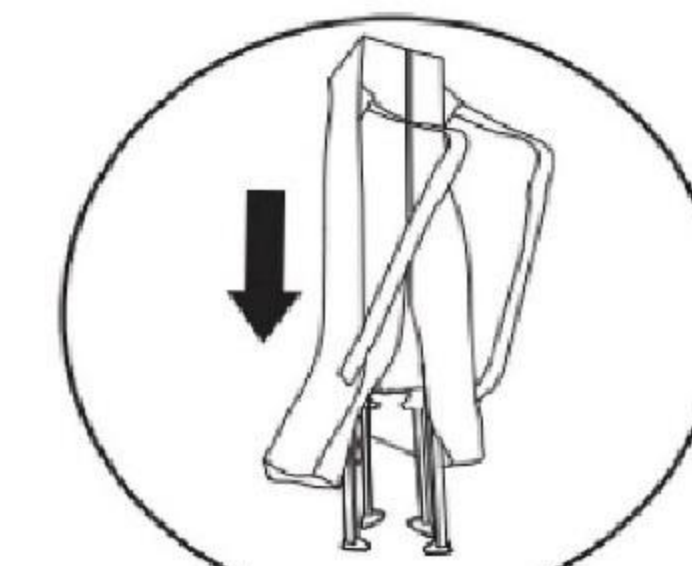

- 6 Slide the carry bag over the closed frame and close the zipper on carry bag.

END