

 
 

 
 
 
 



 


 

 

 




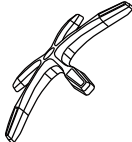


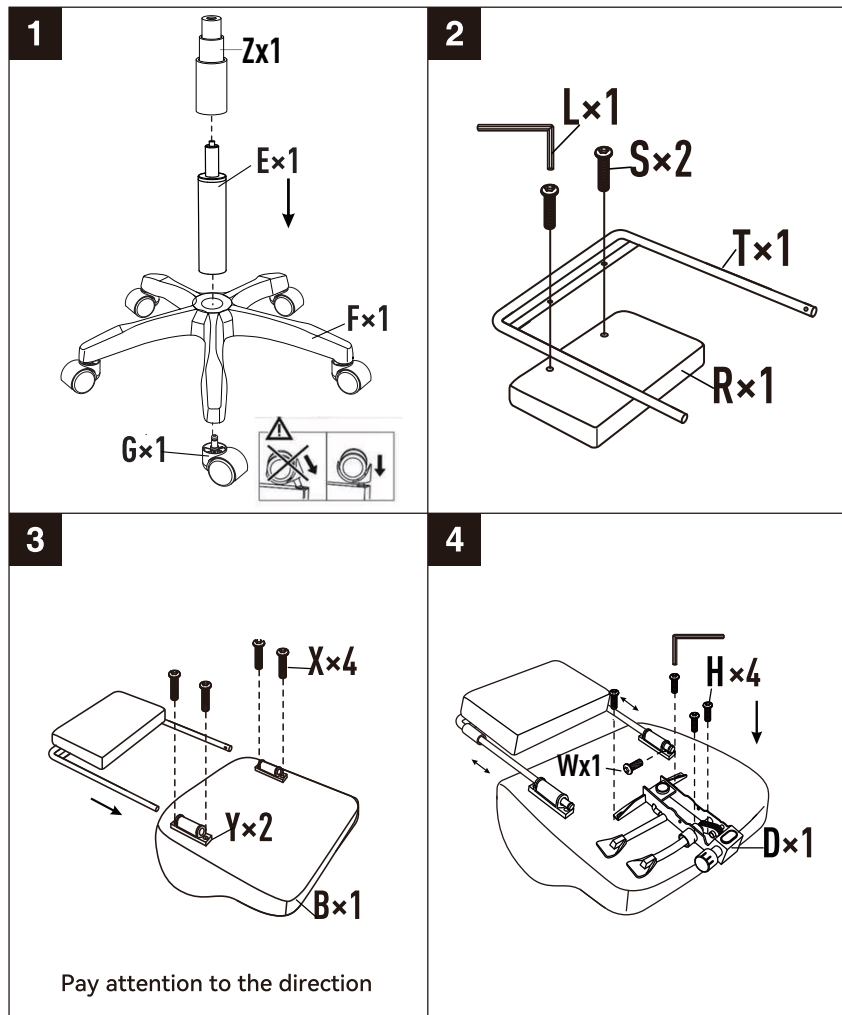
Gaming Chair

User Manual





PACKING LIST

<p>A*1</p> 	<p>B*1</p> 	<p>D*1</p> 	<p>E*1</p> 	<p>F*1</p> 
<p>G*5</p> 	<p>R*1</p> 	<p>Y*2</p> 	<p>T*1</p> 	<p>C-R*1</p> 
<p>C-L*1</p> 	<p>H*4</p>  <p>6*20mm</p>	<p>P*3</p>  <p>6*40mm</p>	<p>J*4</p>  <p>8*40mm</p>	<p>X*4</p>  <p>6*25mm</p>
<p>S*2</p>  <p>6*30mm</p>	<p>W*1</p>  <p>5x10mm</p>	<p>L*1</p> 	<p>K*1</p> 	<p>M*1</p> 
<p>N*1</p> 	<p>Q* 4</p> 	<p>U*1</p> 	<p>V*1</p> 	<p>Z*1</p> 

INSTALLATION



INSTALLATION

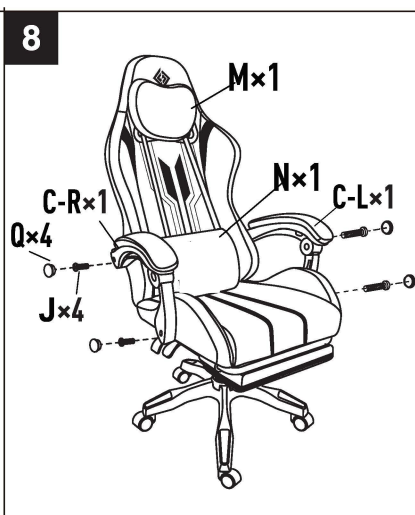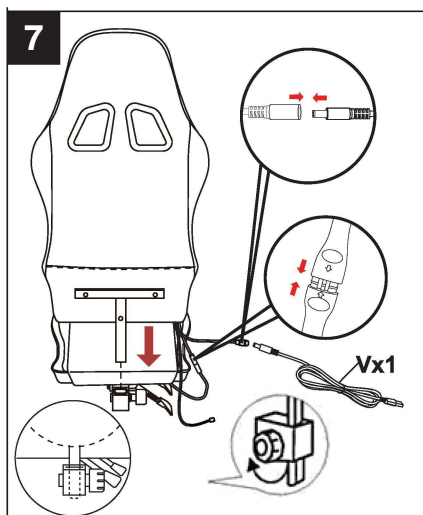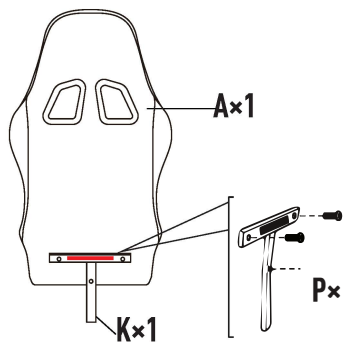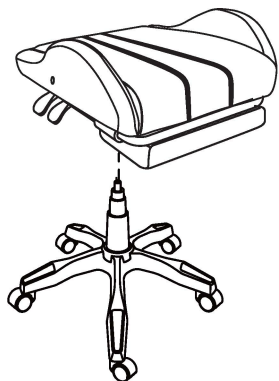

BLUETOOTH CONNECTION



Bluetooth

On

Visible as "Pixel XL" to other devices

Paired devices



HuaBox



Pair new device

Device name

Pixel XL

LED light jumping function in music mode

LOGO built-in LED light can emit light

1. When turned on and in pickup or music mode, the LED light will start jumping up and down according to the sound level.


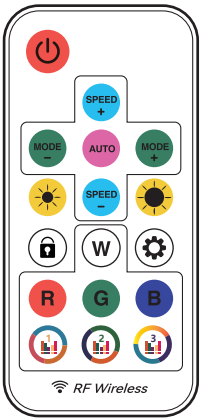
















2. The remote control can adjust the sensitivity of LED light jumping, with a total of 10 settings. The default sensitivity for the first use is 7 settings.

3. The left button on the remote control can lower the sensitivity by a minimum of 1 level, while the right button can increase the sensitivity by a maximum of 10 levels. Adjust the sensitivity according to the tone of the song.

4. The higher the sensitivity level, the closer the LED light will be to the top of the seat back.

5. To prevent insufficient power supply from affecting the experience, it is recommended to connect the USB cable to a 5V2A power adapter.

FUNCTIONS OF EACH BUTTON

	ON&OFF	
 	Speed adjustment	
 	358 flicker patterns to change	
 	1. Brightness adjustment 2. Sensitivity adjustment of LED light jumping in music mode	
	LOCK Match: Press and hold "LOCK" for 5 seconds until green strip flash 3 times. Cancel the match: Press and hold "LOCK" for 5 seconds until white strip flash 3 times.	
	Auto mode Press to play automatically 358 modes. Press 5 times to enter color RGB mode Single cycle play Under AUTO mode, press "SETTING" once, then press "LOCK" once to cyclic the current pattern.	
	SETTING Adjust the LED quantity: Press and hold for 5 seconds until white strip flash to enter the setup menu. Press MODE +/- to adjust the quantity of the LED light. Press "SETTING" to finish the setting.	
   	Static Monochrome Mode White, Red, Green, Purple	
  	1. LED light jumping mode in music mode 2. One button has 4 light jumping modes	
<p>Long press the setting key to enter the setting mode</p> <p>MODE+/- adjust the lighting part (left/right side of backrest/entire seat cushion)</p> <p>SPEED+/- to adjust the number of lamp beads (cannot be adjusted when the light strips are fully on, only when part of the light strips are on, the number of lamp beads can be increased or decreased)</p>		

USAGES

Testing

Continuously press "AUTO" 5 times to enter the RGB automatic switching mode,which can test the your LED.

Matching

Press "LOCK" for 5 seconds until LED flash in green quickly to match the remote control with the receiving controller. Press "LOCK" for 5 seconds untill LED flash in white slowly to un-match.

Reorder RGB

Different kinds of LED,the RGB keys may don't perfectly match to your LED, reorder them if needed. Continuously press "SETTING" 5 times until LED flash in white once and then turn into all white, press the "R" until LED is red, press "G" until LED is green, press "B" untill LED is blue, finally press "SETTING" once to finish your setting.

Adjust the LED quantity

Press "SETTING" for 5 seconds until LED flash in white to enter the setup menu. Press "MODE +/-" or "SPPED+/-" to add/reduce the quantity of the LED pixels.Finally press "SETTING' once to finish the setting.

TROUBLESHOOTING

Fault conditions

Possible causes

Exclusion method

The product is shaking and unstable

1. Wrong screw installation
2. The screw is broken
3. Check that the screws are not tightened in place

1. According to the instruction manual, install the correct screw in the correct position
2. To replace, use the included spare screws
3. Tighten the loose screws

The light strip is off

1. Not plugged in
2. The lighting pattern is not saved correctly

1. Confirm that the product is powered on normally
2. Please read the instructions of the remote control carefully (page 6), and follow the operation

Audio doesn't work

1. Bluetooth connection failed
2. Bluetooth connection error

1. Turn on your phone's bluetooth to connect
2. Turn off the phone's Bluetooth and reconnect (Bluetooth name: HuaBox)

Remote control not working

1. The remote control gasket is not pulled out and cannot work
2. The battery is in poor contact or the battery is installed backwards
3. The battery is dead

1. Check whether the remote control gasket is pulled out
2. Check whether the battery is installed incorrectly and adjust
3. Replace the new battery to make the remote control work normally



Massage



Speakers



LED RGB
Lights