


Stainless Steel Casters Assembly Instruction

How to Install Casters


1. With allen wrench remove legs.

Flip your table over onto a blanket or box to prevent the surface from getting scratched. Then, use an Allen wrench to remove the legs from the work table

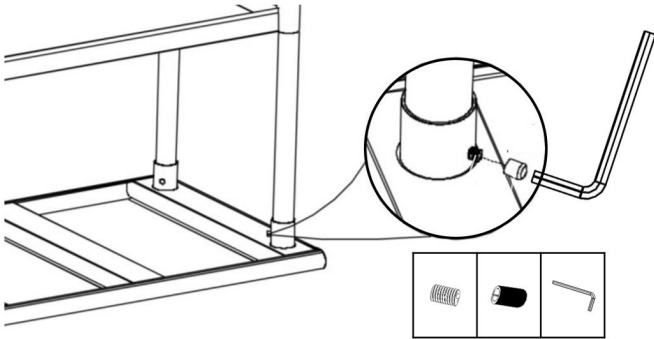


2. Using a broom handle po off feet.

Use a broom handle to pop the feet off your table's legs.

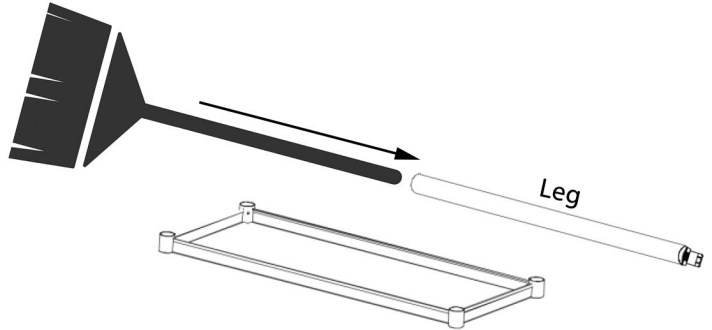

3. Tighten.

Turn the nut on top of your caster, which will expand a plastic piece, giving you a tight fit inside the leg. Turn the nut until you find the right thickness for your work table.

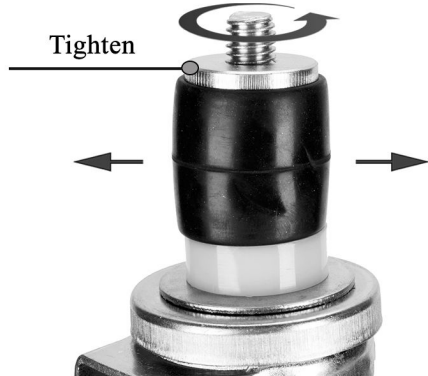

4. Insert casters

Once you've found the right setting, loosen it slightly and insert the caster into the leg of your table.




5. As needed tighten

Then, using a wrench or pair of pliers, tighten the screw on the bottom of the caster to expand the plastic piece and create a snug and secure fit.



6. Reassemble.

Reassemble your table by placing the legs into the tabletop gussets and then tightening the screws with an Allen wrench to secure them in place.

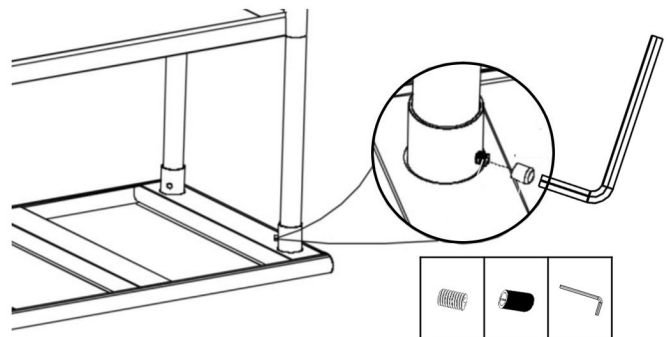

Flip your table back over and you're done.