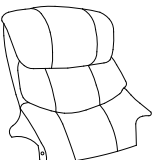

 


 

 
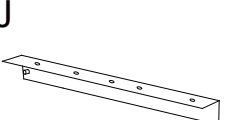
 










 


ASSEMBLY INSTRUCTION

NO.: DK-3020

A  x1	B  x1	C  x1
D  x1	E  x1	F  x1
G  x1	H  x1	J  x1
K  x1	L  x1	M  x1
N  M8*45mm x2	O  M8*60mm x1	P  M8*25mm x2
Q  M6*20mm x8	R  M6*16mm x4	S  M8 x3
T  M6 x1	U  M4 x1	V  x1

