
Thank you for choosing and using our product.


INSTALLATION MANUAL

WALL-MOUNTED FAN WITH LIGHTS

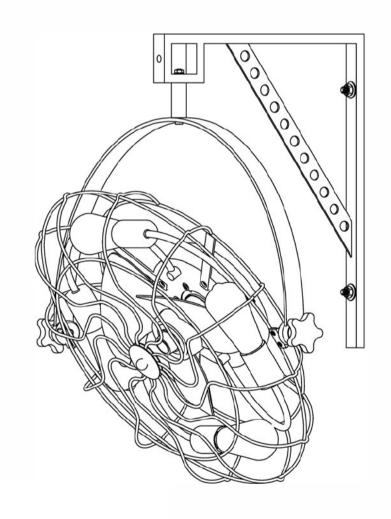

TOOLS REQUIRED

PACKING LIST

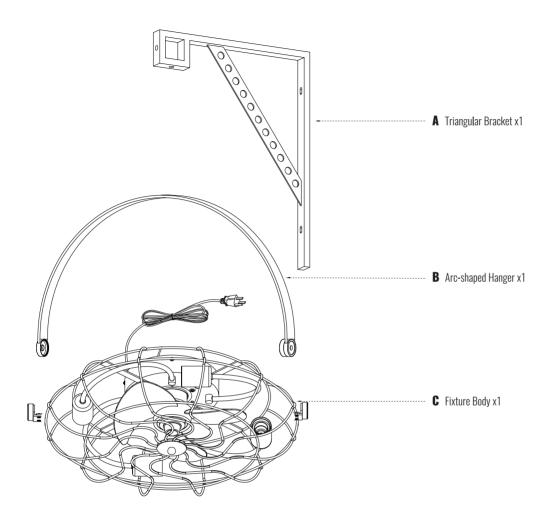

INSTALLATION KIT

AA		2×	ВВ		1×	CC	Î	1×	DD		1×
		Plum blossom lock			Sleeve			Hex bolt			Hex Nut
EE		2×	FF		1×	GG		2×	нн	ß	1×
	()	Wood Screw			Flat Washer (large)			Flat Washer (small)		8	Safety clevis pin
II		2×	IJ	Ŵ	2×	KK	ALL IN THE STATE OF THE STATE O	2×	LL	[°]	1×
		Anchor Bolt			Remote Holder Anchor		*mmmmm (#)	Remote Holder Screw			Remote Holder
MM					1×	NN					1×
					Remote Control			/u			Glove


NOTE:

Some extra hardware may be included. The quantity listed above is the number required for installation.

INSTALLATION

1. Install Arc-shaped Hanger


Align the holes of fixture body (C) with arc-shaped hanger (B) and close them together, then secure with plum blossom lock (AA).

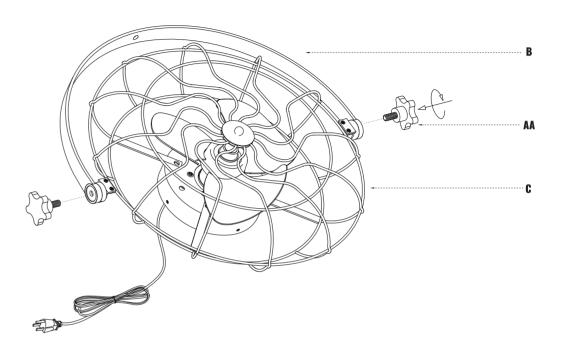


2. Installation Diagram for Solid Wood Wall Paneling


Step 1: Adhere triangular bracket (A) to the corresponding wooden wall.

Step 2: Thread wood screw (EE) through flat washer (small) (GG) and tighten triangular bracket (A).

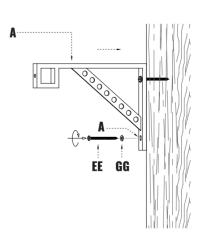


3. Installation Diagram for Cement Wall Surface

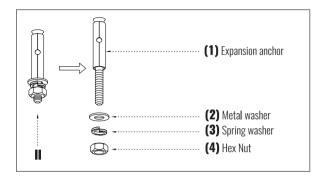


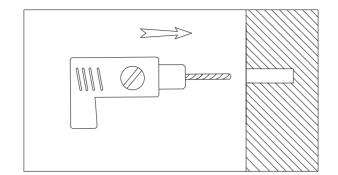


Step 1: First fix the bracket position, then drill the holes.

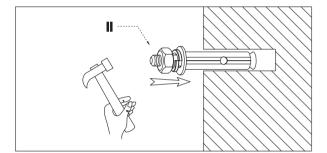


Step 2: Insert expansion anchor (1) into the hole. Note: Do not remove hex nut (4), spring washer (3), and metal washer (2).

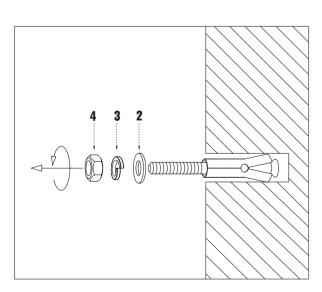

Step 4: Remove hex nut (4), spring washer (3), metal washer (2) for use in the next step.

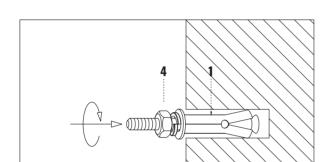


Step 3: Tighten hex nut (4) until expansion anchor (1) feels secure and no longer loose.

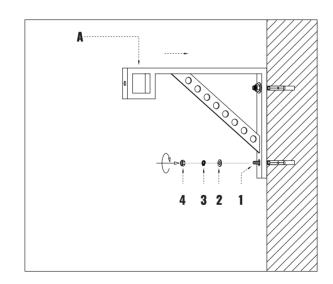

Step 5: At last insert the hole on triangular bracket (A) into expansion anchor (1); Successively fit in metal washer (2), spring washer (3), and tighten with jex nut (4).


4. Installation Body

Secure hex bolt (CC) through arc-shaped hanger (B), sleeve (BB), triangular bracket (A), flat washer (large) (FF) using hex nut (DD).

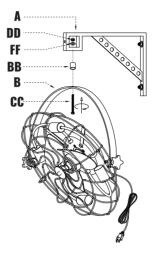


5. Fix Main Body

Insert safety clevis pin (HH) into the hole of hex bolt (CC).

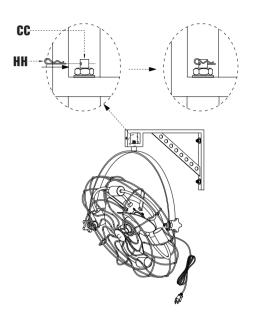

6. Install Bulb


E26 Bulbs X 4 (Max 60W each, not included)

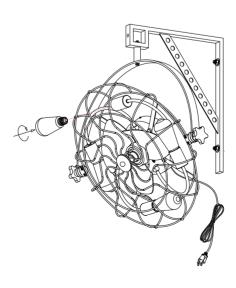

7. Adjustable from Multiple Angles

Step 1: Loosen plum blossom lock (AA) to adjust fixture body (C) up and down, align it to the desired angle, and then tighten plum blossom lock (AA).


Step 2: Adjust to the desired position by moving arc-shaped hanger (B) left or right.

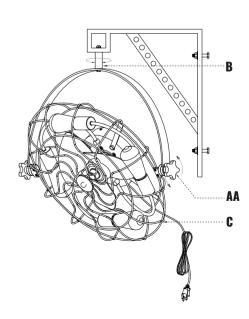


J

8. Adjustable from Multiple Angles


Adjust the view

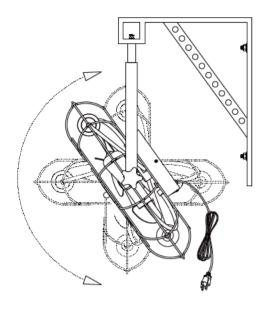



9. Power On and Use

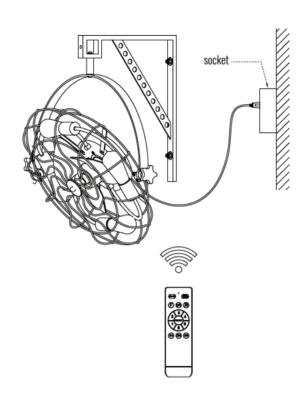


10. DIY Installation

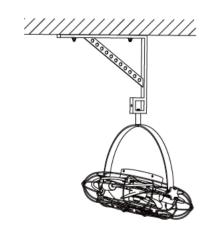

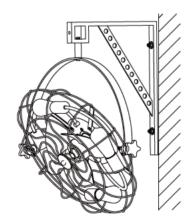

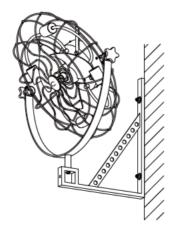

REMOTE CONTROL INSTRUCTIONS

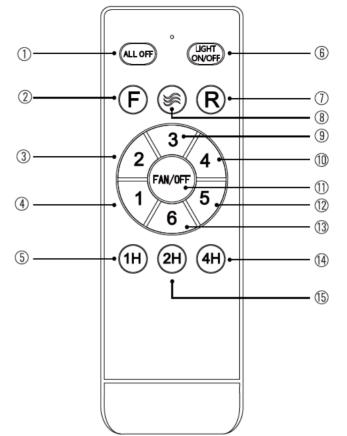

NOTE

Please insert 2 batteries before using.


AAA 1.5V battery x 2pcs (not included)

- 1 : Turn off the fan and lights.
- ②①: "F" refers forward fan direction."R" refers reverse the fan.
- 3 4 9 10 12 13 : 1/2/3/4/5/6 for fan speeds.
- (5)(14)(15): 1H/2H/4H for timing the fan.
- 6 : Turn on/off the lights.
- (8): Natural wind of the fan, fan speed will change automatically when using this function.
- (11) : Turn off the fan.

REMOTE SIGNAL PAIRING:

If the remote control loses the signal of the

fan, turn off the power from wa**ll** switch, then turn it on, press 1 immediately for around 3 seconds, after the fixture beeps or flashes, then it's down.

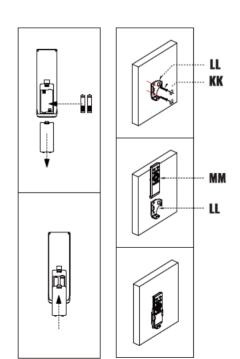

Step 1: Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included)

Step 2: Install the remote holder onto the wall with screws.

5