 


ASSEMBLY INSTRUCTIONS

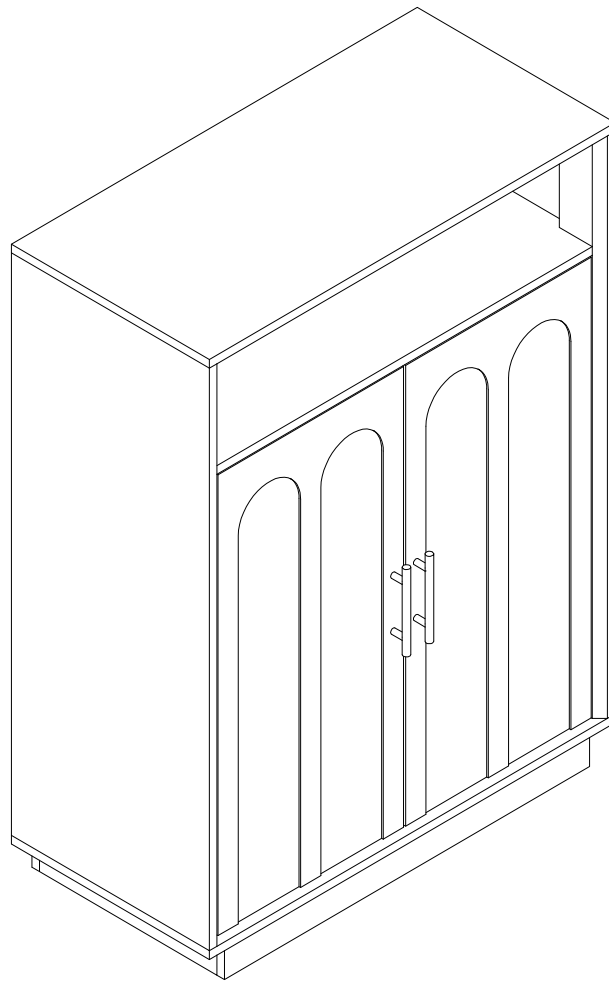

ATTENTION

Prior to assembly, please check and count all parts and hardware regarding to the list on page 3-4 of the instruction. If there is any part missing or damaged, please send us messages with the part name and number or send us pictures, we will send you the replacement asap.

If you have any questions about the product or assembly, please kindly contact us at anytime, we will solve your problem asap.



IMPORTANT INFORMATION

READ CAREFULLY.

 
KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

If you have any questions about the product or assembly, please kindly contact us

NOTES BEFORE YOU START

1. If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.
2. Open and assemble the item in the area you plan to keep it to avoid excessive heavy lifting.
3. Assemble the product in a spacious space, and on a soft, clean surface to avoid damage and scratches.
4. **TWO PEOPLE** are recommended for ease in the assembly of this product.
5. Ensure all parts and hardware are available before assembly. If you find any part is damaged or missing, please email us, we will send you the replacement asap.
6. Follow each step in the manual to ensure the proper assembly.
7. You will use the following tools: a Phillips head screwdriver and rubber hammer.
The wood dowels may need to be gently tapped in lightly with a rubber hammer.

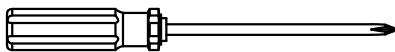

(not included)



 
(not included)

8. We don't recommend using the electric screwdriver. If you use the power screwdriver to tighten the screws, please be slow down, and stop if the screw is already tightened, excessive screwing may damage the screw and product surface.













WARNINGS

1. Please be careful and slowly when opening and assembling the product, especially keep the parts and packaging away from children to avoid accidental injury.
2. Please avoid using aggressive chemicals/cleaners to avoid damaging the product surface.
3. Don't push or pull the product to avoid damaging your floor.
4. Don't throw away any packing materials and accessories until assembly is complete.

Exploded Drawing




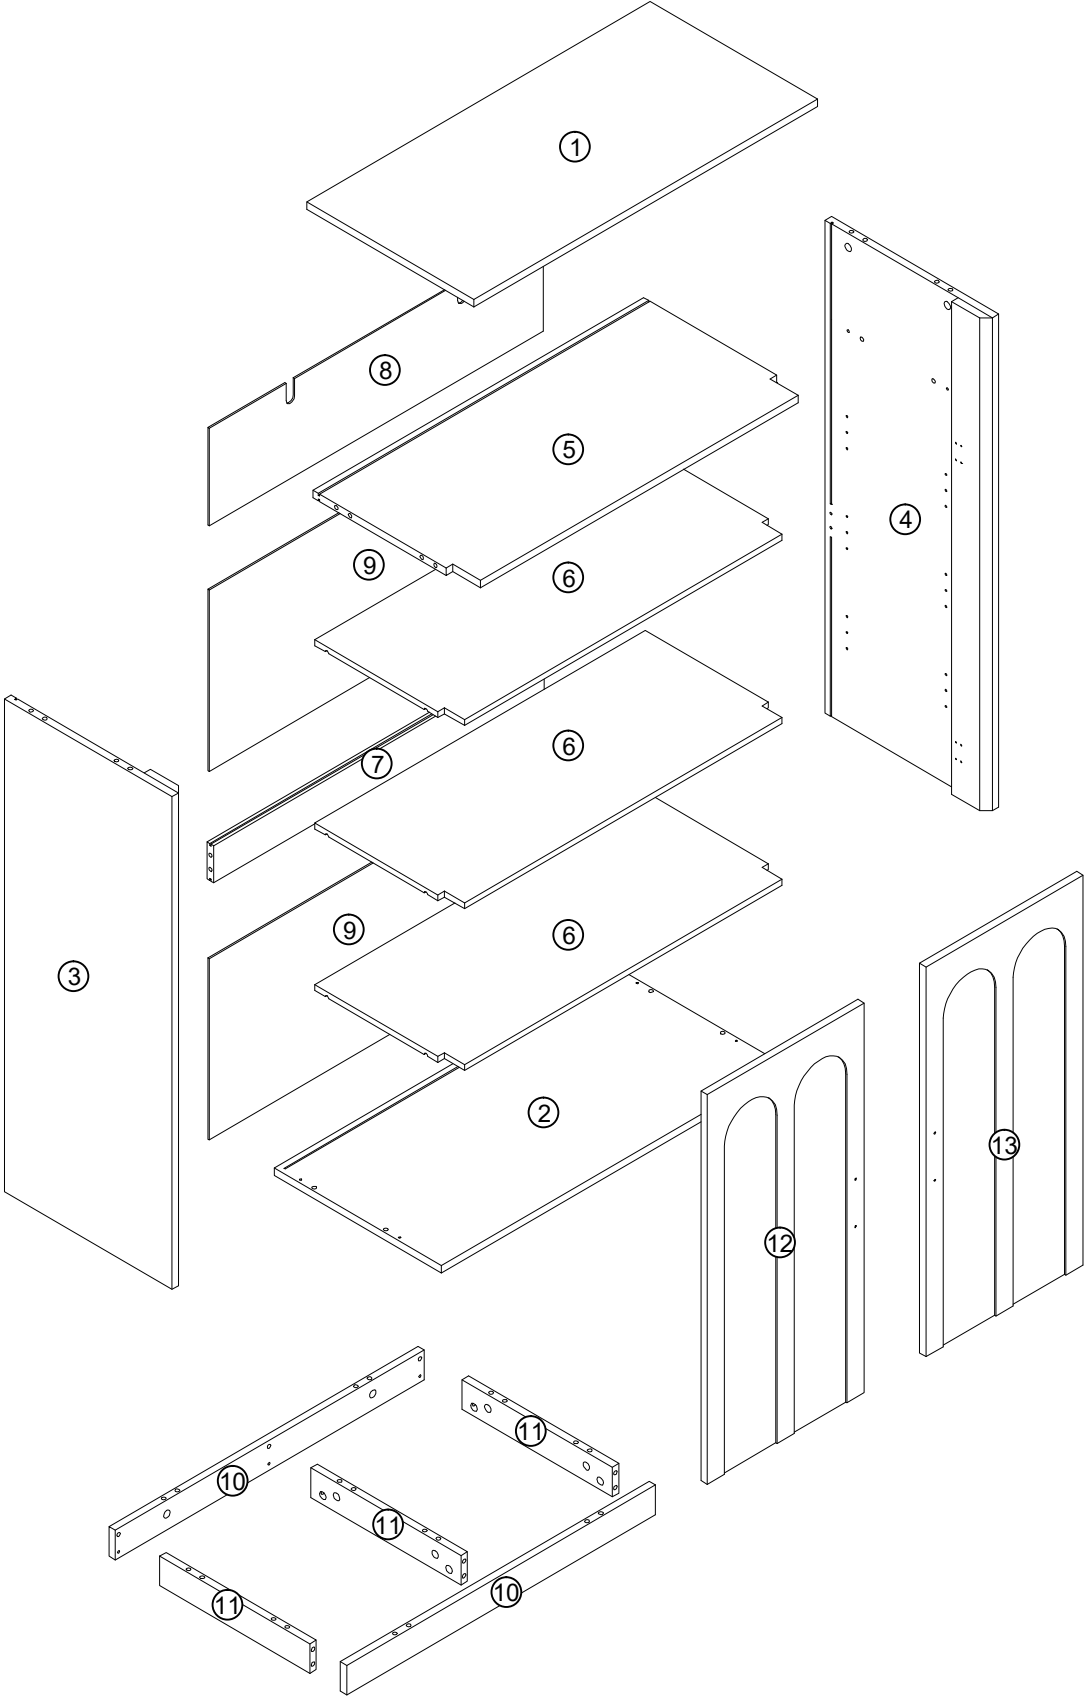


HARDWARE LIST

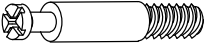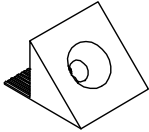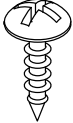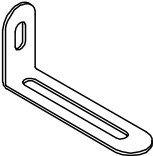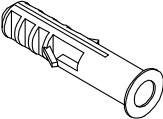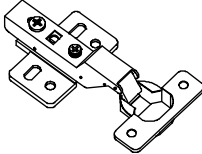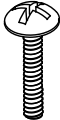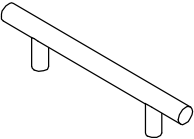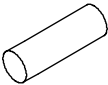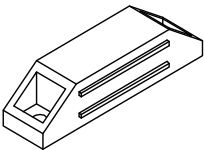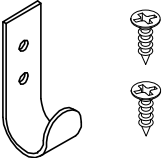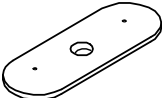            (A)  M6×35mm 28PCS spare:3	(B)  Φ15×10mm 28PCS spare:3	(C)  Φ8×30mm 28PCS spare:3	(D)  M3×12mm 26PCS spare:3
(E)  18PCS spare:3	(F)  M3×14mm 20PCS spare:3	(G)  M4×35mm 6PCS spare:1	(H)  M4×12mm 2PCS
(I)  2PCS	(J)  2PCS	(K)  4PCS	(L)  M4×16mm 4PCS spare:1
(M)  2PCS	(N)  Φ5×20mm 12PCS spare:2	(O)  Φ20mm 4PCS spare:1	(P)  1PC spare:1
(Q)  2PCS	(R)  2PCS		



CAM LOCK/BOLT FASTENING INTRODUCTION

    (You will use it during assembly)

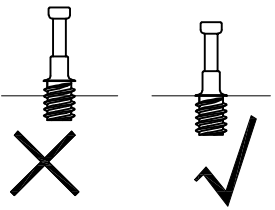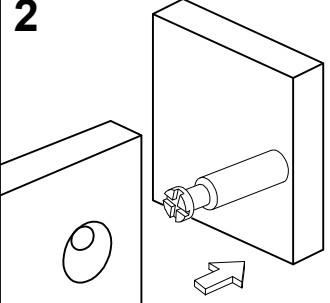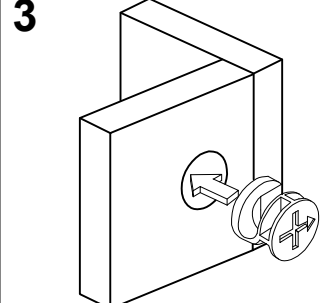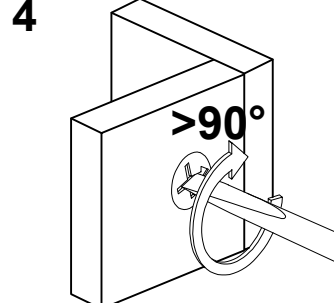1 	2 	3 	4 
1.Screw cam bolt into the threaded anchor gently. (Attention:don't screw cam bolt too deep or too shallow.)	2.Please connect the two boards you want connect by inserting cam bolt.	3.Insert the cam lock into the round hole of the board. (Attention:point the arrow on the top of the cam lock to the outer edge.)	4.Turn the cam lock clockwise until it is firmly tightened.

STEP 1

  A ×18

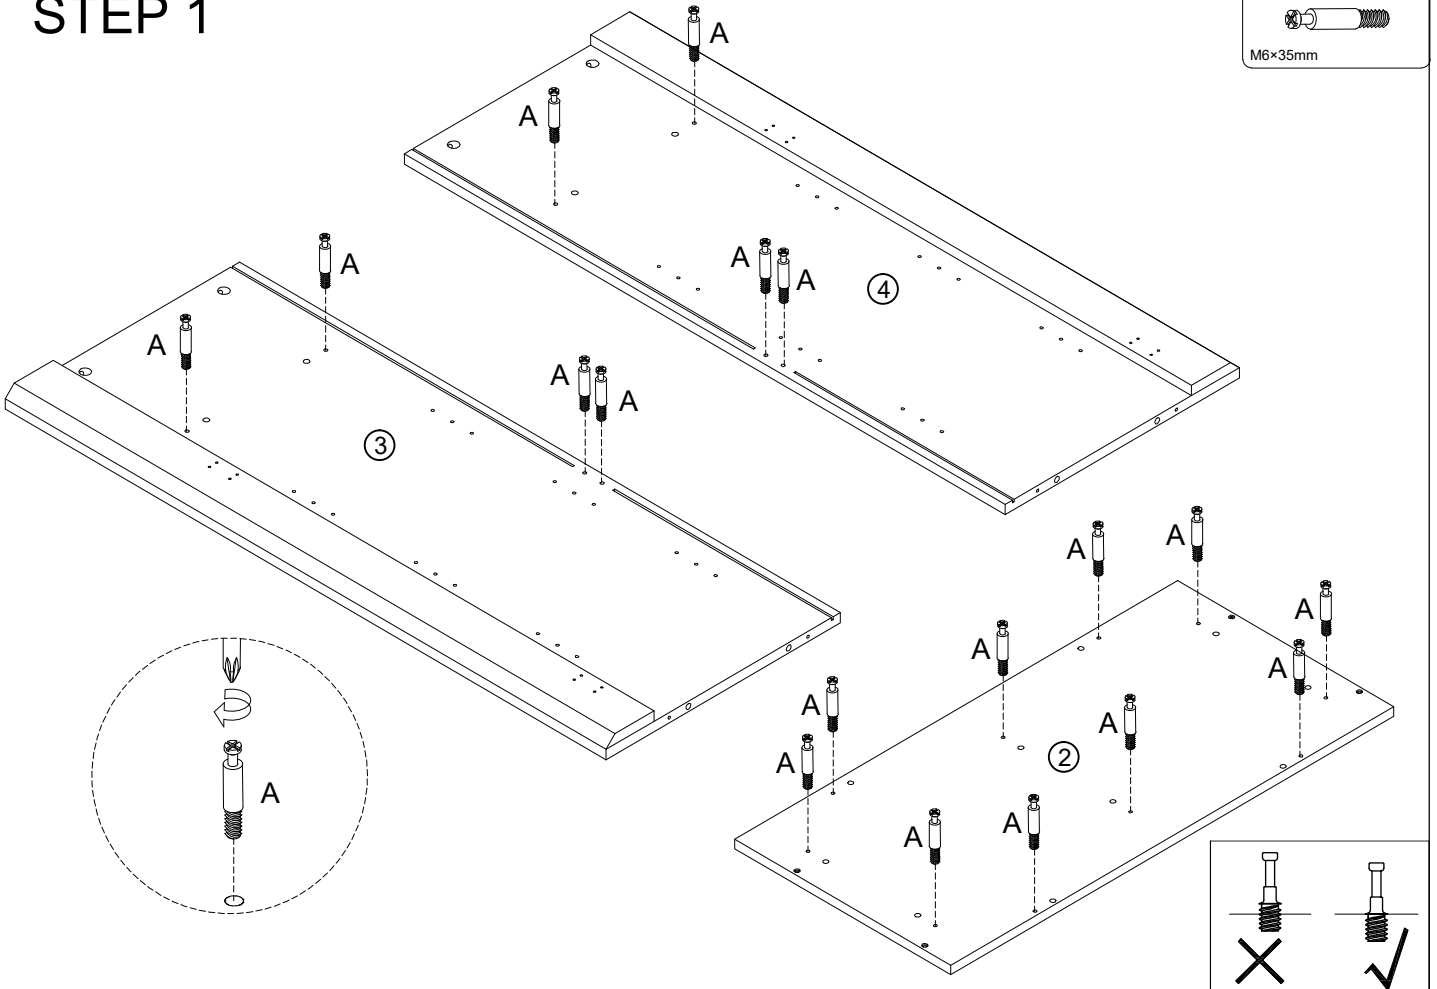
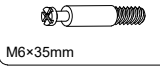


STEP 2


F ×2



  P ×1

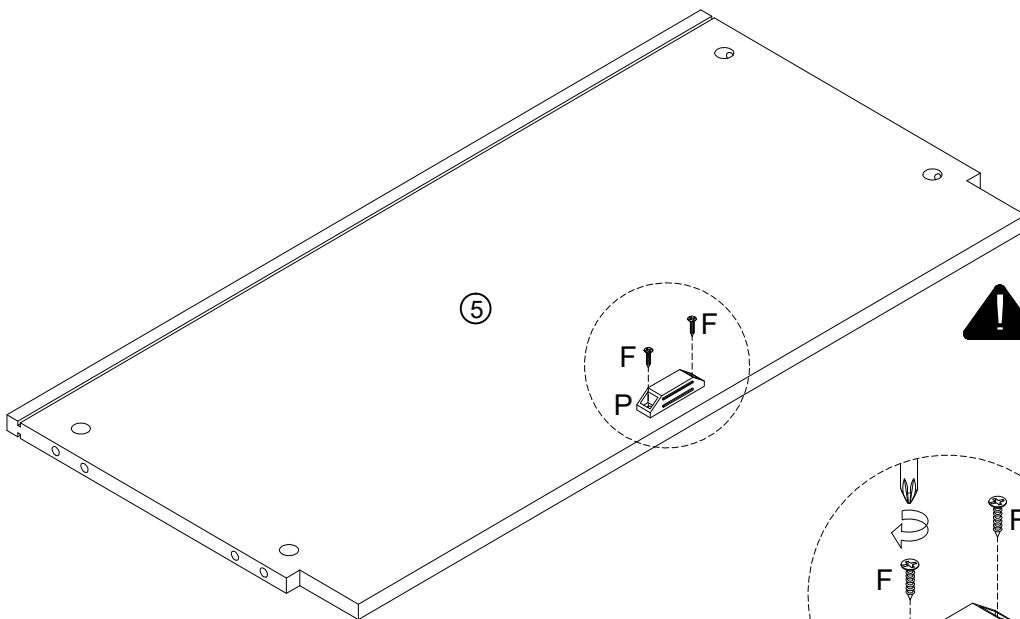


! Magnet facing outward

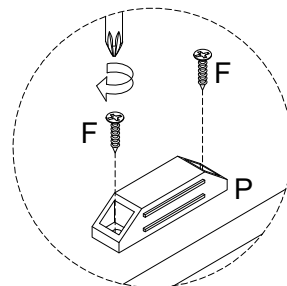 


STEP 3

 
Notice the door catcher is on the left.

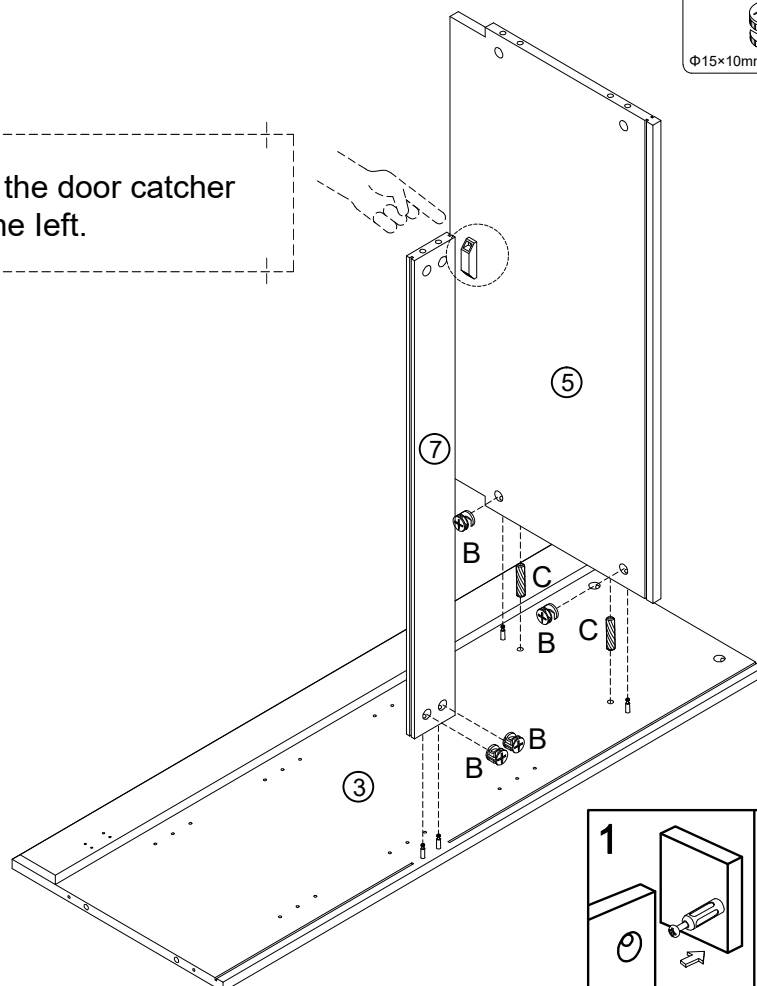

B	×4	C	×2
			
Φ15×10mm		Φ8×30mm	

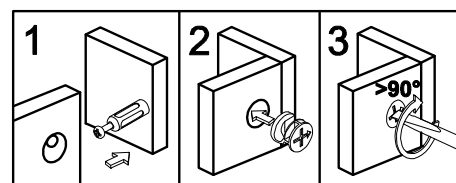 


 STEP 4

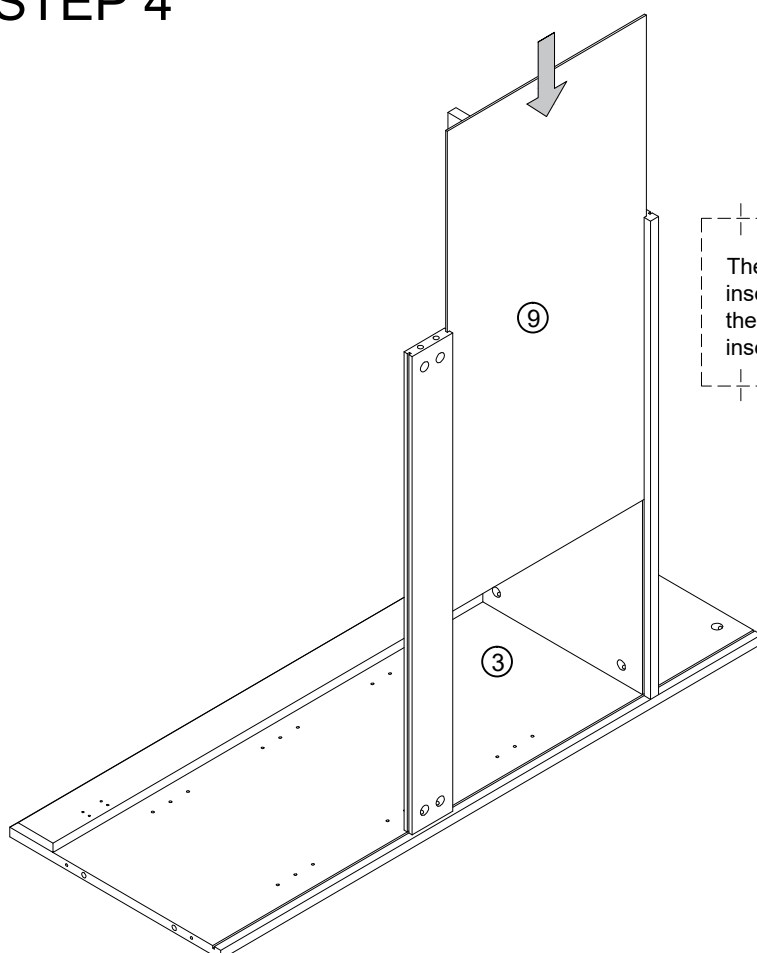

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 
STEP 5

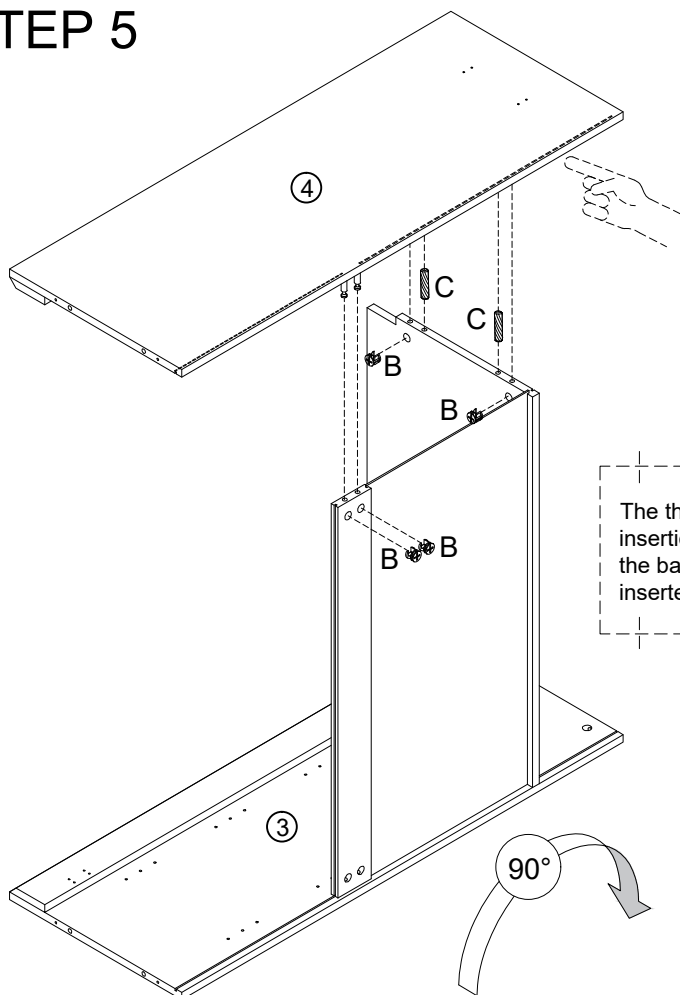


B	×4	C	×2
			
Φ15×10mm		Φ8×30mm	

Please pay attention to the position of the grooves and the direction of the holes.

 The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

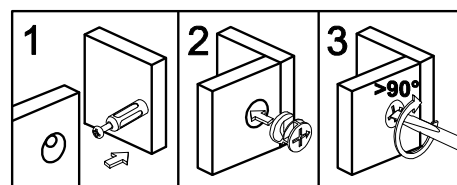


 STEP 6

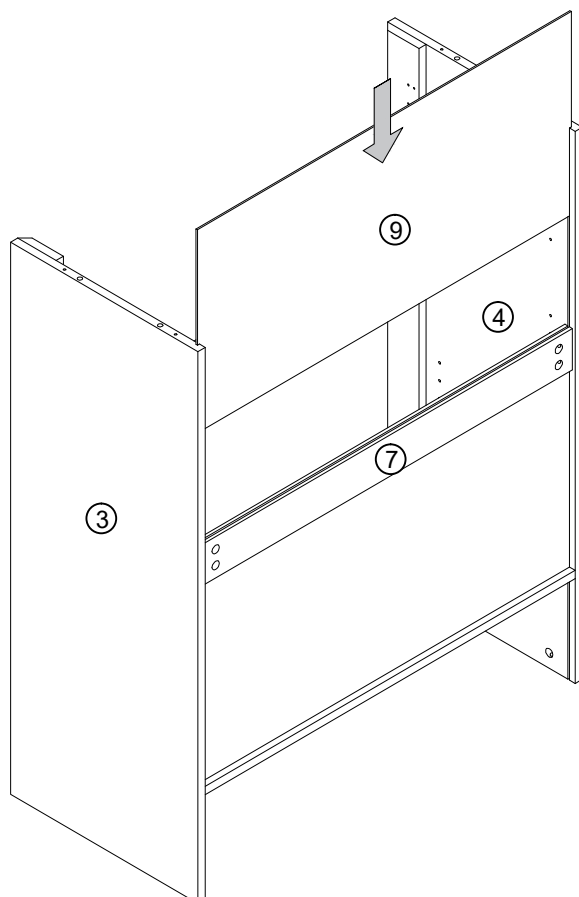


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 STEP 7

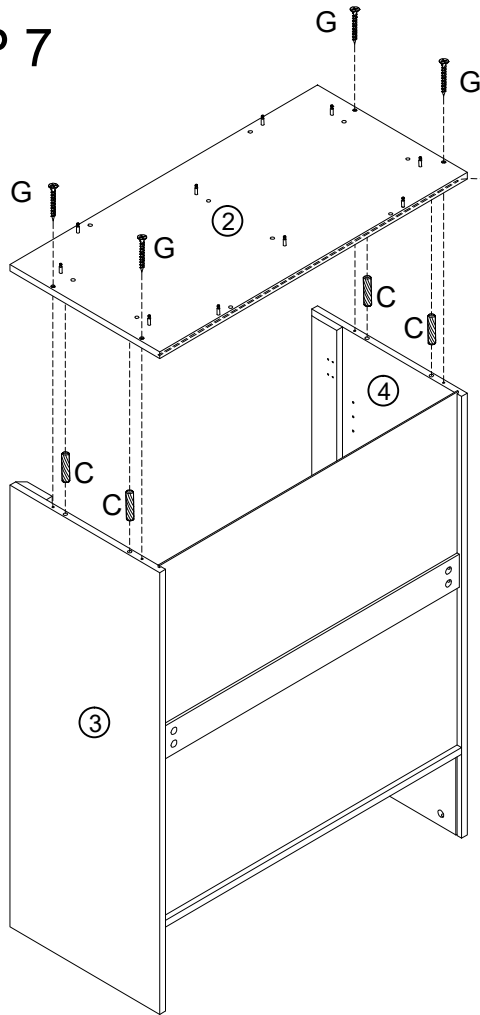


C ×4	G ×4
	
Φ8×30mm	M4×35mm

 
Please pay attention to the position of the grooves and the direction of the holes.

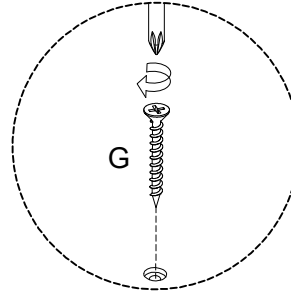


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 STEP 8


A ×6	B ×6	C ×6
		
M6×35mm	Φ15×10mm	Φ8×30mm

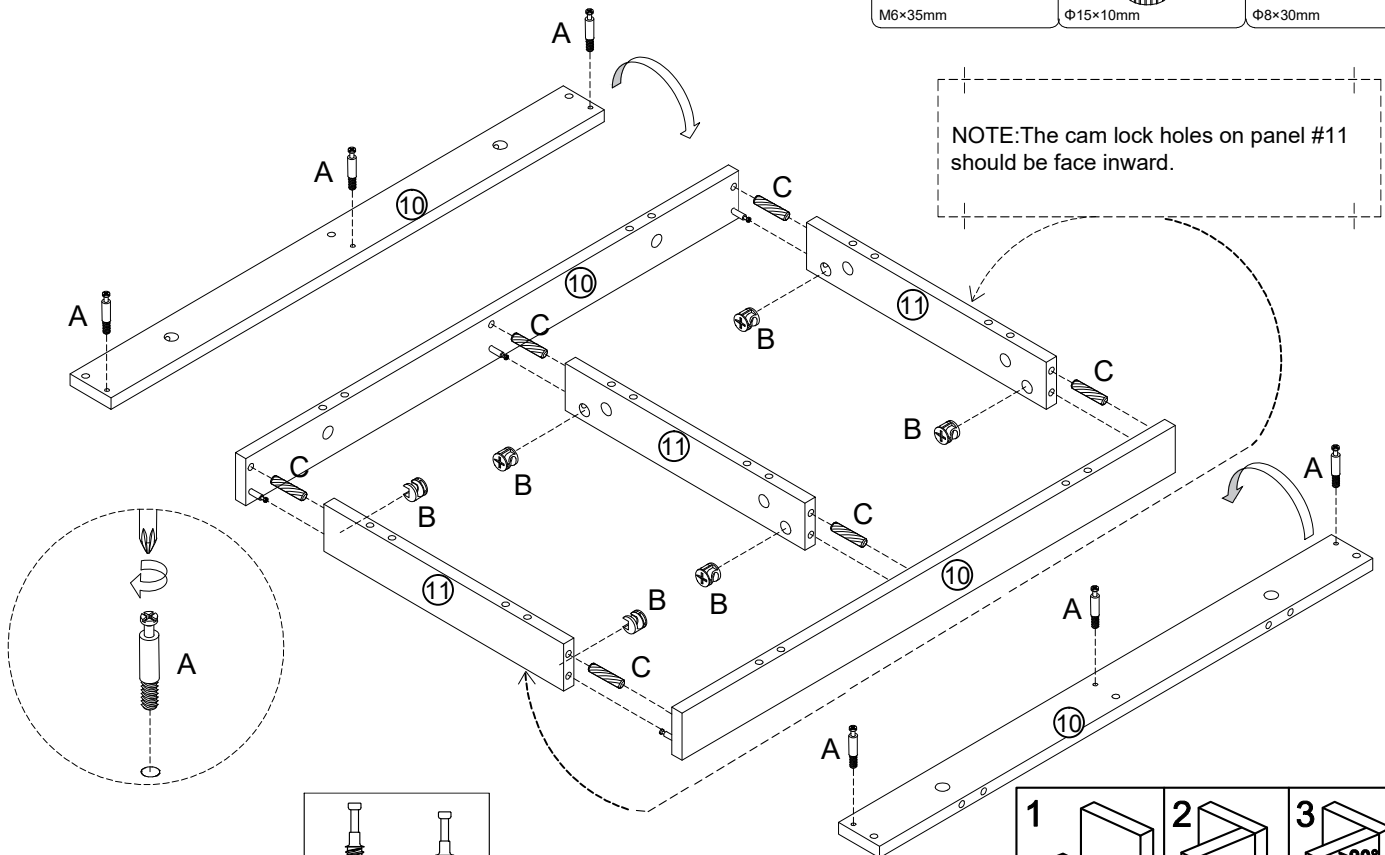 

 NOTE: The cam lock holes on panel #11 should be face inward.

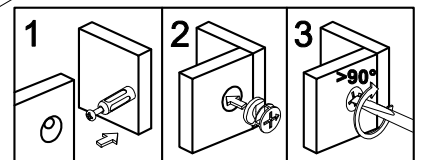


 STEP 9


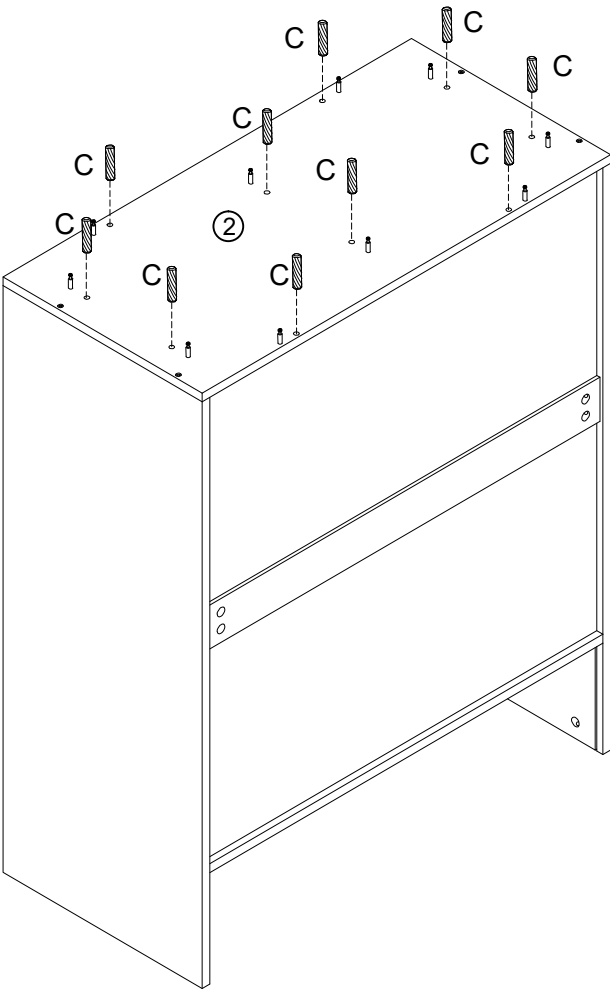


C ×10
Φ8×30mm

 
STEP 10

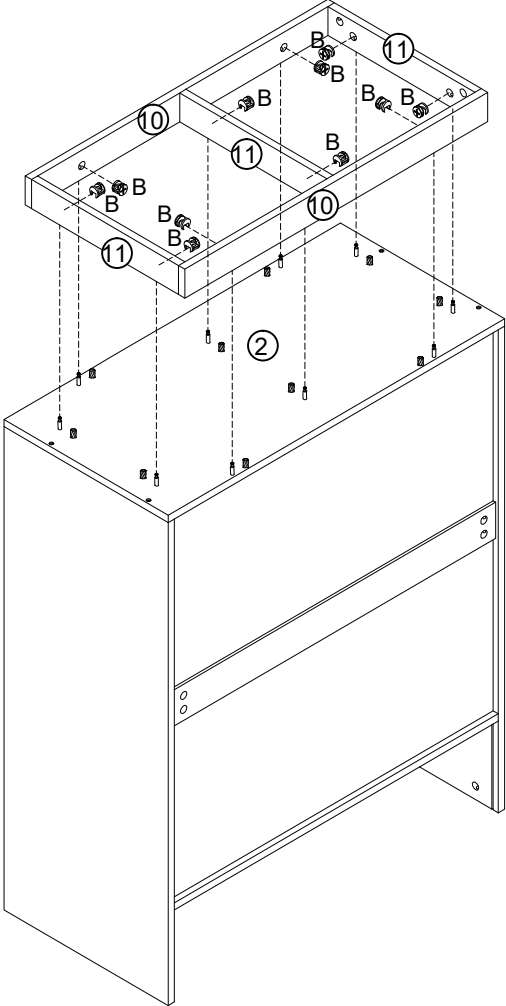

B ×10
Φ15×10mm

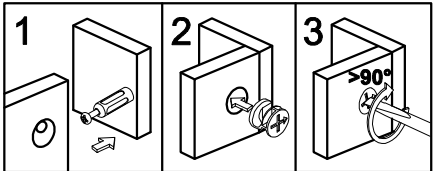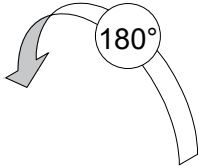  


 
STEP 11

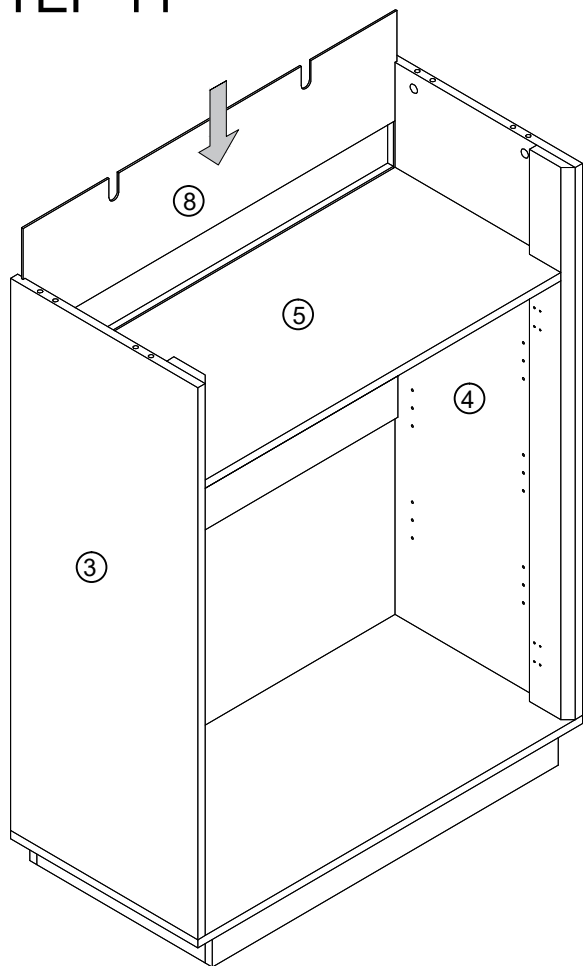


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

 STEP 12

A	×4	H	×2	I	×2
					
M6×35mm		M4×12mm			

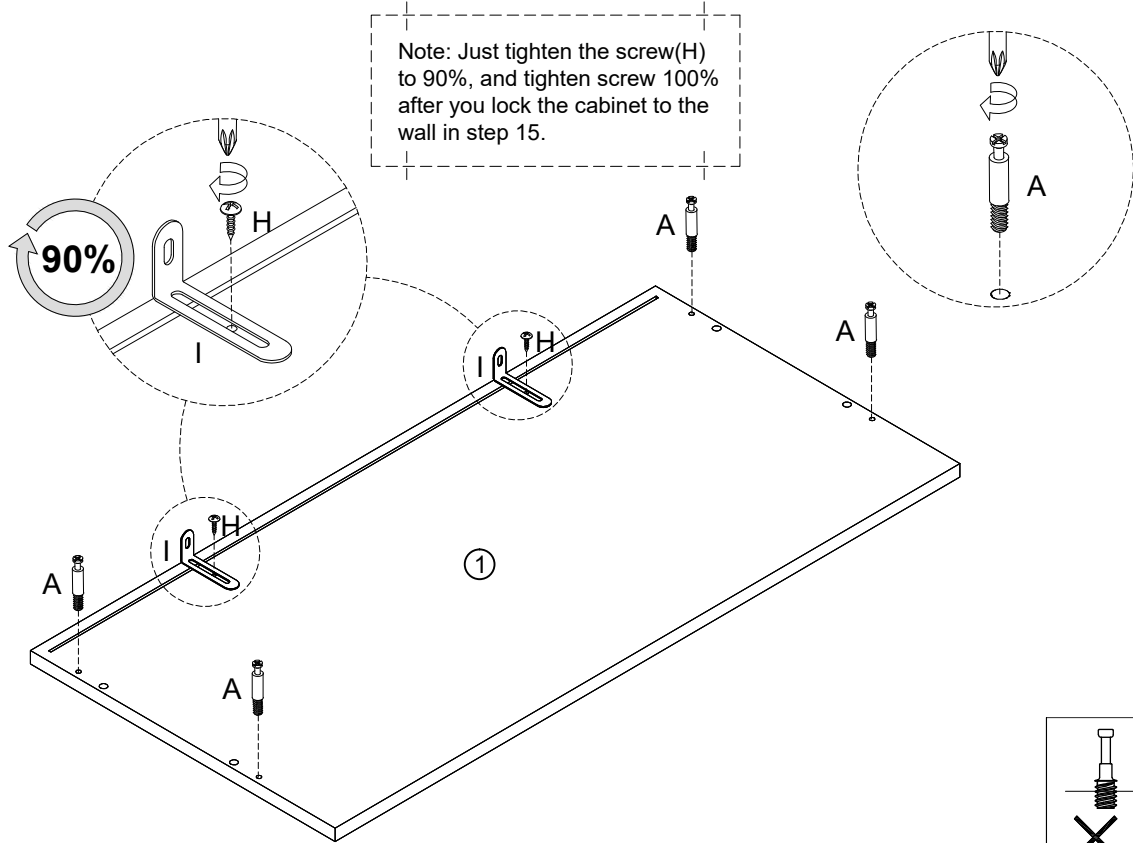 


 STEP 13

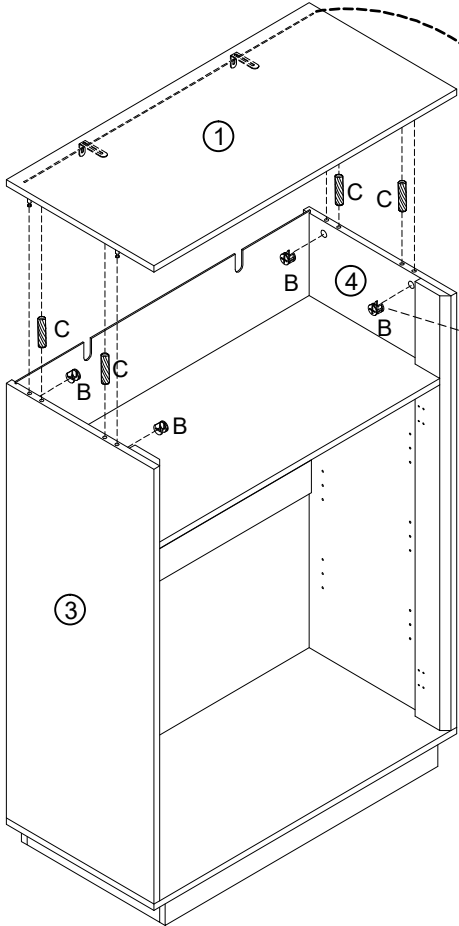


B ×4	C ×4	O ×4
		
Φ15×10mm	Φ8×30mm	Φ20mm

 
Please pay attention to the position of the grooves.

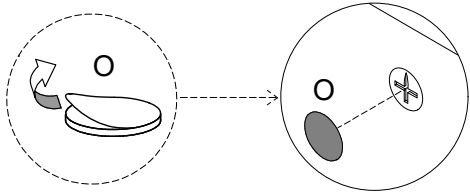


 
The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

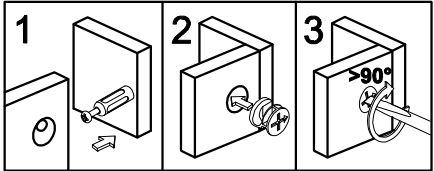

 
STEP 14





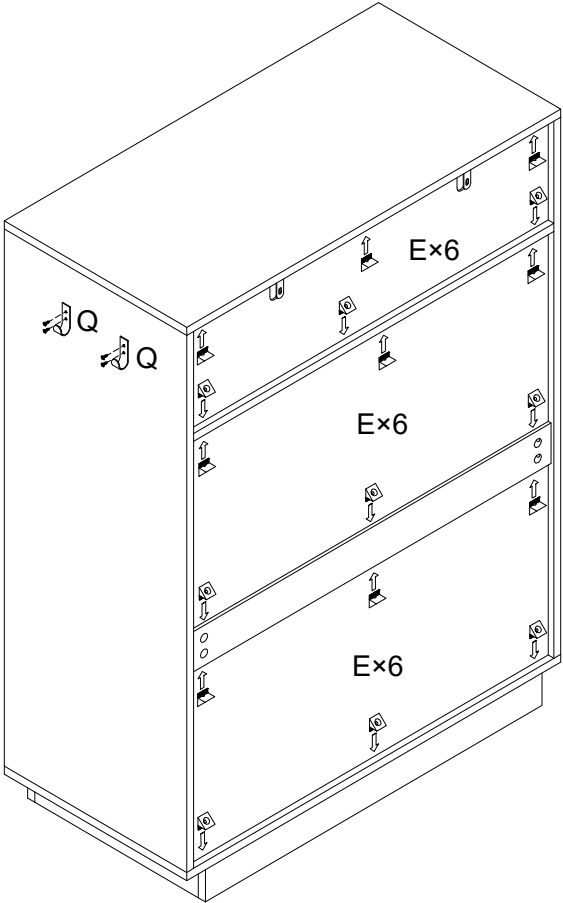


E ×18	F ×18	Q ×2
		
	M3×14mm	

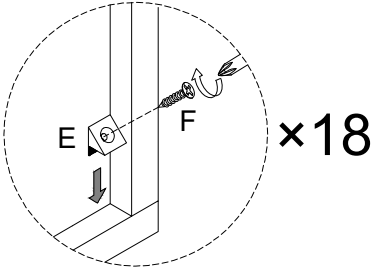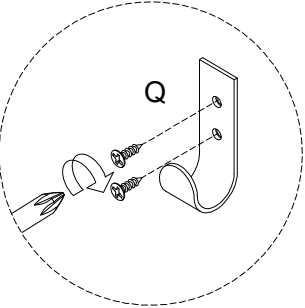  

 STEP 15


G	×2	J	×2
 M4×35mm			

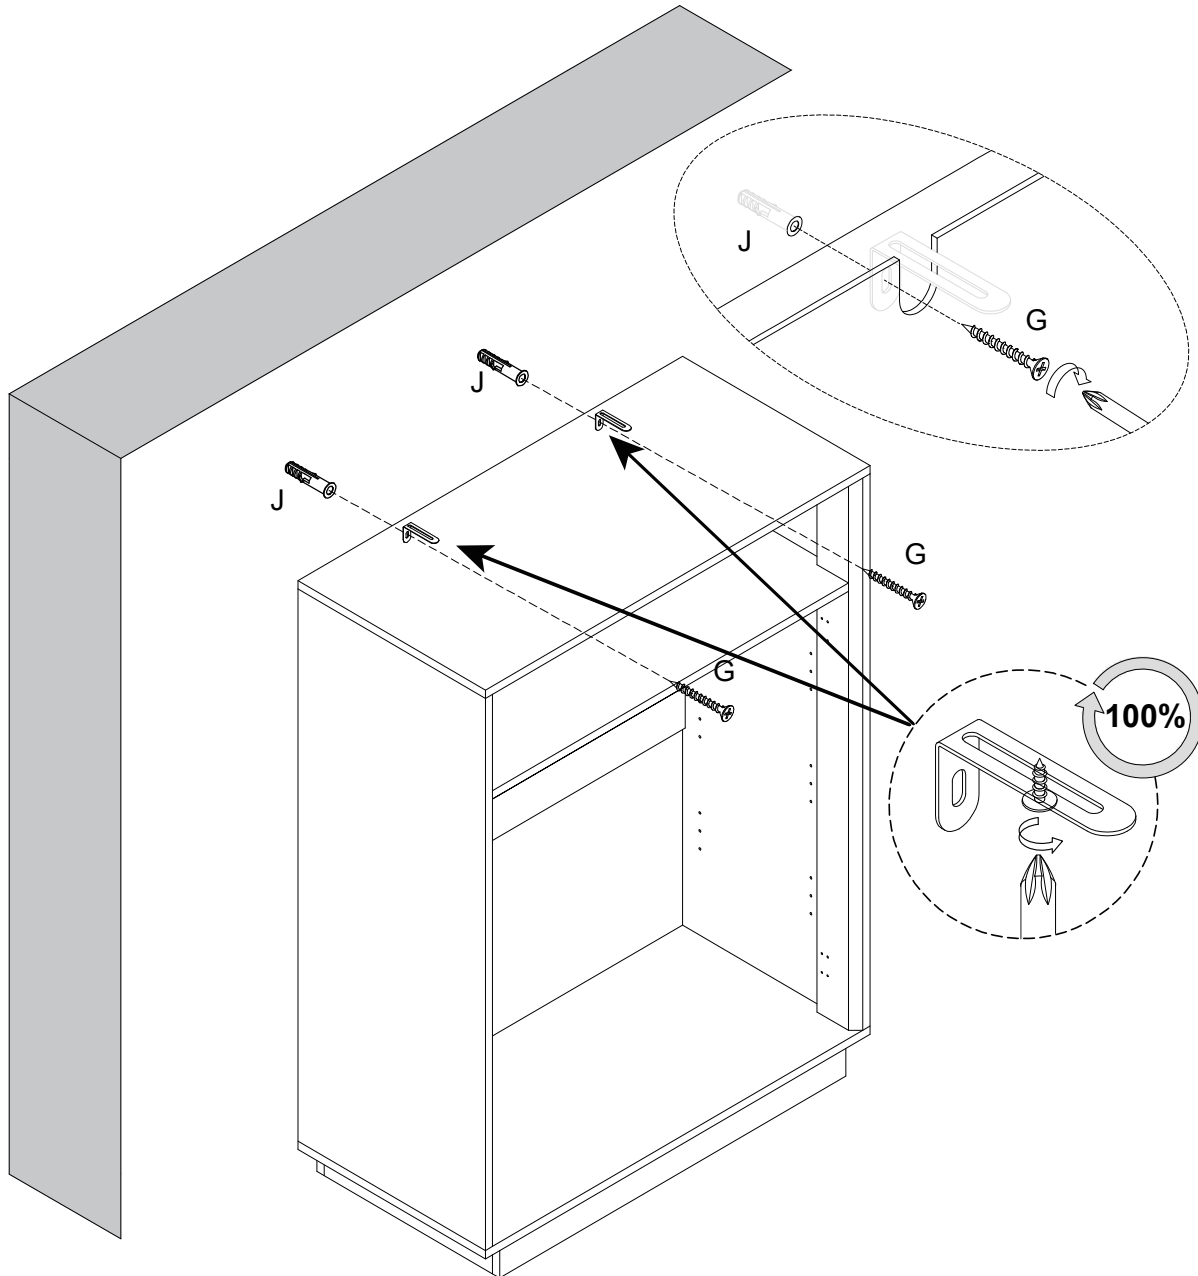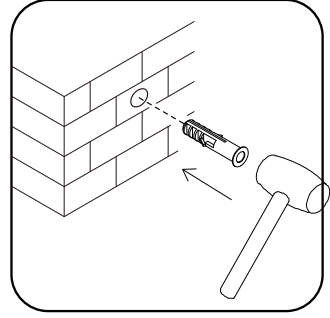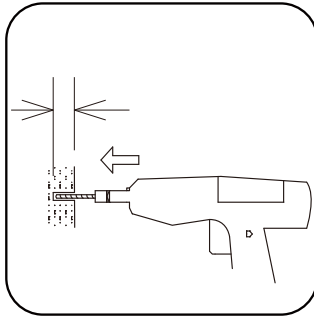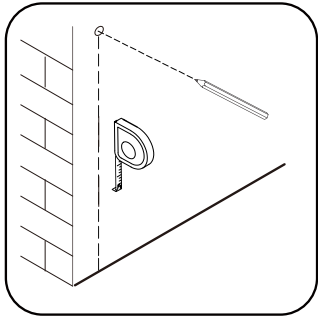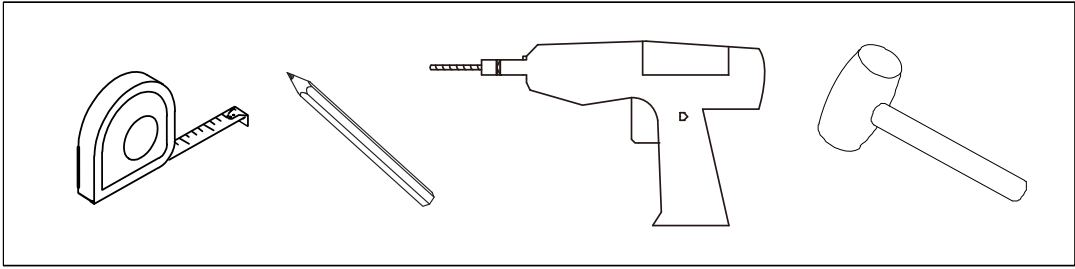     

STEP 16

N	×12
---	-----

 Φ5×20mm

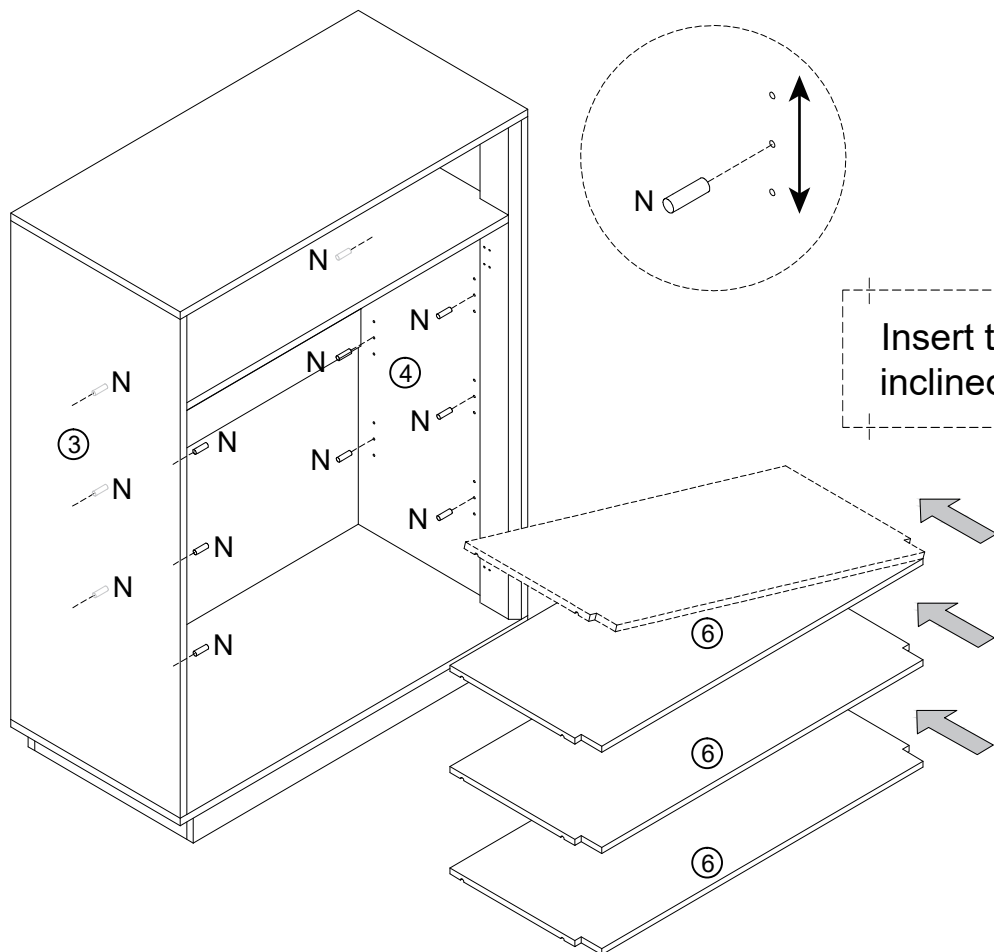

Insert the Panels at an inclined angle.

STEP 17

 
×10

x4

x4



x2

x2




M3×12mm

  M4×16mm

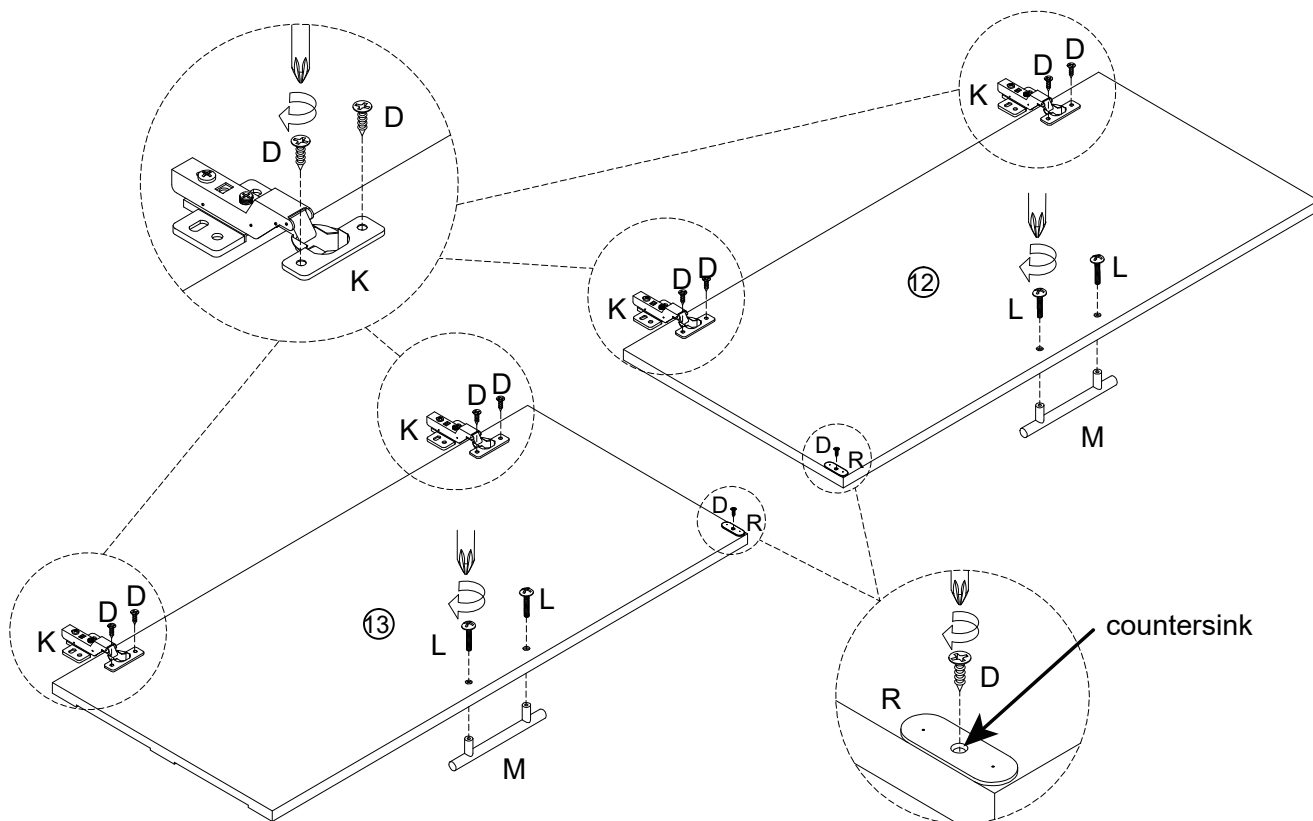



countersink

 STEP 18

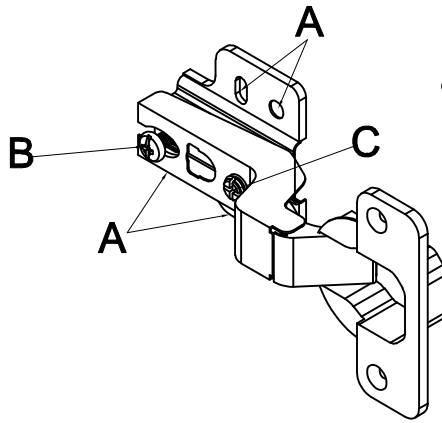

  YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

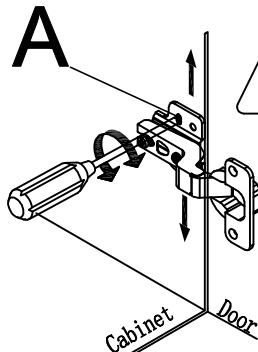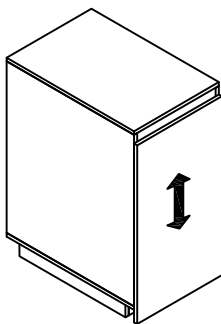



If you find a large gap above or below the door.

To adjust the vertical height.

Loosen the four screws "A" on both hinges.

Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.

  Then tighten back up.

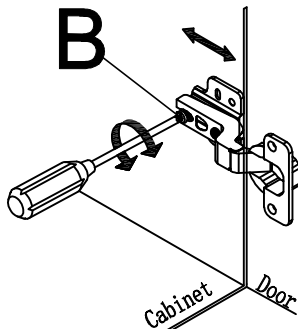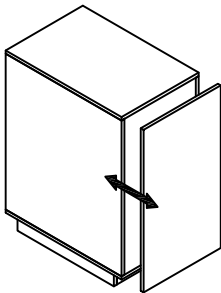







If you find the door is too protruding or too inside.

To adjust depth.

Loosen screw "B" on both hinges and move the door to suit.

If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again.

      Finally, tighten both screw "B" and reset both screw "C".

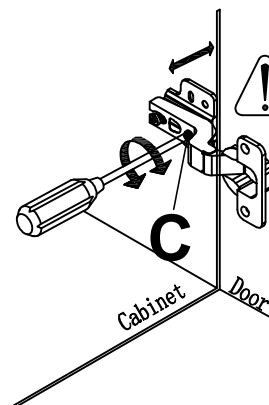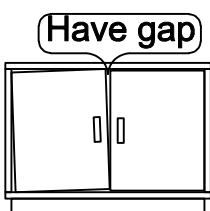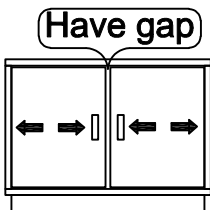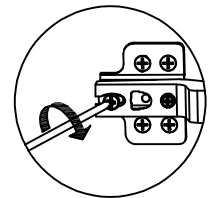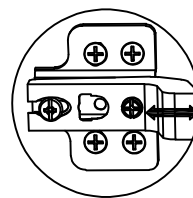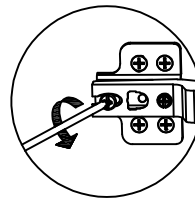


If you find a large gap between or beside the doors. Don't worry, it's not the problem with product.

To adjust side ways.


Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

STEP 19


 
D ×16

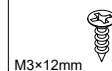

Have gap

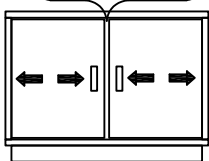 


Have gap

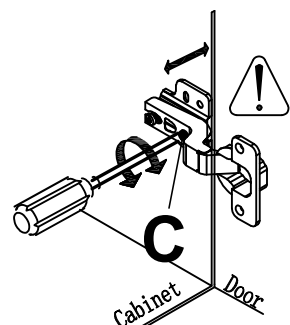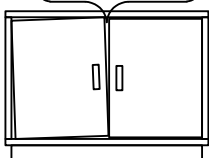  





If you find a large gap between or beside the doors. Don't worry, it's not the problem with product.

To adjust side ways.

 Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

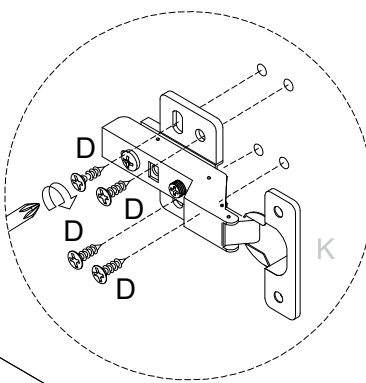

×4

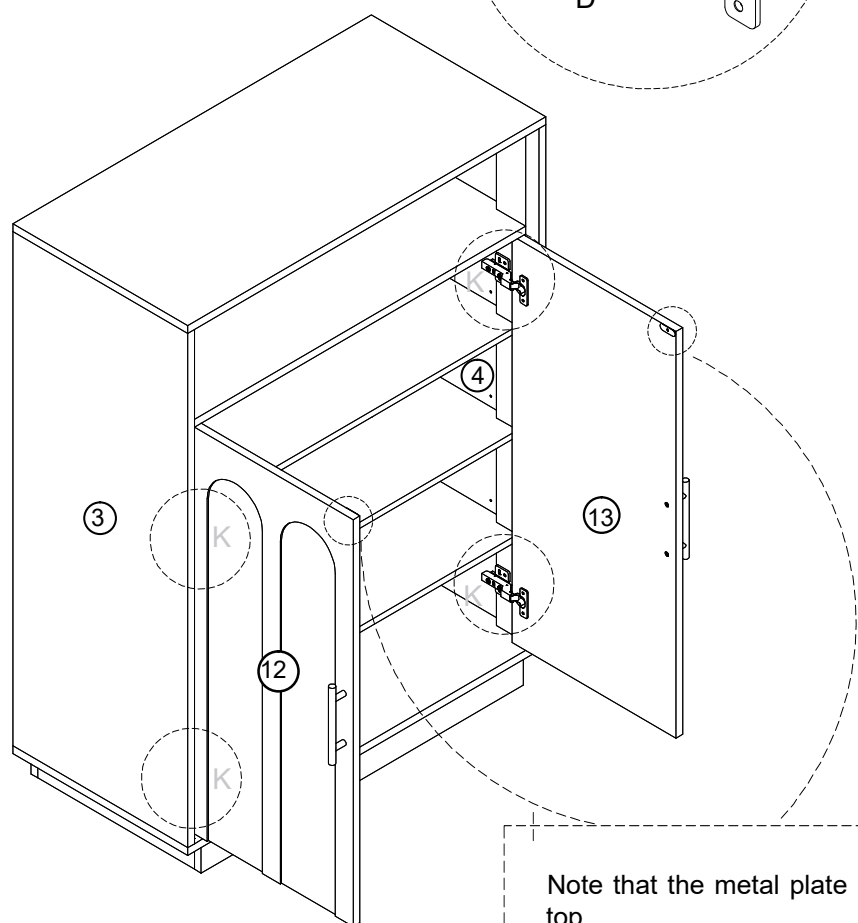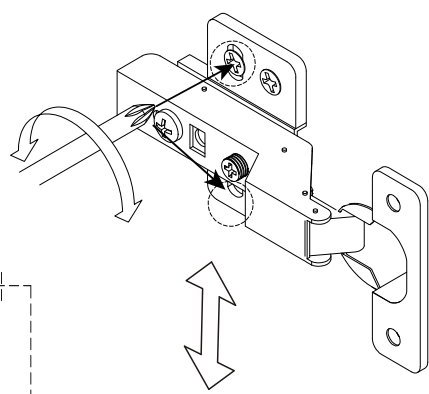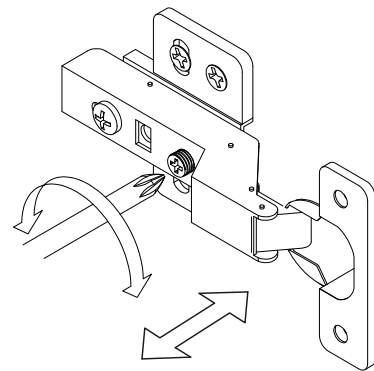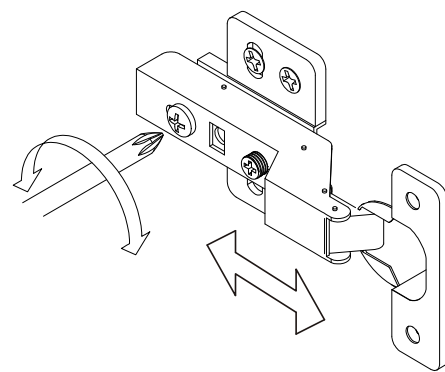    

Note that the metal plate is at the top.

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

⚠ ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

⚠ WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!