


ELECTRONIC GUN SECURITY CABINET

INSTRUCTION MANUAL

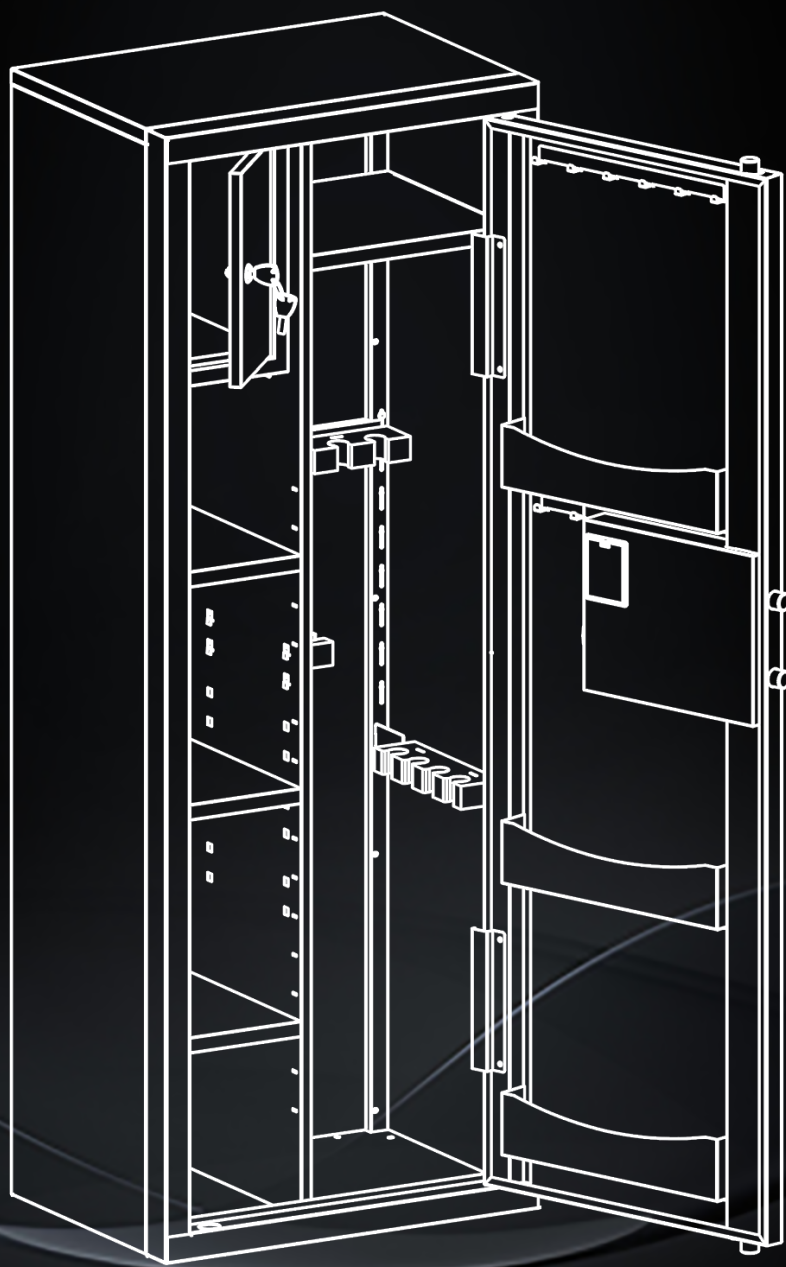



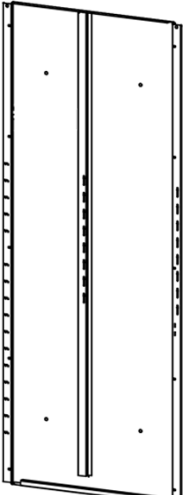

 
 

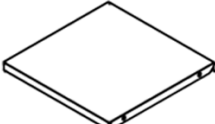

 
 
 
 
 









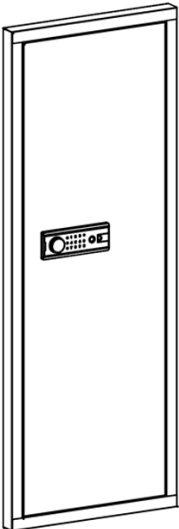

 Keep children or unauthorized persons away from your guns


COMPONENT DESCRIPTION

Hi friend,

Thank you for your purchase, please take a few minutes to read the instruction manual for better use of the product. If you have any questions, please contact the seller for your service.

| | | | | |
|--|---|--|---|---|
| Door Frame 1 Pc  | Side Panel-L 1 Pc  | Middle Partition 1 Pc  | Side Panel-R 1 Pc  | Back Panel 1 Pc  |
| Top Panel 1 Pc  | Bottom Panel 1 Pc  | Inner Door with Frame 1 Pc  | Internal Cabinet Base Plate 1 Pc  | Right Side Partition 1 Pc  |
| Left Side Partition 3 Pc  | Left Gun Bracket 1 Pc  | Right Gun Bracket 1 Pc  | Back Gun Bracket 1 Pc  | Side Gun Rack 2 Pc  |
| Back Gun Rack 1 Pc  | Buckle 12 Pc  | Self Tapping Screw 51 Pc  | Plastic Screw 4 Pc  | External power box  |
| Screwdriver 1 Pc  | Gloves  | Expansion bolt  | Keys  | Instruction  |

STRUCTURAL SCHEMATIC

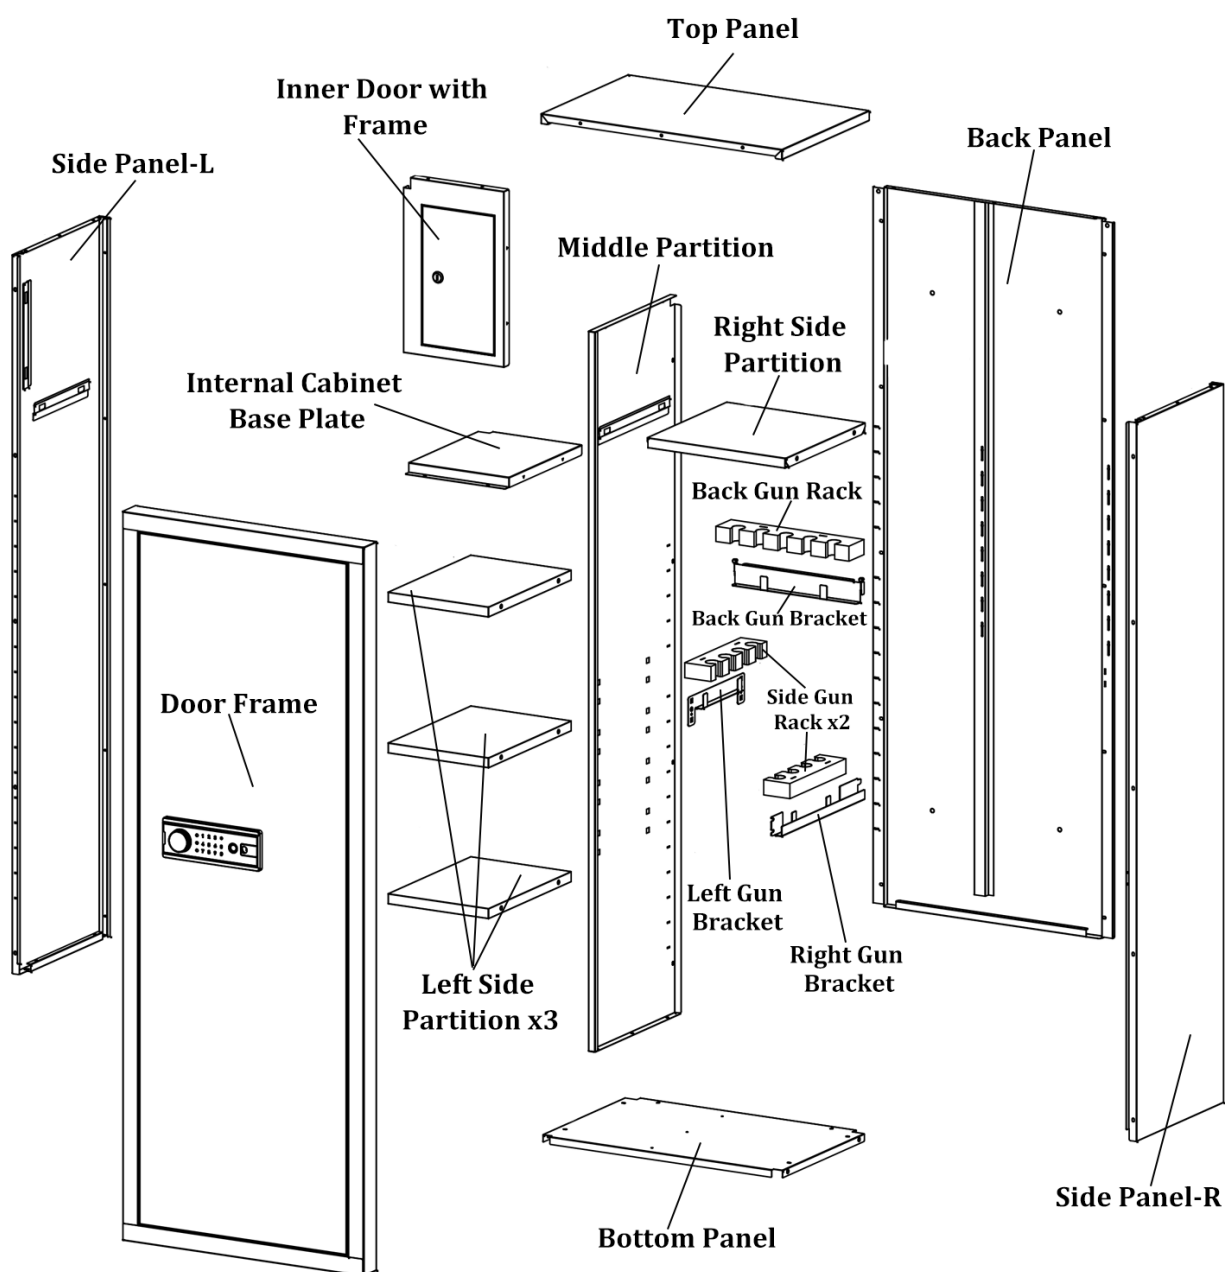

- Please refer to the illustration to identify the parts and accessories of the gun cabinet and check the materials to ensure that they are not damaged.
- During the installation process, please pay attention to loosen the nuts to ensure that all external panels are correct, and tighten the nuts after all panels are assembled.
- If any parts are missing or the goods are damaged, please contact us and we will provide you with a satisfactory solution.



WARNING




Tip Over Hazard

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.

INSTALLATION INSTRUCTIONS

 X10

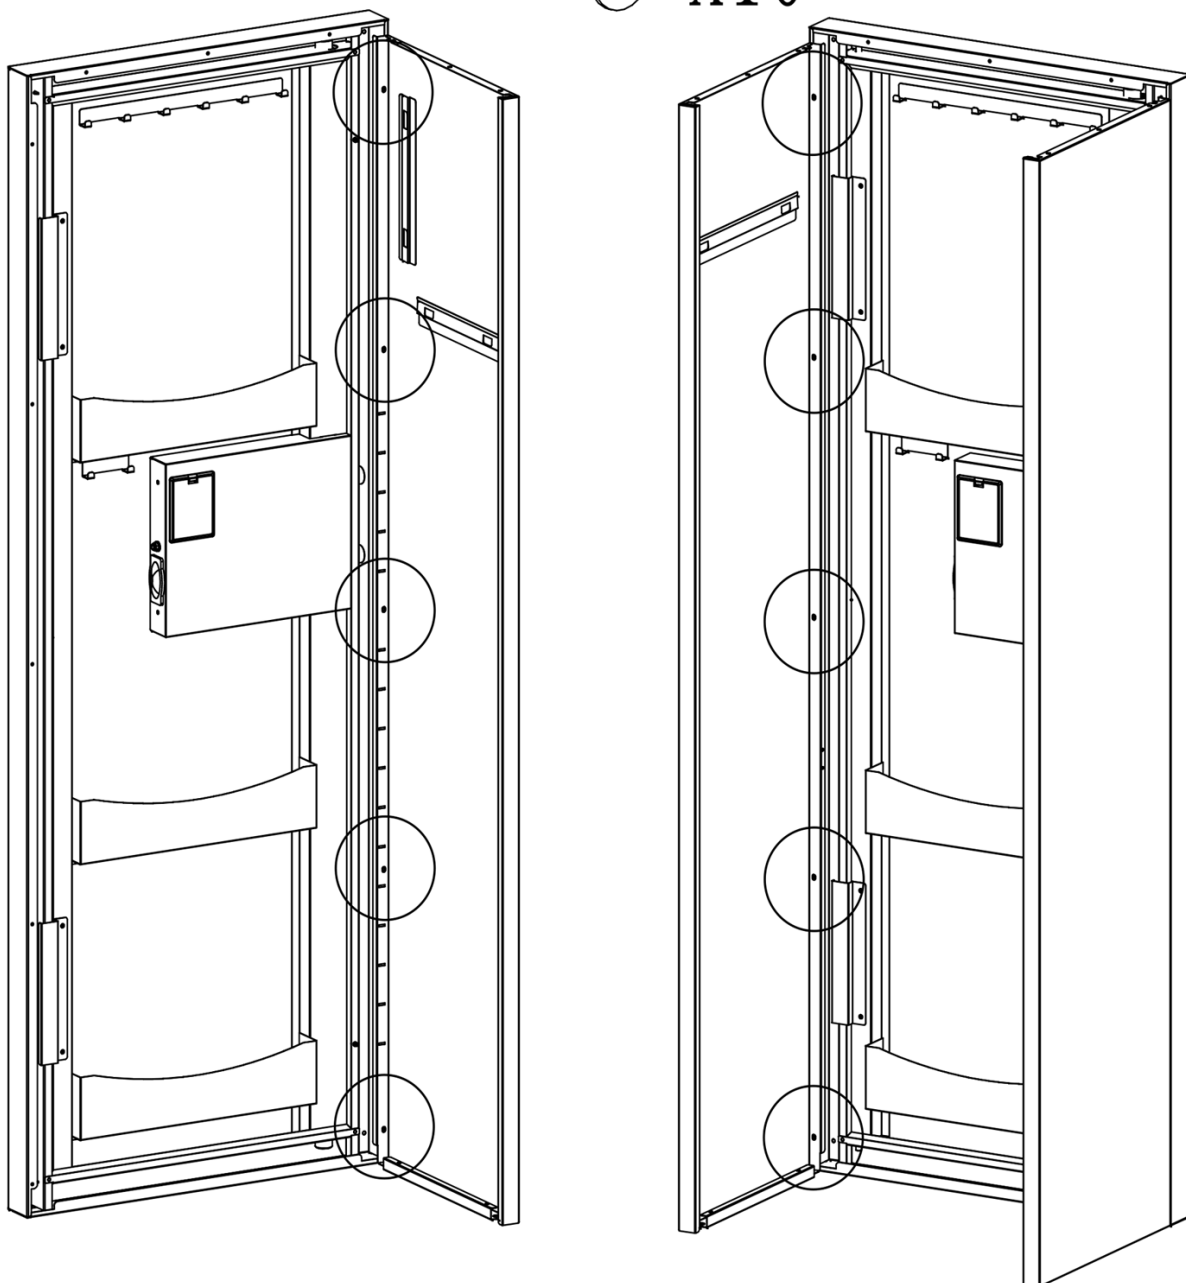


Step 1:

Connect the door frame to the left and right side panels with self-tapping screws.

INSTALLATION INSTRUCTIONS

 X10

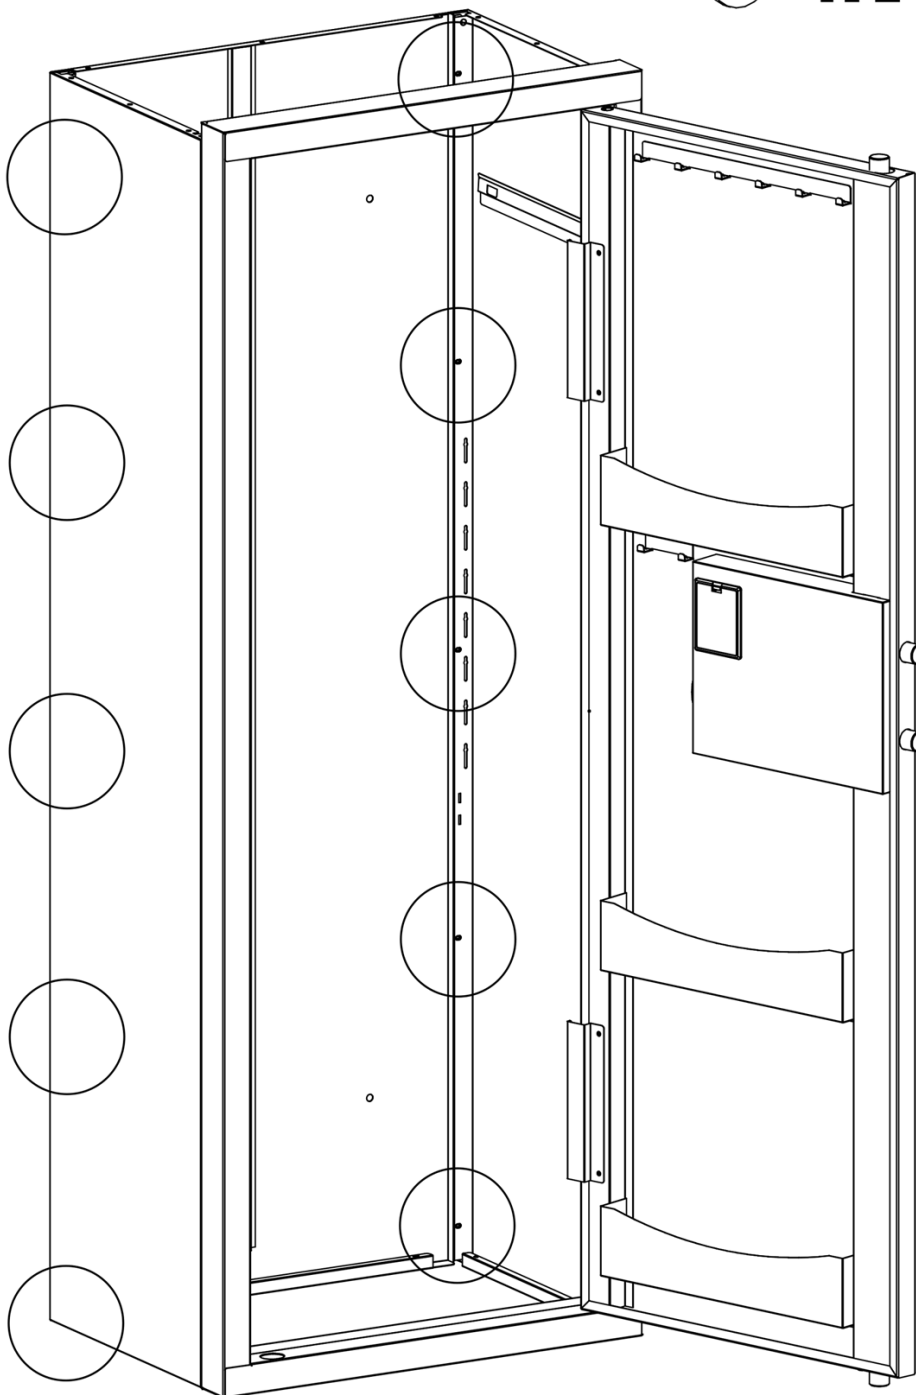


Step 2:

Connect the back panel to the left and right side panels with self-tapping screws.

INSTALLATION INSTRUCTIONS

 X12

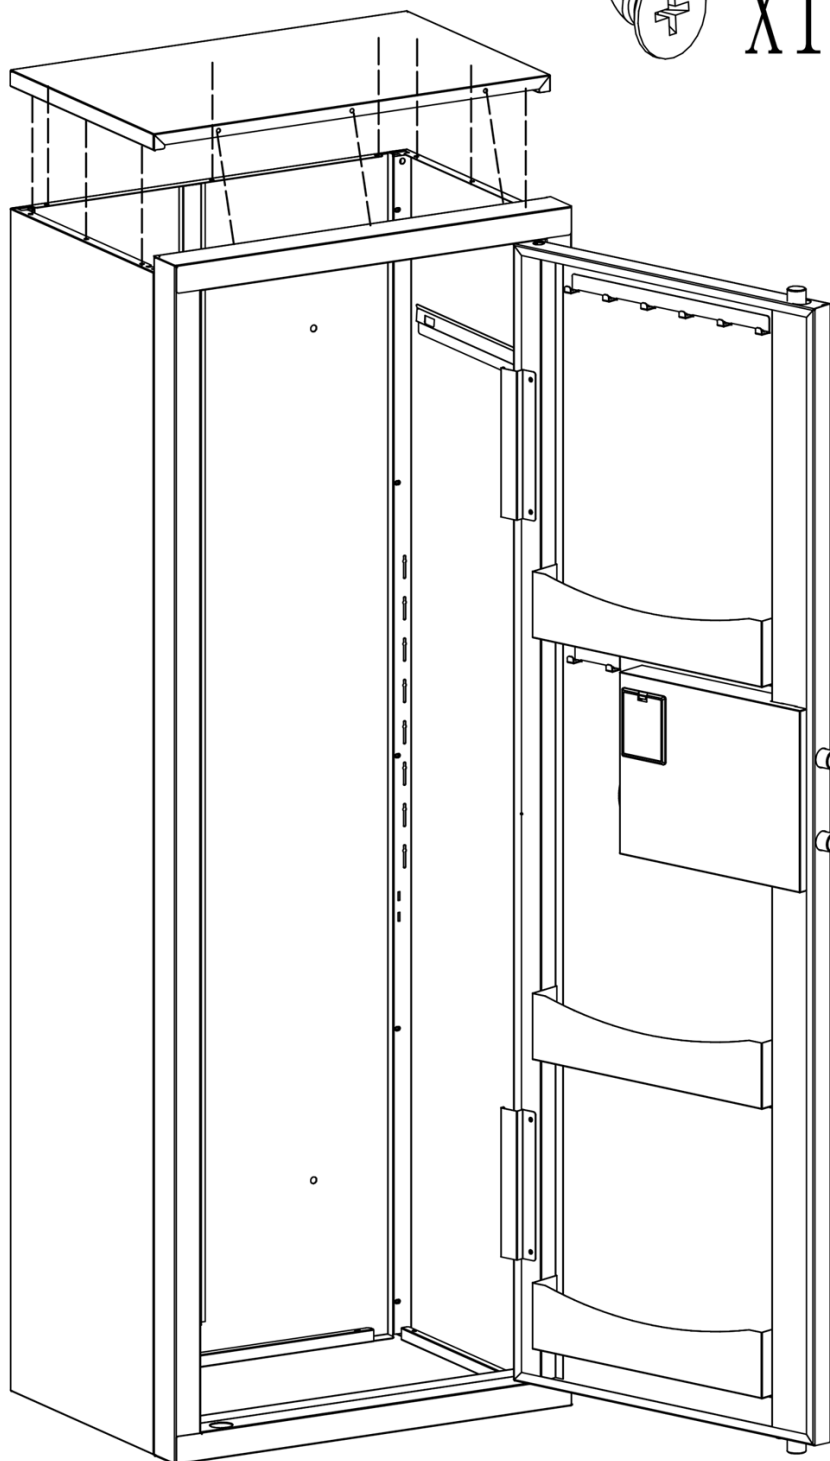


Step 3:

Install the top panel and connect it to the top with self-tapping screws.

INSTALLATION INSTRUCTIONS


 X6

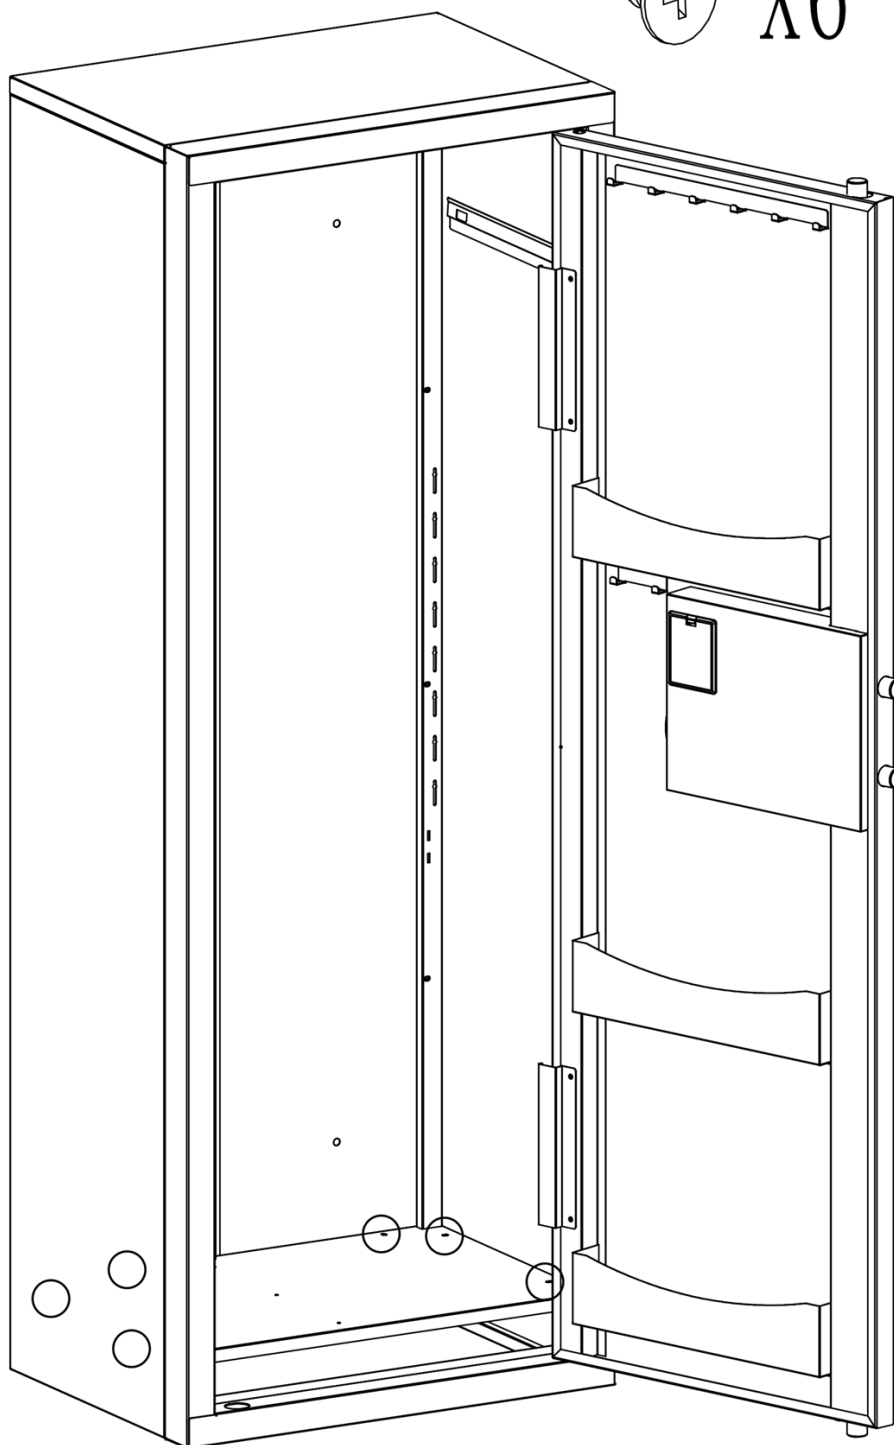

Step 4:

Install the bottom panel and connect it to the bottom with self-tapping screws.


INSTALLATION INSTRUCTIONS

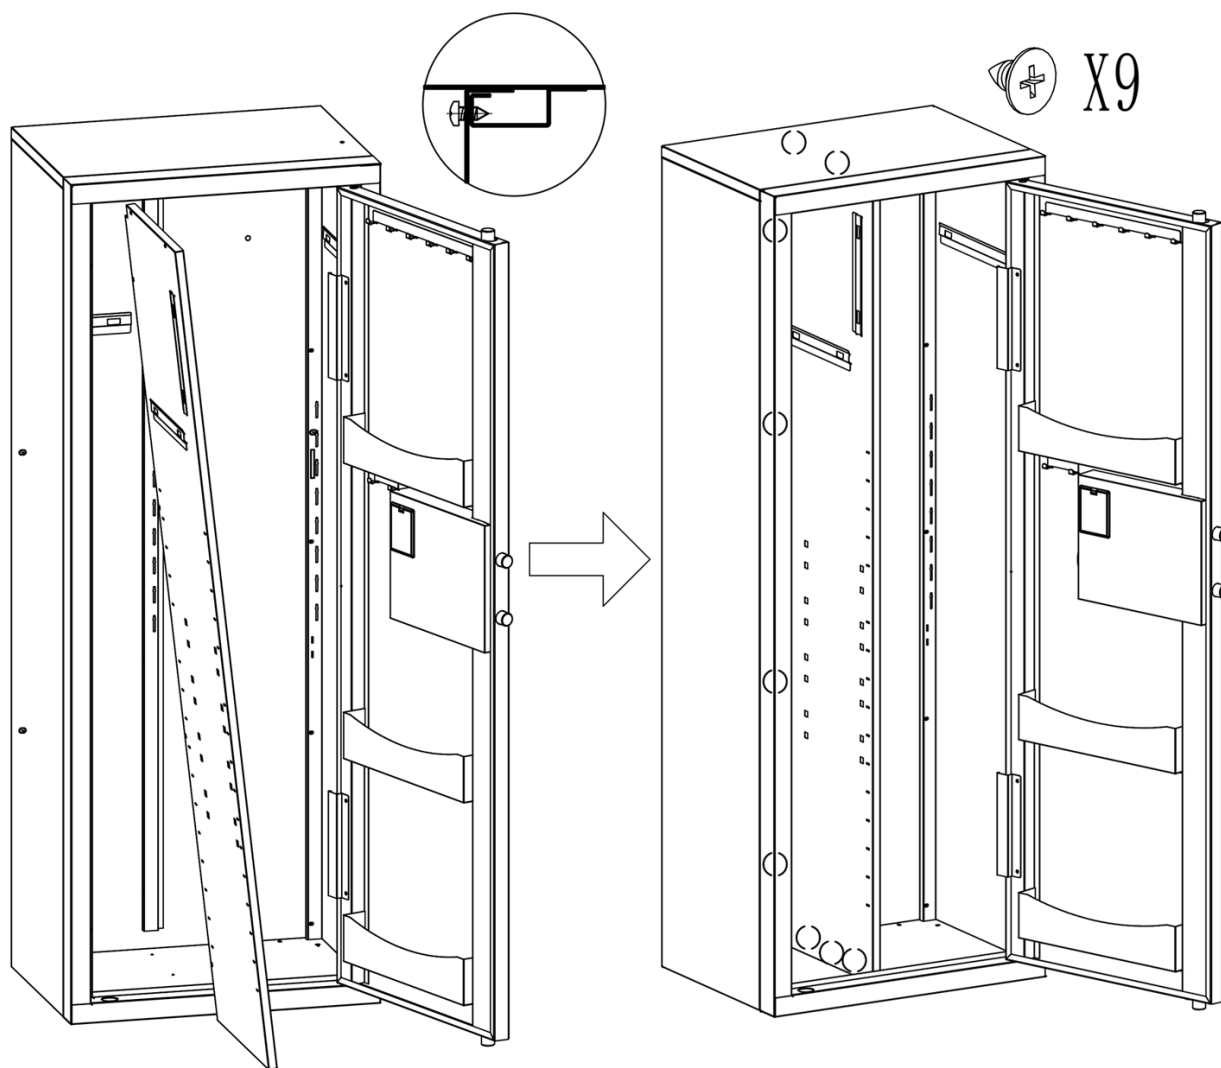

Step 5:

Tilt the middle partition into the cabinet, snap them into the back and top mounting brackets respectively, and then connect them with self-tapping screws.


INSTALLATION INSTRUCTIONS

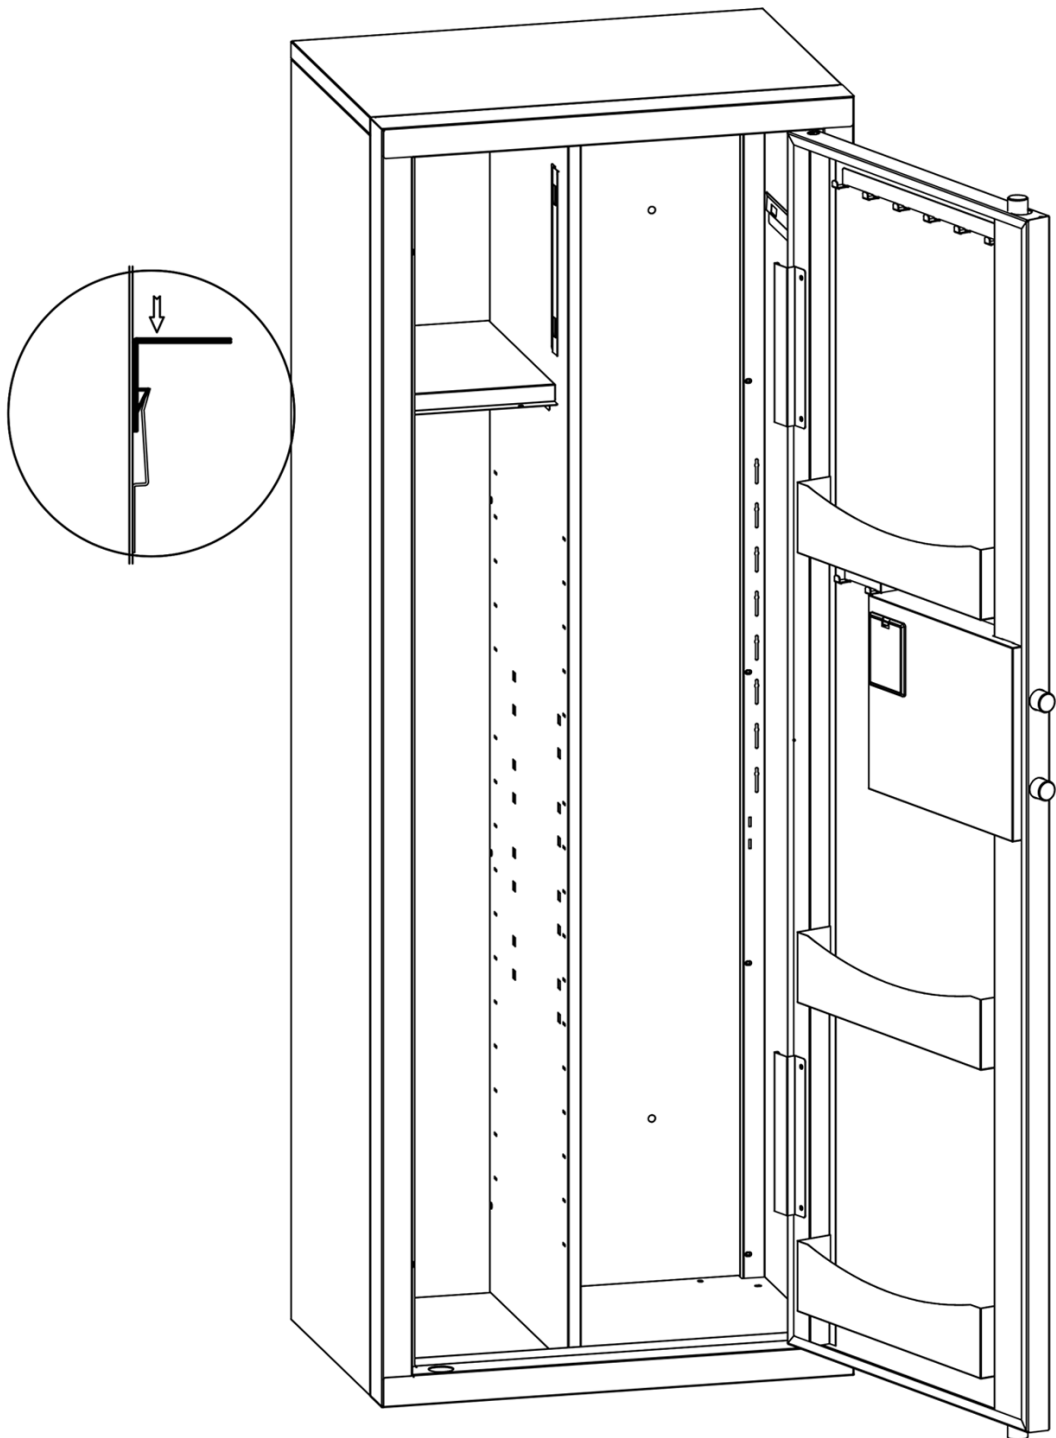

Step 6:

Snap the internal cabinet base plate into the slot.


INSTALLATION INSTRUCTIONS

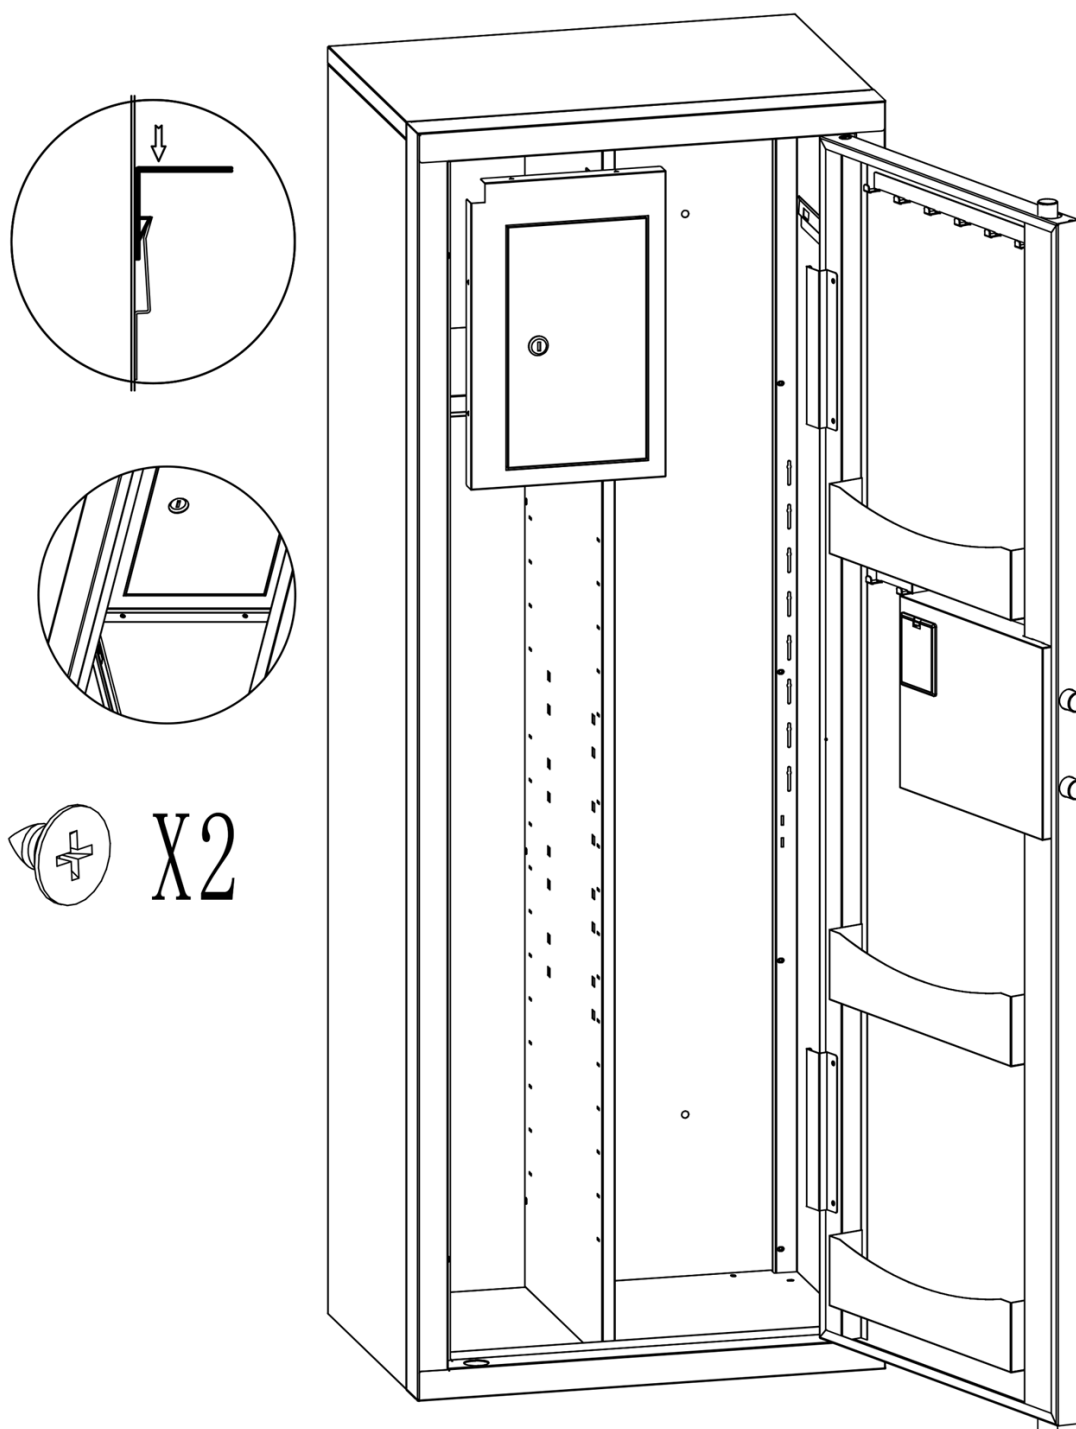

Step 7:

Place the inner door with frame into the cabinet at an angle from the front and snap into the slot, use self-tapping screws to attach to the base plate.


INSTALLATION INSTRUCTIONS

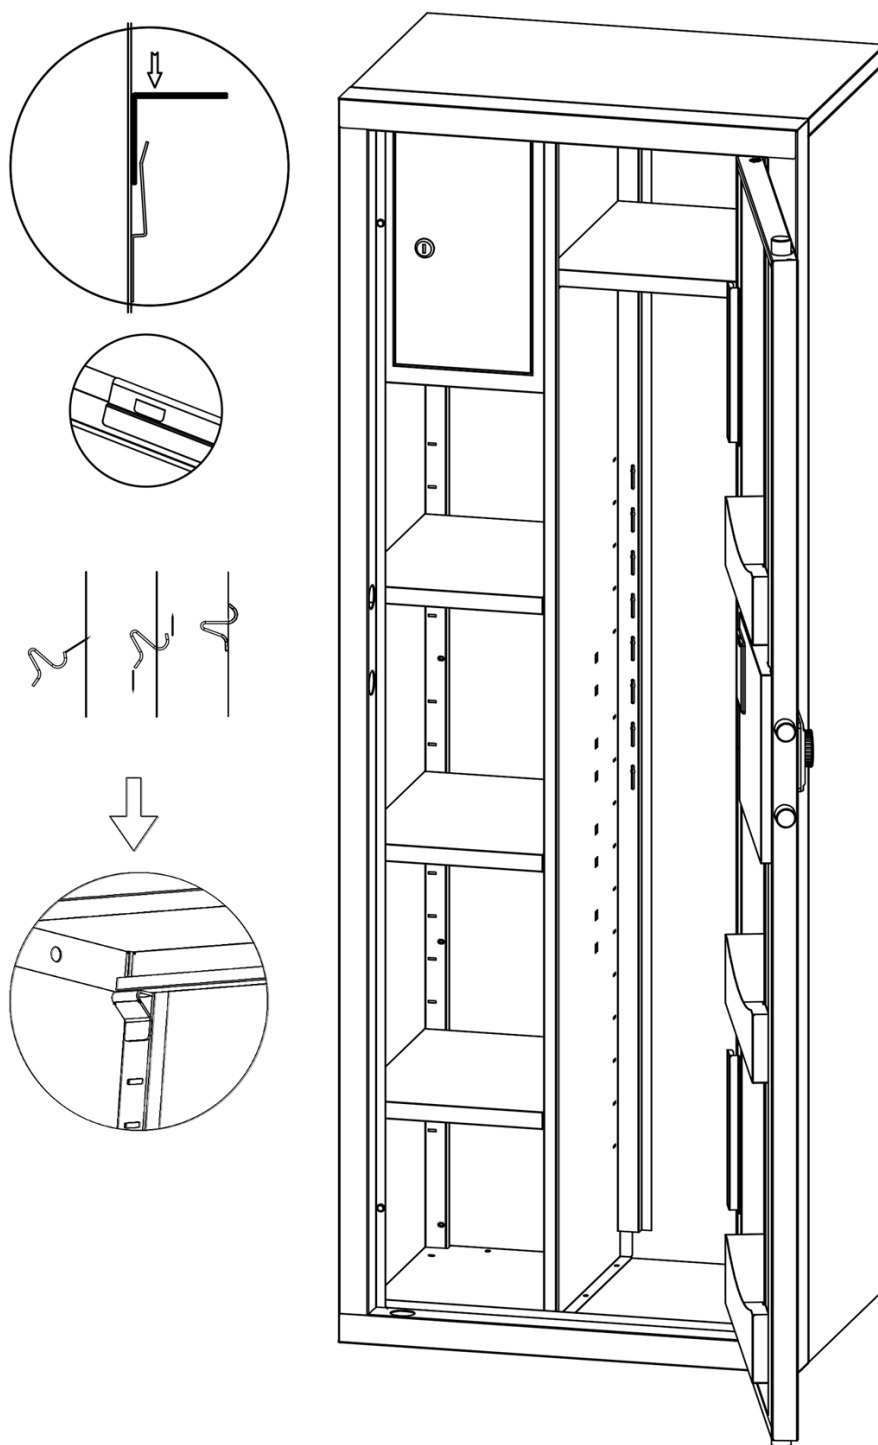

Step 8:

The left side partition are supported using buckles, and the right side partition is placed in slot.


 
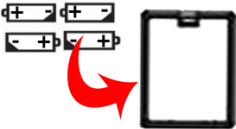

INSTALLATION INSTRUCTIONS

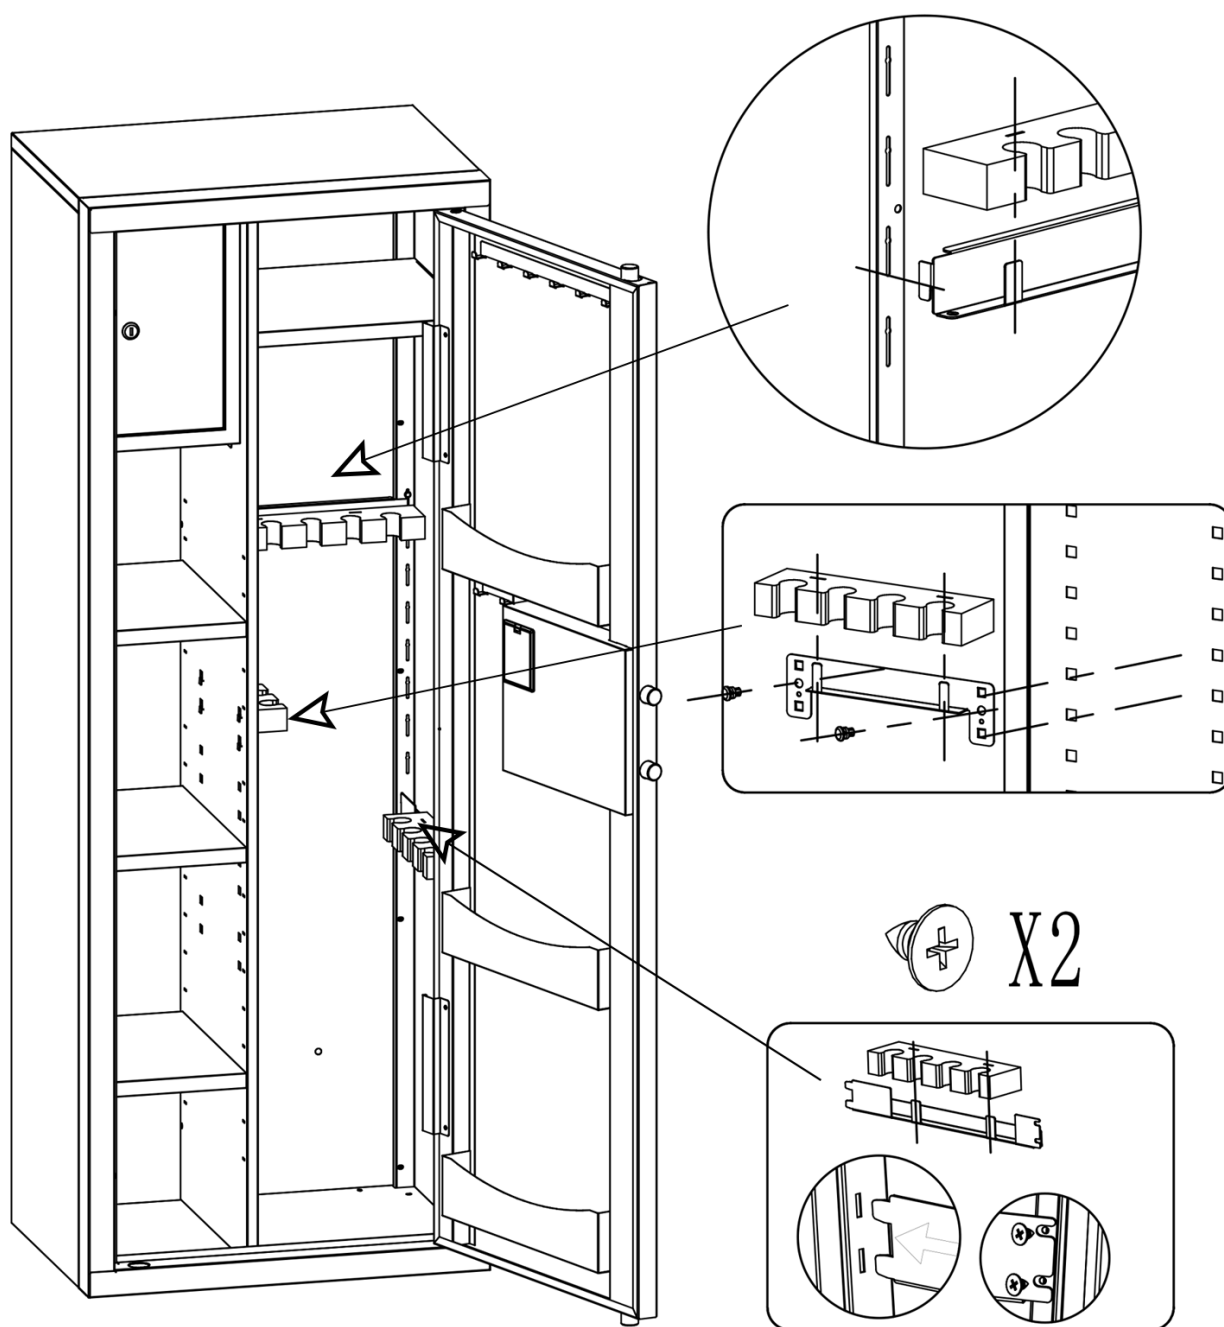

Step 9:

Install the 3 types of gun racks as shown in the picture.

THE FIRST TIME OPENING

| | | | |
|---|---|---|---|
| 1.Insert the key |  | 2.Turn the handle |  |
| 3.Insert 4 AA alkaline batteries (not included) |  | Please do not use rechargeable or different brands of batteries |  |

PERSONAL PASSWORD SETTING

Original factory password: 123456

This gun safe can be set with a manage password

SET UP THE FIRST PASSWORD

1. In the open state, press the green setting button inside of the gun cabinet, the buzzer will sound once and the keyboard light on.



2. Enter any new 3-12 digits code, press the "#" button to confirm. The buzzer will sound once and the indicator light will be off. Password is set successfully.

Note: After setting your password, please test the new password to ensure it is valid.

SET UP THE MANAGE PASSWORD

1. In the open state, press '00', the keyboard light on. Then press the green setting button inside the door.

2. Enter another new code within 3-12 digits, and then press "#" key to confirm. The buzzer sound and the blue indicator light will be off, the manage password is set successfully.

HOW TO OPEN THE GUN SAFE

1. Touch any code on the keyboard to wake up the keyboard, And enter the password you set.

2. Press the "#" key to confirm, the blue indicator light is on, and the buzzer beeps twice, indicating that the password is entered correctly.

3. Turn the handle clockwise.

NOTE: This gun safe has 3 (5) times password error, automatic alarm 30 seconds or 1 minute, enter the correct password can eliminate the alarm sound

SYSTEM INITIALIZATION

Press the green setting button for 5 seconds, the system will restore the initialized settings and clear all passwords.

LOW BATTERY ALERT

1. The gun cabinet uses four 1.5V alkaline batteries, if the voltage is insufficient to open the door after the continuous reminder of "beep" twice, the power indicator light flashes for about 30 seconds before shutting down, reminding you of the low battery. You need to replace the batteries promptly.

2. If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the safe.

*** This electronic lock has the function of no power protection code never disappear.**

MUTE MODE

1. Tap to activate the touch screen, enter "11#"

2. The buzzer "beep--" a long sound, indicate the mute and non-mute mode set successfully.

TECHNICAL PARAMETERS

1. Working power supply : 4 No. 5 "AA" alkaline batteries

2. Working voltage range : 4.2V-7V

3. Working undervoltage point : $4.6V \pm 0.20V$

4. Operating current : $\leq 380mA$

5. Static current : $35\mu A$

Q

What if I lose my keys?

A

Please contact us by email for the key code (the code is next to the keyhole) and we will make a replacement for you!

Q

What if the battery is run off?

A


Open the battery box cover, Insert 4AA batteries, Insert the external battery box hole and enter the code to open the gun safe

Easy Installation

1. Drill appropriately sized holes wherever you like.

2. Hand thread the expansion screws through the pre-drilled holes in the safe.

3. Tighten the screws and check that they are secure.

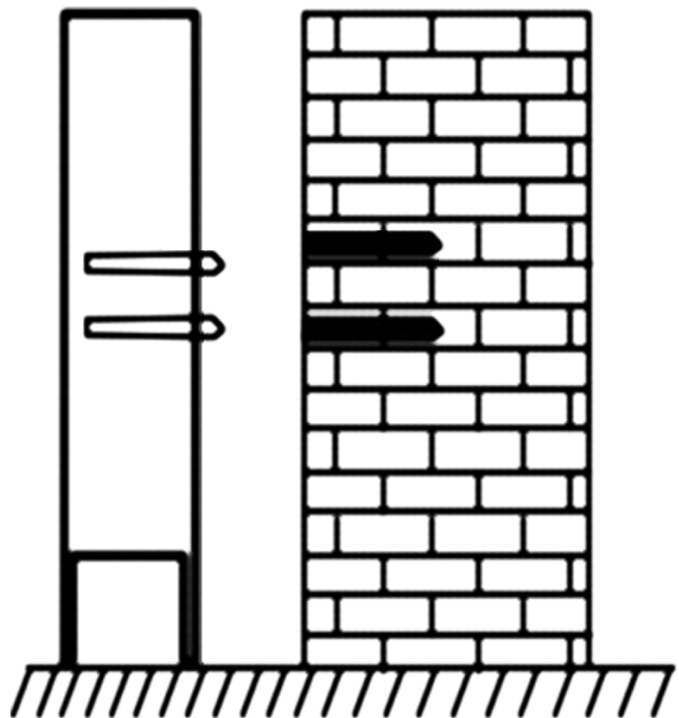

WARNING



Tip Over Hazard

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.

PERFECT SERVICE

Hi, my order number is
111-*****, I have problems
with.....



Dear Customer.
Thank you very much for contacting us .
Could you please describe your problem in
detail?
Attach a picture so we can solve it faster.
We will provide you with a satisfactory
solution.
Best wishes to you!

TOP QUALITY, AFFORDABLE SECURITY!