




Learniture
Smart School Furnishings™

Collaborative Table Legs

Model# LT-LNTLEGCTSTR-4-XX

Model# LT-LNTLEGCTSTR-6-XX

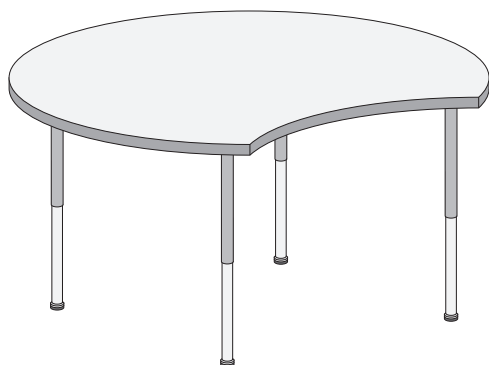

WARNING:

Adult Assembly Required

- Two adults recommended.
- Contains small parts, sharp points and edges.
- Do not stand, sit, kneel, climb, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.

TOOLS NEEDED

+ Phillips Screwdriver



Parts List

BEFORE ASSEMBLING, MAKE SURE YOU HAVE ALL THE PARTS

| | | | | | | | | | |
|----------|-------------------------------|----------|---------------------------------|----------|-----------------------------|----------|-------------------------------|----------|--------------|
| A | Upper Leg Support (4 or 6) | B | Lower Leg Extension (4 or 6) | C | Table Leg Glide (4 or 6) | E | Hex Screws (8 or 12) | G | Hex Tool (1) |
| | | | | | | | | | |
| | | | | D | Locking Caster (4 or 6) | F | Phillips Screws (12 or 18) | H | Wrench (1) |
| | | | | | | | | | |



1

Install Upper Leg Supports into Receiver Plates

Slide the base plate of the **Upper Leg Support (A)** onto the receiver plate, until the three pilot holes on the table are aligned and visible through the corresponding holes on the leg base plate.

Install each **Upper Leg Support (A)** onto the Table Top with three **Phillips Screws (F)** using a Phillips screwdriver.

Do not over tighten screws.

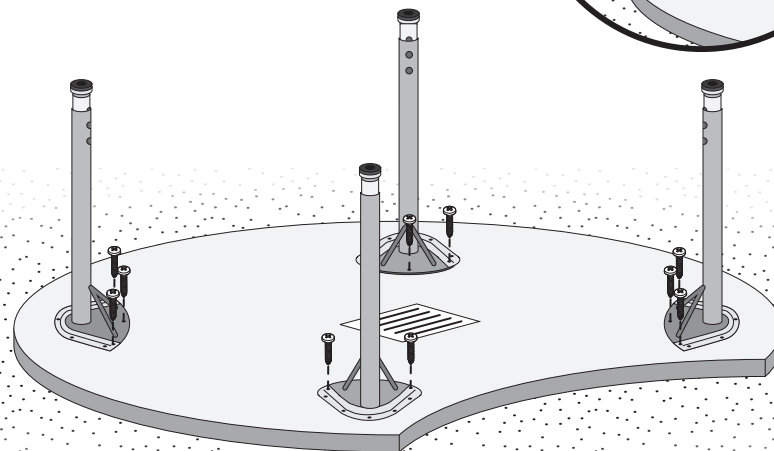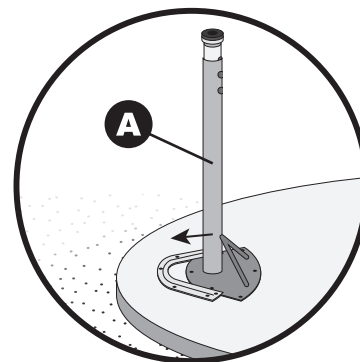


See Next Page

2

Leg Height Adjustment and Installation

To adjust the table height, remove the two pre-installed **Hex Screws (E)** using the **Hex Tool (G)** from the **Upper Leg Support (A)** to move the **Lower Leg Extension (B)** up or down. The holes are spaced 1" apart, the lowest setting will set the Table Top at 20", the highest setting will set the Table Top at 30".

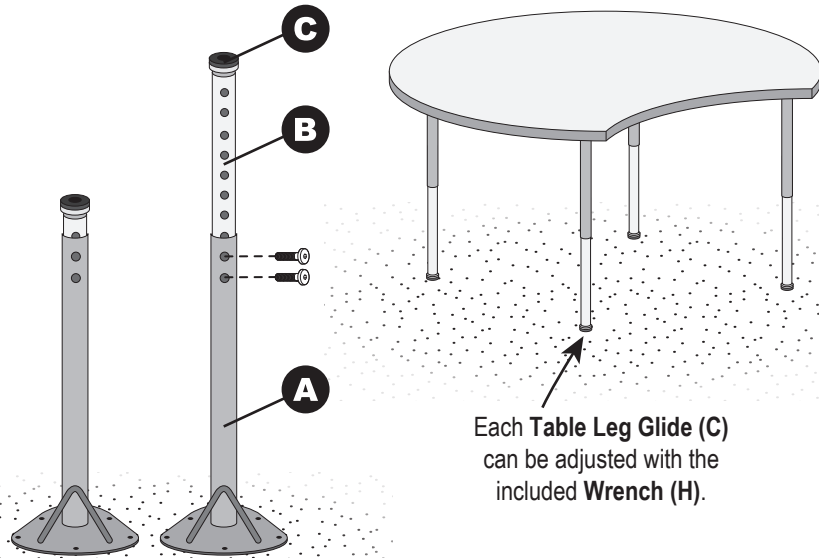

Learniture
Smart School Furnishings™

**QUESTIONS? CONTACT CUSTOMER SERVICE:
(866) 619-1776**




WARNING :

- Do not stand, sit, kneel, climb, or lean on table for support.

3

Optional Locking Casters

Each **Table Leg Glide (C)** can be removed and replaced with a **Locking Caster (D)** using the included **Wrench (H)**, allowing the table to be mobile for collaborative learning environments.

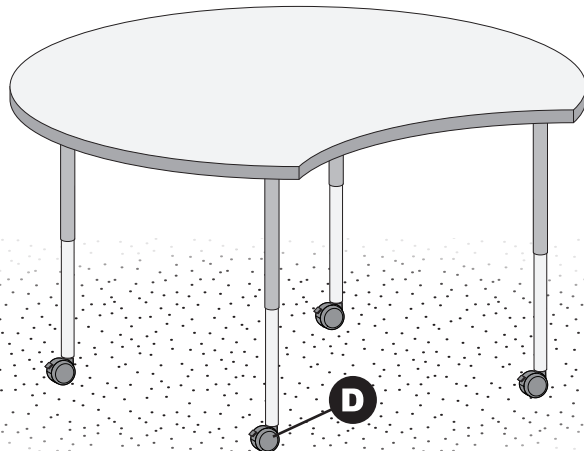

Care and Cleaning

Clean unit with a damp cloth or sponge using warm water and mild soap. Wipe dry.

Do not place near heat, moisture or vaporizer which may cause panels to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.