


Step 4

Tip the sofa upside down first. Install the front legs (F) and tighten them to the right. Then install the rear legs (G), aligning the metal plates with the holes.

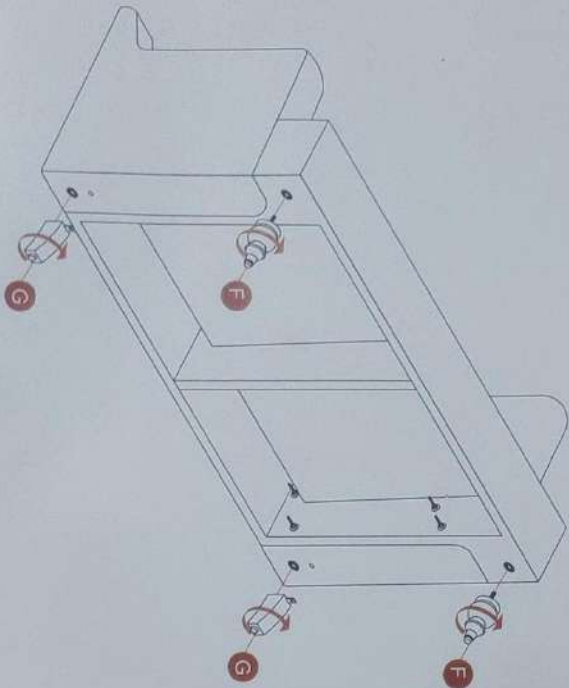


- 6 -

Step 5

First, pass the flat washer (9) and spring washer (8) through the hexagon socket screw (6), then align and insert the hexagon socket screw into the hole. Finally, tighten it with the hexagon socket wrench (7).

6		X 2	D5/16"x1"
7		X 1	Allen key 5mm
8		X 2	D3/8"
9		X 2	D5/16"x19mm

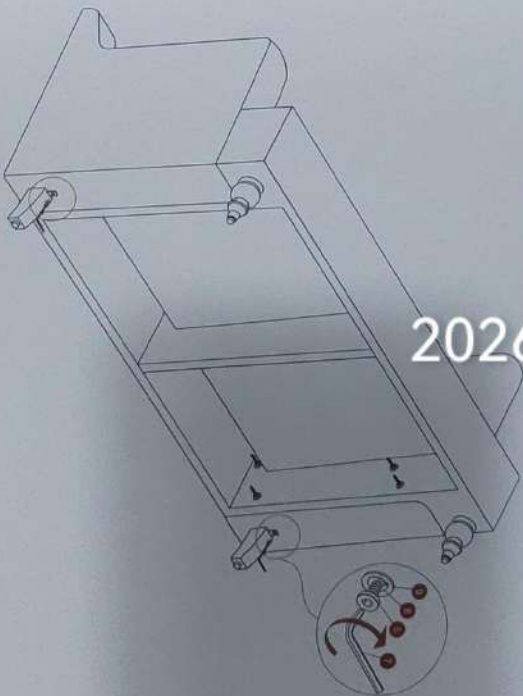


- 7 -

2026/05/10 14:55

Step 6

Take the backrest (D), align it with the two pins at the rear of the armrest, then insert and secure it.

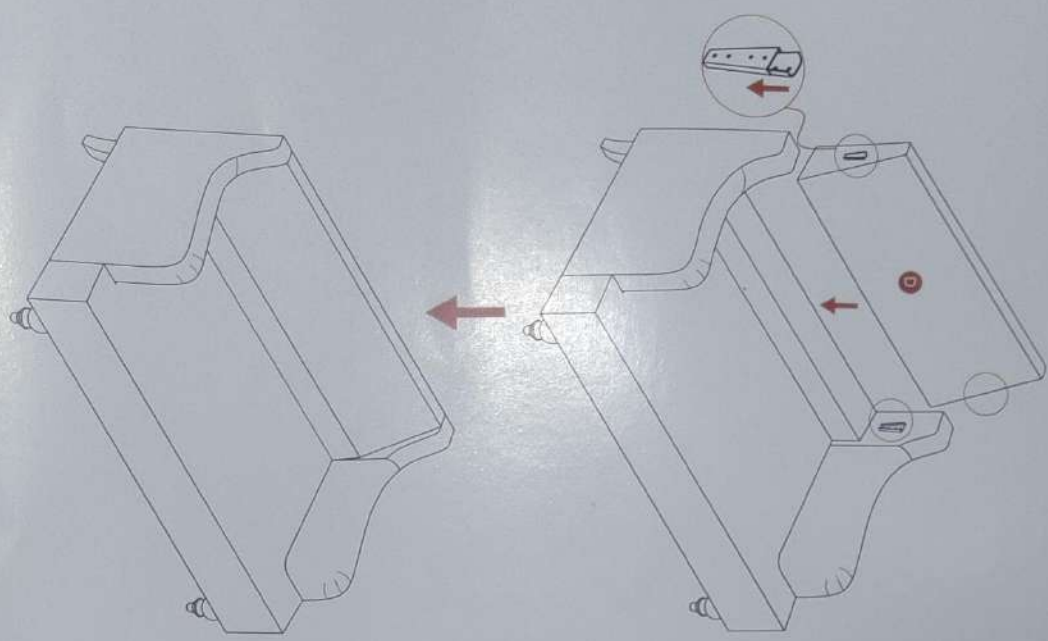


Step 7

Two people unfold the folded cover (C), lift the four corners of the cover (C), and fit it over the sofa from top to bottom.



Note:
The operation takes two adults to complete.

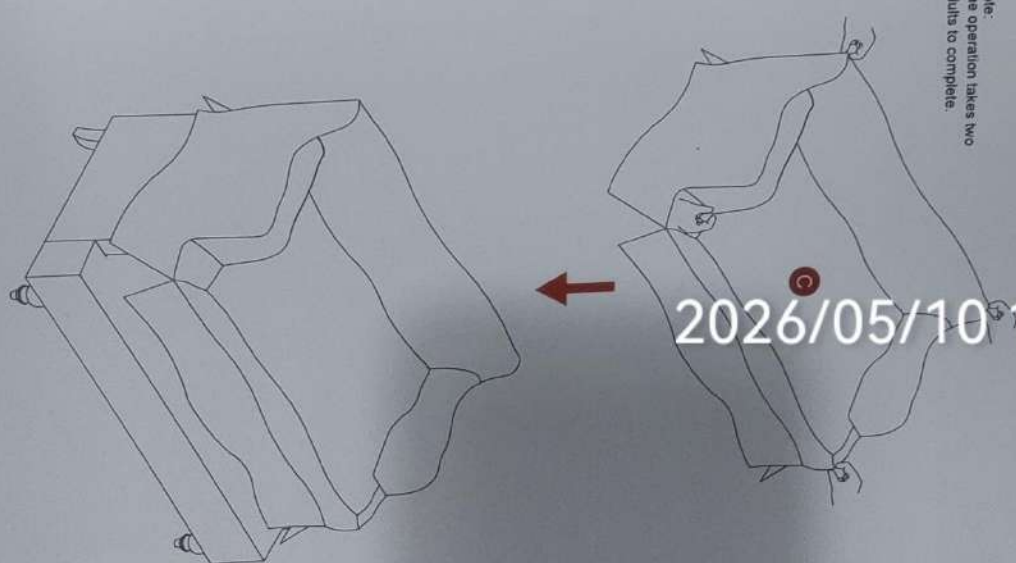


2026/05/10 14:55

Step 8

After fitting cover (C) onto the sofa, pull the four corners into position and adjust evenly to ensure uniform tension across the fabric.




Note:
The operation takes two adults to complete.

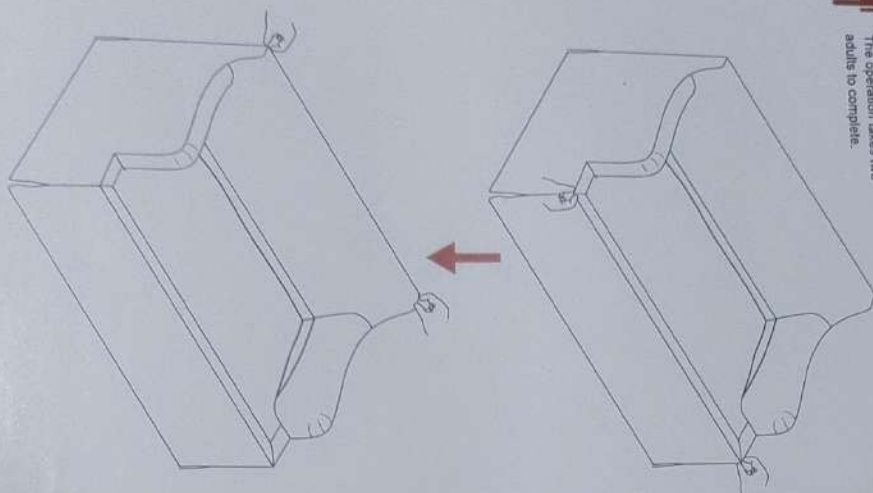

- 10 -

Step 9

Smooth out and press firmly the fabric covering the armrests, peel off the Velcro around the inner frame, then press evenly to secure.

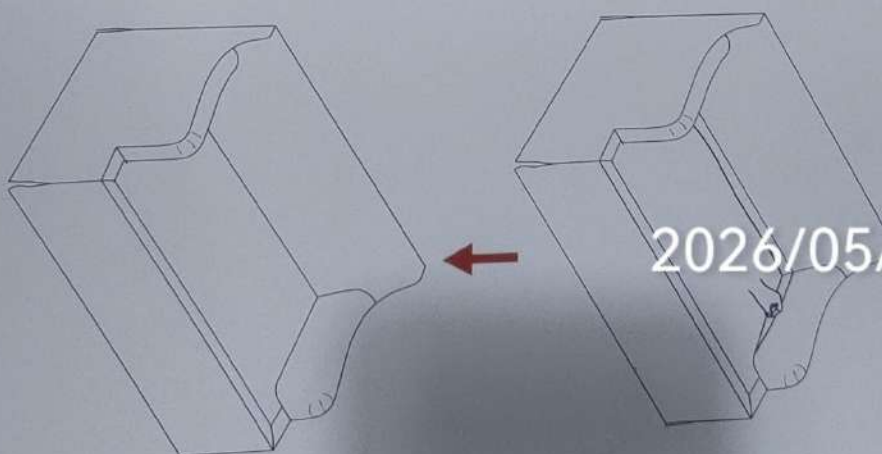


- 11 -

2026/05/10 14:55


Step 10

First peel off the Velcro on the bottom of the seat cushion (B), then place the seat cushion upside down onto the seat frame

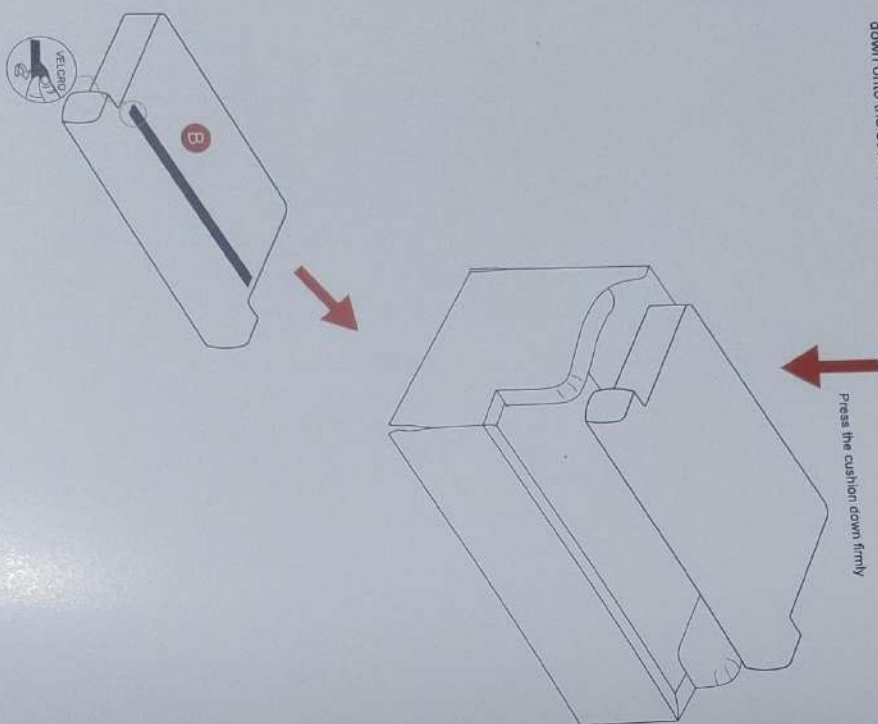

Step 11


Place the back cushion (E) against the sofa backrest.

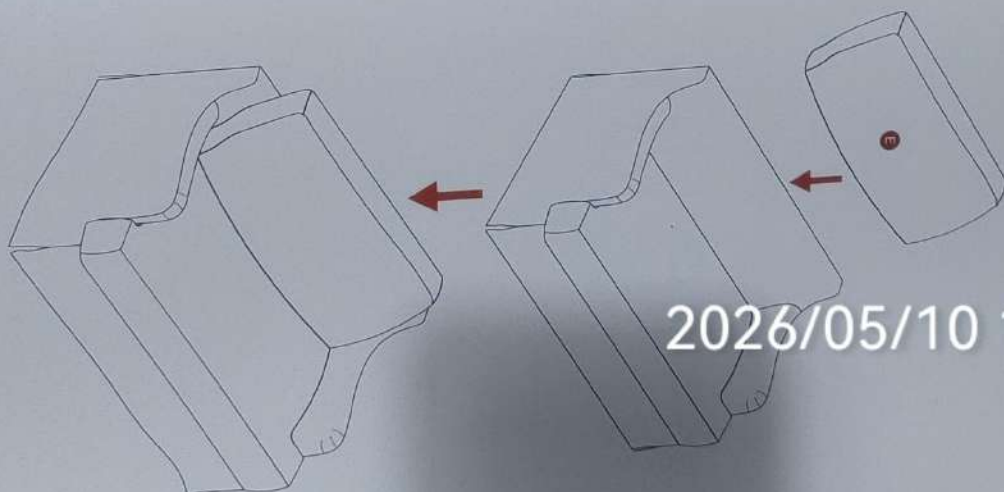

2026/05/10 14:55

Step 12

rendering

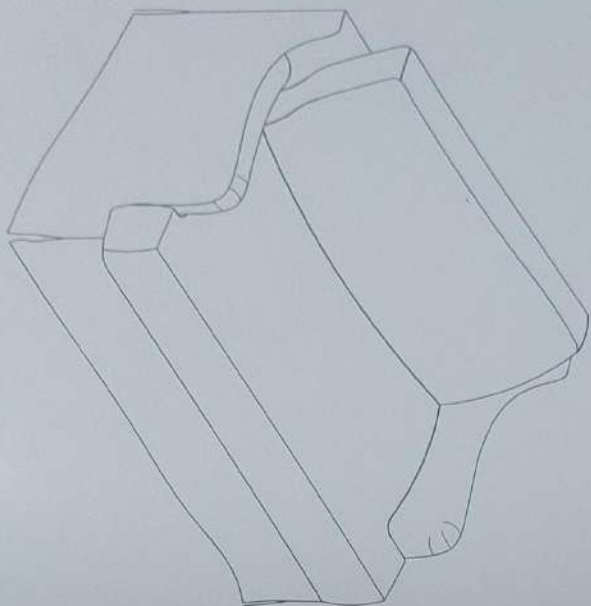

HULALA[®]
HOME

Adaptive Design, Effortless Living.

2026/05/10 14:55

WWW.HULALAHOME.COM

Email: customerservice@hulalahome.com

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)



Warranty

▲ We strive to offer high quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period. You may also still receive replacement parts by purchasing them with our company if they are available.

▲ Are you having difficulty with assembly? Missing parts? Please send email with your order number to customerservice@hulalalhome.com


▲ For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.

Exploded Diagram

Please confirm that you have received all 2 boxes (A/B), then begin the assembly!

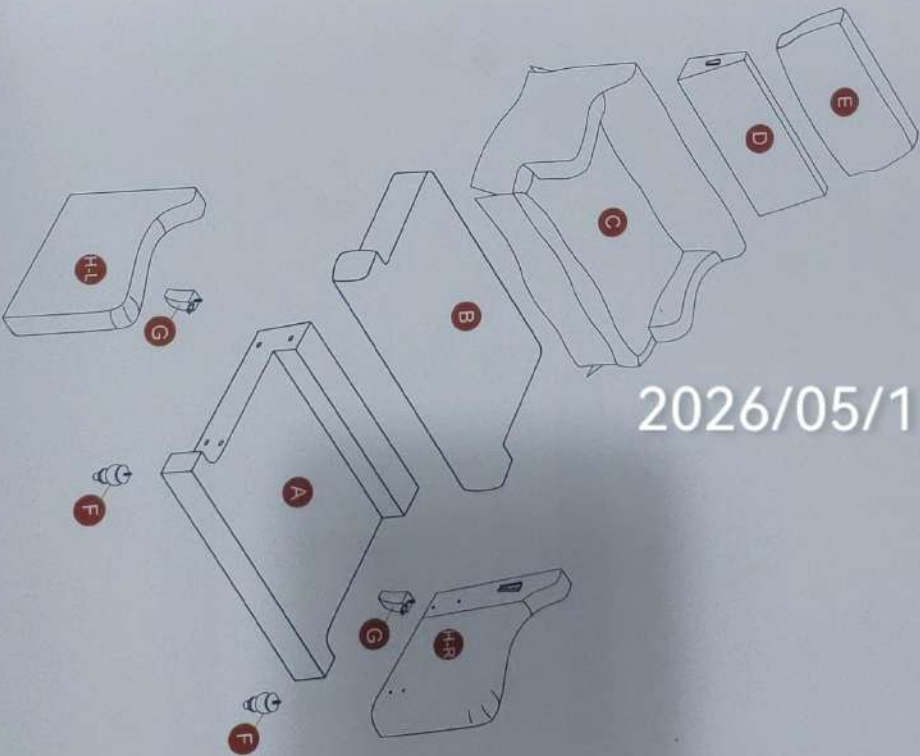

2026/05/10 14:55

Parts List (Carton A)

- A** ×1 
 - B** ×1 
 - C** ×1 
 - D** ×1 
 - E** ×1 
 - F** ×2 
 - G** ×2 
- seat frame
- cushion
- cloth cover
- back rest
- back pillow
- front leg
- back leg
- You can find them (F, G) inside bottom of seat A in the accessory box!

Hardware List (Carton A)

You can find hardware list inside bottom of seat A in the accessory box!

- 1** ×8+1 
- 2** ×1 
- 3** ×8+1 
- 4** ×8+1 
- 5** ×8+1 
- 6** ×2 
- 7** ×1 
- 8** ×2 
- 9** ×2 
- D5/16"×4"** 
- L3-1/2"×3-1/2"** 
- 5/16"×D1/2"** 
- D7/8"** 
- D3/8"** 
- D5/16"×1"** 
- Allen key 5mm**
- D3/8"**
- D5/16"×19mm**

Parts List (Carton B)


- H-L** ×1 
 - H-R** ×1 
- left armrest
- right armrest

Assembly Instructions

Step 1

Align the screw (1) with the holes on the left and right armrests (H-L, H-R) and tighten it.

- 1**  ×8 **D5/16"×4"**

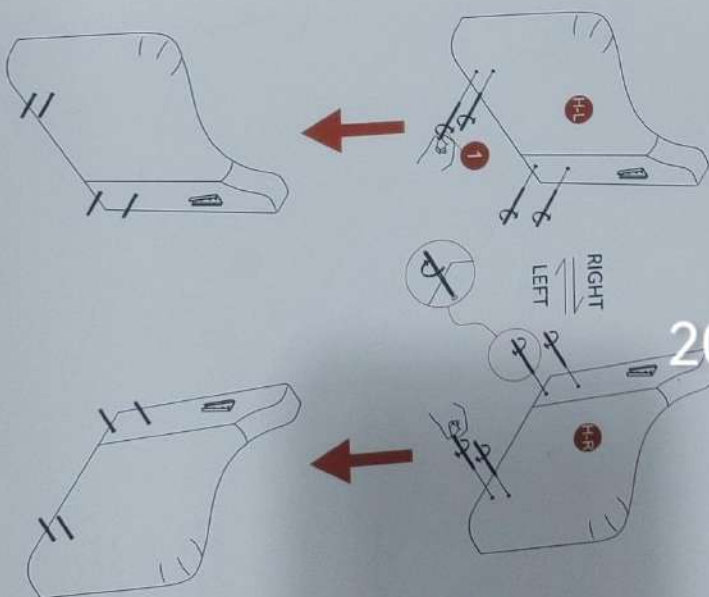

2026/05/10 14:55

Step 2

First, take out the hardware foot box. Place the right armrest (H-R) on the floor with the screw side facing upward. Stand the seat frame (A) upright, align the holes of the seat frame (A) with the screws on the right armrest and insert them through. Install the flat washer (4), spring washer (5) and hex socket nut (3) in sequence, then tighten and secure with the hex key (2).


2		X 1	L3-1/2"×3-1/2"
3		X 4	5/16"×D1/2"
4		X 4	D7/8"
5		X 4	D3/8"



Note:
The operation takes two adults to complete.

Take out the hardware foot box.

Place a mat on the floor during installation to avoid soiling the product.

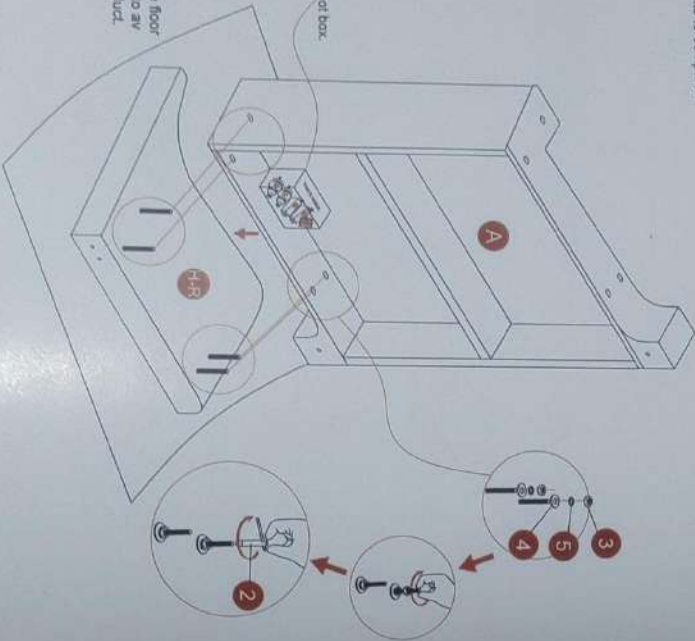


Step 3

Place the left armrest (H-L) on the floor with its screw side facing up. Stand the seat frame (A) upright, align the holes of the seat frame (A) with the screws on the left armrest (H-L) and insert them through. Then attach the washer (4), spring washer (5) and hex socket nut (3), and tighten them with the hex key (2).

2		X 1	L3-1/2"×3-1/2"
3		X 4	5/16"×D1/2"
4		X 4	D7/8"
5		X 4	D3/8"



Note:
The operation takes two adults to complete.

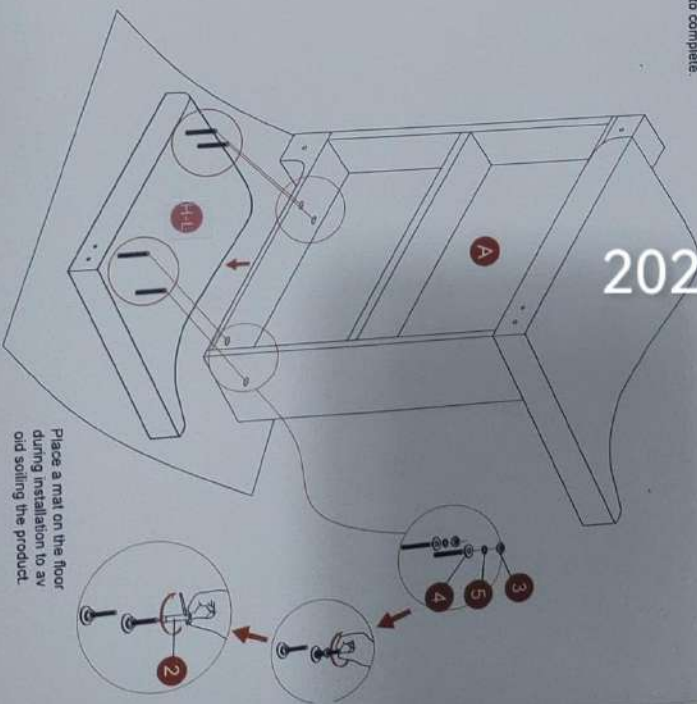

Place a mat on the floor during installation to avoid soiling the product.