



Assembly Manual

6090-5208NT

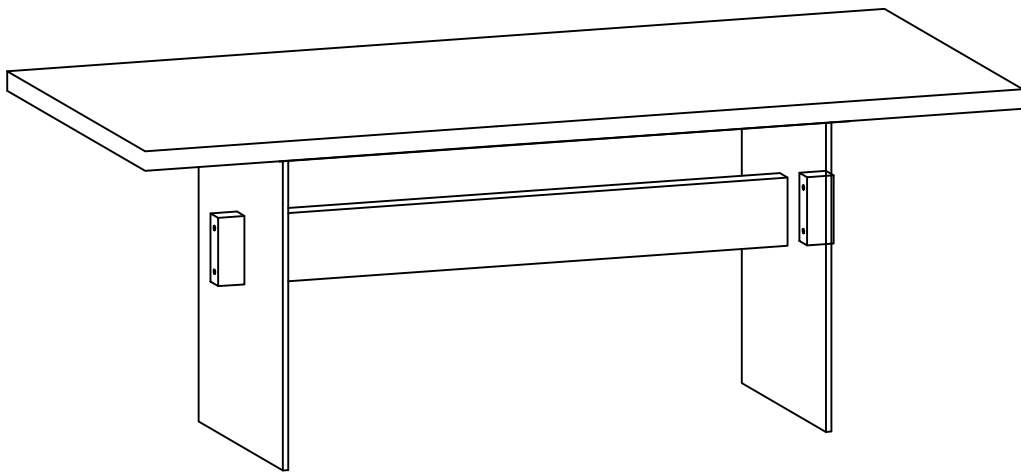

Assembly Manual

6090-5208NT

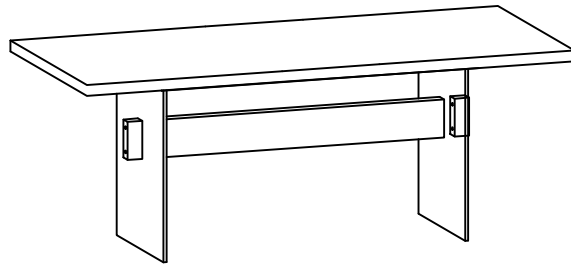

1



 
1pc

2



1pc

3



2pcs

4



2pcs

5



1pc


Assembly Manual

6090-5208NT


Hardware Accessories								
NO.	Plcture	SIZE	QTY		NO.	Plcture	SIZE	QTY
A		M8*L110mm	4		B		M8*L30mm	4
C		M8	4		D		φ8	4
E		φ8*16	8		F		M8	4
G			4		H		M5	1
I		M6*L65mm	8	J		φ6*16	8	
SPARE								
NO.	Plcture	SIZE	QTY		NO.	Plcture	SIZE	QTY
A		M8*L110mm	1		B		M8*L30mm	1
C		M8	1		D		φ8	1
E		φ8*16	1		F		M8	1
G			1		H		M5	1
I		M6*L65mm	1	J		φ6*16	1	

Assembly Manual

6090-5208NT

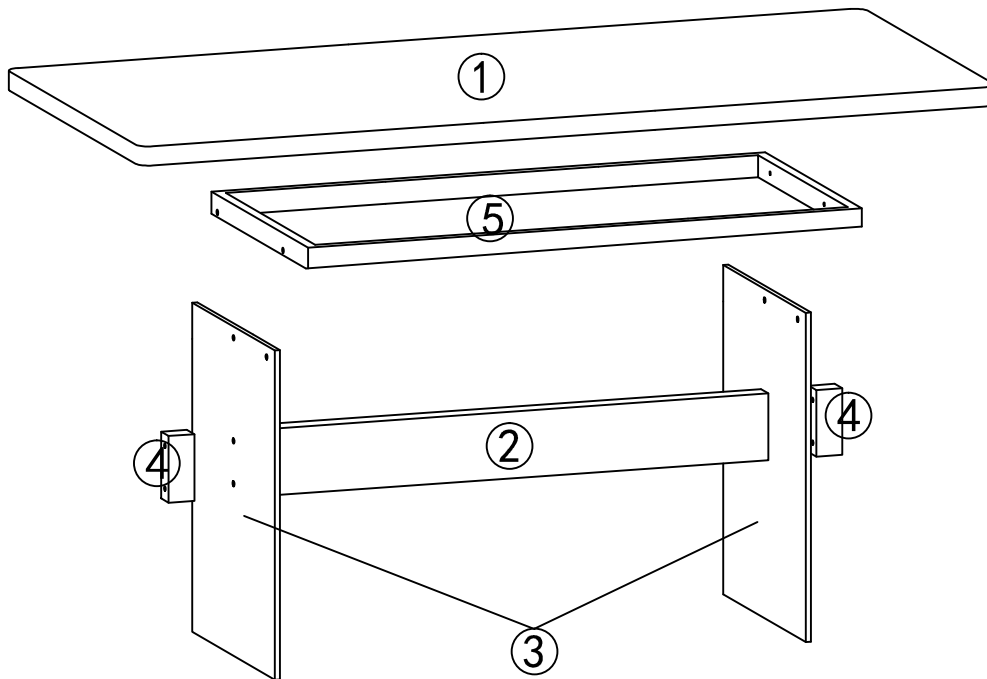

step 1

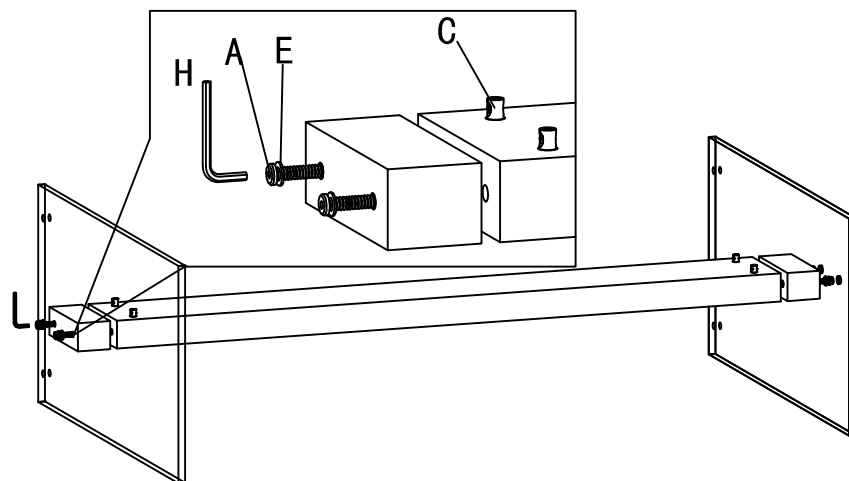


A*4	C*4	E*4	H*1
-----	-----	-----	-----

Assembly Manual


6090-5208NT

step 2

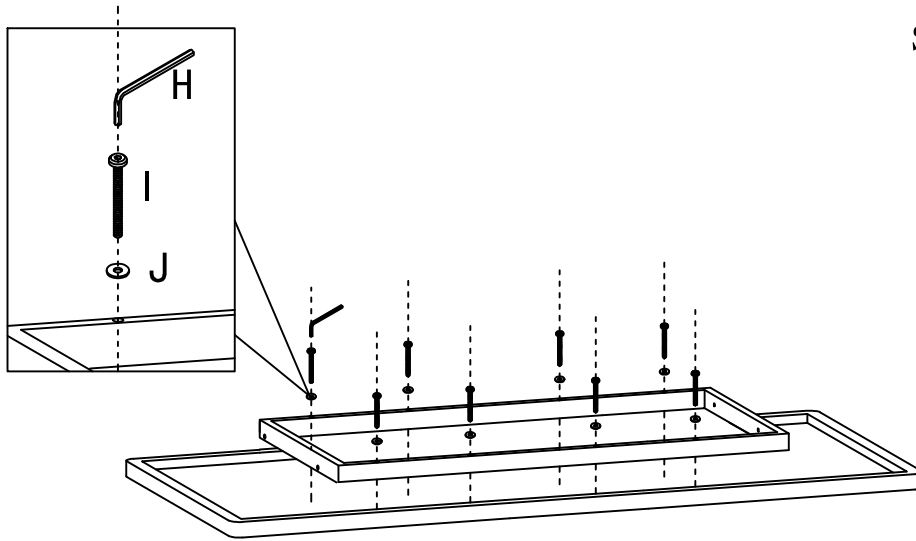

H*1 	I*8 	J*8 
---	---	---

step 3

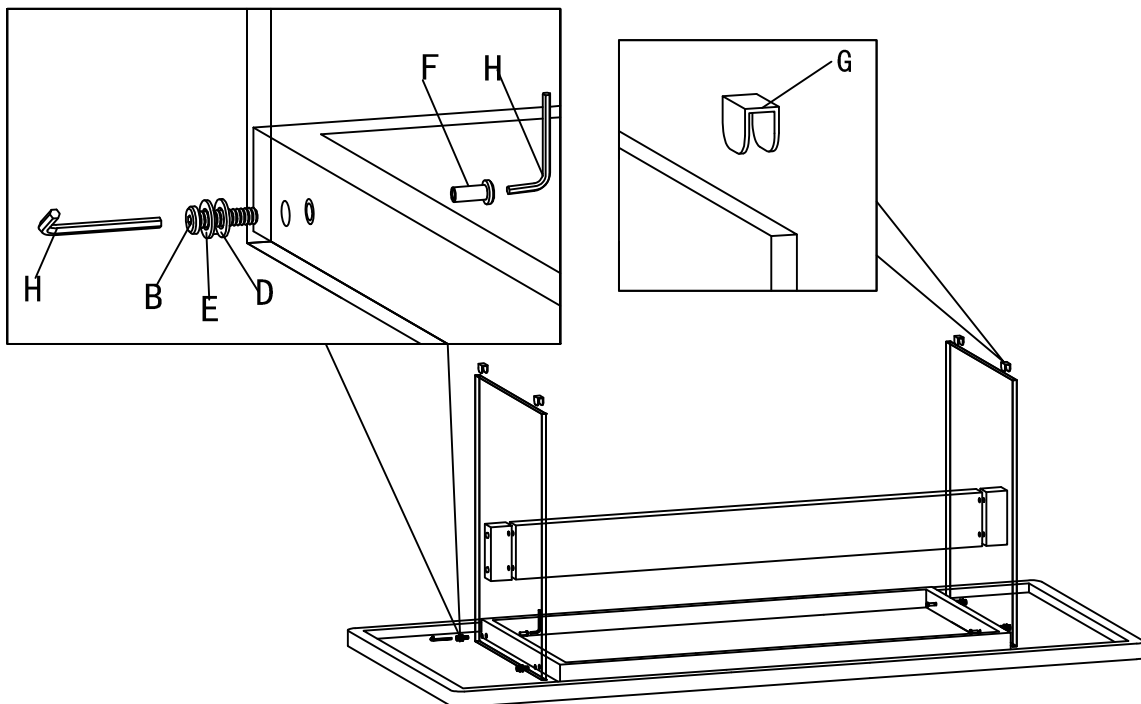

B*4 	D*4 	E*4 	F*4 	G*4 	H*2 
---	---	---	---	--	---

Assembly Manual

6090-5208NT

COMPLETED DRAWING

