

Ember Glow[®]


Assembly Instructions




3-Piece Pre-Lit Rattan Deer Family

LED6556

Assembly is similar for the buck, doe and fawn. Please follow these steps to assemble each deer

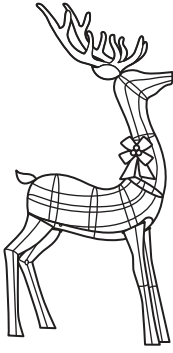

Buck

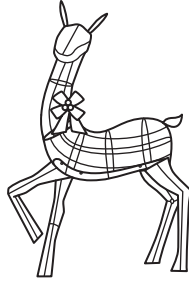

Doe



Fawn

- This product is designed for outdoor use and should only be assembled outdoors.
- It is not intended for permanent installation or continuous use.
- Always unplug the product when not in use or when left unattended.
- Confirm that your power supply voltage matches the product specifications.
- Discontinue use if any parts are missing, damaged, broken, or worn. Resume only after repairs are completed or replacement parts are installed.
- Use this product only as directed in the manufacturer's instructions. Improper use may void the warranty.




CAUTION

- Do not plug into a wall outlet until the item is fully assembled and all lights are securely connected.
- Do not use during extreme weather conditions.
- This product contains glitter. Assemble outdoors only to avoid property damage and difficult cleanup.
- Avoid contact of glitter with eyes or face to prevent irritation or injury.
- Keep away from all heat sources, including fireplaces, stoves, and heaters.
- Always use the provided stakes to secure the reindeer properly.
- Do not attach wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or any objects from the cord.
- Unplug before replacing or removing bulbs.
- Replace burned-out bulbs promptly with bulbs of the same rating.


Package Contents

1

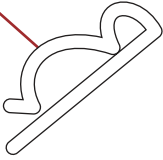


COTTER PIN
X 3

2

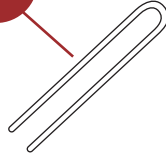


STAKE
X 12

A

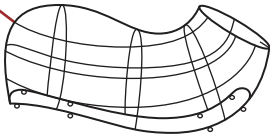


BODY
X 3

B

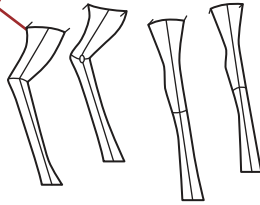


LEGS
X 3 SETS

 C




TAIL
X 3

D

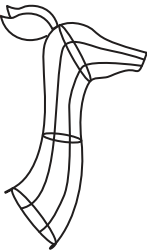


HEAD
X 3

E

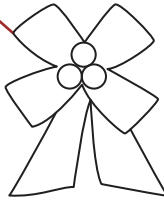


BOW
X 3

F

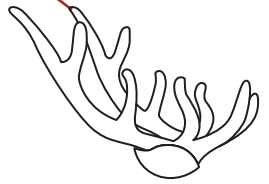


ANTLERS/EARS
X 1 SET


Product Assembly

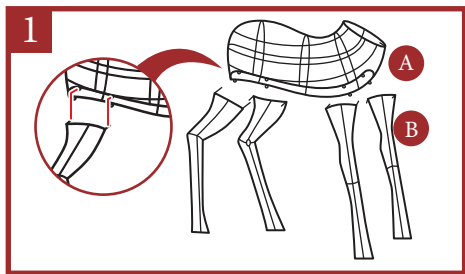


Carefully remove protective wrap. Do not use a knife to avoid damaging parts or light bulbs. Insert the part B legs into the designated holes on the part A body.

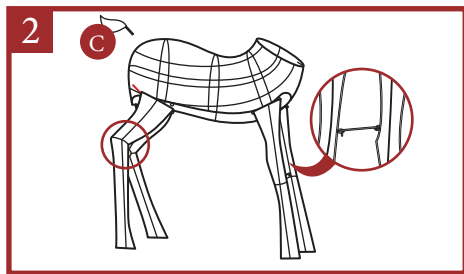


Insert the rod on a front leg into the designated hole on the other front leg. Repeat on the back legs. Insert the part C tail.

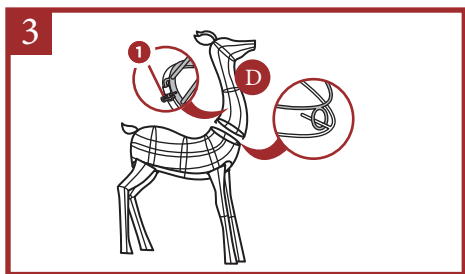


Insert the part D head. Secure the back of the neck with a part 1 cotter pin.

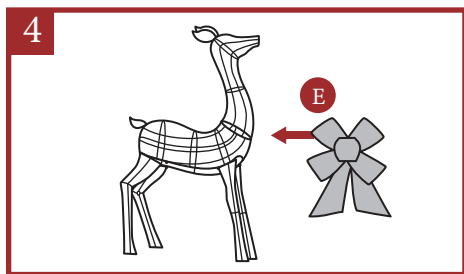


Attach the part E bow.

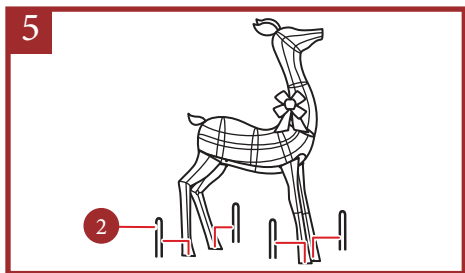

Secure the reindeer to the ground with four part 2 stakes. Plug into a wall outlet to turn on lights.

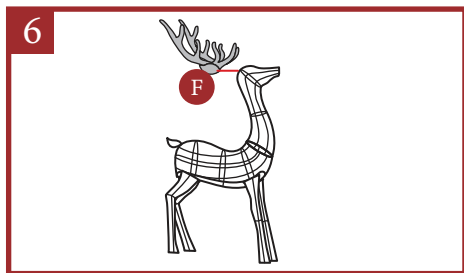

FOR BUCK ONLY: Insert the part F antlers/ears.

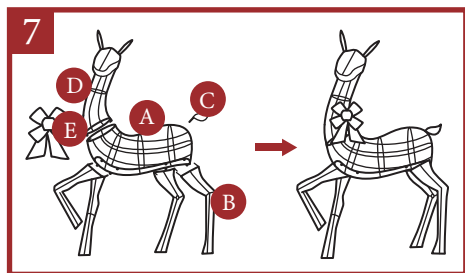

Repeat steps to build additional deer.

Troubleshooting

Problem	Reason	Solution
One section does not light	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
Lights do not work	Not plugged in	Firmly plug into wall outlet
	Extension cord does not have power	Plug in/turn on extension cord
	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
	Blown fuse	Replace fuse on plug




Warning


Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.

Changing Broken Lights


Unplug the product from power supply.

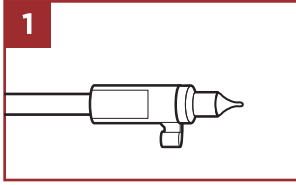

1
Locate the defective light and grip the plastic housing

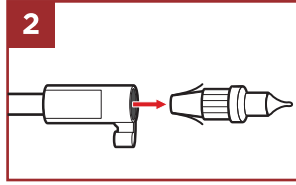

2
Pull straight up to remove. Do not pull or twist the glass bulb

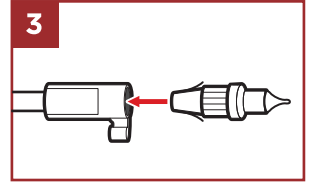

3
Push the new bulb straight into the socket.

Light Bulbs

Bulb Type	Bulb Size	Wattage	Voltage	What if 1 bulb breaks?
Incandescent	5 mm	0.48 W	4 V	The entire string of lights up to that point will shut off.

Product Warranty Information

RETURN POLICY/GUARANTEEE

We personally inspect each piece before we ship to guarantee quality. Damaged or flawed items **MUST** be reported within 48 hours of receiving your shipment or the claim will not be honored. If the items you have ordered through www.florabunda.us are damaged in transit, please reach us with thru our [Contact US](#) page. For faster service please add your Order ID# and someone will get back to you within 24 business hours to let you know how we can proceed.

Returning an Item

If there is nothing wrong with the quality of your order and you simply decide you no longer want it, contact us within 48 hours of receiving it with the following information:

Order Id #, product name/number, reason for return and contact details.

We will then provide you with a returns authorization number (RA), but are unable to provide a return label.

Please send returned items to

Ember Glow Returns

8545 Pecan Ave,
Rancho Cucamonga, CA 91739

We ask that you email us your tracking number to ensure a speedier refund.

Once the product is received complete with original packaging and RA Number, we will provide you with a refund as quickly as possible; in busy times, this process can take slightly longer but will not be longer than 30 days. Refunds will be credited to the original purchaser's credit card, minus a \$3 restocking fee. The restocking fee covers the costs of the box, credit card transaction charges and taxes on postage.

We strongly recommend that you arrange for proof of delivery on returned items as we cannot accept responsibility for parcels lost in transit. Please note that proof of postage is not proof of delivery.



Question about your product? We're here to help. Visit us at:

<https://florabundaus.com/contact>

Email: info@florabundaus.com

Tel: (909) 987-8819