 


Assembly Instructions

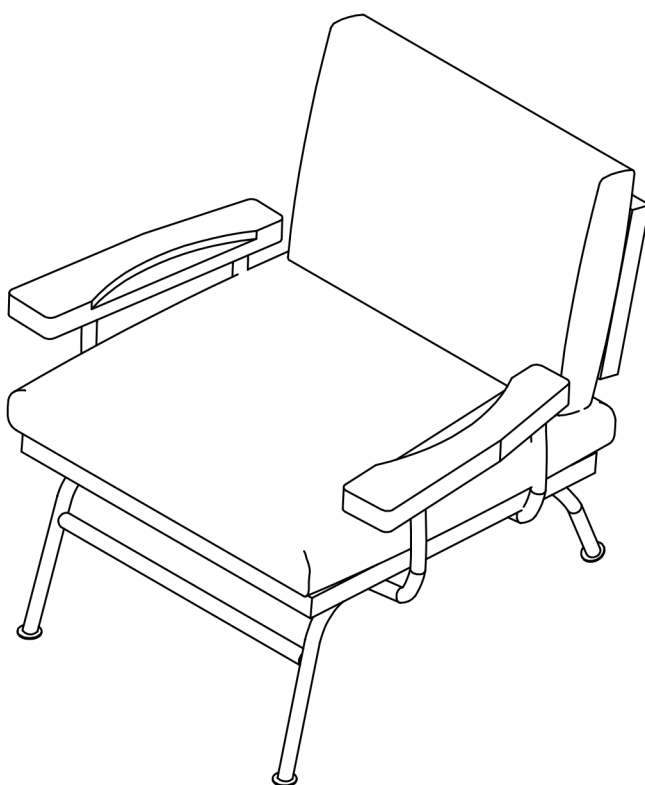

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES



When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.



Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.



Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

 


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

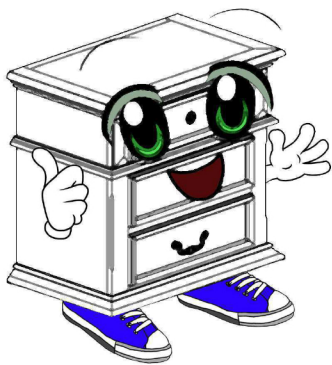


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List



#1 x 1pc
Seat Frame

 

#2 x 1pc
Back Panel



#3 x 1pc
Left Wood Arm



 
#4 x 1pc
Right Wood Arm




#5 x 1pc
Left Side Metal Frame




#6 x 1pc
Right Side Metal Frame



#7 x 1pc
Front Rail

 

#8 x 1pc
Seat Cushion

 

#9 x 1pc
Back Cushion

Hardware List



#A x 14pcs
Short Bolt Ø1/4"x3/4"L



#B x 4pcs
Long Bolt Ø1/4"x1-1/2"L



#C x 18pcs
Lock Washer 1/4" Dia



#D x 4pcs
Flat Washer 5/16" X 2-1/2"



#E x 14pcs
Flat Washer 5/16" X 1- 1/2"



#F x 1pc
Allen Wrench M5

 


#G x 4pcs
Plug




Prepare 2 bolts assembly by inserting lock washer (#C), then flat washer (#E) onto bolts (#A). Align front rail (#7) to the holes of the left and right side metal frames (#5,6). Secure by using bolts (#A).

#A x 2pcs
#C x 2pcs
#E x 2pcs
#F x 1pc

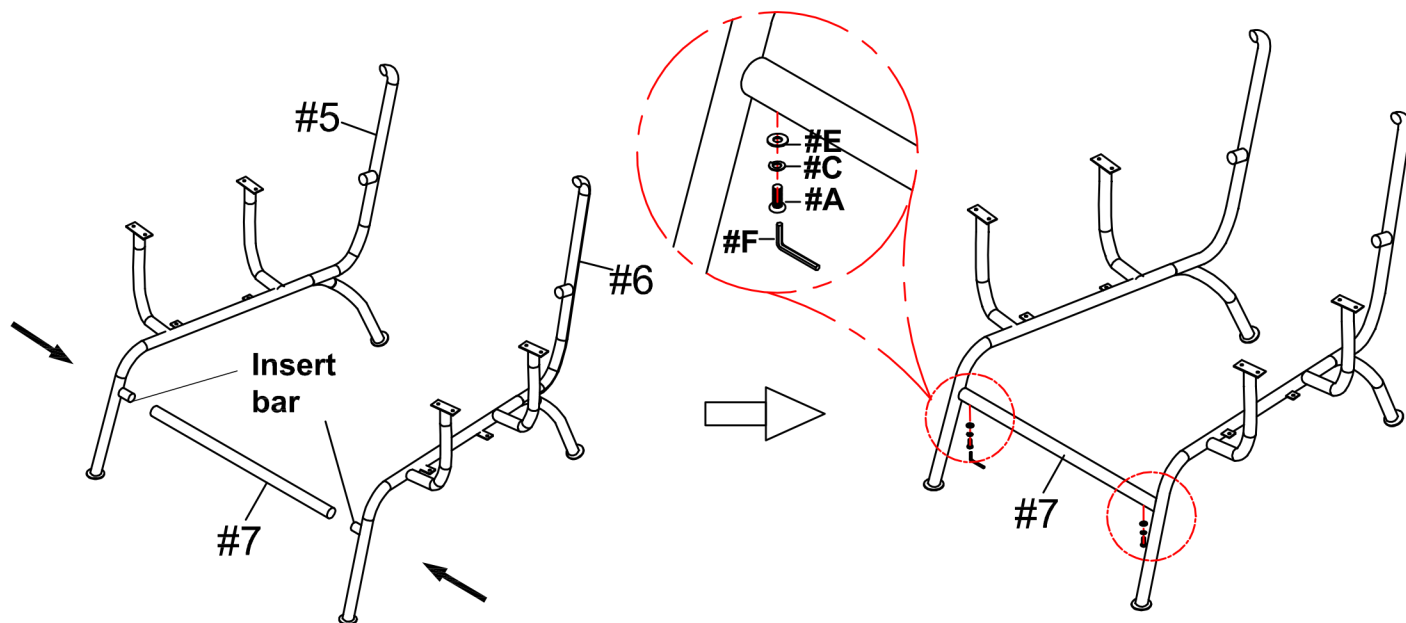

 DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ASSEMBLY COMPLETED.

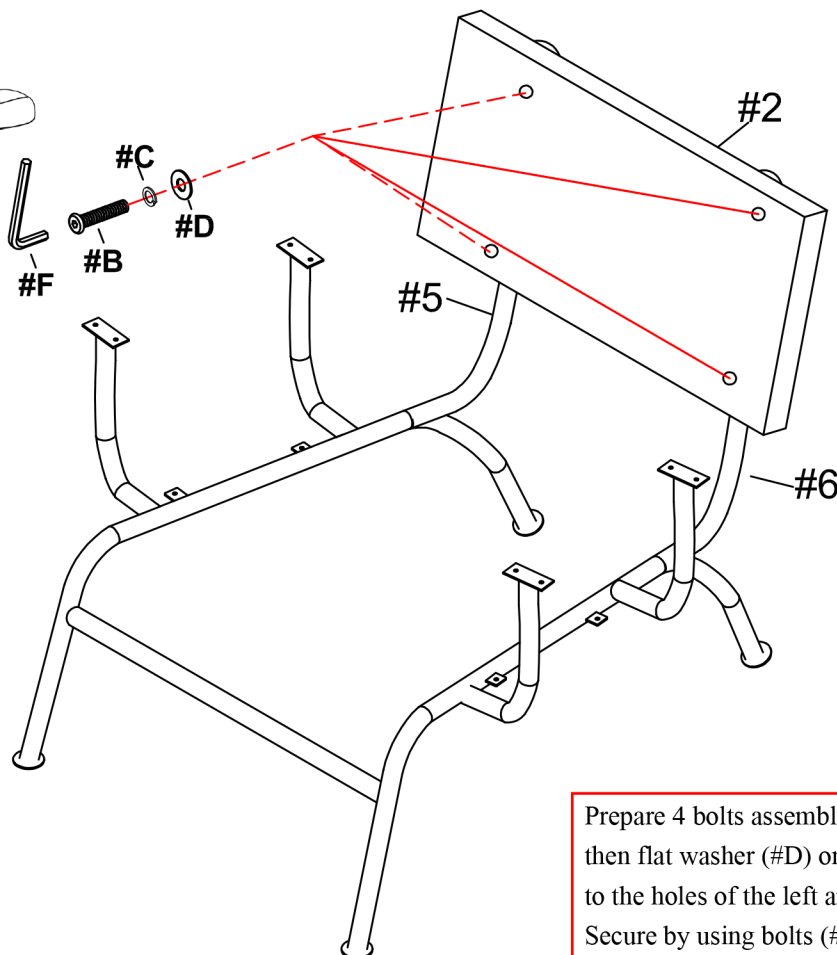


#B x 4pcs
#C x 4pcs
#D x 4pcs

Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#D) onto bolts (#B). Align back panel (#2) to the holes of the left and right side metal frames (#5,6). Secure by using bolts (#B).




Prepare 8 bolts assembly by inserting lock washer (#C), then flat washer (#E) onto bolts (#A). Align left and right wood arms (#3,4) to the holes of the metal side frames (#5,6). Secure by using bolts (#A).

 
#A x 8pcs
#C x 8pcs
#E x 8pcs
#F x 1pc

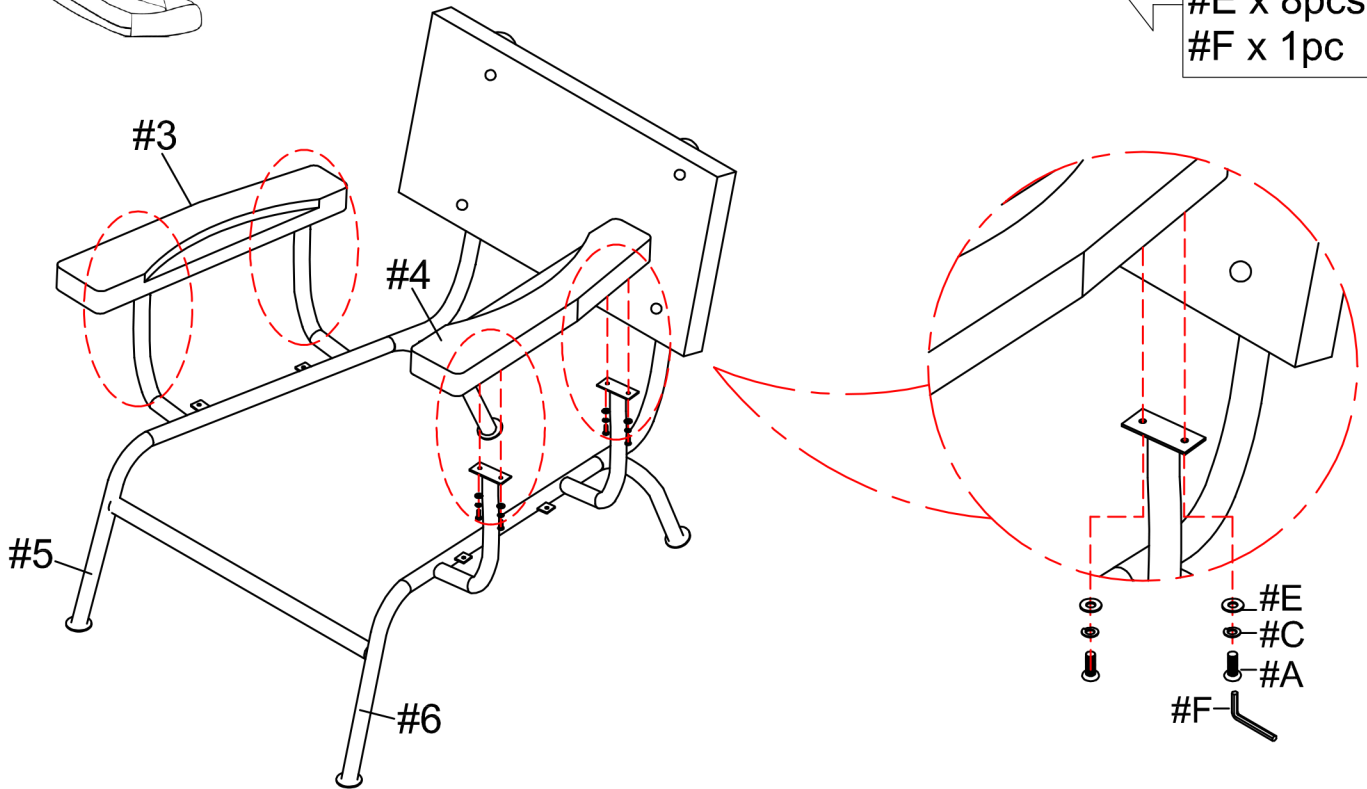


#A x 4pcs
#C x 4pcs
#E x 4pcs
#F x 1pc

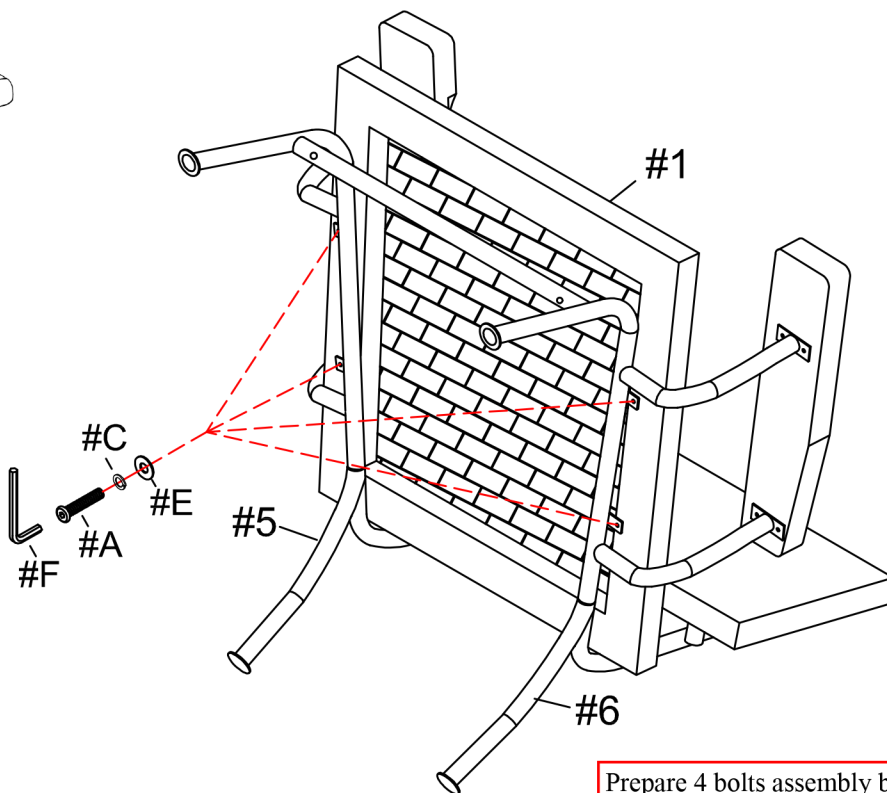 

 Prepare 4 bolts assembly by inserting lock washer (#C), then flat washer (#E) onto bolts (#A). Align seat frame (#1) to the holes of the metal side frames (#5,6). Secure by using bolts (#A).

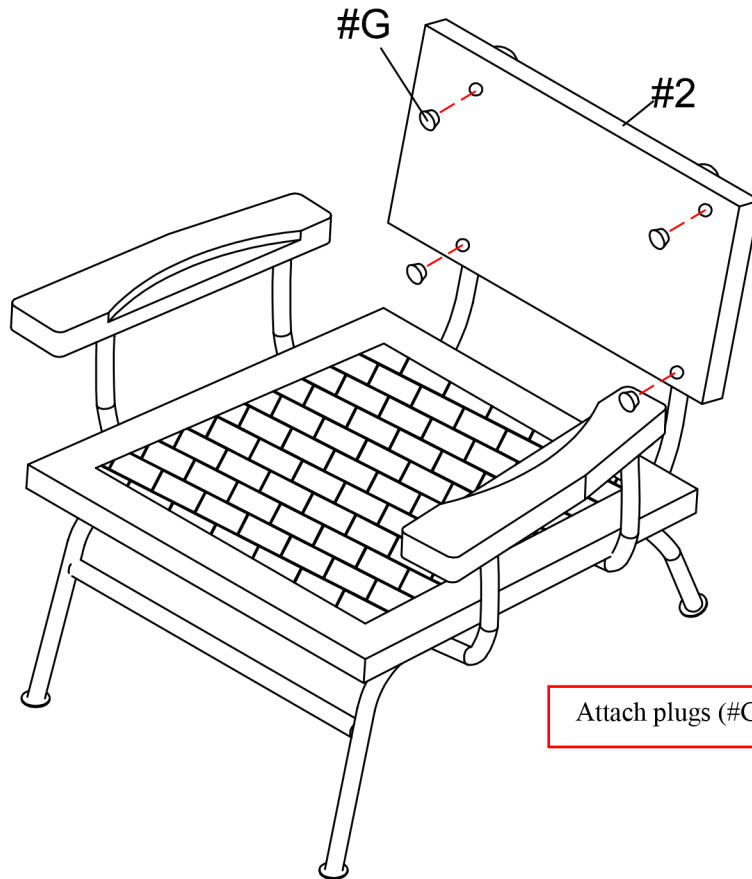

 Attach plugs (#G) to the holes of the back rest (#2).

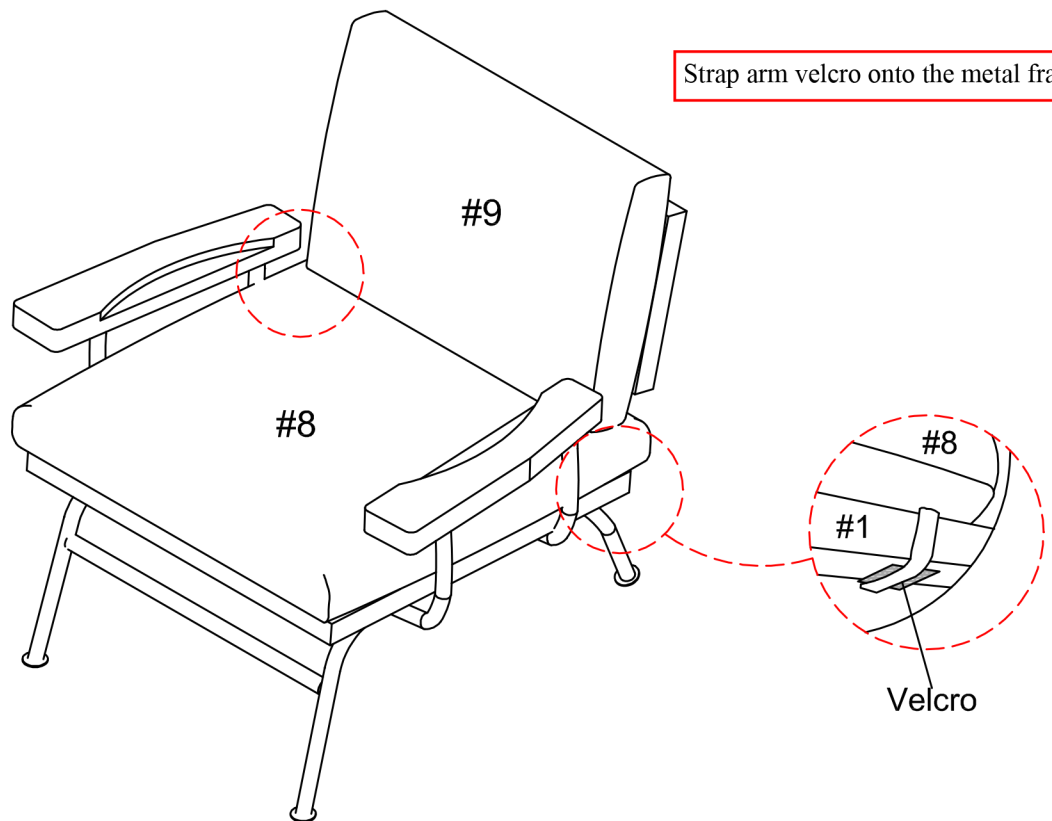

Strap arm velcro onto the metal frames.