 
 
 
 
 
 
 

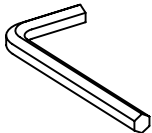 
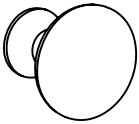 

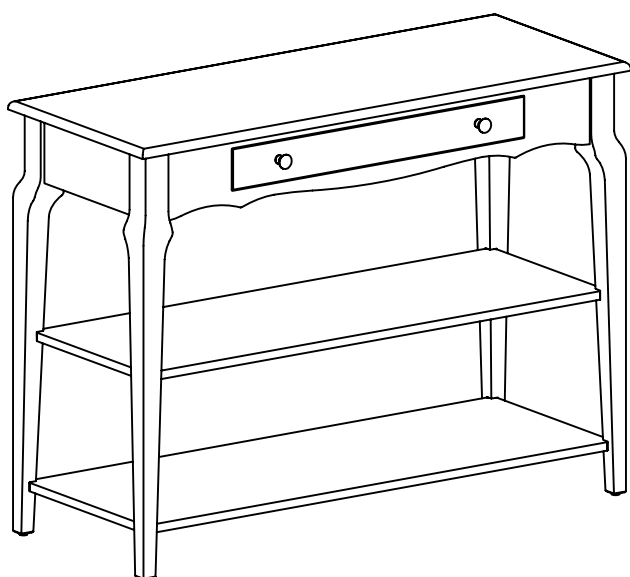 


# ASSEMBLY INSTRUCTION

 
## SOFA TABLE TV STAND

<b>A</b>	WOOD TOP WITH DRAWER	<b>B</b>	LEGS	<b>C</b>	SHELF	<b>D</b>	BOTTOM
							
1 PC		4 PCS		1 PC		1 PC	
<b>E</b>	SCREW Ø5/32" X 32mm	<b>F</b>	BOLT 1/4" X 1-3/4"	<b>G</b>	FLAT WASHER Ø1/4" X 16mm	<b>H</b>	LOCK WASHER Ø1/4" X 11mm
							
8 PCS		8 PCS		8 PCS		8 PCS	
<b>I</b>	ALLEN WRENCH 4mm	<b>J</b>	KNOB Ø25 X 21mm	<b>K</b>	BOLT Ø5/32" X 3/4"		
							
1 PC		2 PCS		2 PCS			

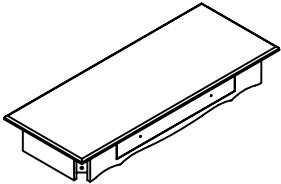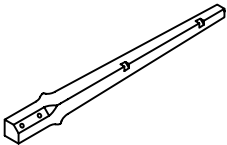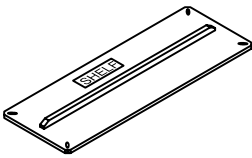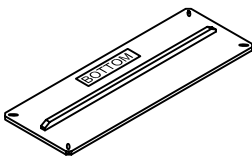


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attached three legs (B) to wood top (A) by using bolt (F), lock washer (H), flat washer (G) and allen wrench (I) as shown.

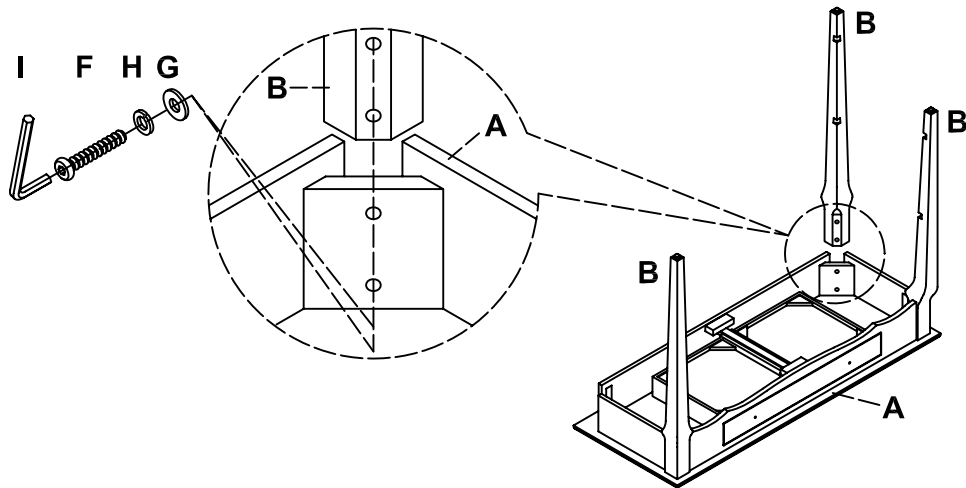

 - 2** Attached shelf (C) and bottom (D) to the legs (B) by using screw (E), on holes of shelf (C) and bottom (D). Attached the rest of legs (B) to the wood top (A) by using bolt (F), lock washer (H), flat washer (G) and allen wrench (I) in last as shown.

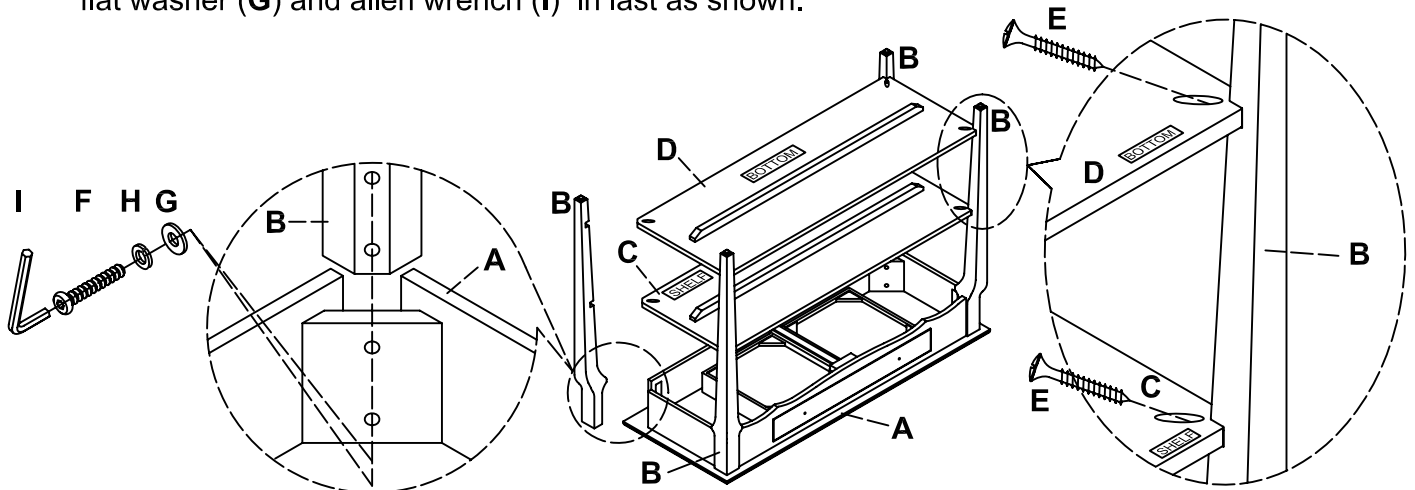

 - 3** Take out the knobs (J) of drawer from inside of the drawer and reassemble by using bolt (K), as shown below.

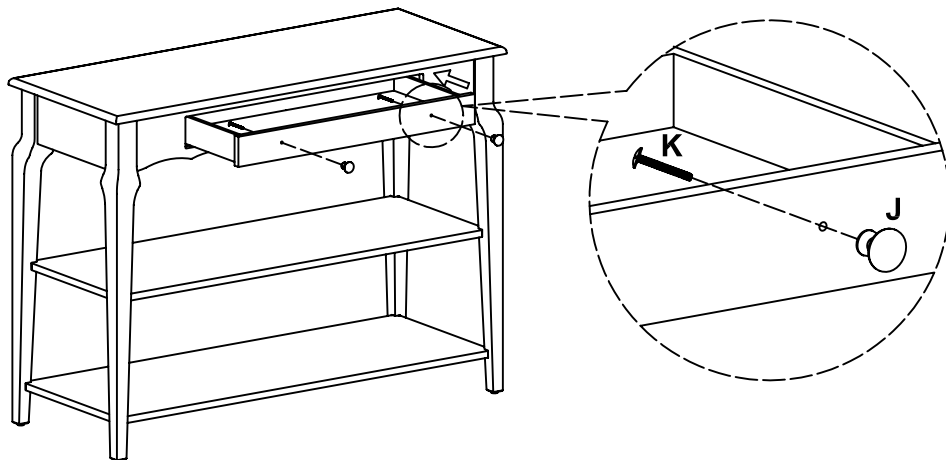

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.