 


Dog Crate

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

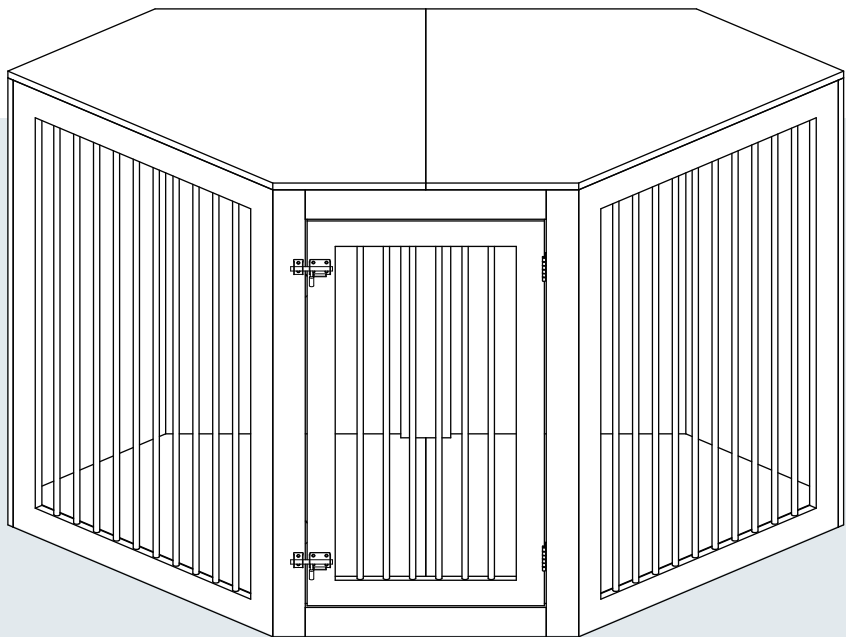

Dimensions

Width-52.4 inch
Depth-25.9 inch
Height-31.6 inch

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

· By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 34	B  6*35mm Cam Bolt x 36	C  Cam Lock x 40
D  3*14mm Screw x 48	E  4*40mm Screw x 10	F  6.5*60mm Cam Bolt x 4
G  x 4	H  x 2	I  x 2
J  x 2	K  x 6	L  6*18mm Bolt x 8
M  2.5*12mm Screw x 36	N   x 2 4*50mm	

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws length is measured from the head to the point (30mm screw shown).

 
0 1 2 3

inch

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

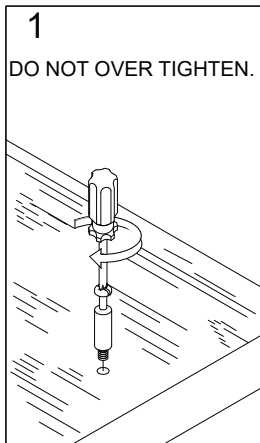

Step 2

 
Push the male camlock into the entry hole.

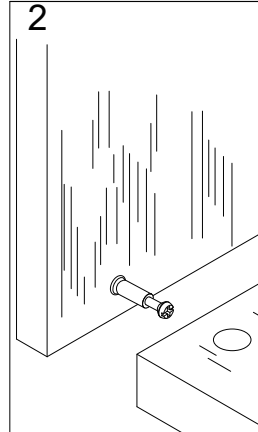

Step 3

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

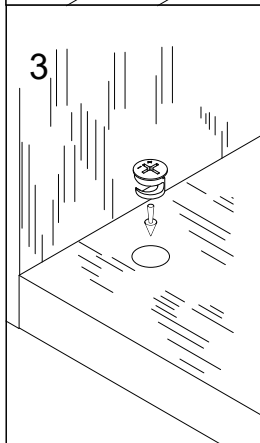


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

 The joint is now secure.

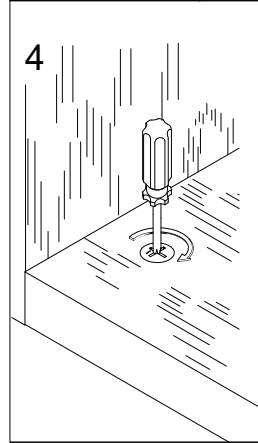


Parts List - Panels

 
Please check you have all the panels listed below

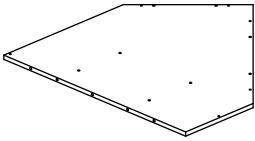


1 (665x655x12mm x1)

 


2 (665x655x12mm x1)

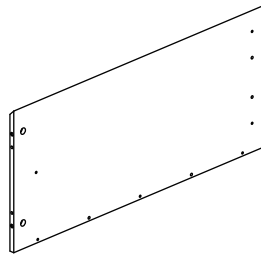 


3 (790x345x12mm x1)

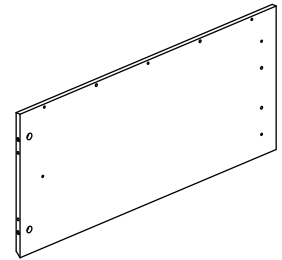 


4 (790x345x12mm x1)

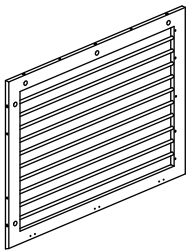 


5 (790x579x15mm x1)

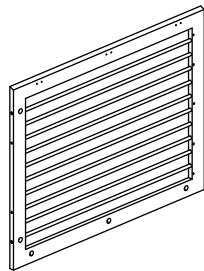 


6 (790x579x15mm x1)

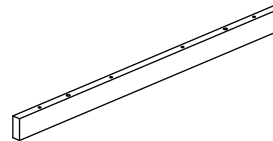 


7 (585x38x15mm x2)

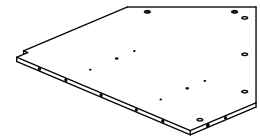 


8 (645x638x12mm x1)

 


9 (645x638x12mm x1)

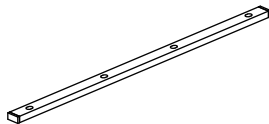 


10 (507x20x10mm x2)

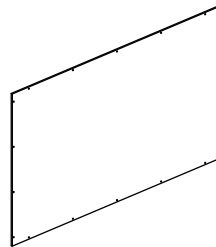 


11 (763x433x4mm x2)

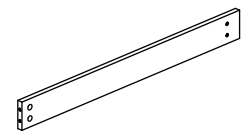 


12 (790x80x15mm x1)

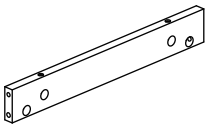 


13 (389x50x15mm x1)

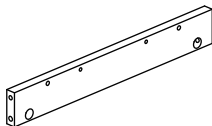 


14 (389x50x15mm x1)

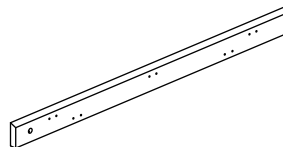 

15 (790x50x15mm x1)

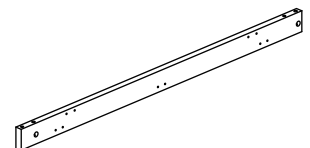 


16 (790x50x15mm x1)

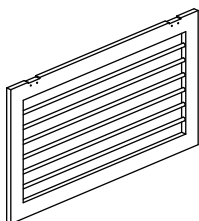 

17 (681x383x15mm x1)

 Assembly Instructions


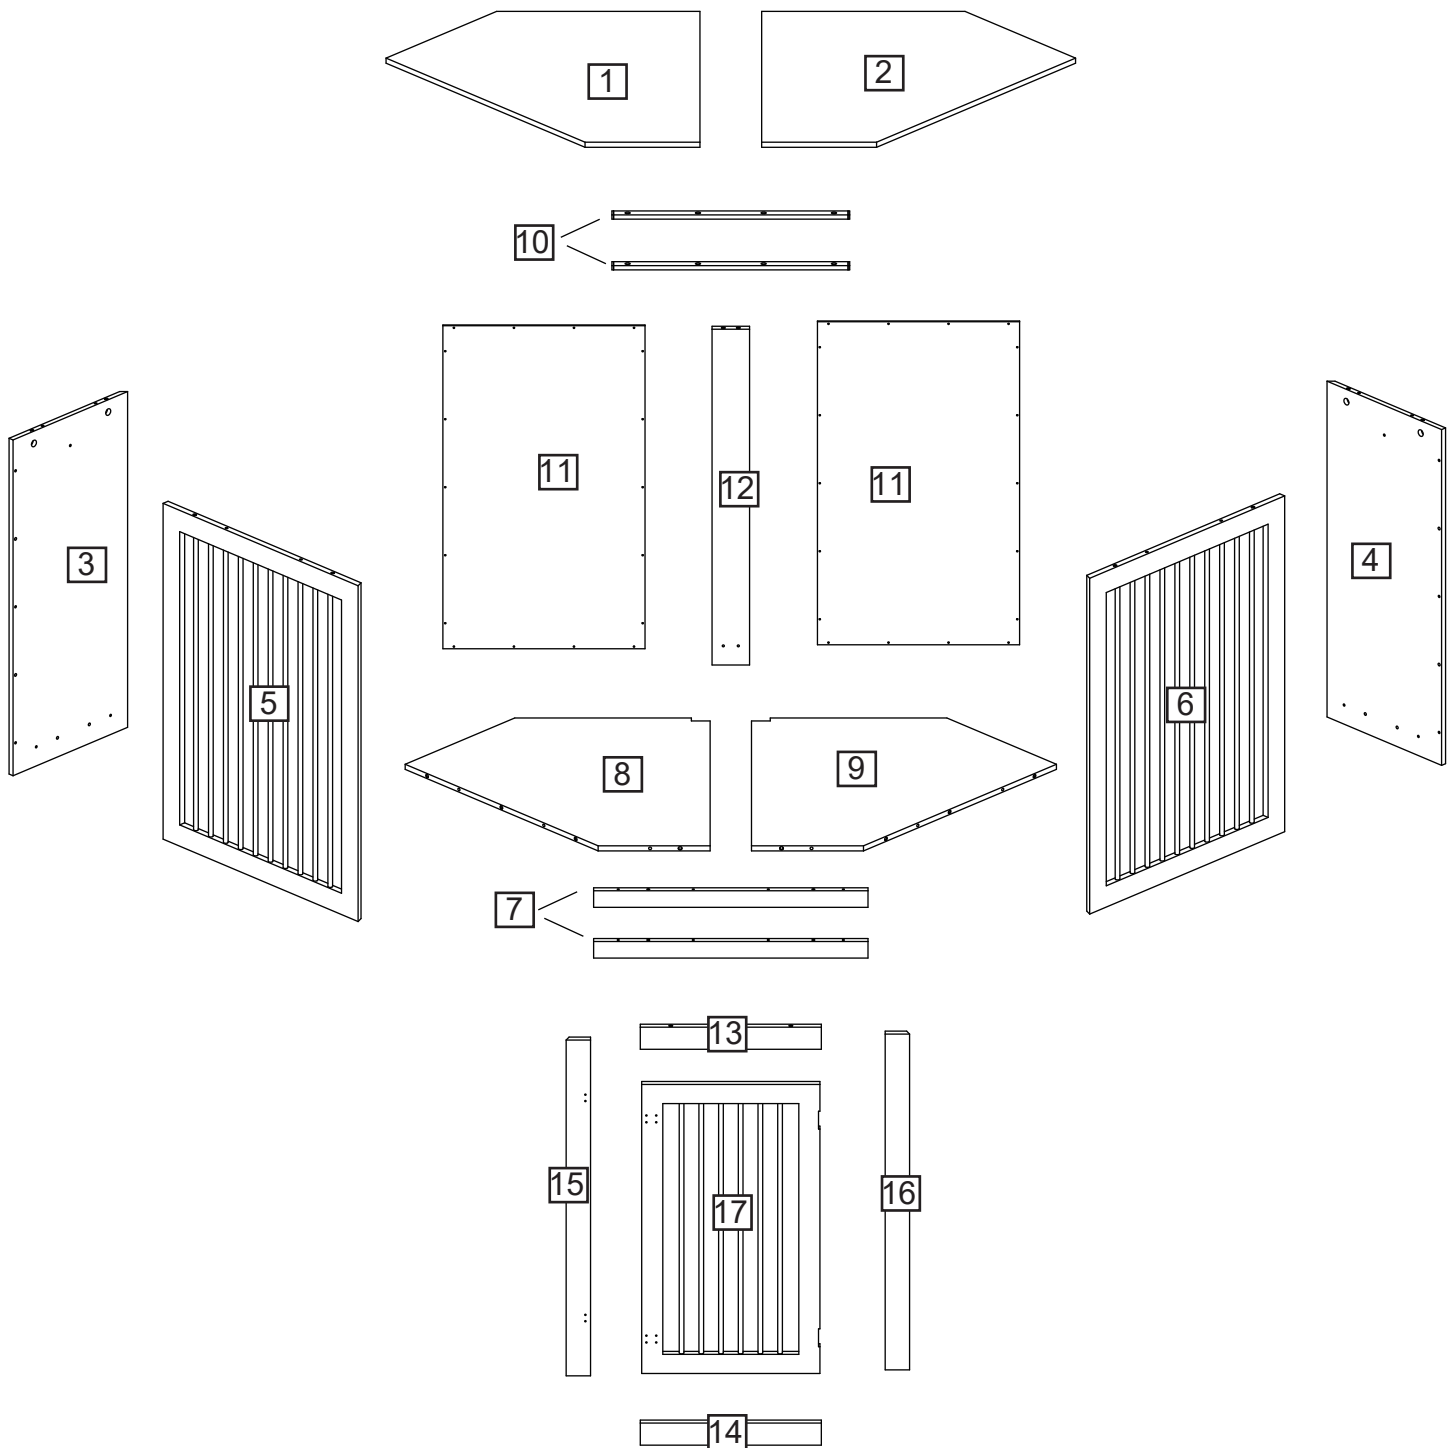


Assembly Instructions

Step 1

CAM-LOCK

  Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)


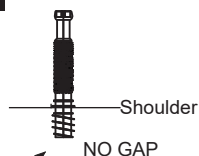
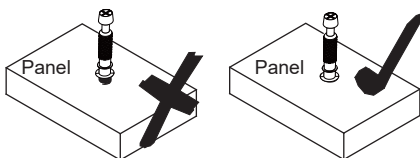


Insert wooden dowels (A) into panel (8). Attach cam bolt (B) to panel (8). Then attach panel (9) to panel (8), insert cam lock (C), and tighten.

A x2
6x30mm

B x3

   
C x3

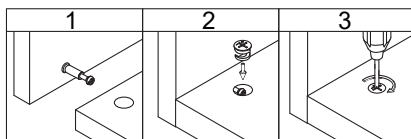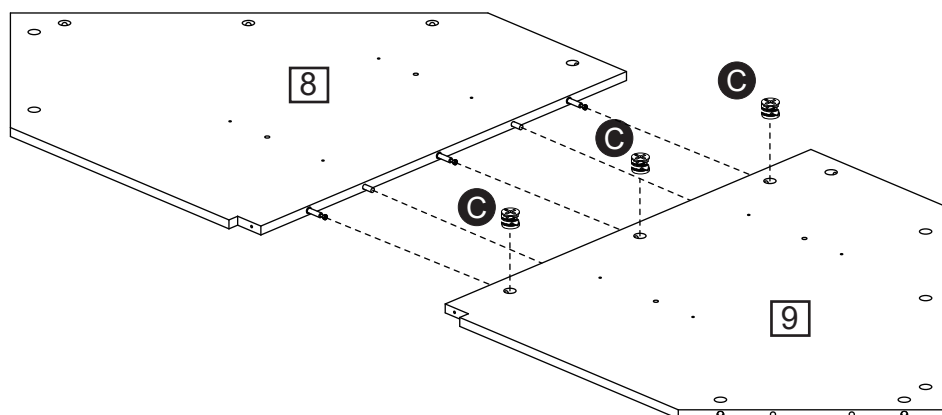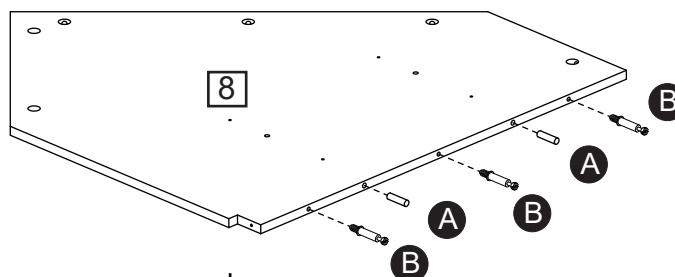

Step 2

A x4
6x30mm

 
E x8
4x40mm

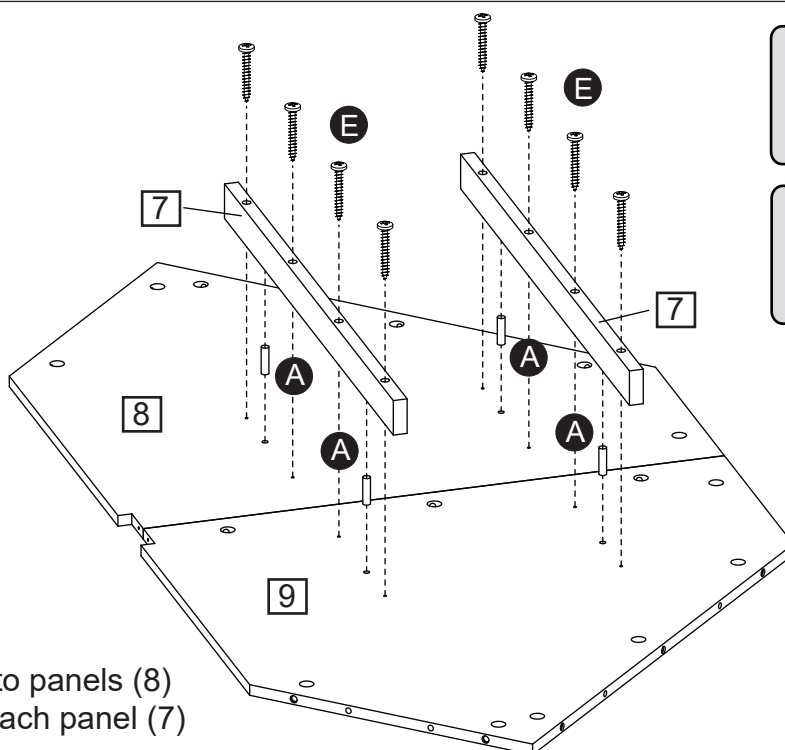


Insert wooden dowels (A) into panels (8) and (9). Use screw (E) to attach panel (7) to panels (8) and (9).

Assembly Instructions

 Step 3

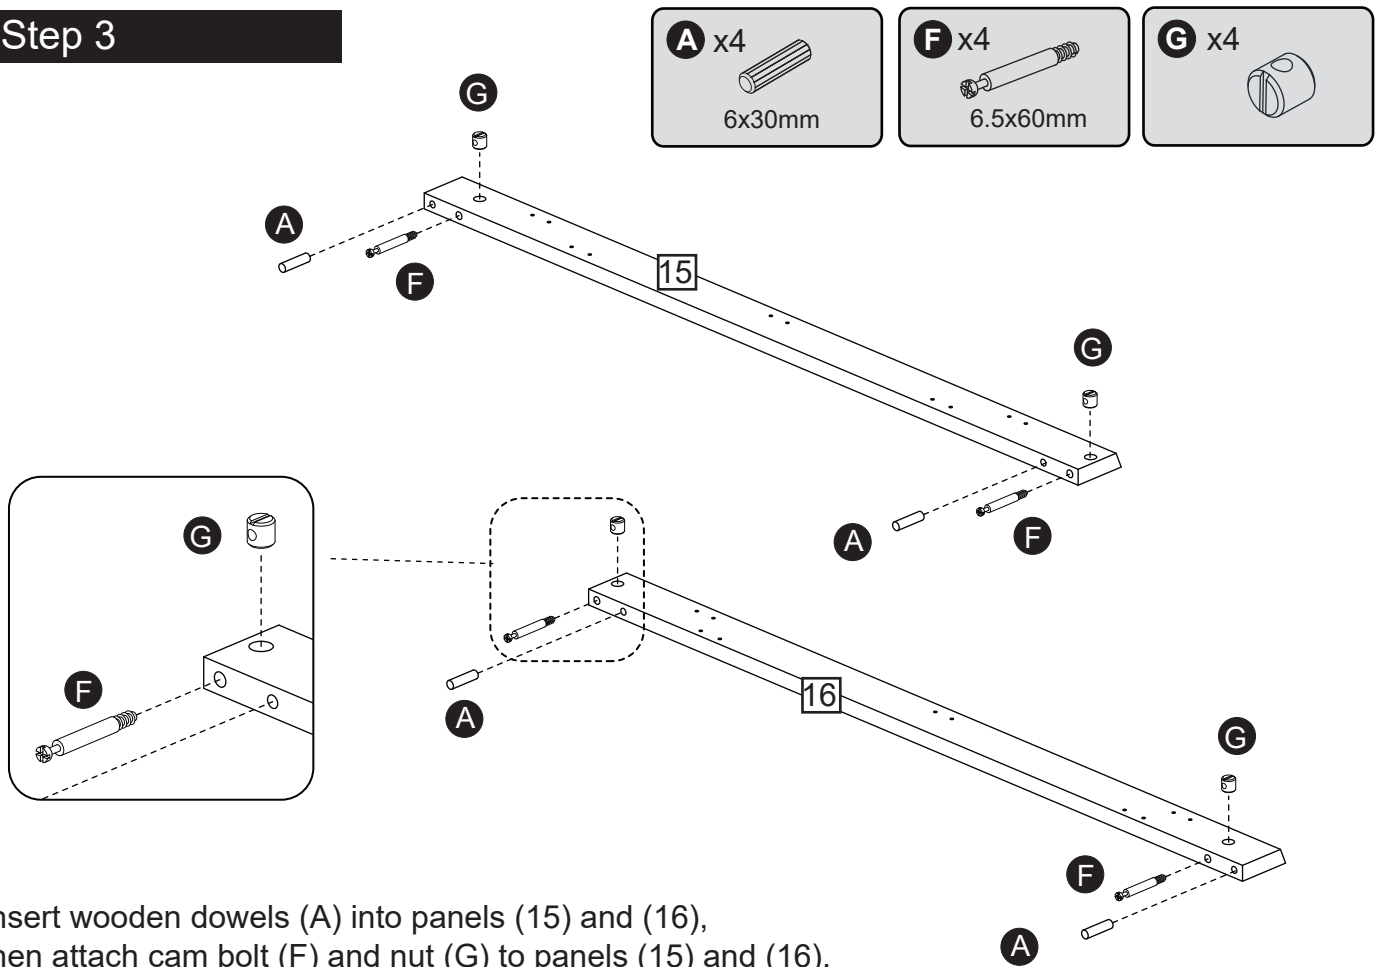

 Step 4







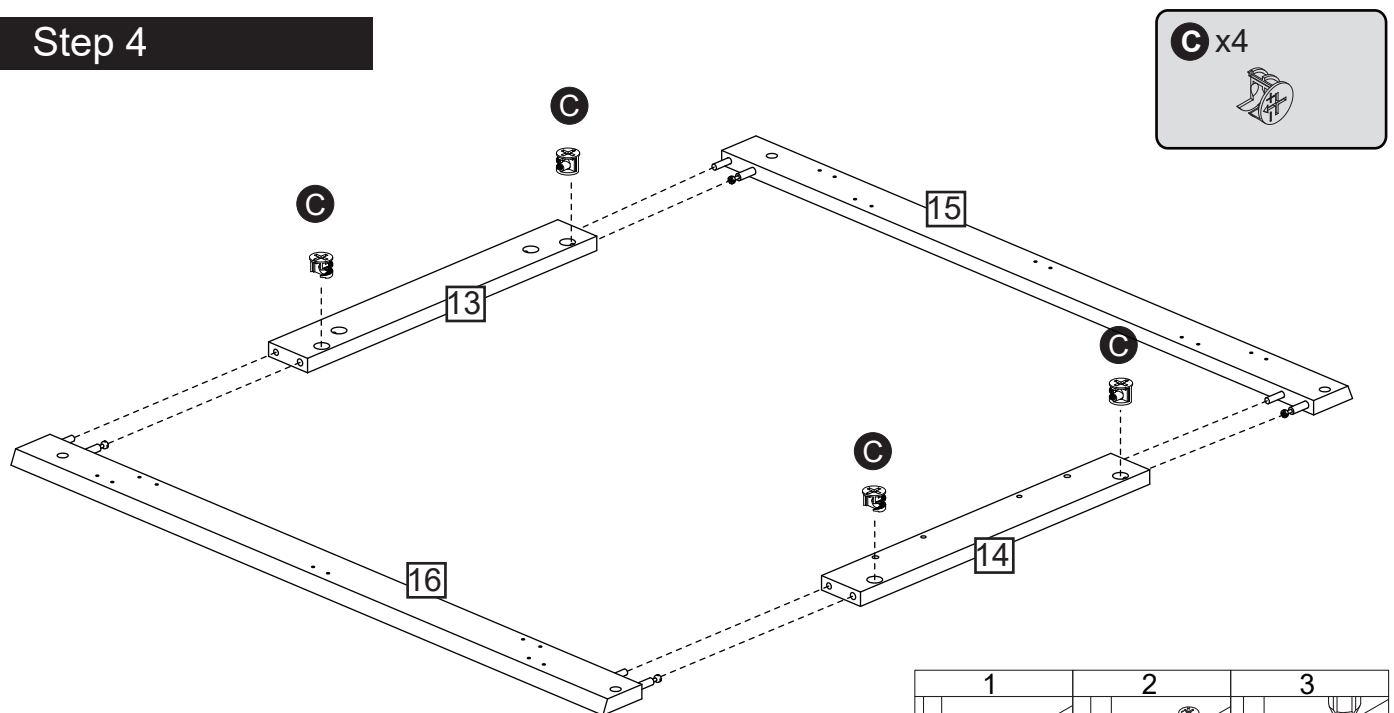


Assembly Instructions

Step 5

CAM-LOCK

       Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

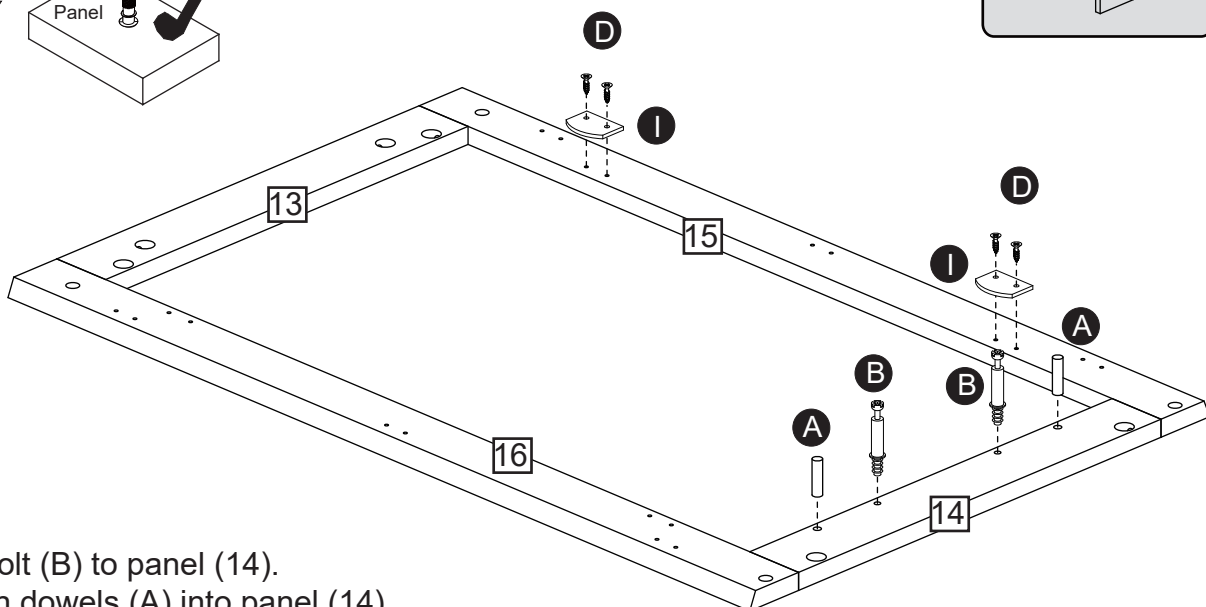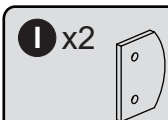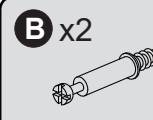
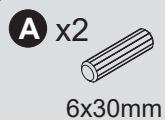
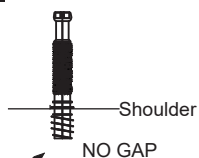
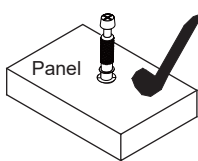
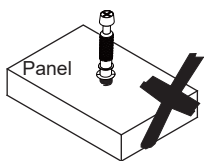


Attach cam bolt (B) to panel (14).
Insert wooden dowels (A) into panel (14).
Use screw (D) to attach parts (I) to panel (15).

Step 6

CAM-LOCK

     
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

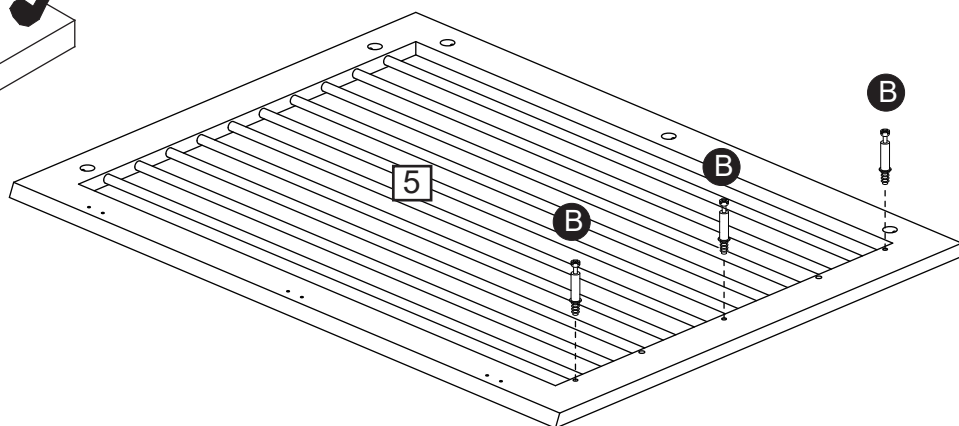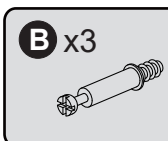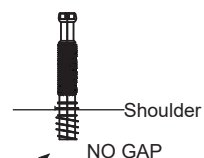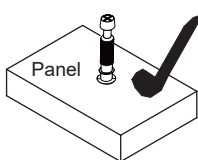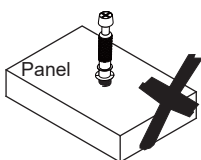

Attach cam bolt (B) to panel (5).


Assembly Instructions

 Step 7

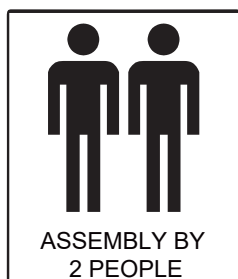


A x2
6x30mm

 C x3

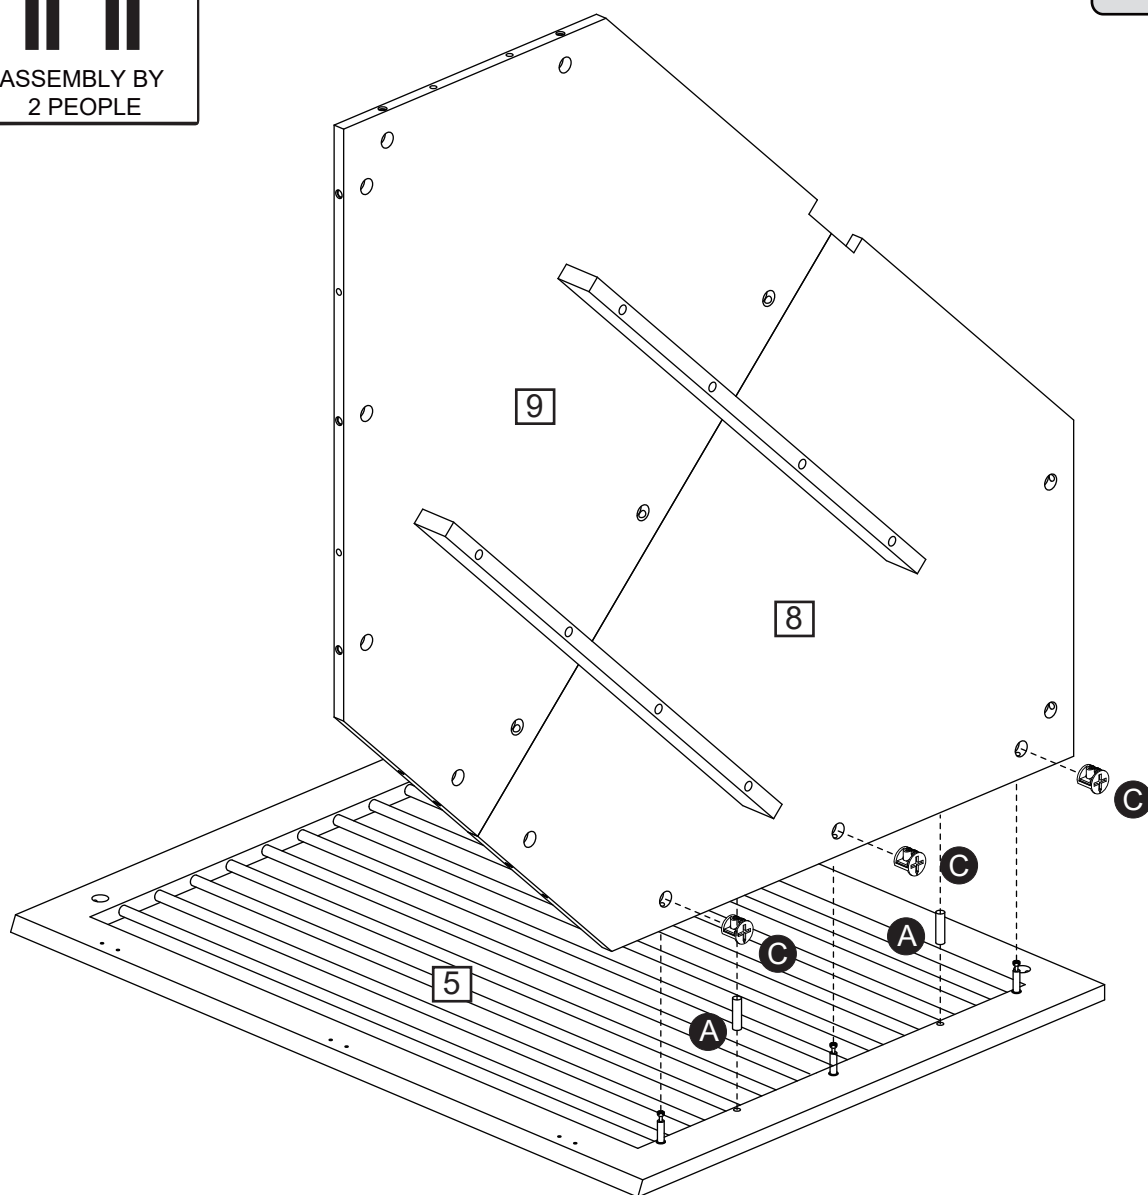


 
Insert wooden dowels (A) into panel (5),
then attach panels (8) and (9) to panel (5).
Insert cam lock (C) and tighten.

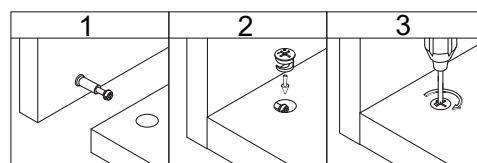


Assembly Instructions

Step 8

  
C x2

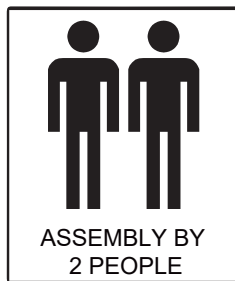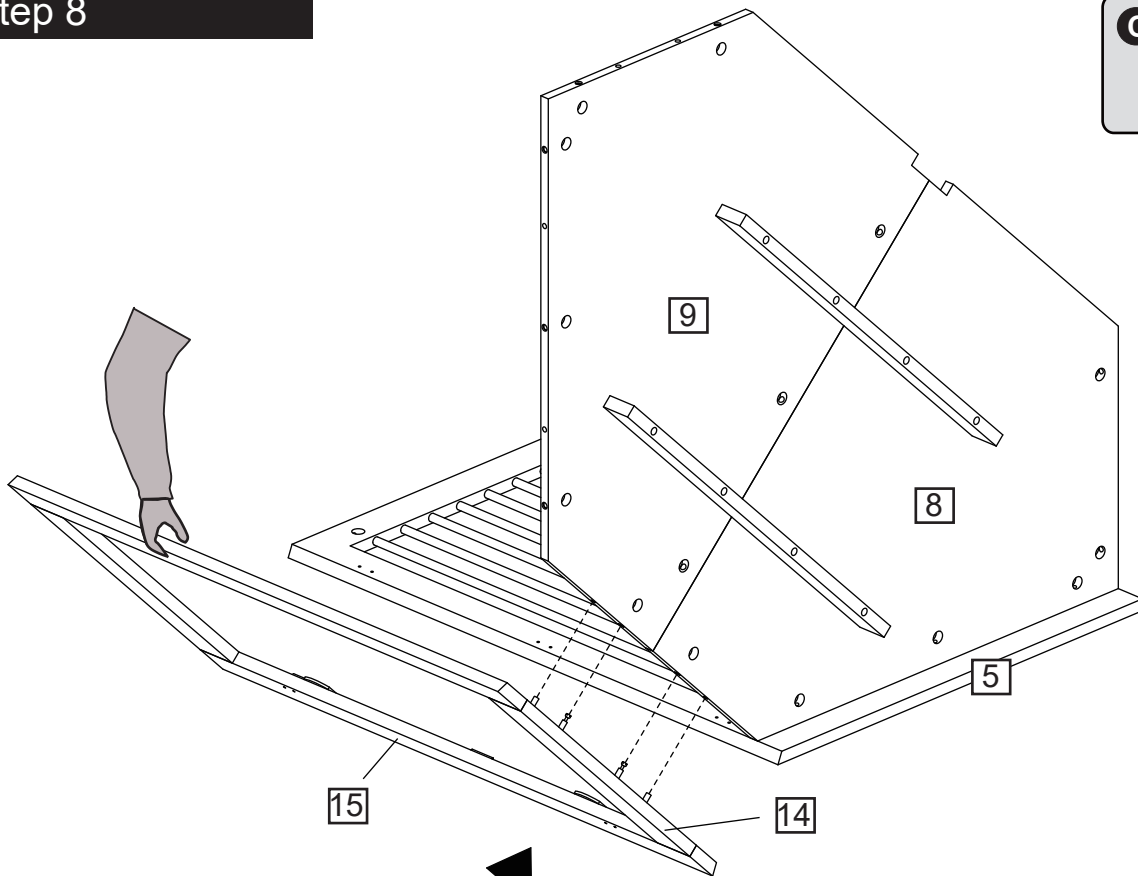





ASSEMBLY BY
2 PEOPLE

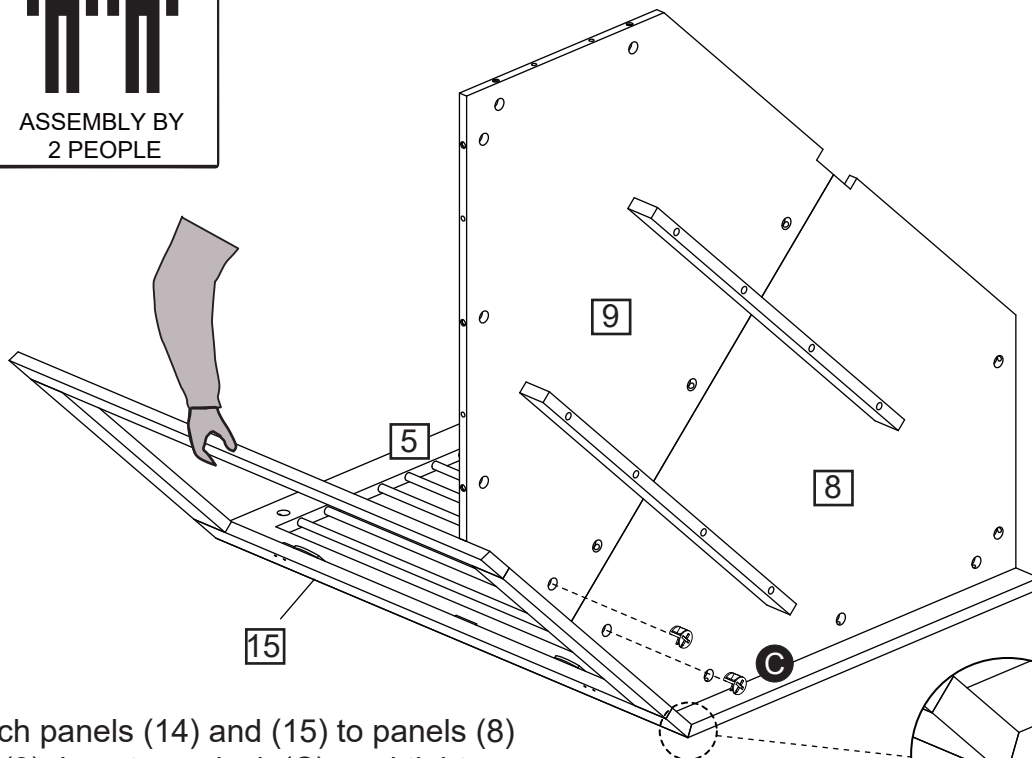 

 Attach panels (14) and (15) to panels (8) and (9), insert cam lock (C), and tighten.

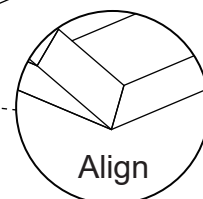

    Step 9

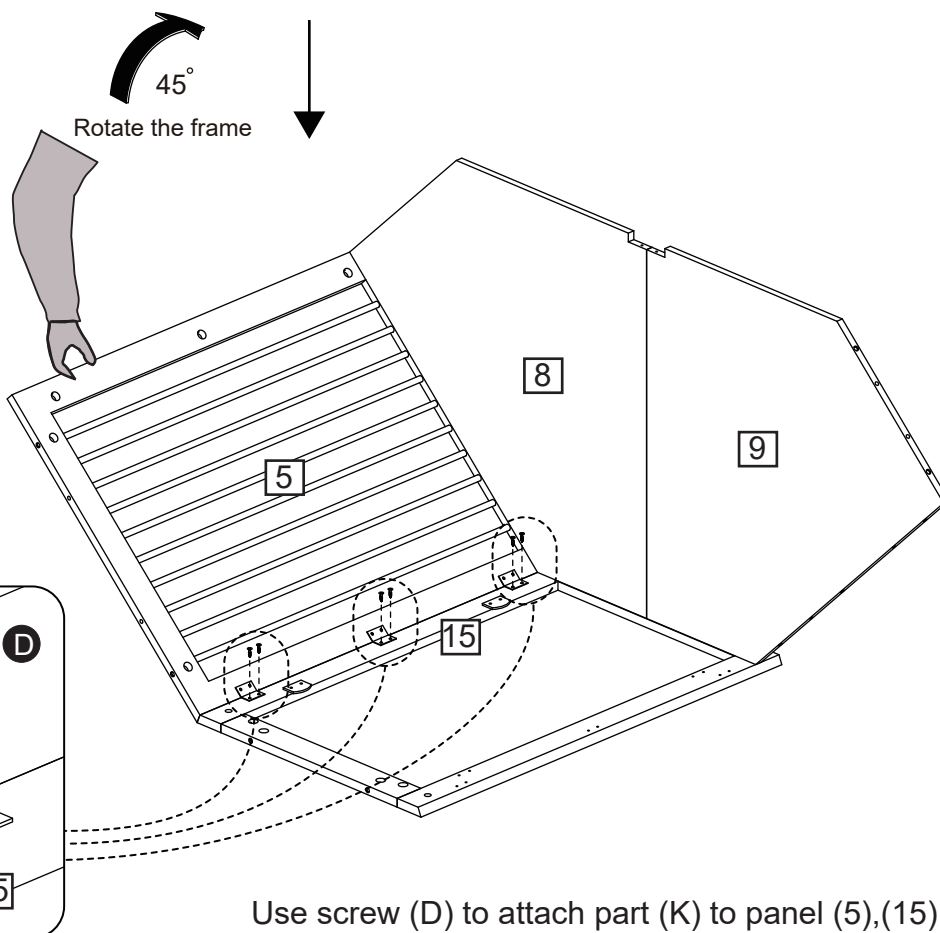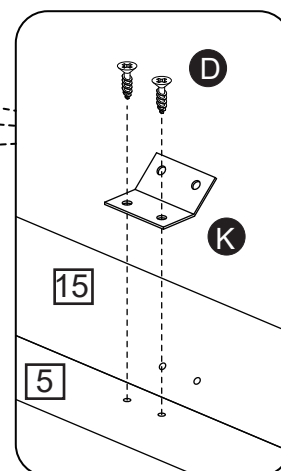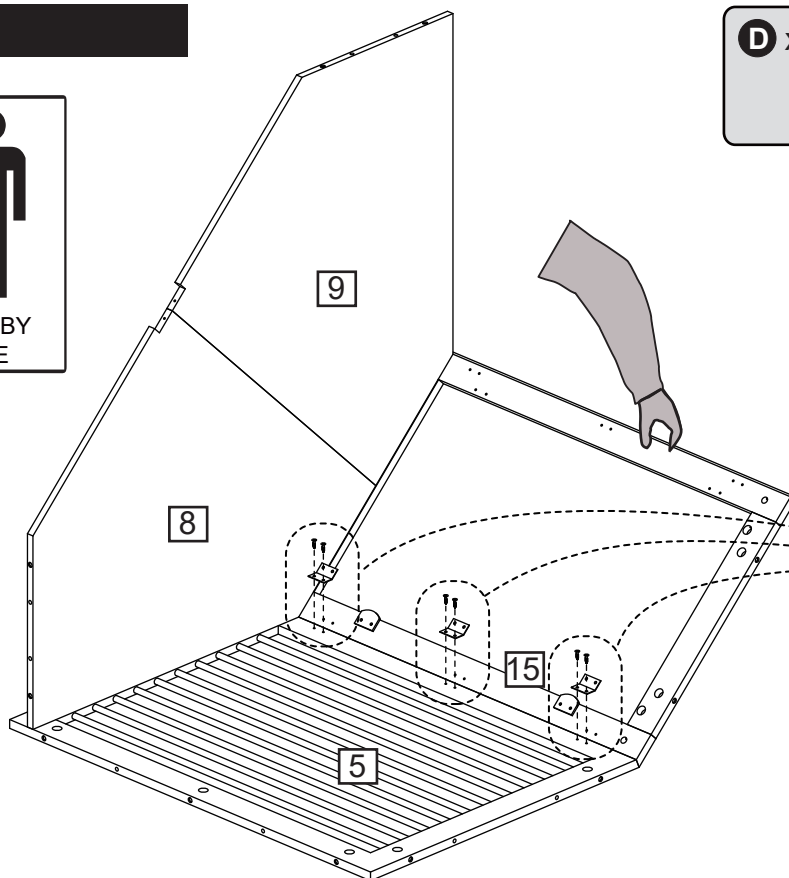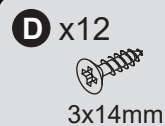


Use screw (D) to attach part (K) to panel (5),(15).

Assembly Instructions

Step 10

CAM-LOCK

 
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

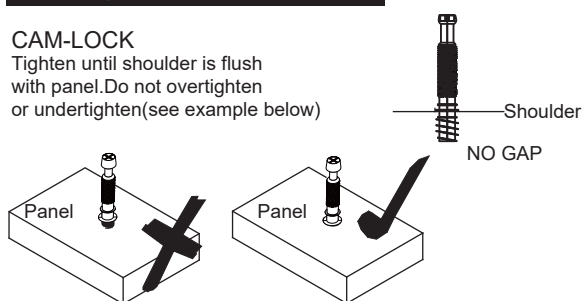

A x2

6x30mm

 B x3

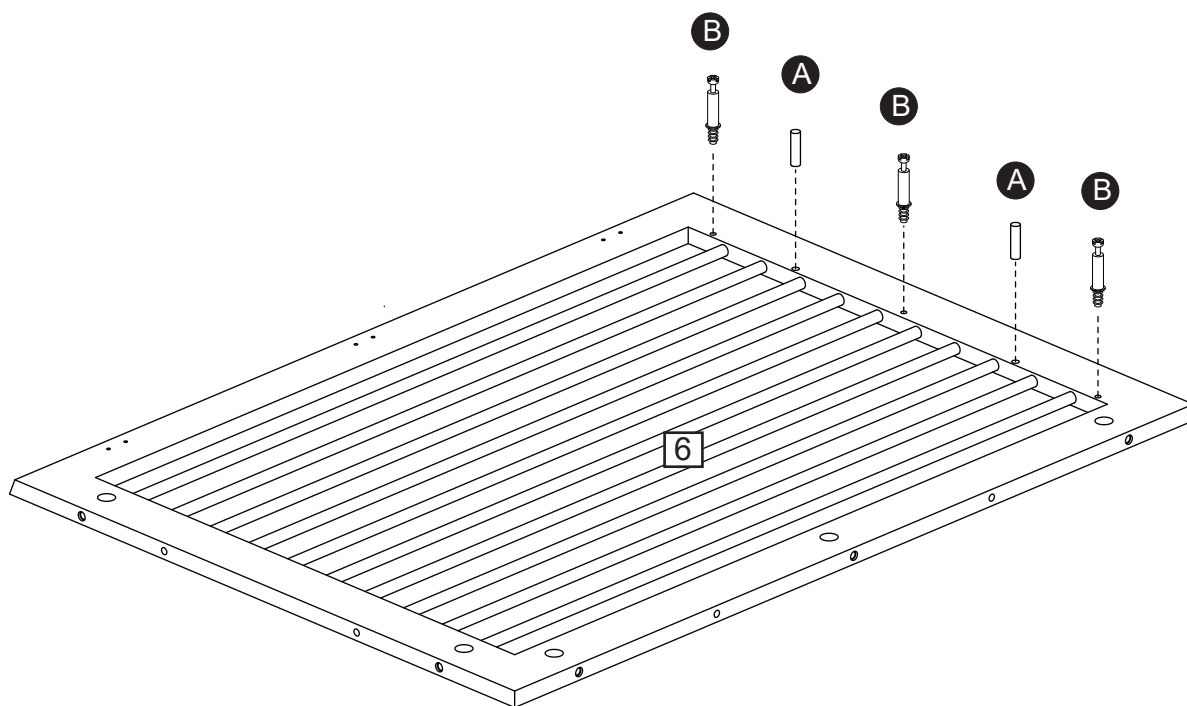


Attach cam bolt (B) to panel (6). Insert wooden dowels (A) into panel (6).



Assembly Instructions

Step 11

 C x3

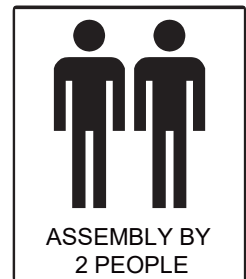


ASSEMBLY BY
2 PEOPLE

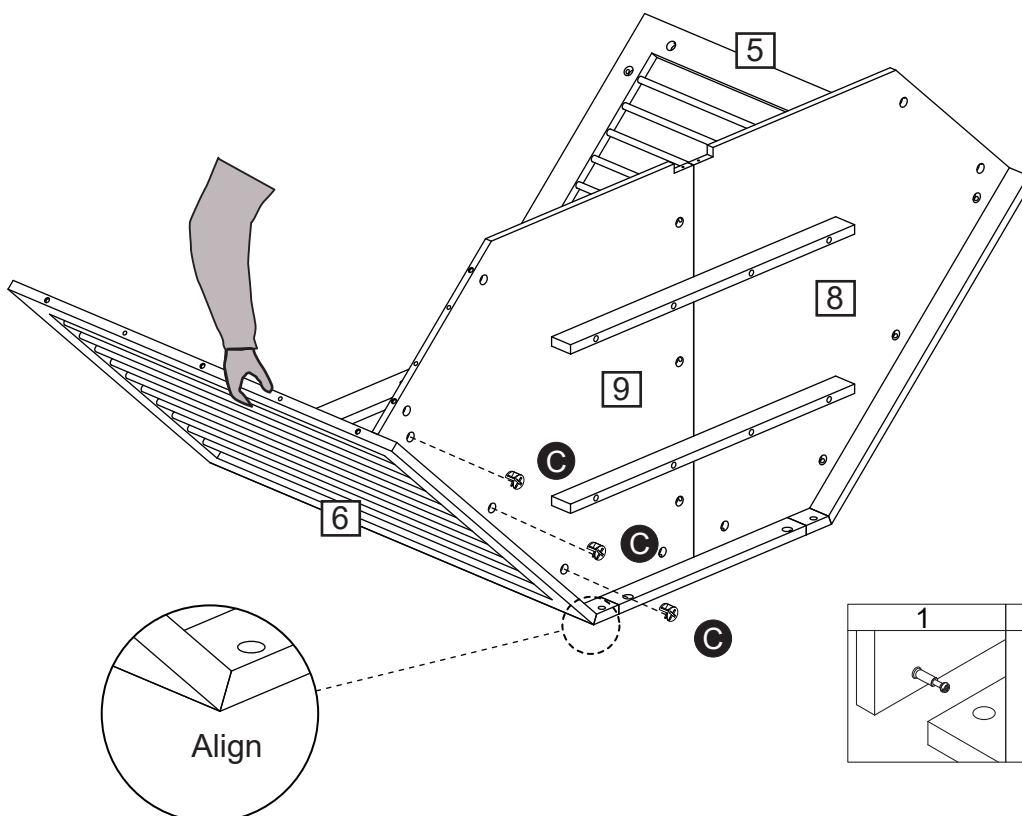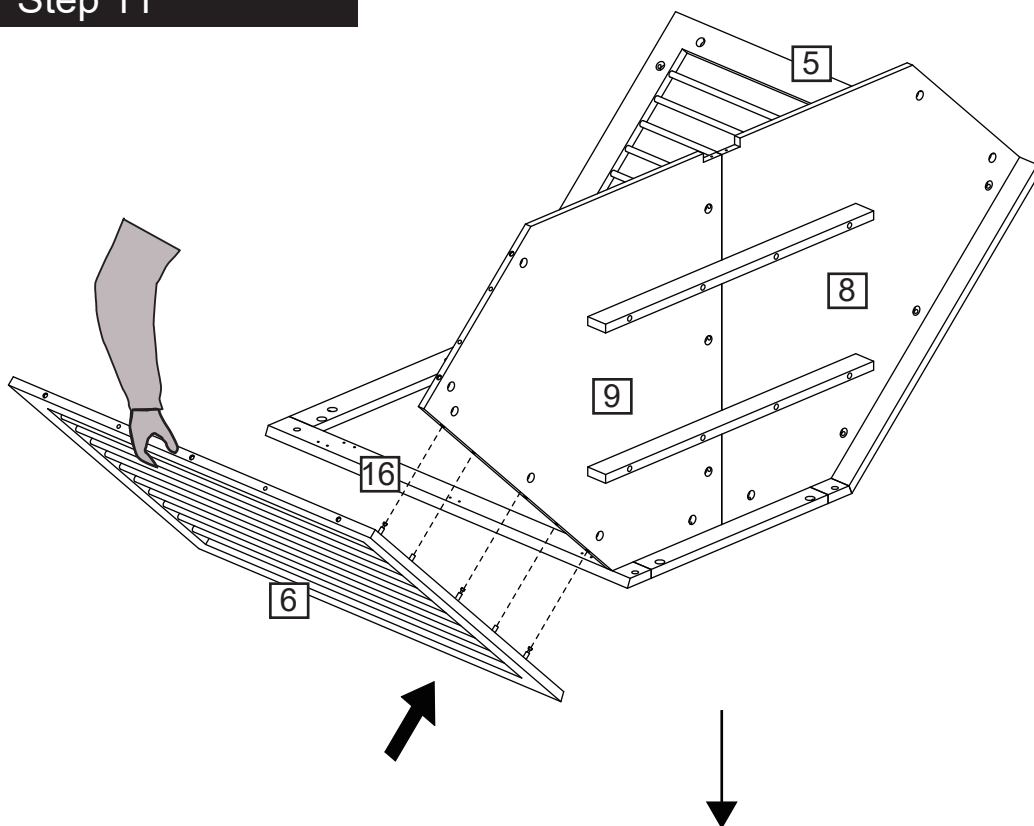  


Attach panel (6) to panel (9) , insert cam lock (C), and tighten.

Assembly Instructions

 Step 12

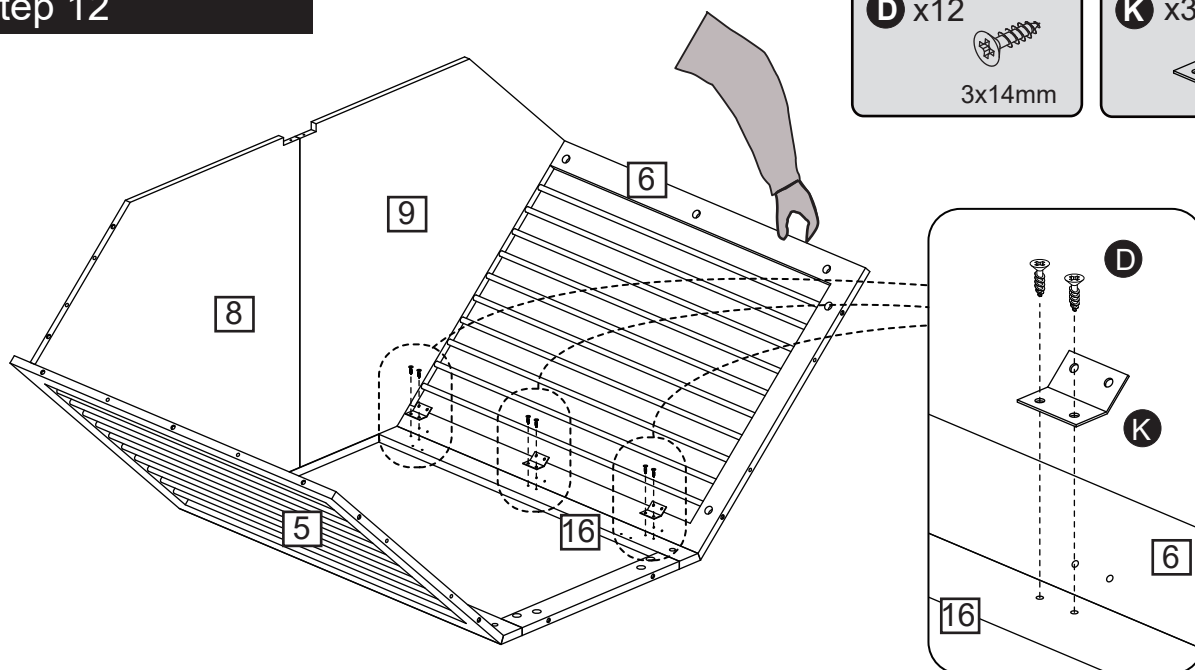

45°
Rotate the frame

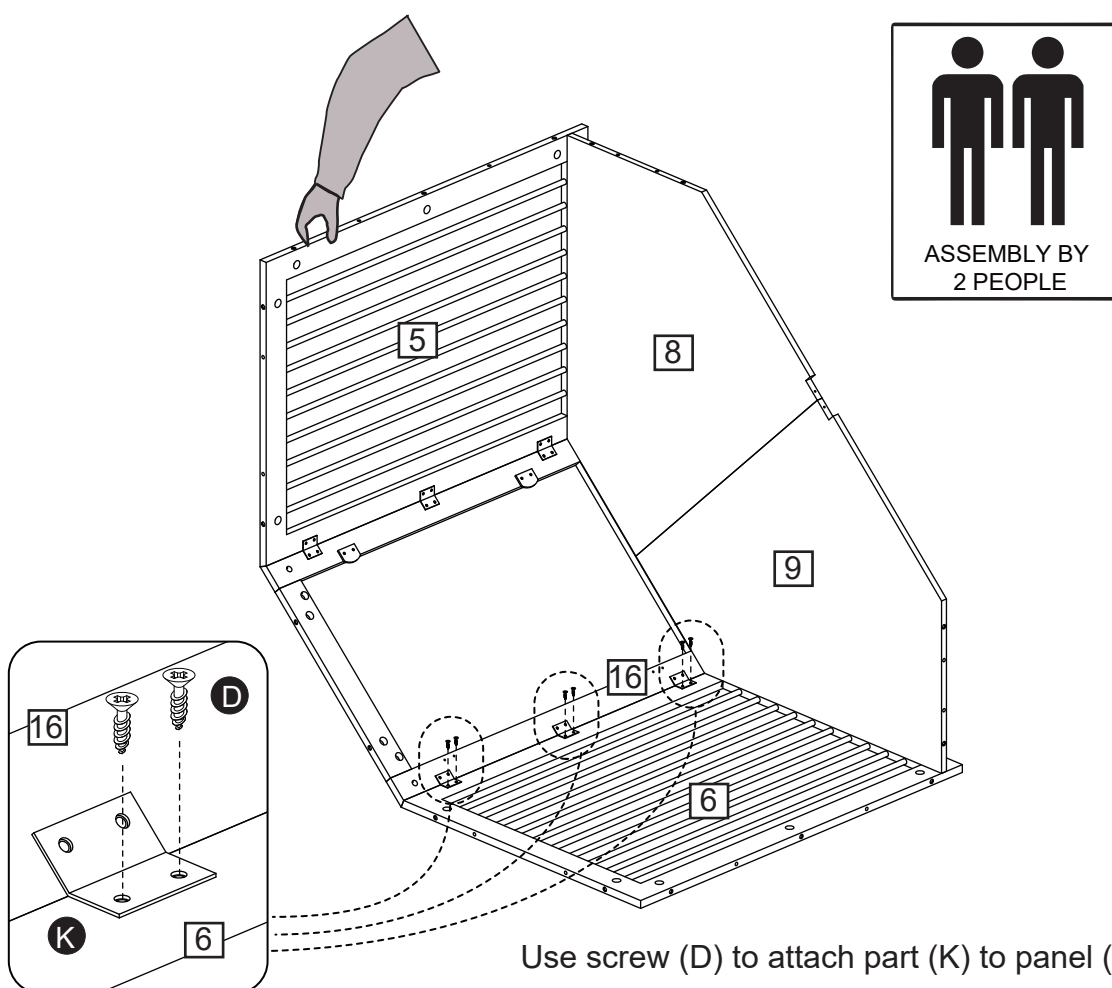 

Use screw (D) to attach part (K) to panel (6),(16).

 
Assembly Instructions

Step 13

D x4



H x2

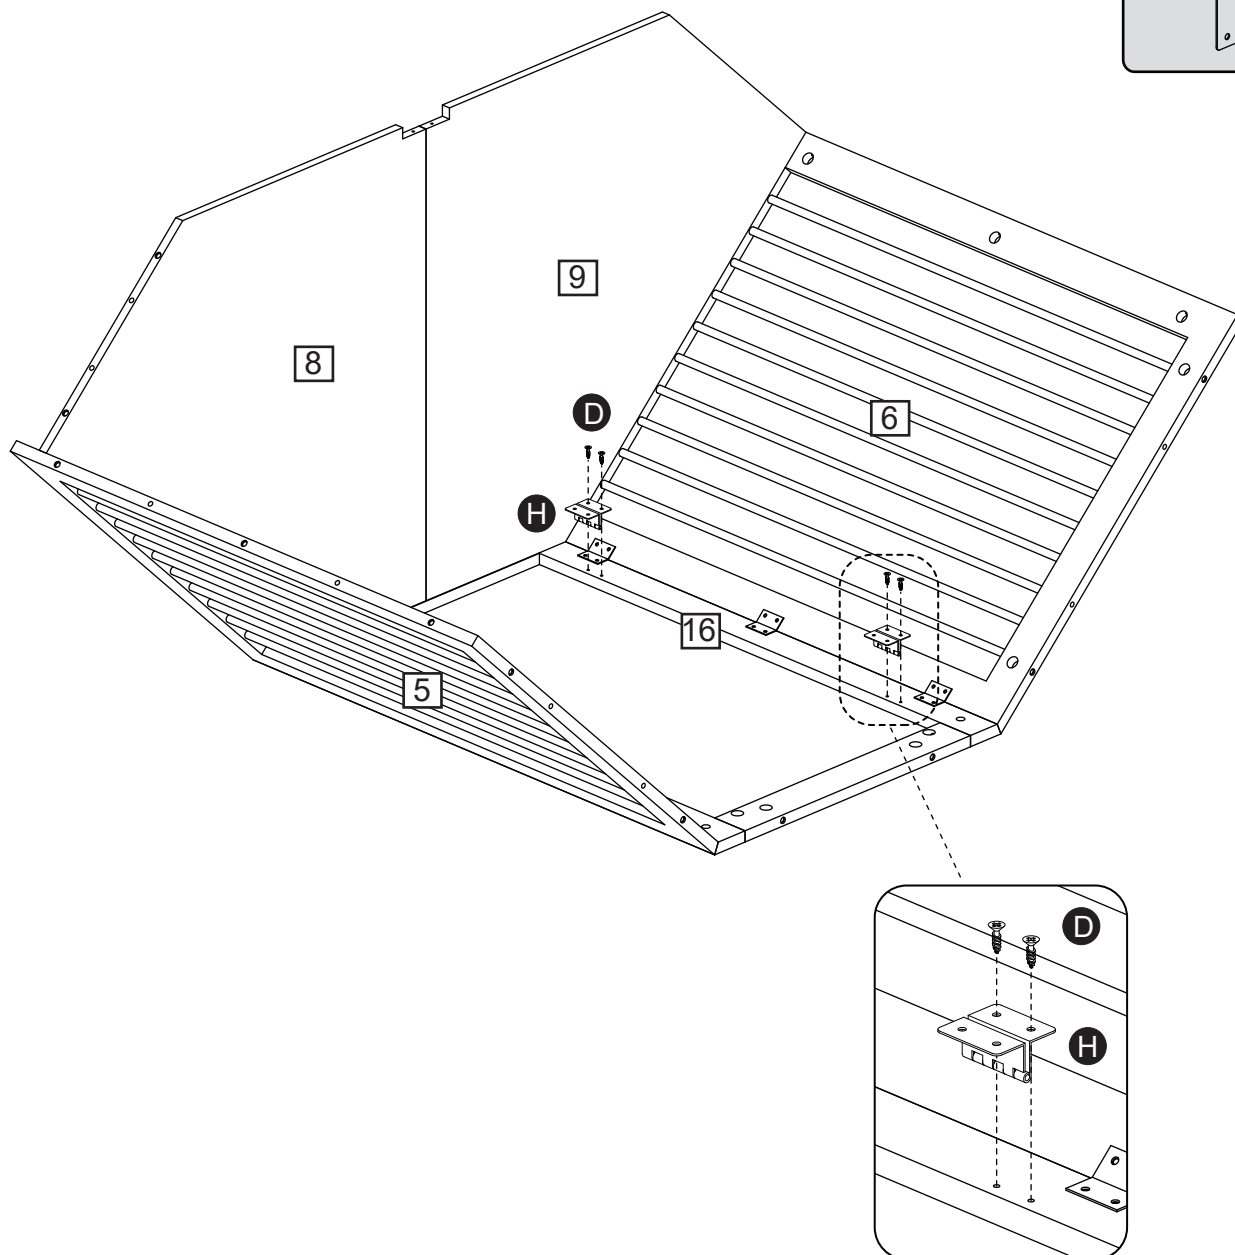



Use screw (D) to attach hinge (H) to panel (16).

Assembly Instructions

Step 14

CAM-LOCK

  
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

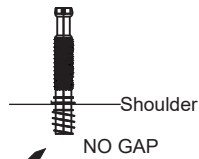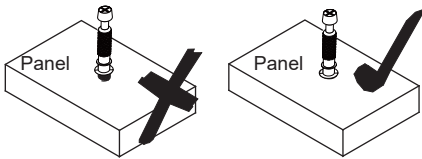


A x4
6x30mm

B x5

 
C x5

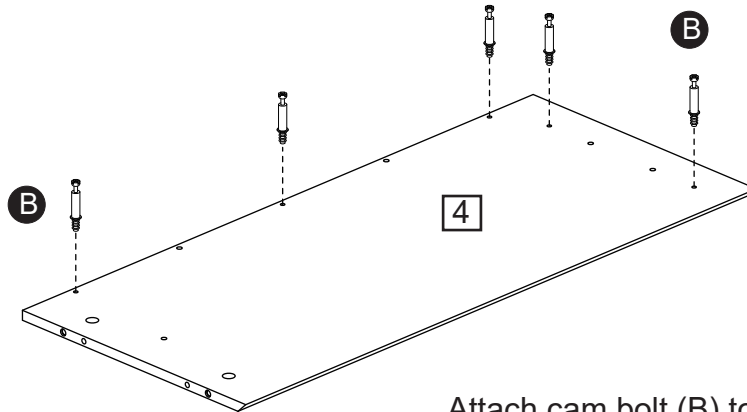

Attach cam bolt (B) to panel (4).

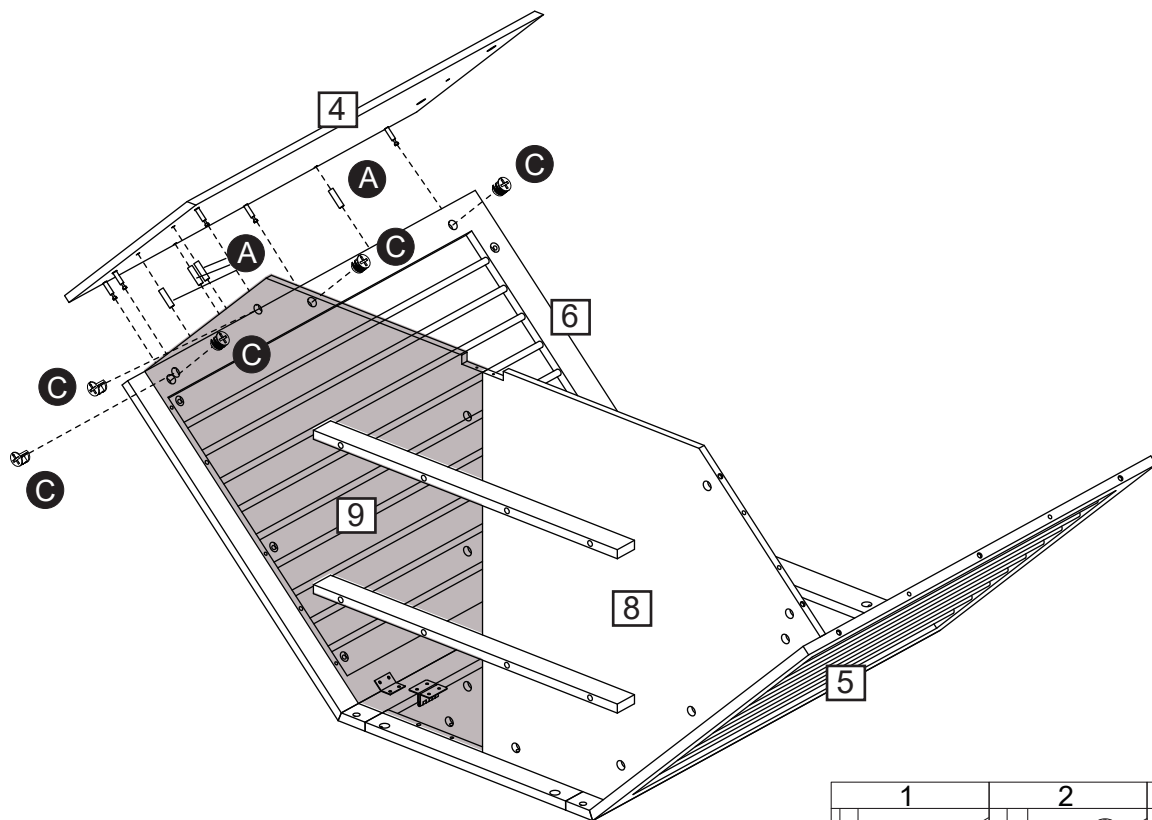 

 Attach panel (4) to panels (6) and (9), insert cam lock (C), and tighten.


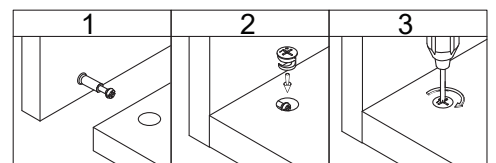


Assembly Instructions

Step 15

CAM-LOCK

  
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

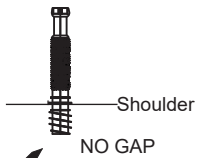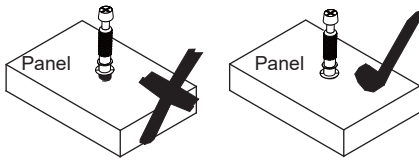


A x4
6x30mm

B x5

 C x5

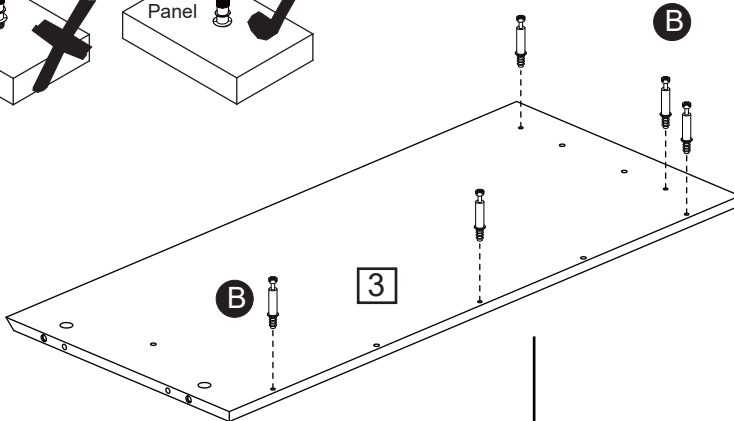


Attach cam bolt (B) to panel (3).

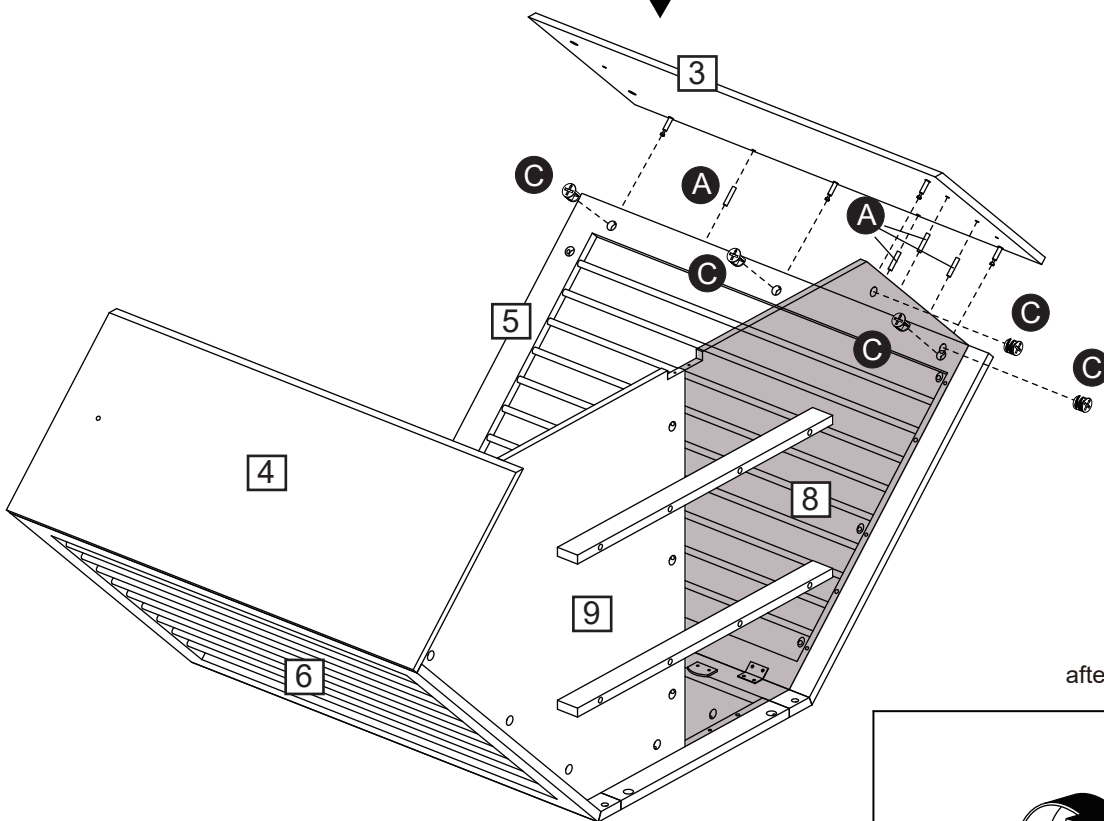 



Rotate the frame after this step as next step

 Attach panel (3) to panels (5) and (8), insert cam lock (C), and tighten.

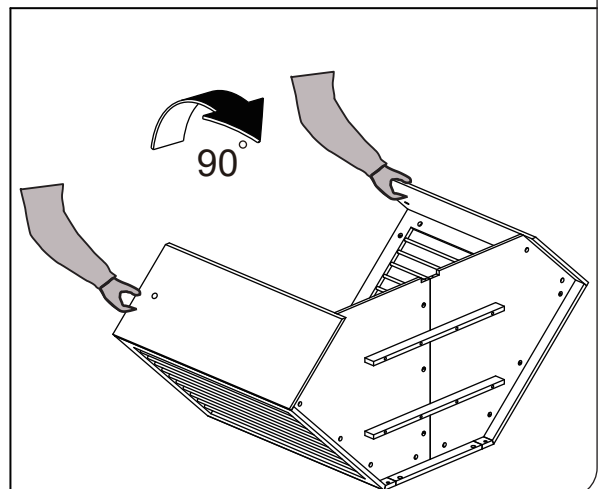







Assembly Instructions

  Step 16

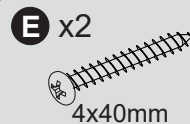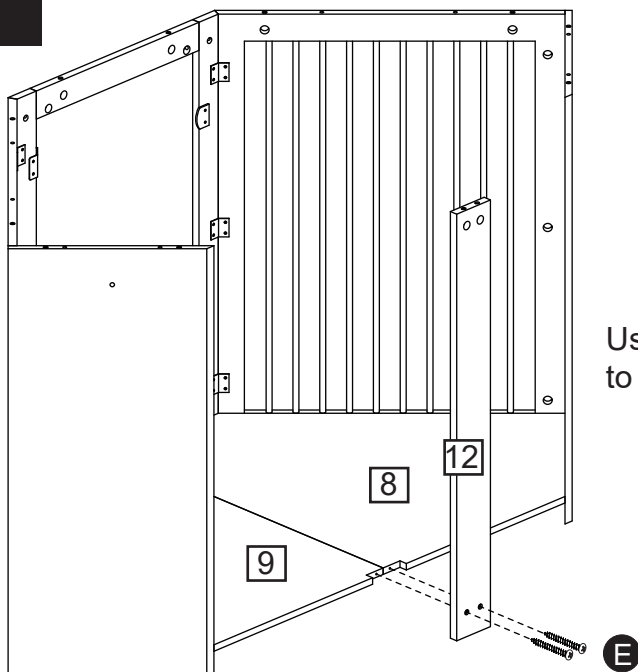

Use screw (E) to attach panel (12) to panels (8) and (9).

      Step 17

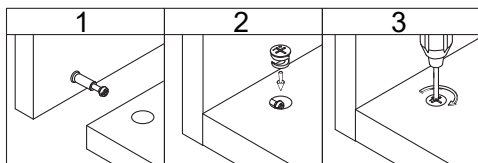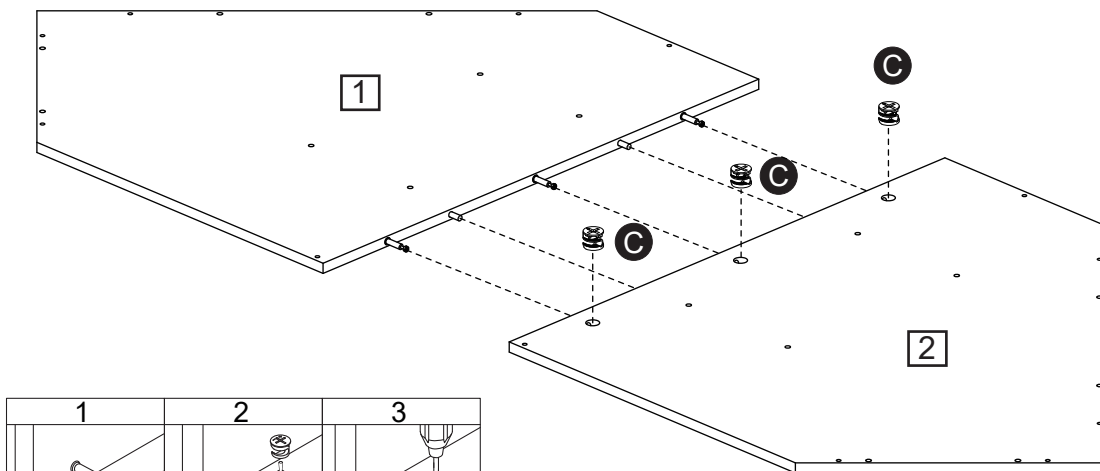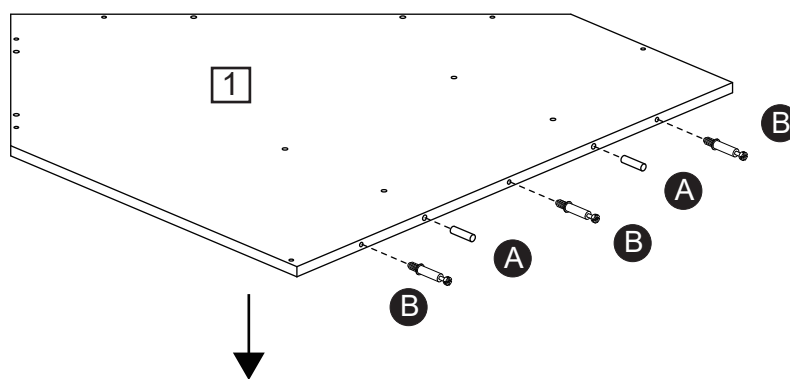




Insert wooden dowels (A) into panel (1). Attach cam bolt (B) to panel (1). Then attach panel (2) to panel (1), insert cam lock (C), and tighten.

Assembly Instructions

Step 18


CAM-LOCK

   Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

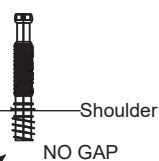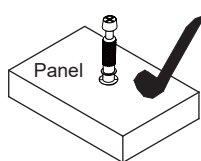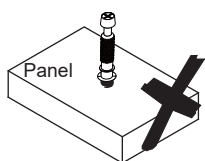

NO GAP

 
B x12



L x8




 6x18mm

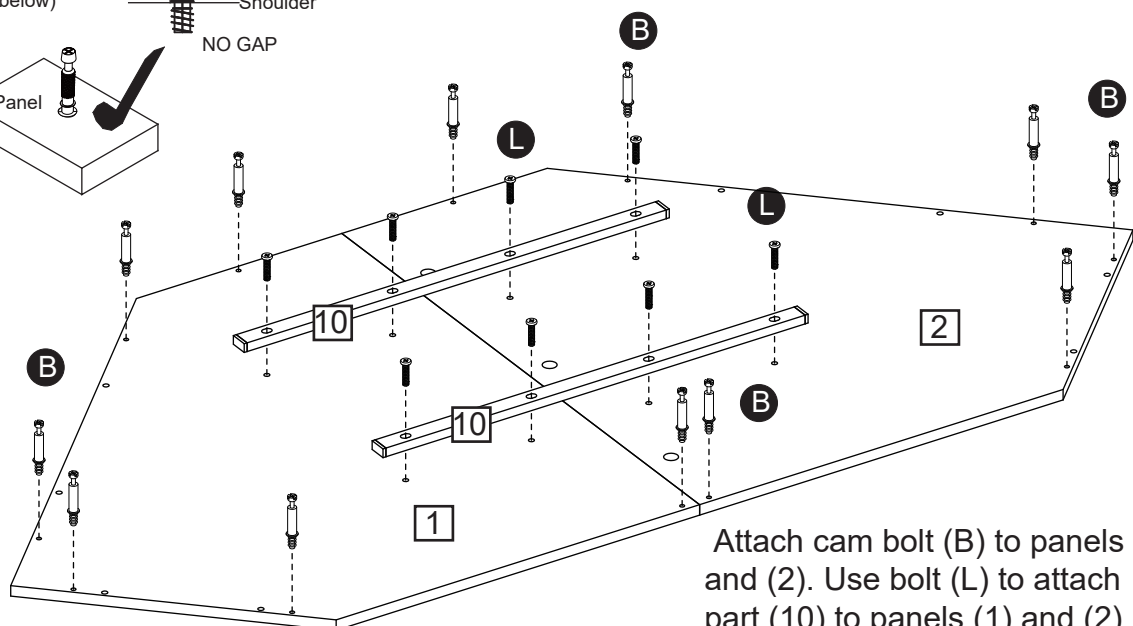

Attach cam bolt (B) to panels (1) and (2). Use bolt (L) to attach part (10) to panels (1) and (2).

 Step 19

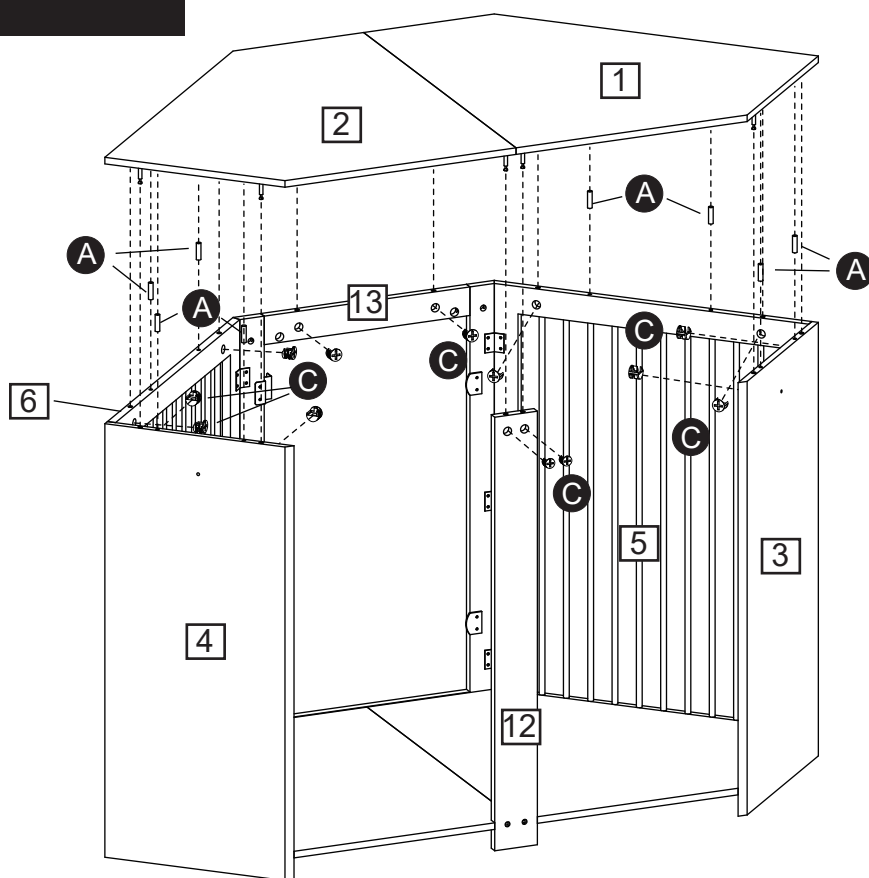

A x8



6x30mm

C x12



ASSEMBLY BY
2 PEOPLE



 
 
 
90°

Insert wooden dowels (A) into panels (3), (4), (5), and (6), then attach panels (1) and (2) to panels (3), (4), (5), (6), (12), and (13). Insert cam lock (C) and tighten.

Rotate the frame after this step as next step

Assembly Instructions

Step 20

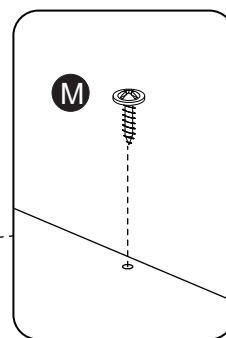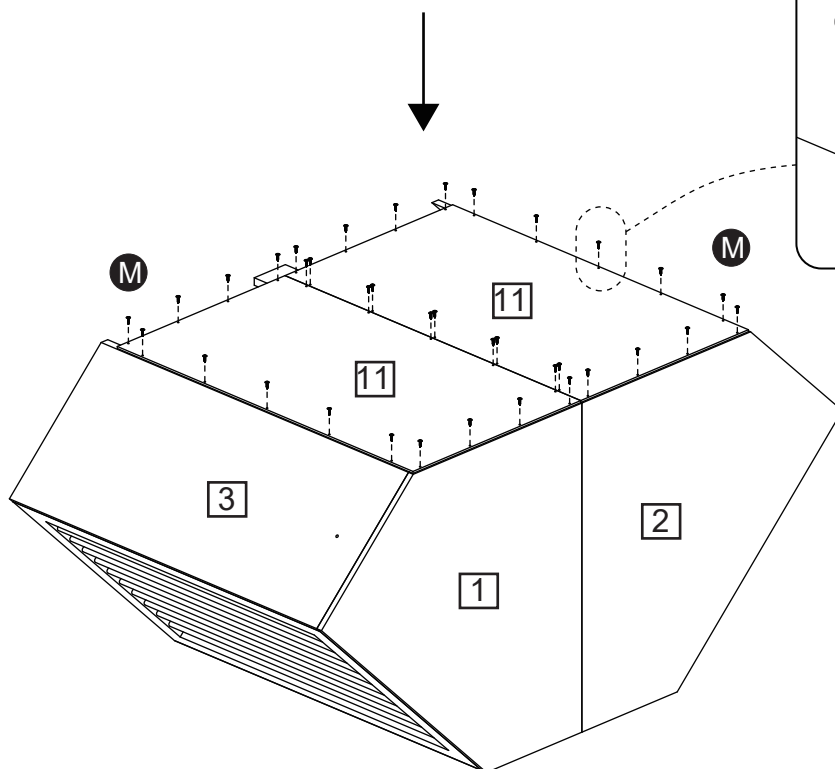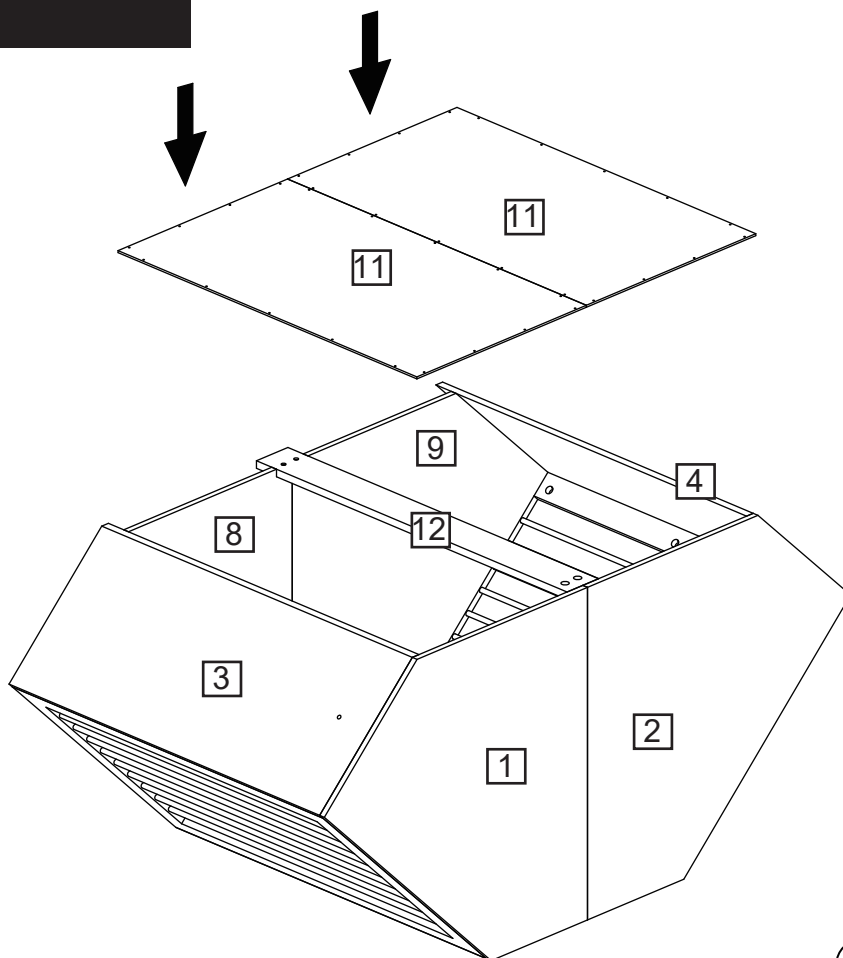


Use screw (M) to attach panel (11) to the cabinet.

Rotate the frame
after this step as next step

Assembly Instructions

 Step 21

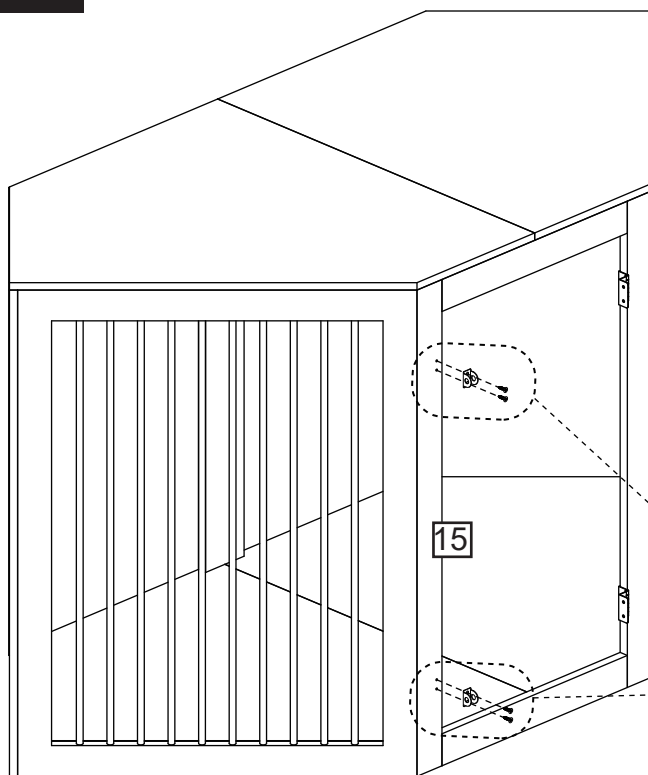

D x4

 
3x14mm

J x2



Use screw (D) to attach part (J) to panel (15).

Step 22

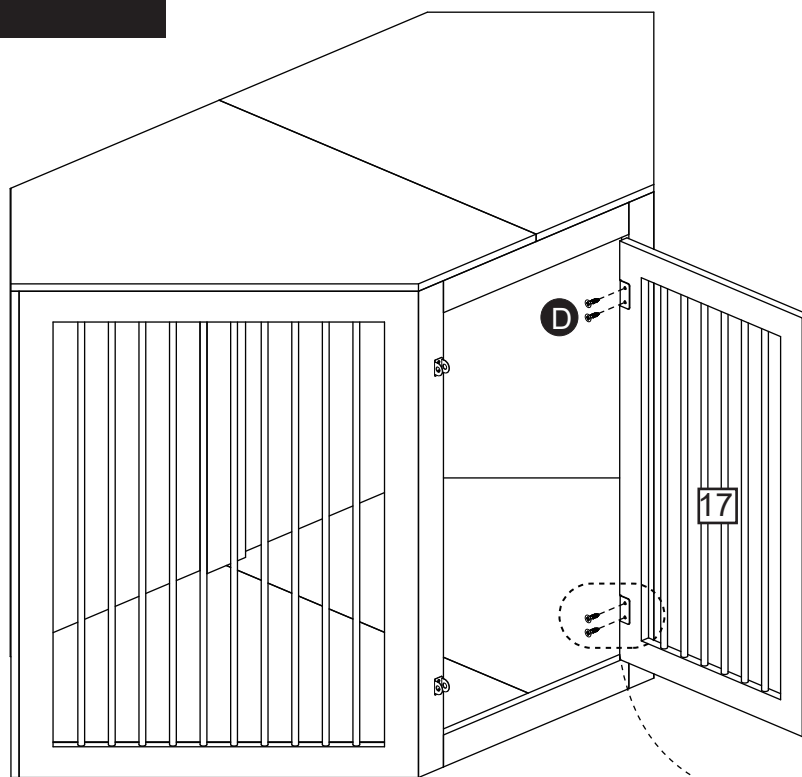

D x4

3x14mm

 
 
 
 
 


ASSEMBLY BY
2 PEOPLE

Use screw (D) to attach panel (17) to the cabinet.






Assembly Instructions

Step 23

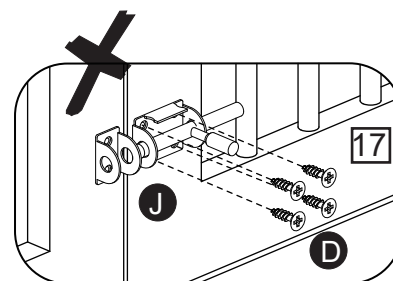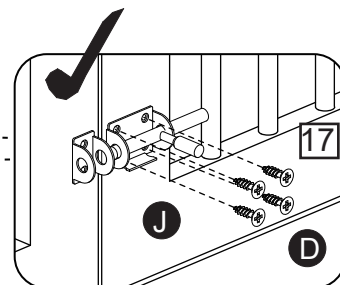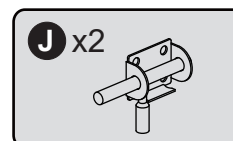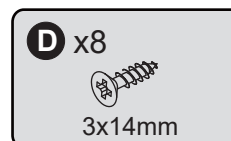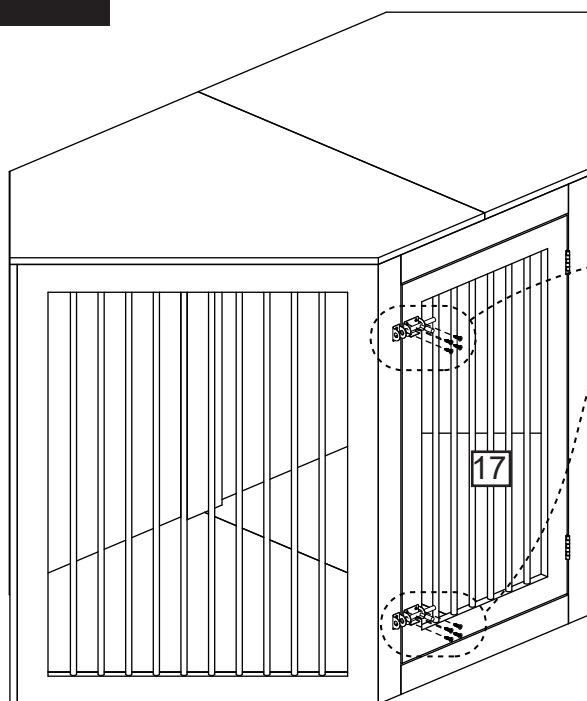

Use screw (D) to attach part (J) to panel (17).

     
Step 24

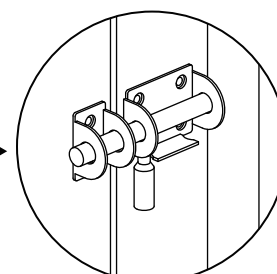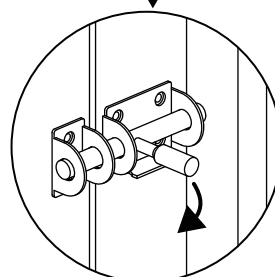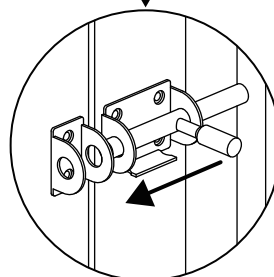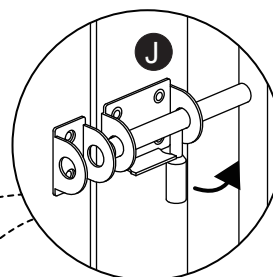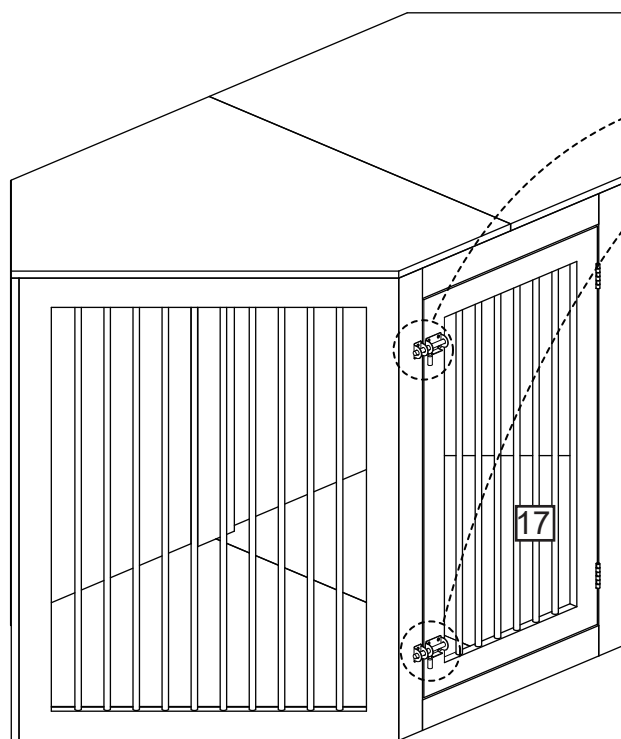


Lock panel (17) according to the steps shown in the diagram.

Assembly Instructions

 Step 25

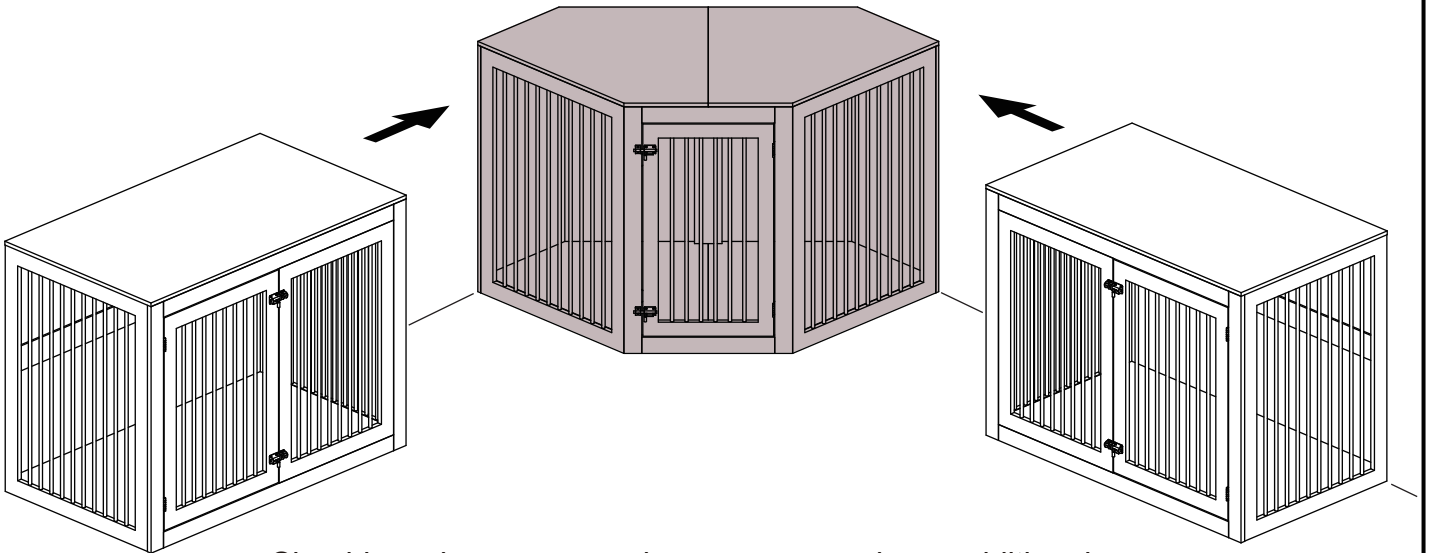


 Should you have any needs, you may purchase additional supporting combination units as required to facilitate easier use.





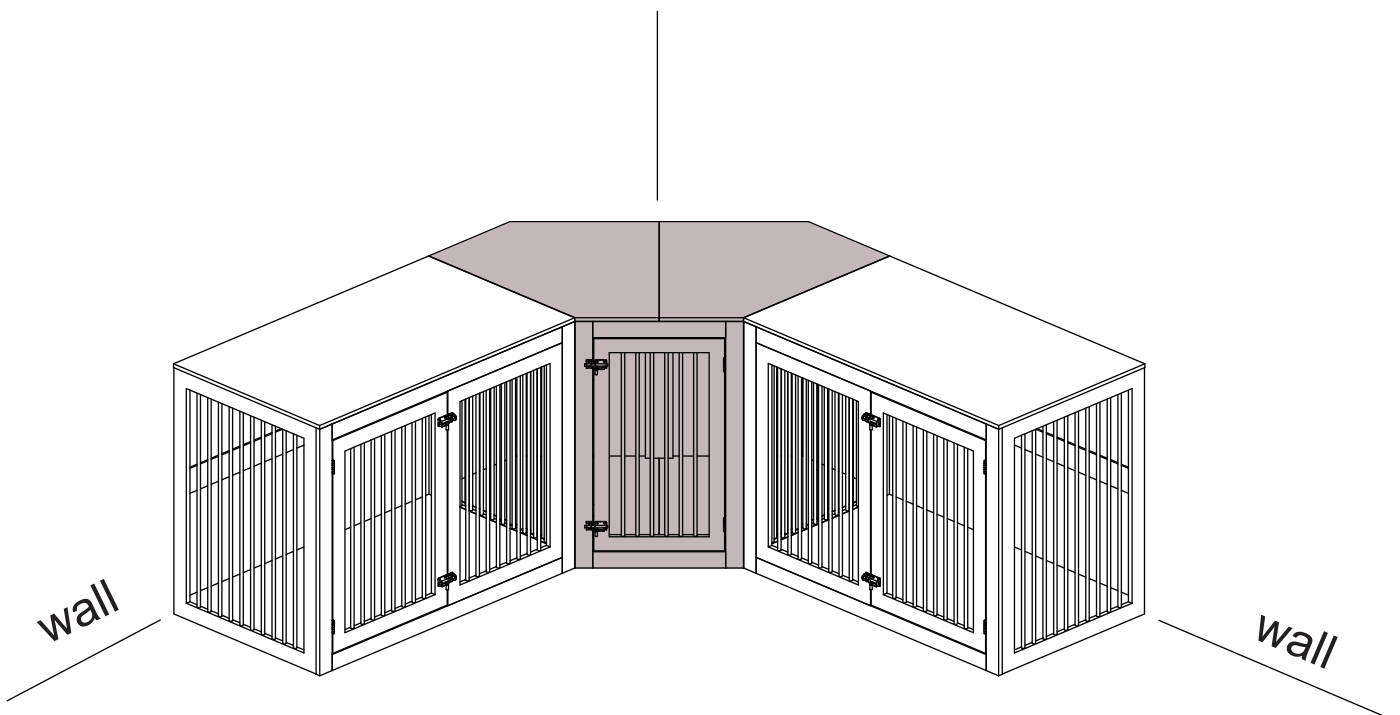


Assembly Instructions

 Step 26

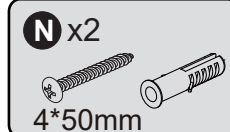

     Use part (N) to secure the cabinet to the wall.

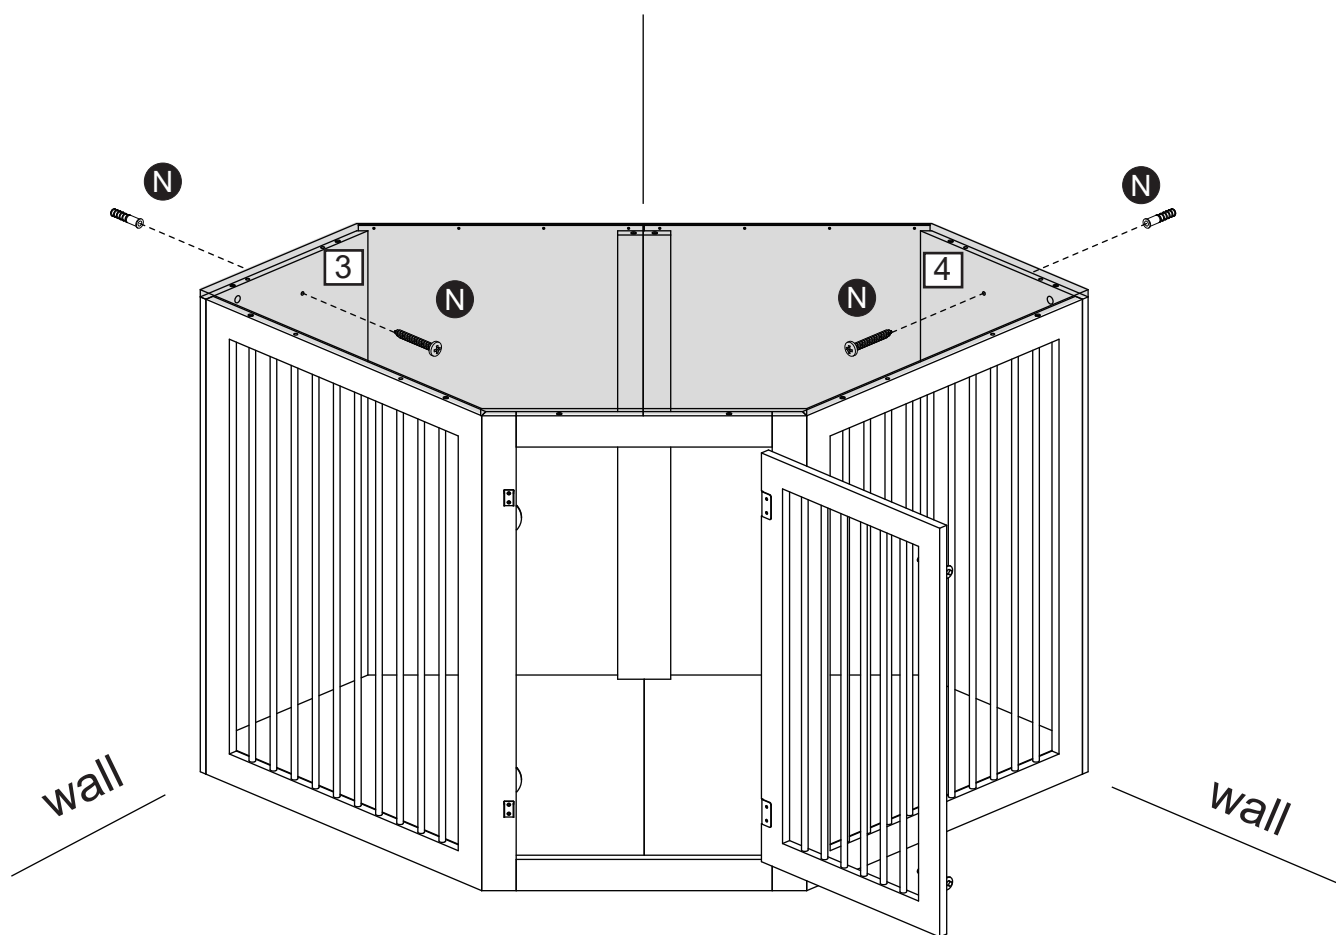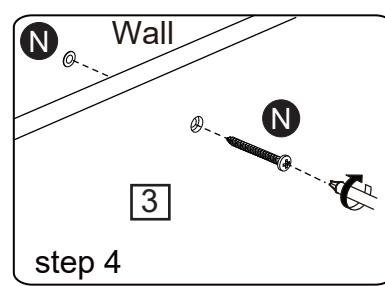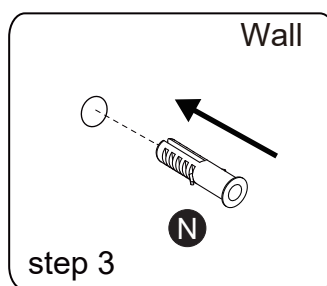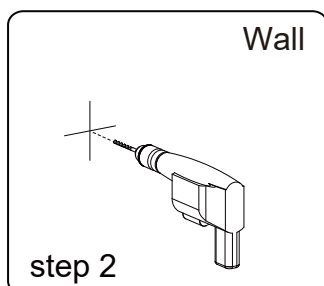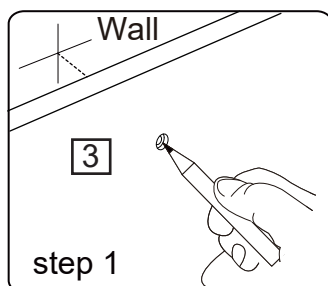

Please read the Guide to Wall Mounting & Fixings on the next page before excuting this step.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**

 
Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

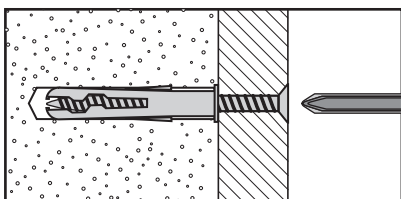


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

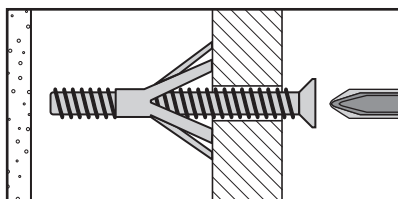


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

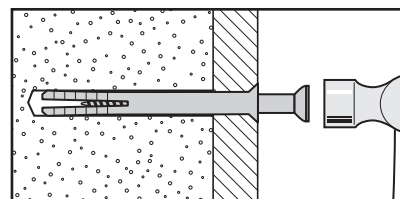


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

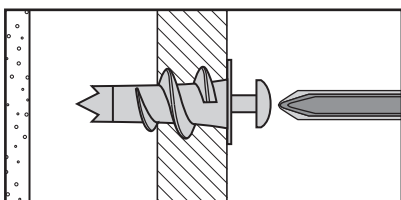


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing – Heavy Duty" wall plug

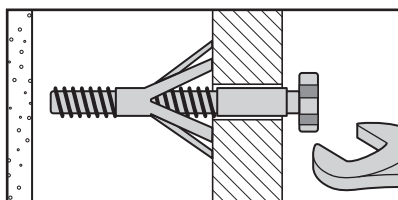

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.6 "Shield Anchor" wall plug – heavy loads

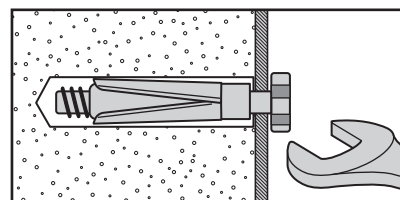

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

| Dog Crate

Sku:
C000789011
C000789021

V1.0