

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

1. For use with televisions weighing 39 lbs or fewer. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. **NEVER** use with CRT televisions

 
2. Do not stand on the product

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:
	• ALWAYS install tipover restraint provided. • For use with televisions weighing 39 lbs or fewer. Use with heavier televisions may result in instability causing tipover resulting in death or serious injury. NEVER use with CRT TVs. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. • Do not defeat or remove the drawer interlock system.
	<i>This is a permanent label. Do not remove!</i>

Assembly Instructions







Caution : You must read this before you proceed

TV CABINET

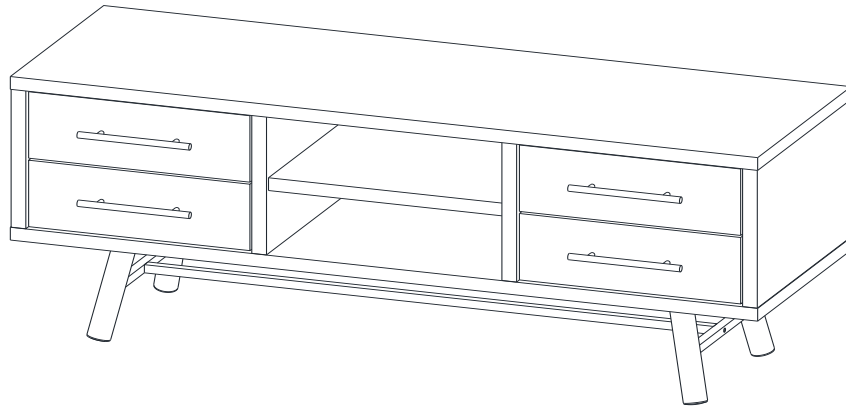

Parts List

Label	Picture	Description	QTY
AL		Drawer Left Side Rail	4
AR		Drawer Right Side Rail	4
BL		Drawer Left Bottom Rail	4
BR		Drawer Right Bottom Rail	4
C		Top Panel	1
D		Side Panel Left	1
E		Side Panel Right	1

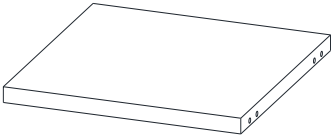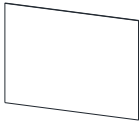      
F		Center Panel Left	1
G		Center Panel Right	1
H		Middle Panel	1
I		Bottom Panel	1
J		Back Panel	2
K		Drawer Front Panel	4
L		Drawer Back Panel	4
M		Drawer Side Panel	8
N		Drawer Bottom Panel	4
O		Metal Leg	2
P		Metal Support	1
Q		Handle	4

Hardware			
Label	Picture	Description	QTY
①		Cam Lock	13
②		Cam Bolt	13
③		Cam Cap	13
④		Positioning Dowel (φ8*30mm)	21
⑤		Cap Wood Screw (M6*60mm)	9
⑥		Screw (M3.5*16mm)	49
⑦		Screw (M4*38mm)	33
⑧		Handle Screw (M4*45mm)	9
⑨		Allen Key	1
⑩		Bolt (M6*40mm)	3
⑪		Screw (M4*20mm)	17
⑫		Screwdriver (not provided)	1
⑬		Hammer (not provided)	1
⑭		Power Drill (not provided)	1

Cabinet Restraint Device Hardware			
⑮		Metal Bracket	4
⑯		Wall Plug	2
⑰		Wall Plug Screw	2
⑱		Pan Head Screw	2
⑲		Cabinet Restraint Strap	2

Assembly Preparation

 
Before Beginning Assembly:

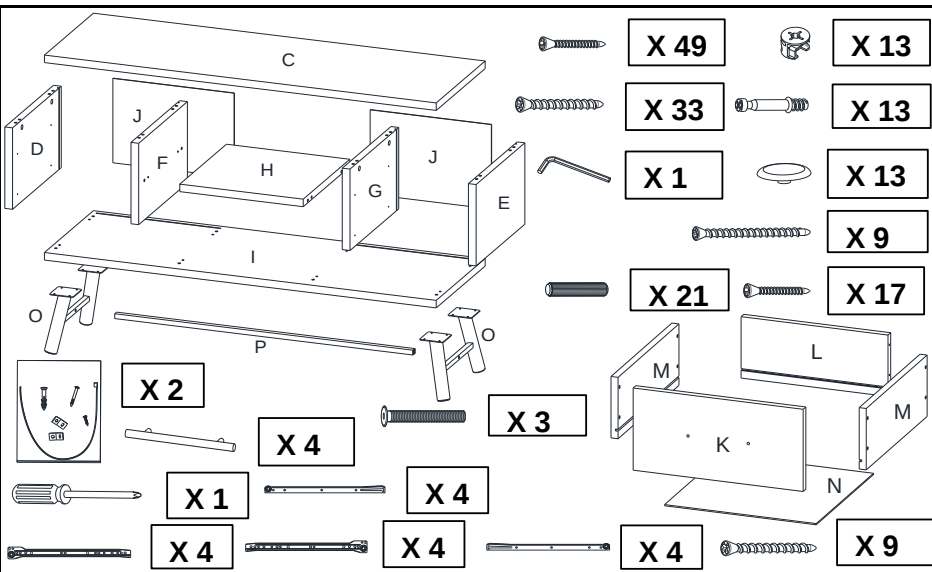

-  • Read instructions, cover to cover-
-  • Have 2 adults on hand for assembly-
-  • Do not assemble on flooring or carpet-
-  • Assemble on a clean non-marring surface (packing foam)-
-  • Save all packaging until finished-

Assembly Steps

 
Overview

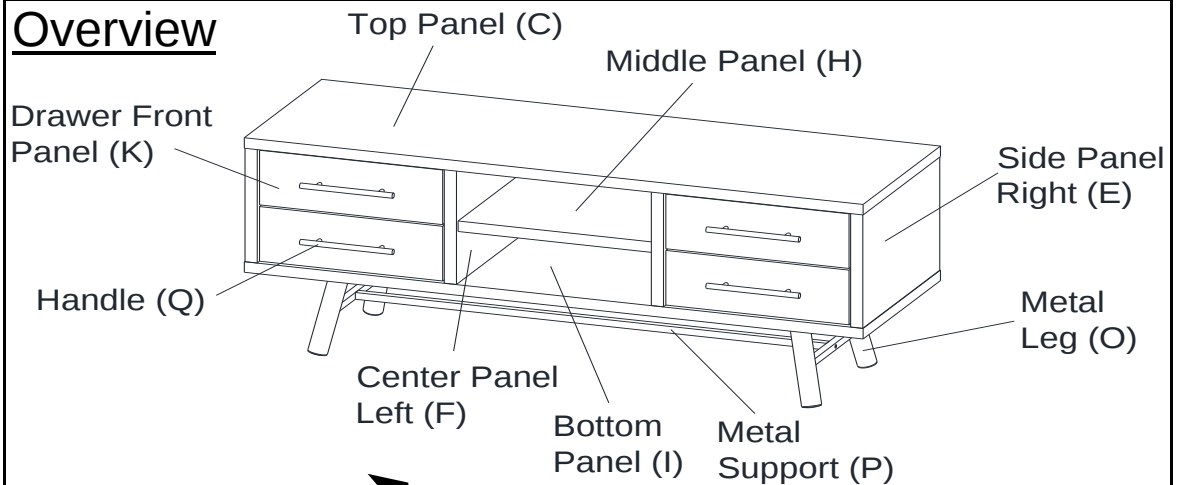

FRONT FACING


This TV Cabinet has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the TV Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

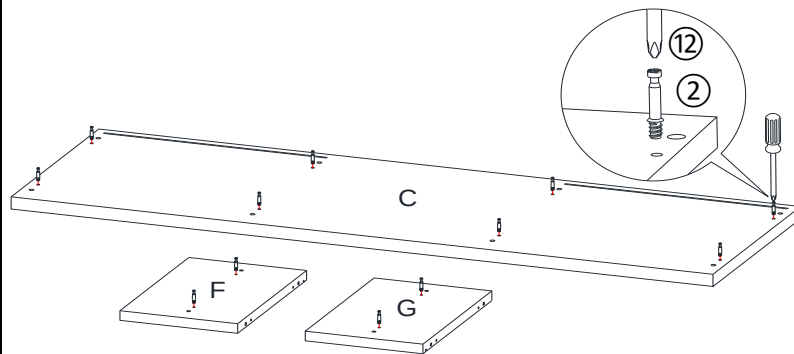

Unpack and place all parts on a clean, non-marring surface. Attach Cam Bolts(②) to mounting positions on Top Panel (C), Center Panel Left (F) and Center Panel Right (G) with Screwdriver(⑫).

 
Step 2

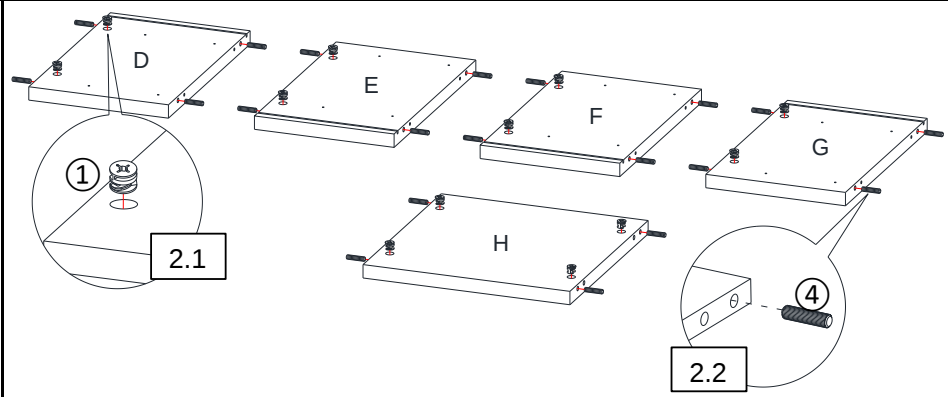

2.1) Insert Cam Locks(①) into mounting positions on Side Panel Left (D), Side Panel Right (E), Center Panel Left (F), Center Panel Right (G) and Middle Panel (H) by hand.

2.2) Insert Positioning Dowels(④) into mounting positions on Side Panel Left (D), Side Panel Right (E) and Center Panel Left (F), Center Panel Right (G) and Middle Panel (H) by hand.

 Step 3

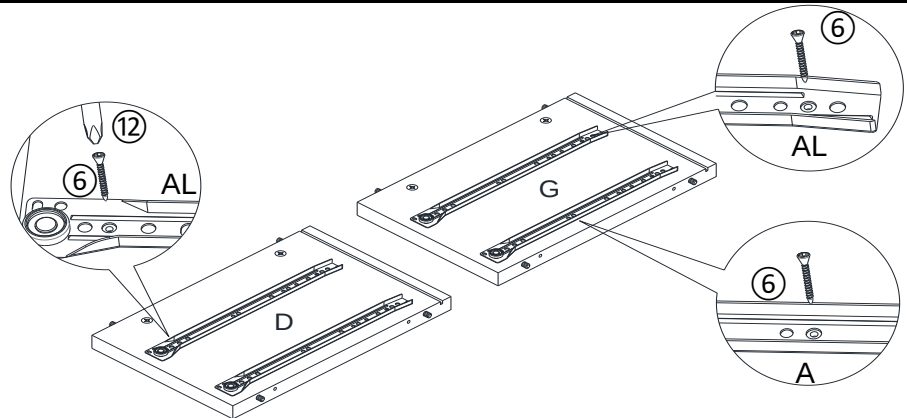


Attach Drawer Left Side Rail (AL) to Side Panel Left (D) and Center Panel Right (G) using Screws(⑥) with Screwdriver(⑫) where indicated.

Note: There are pre-existing mounting positions on the Side Panel Left (D) and Center Panel Right (G) to attach the Drawer Left Side Rail (AL).

Tighten the Screws fully in a sequential manner.

 Step 4

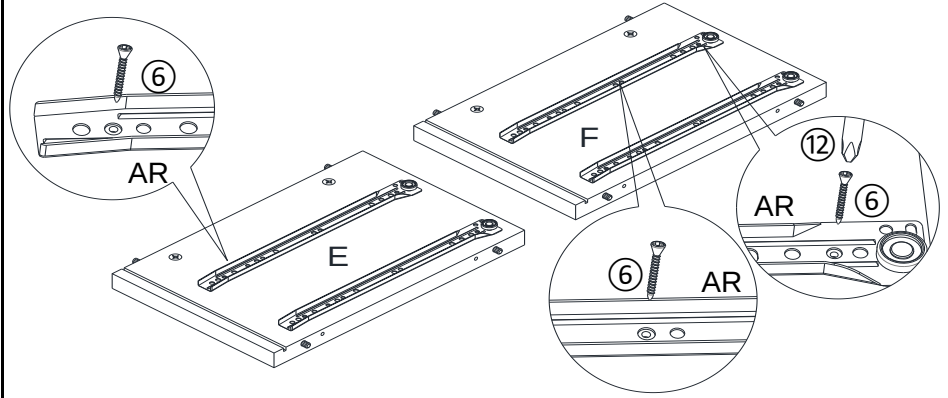


Attach Drawer Right Side Rail (AR) to Side Panel Right (E) and Center Panel Left (F) using Screws(⑥) with Screwdriver(⑫) where indicated.

Note: There are pre-existing mounting positions on the Side Panel Right (E) and Center Panel Left (F) to attach the Drawer Right Side Rail (AR).

Tighten the Screws fully in a sequential manner.

 Step 5

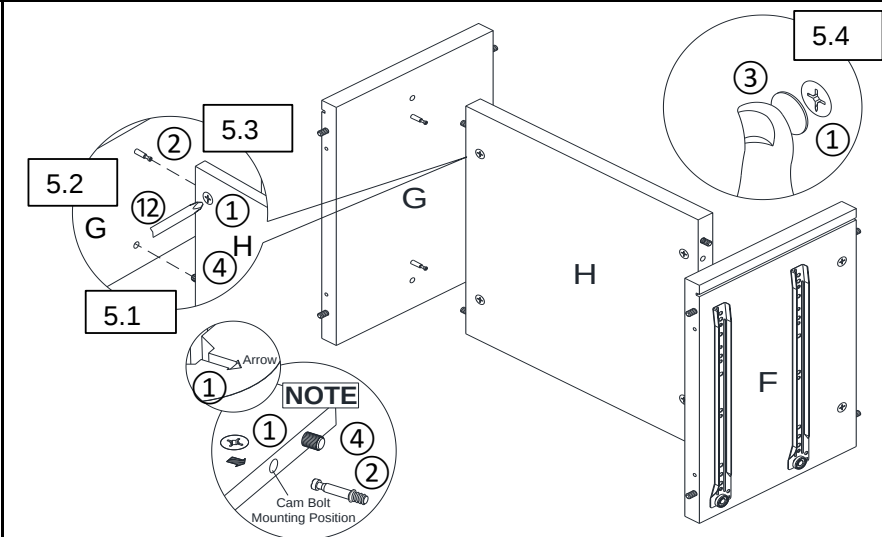

5.1) Insert Positioning Dowels(④) from Middle Panel (H) into mounting positions on Center Panel Left (F) and Center Panel Right (G).

 
Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.

5.2) Insert the Cam Bolts(②) on Center Panel Left (F) and Center Panel Right (G) into mounting positions on Middle Panel (H).

5.3) Turn the Cam Locks(①) with the Screwdriver(⑫) until they all lock into place.

5.4) Insert Cam Cap(③) to cover the Cam Lock(①) by hand.

Step 6

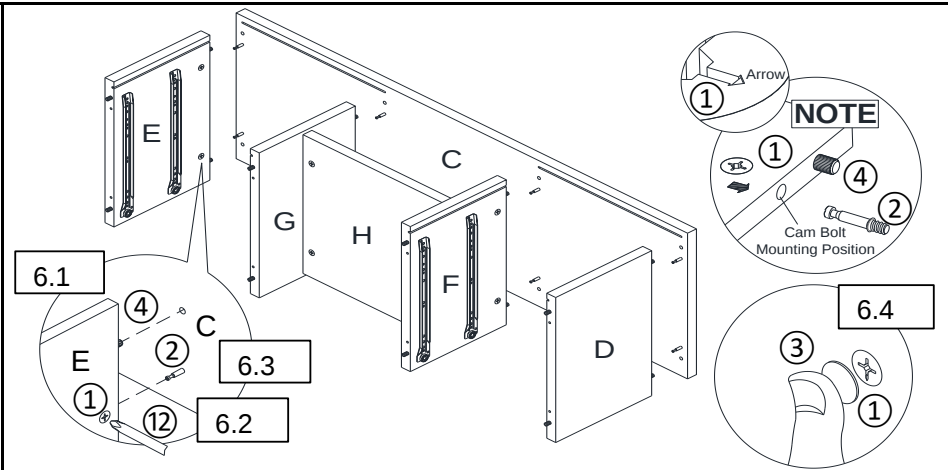

6.1) Insert Positioning Dowels(④) from Side Panel Left (D), Side Panel Right (E), Center Panel Left (F) and Center Panel Right (G) into mounting positions on Top Panel (C).

 
Note: Ensure the arrows on Cam Locks head points towards the Cam Bolt mounting positions.

6.2) Insert the Cam Bolts(②) on Top Panel (C) into mounting positions on Side Panel Left (D), Side Panel Right (E), Center Panel Left (F) and Center Panel Right (G).

6.3) Turn the Cam Locks(①) with the Screwdriver(⑫) until they all lock into place.


6.4) Insert Cam Cap(③) to cover the Cam Lock(①) by hand.

Step 7

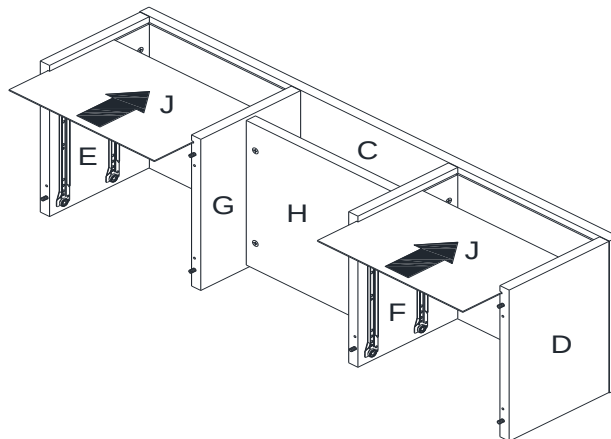

Insert Back Panel (J) along the slot on Side Panel Left (D), Side Panel Right (E), Centre Panel Left (F) and Centre Panel Right (G).

 
Step 8

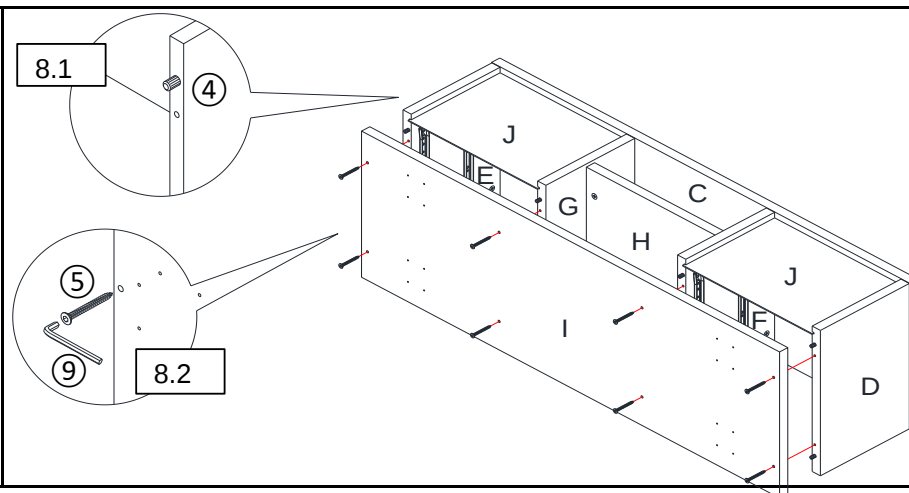

8.1) Insert Positioning Dowels(④) from Side Panel Left (D), Side Panel Right (E), Center Panel Left (F) and Center Panel Right (G) into mounting positions on Bottom Panel (I).


8.2) Attach Bottom Panel (I) to TV Cabinet Assembly using Cap Wood Screws(⑤) with Allen Key(⑨).

 Step 9

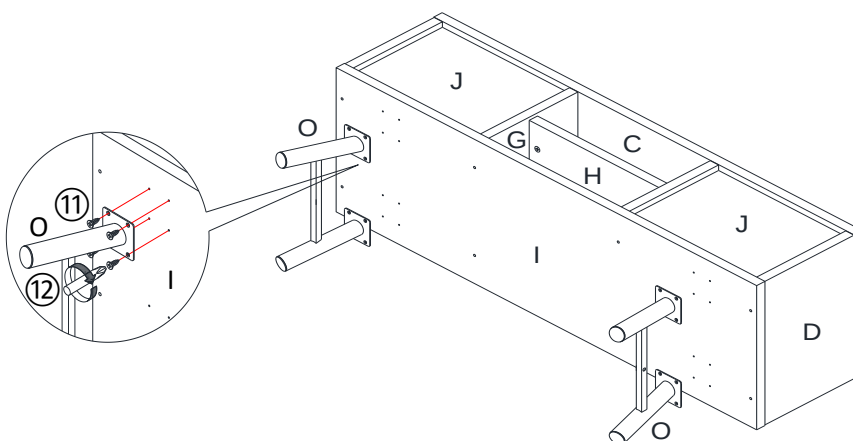


Attach Metal Leg (O) to Bottom Panel (I) using Screw(⑪) with Screwdriver(⑫).

 Step 10

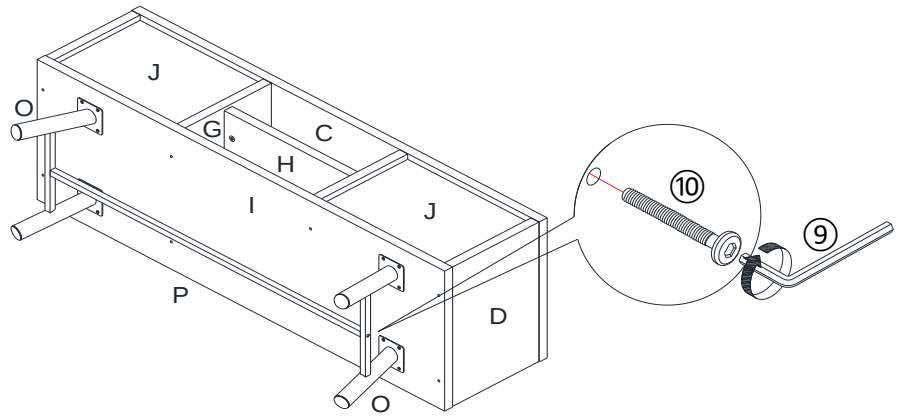


Attach Metal Leg (O) to Metal Support (P) using Bolt(10) with Allen Key(9).

 Step 11

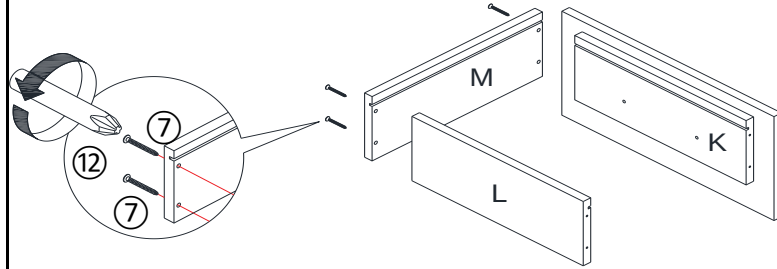


Attach Drawer Side Panel (M) to Drawer Front Panel (K) and Drawer Back Panel (L) using Screws(7) with Screwdriver(12).
Tighten the Screws fully in a sequential manner.

 Step 12

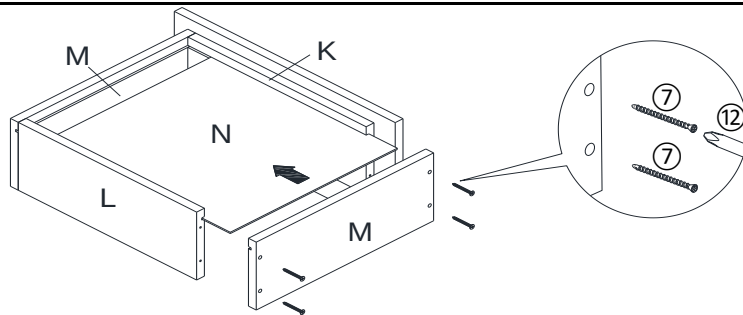

Attach Drawer Bottom Panel (N) to Drawer Assembly, attach Drawer Side Panel (M) to Drawer Front Panel (K) and Drawer Back Panel (L) using Screws(7) with Screwdriver(12).
Tighten the Screws fully in a sequential manner.

 Step 13

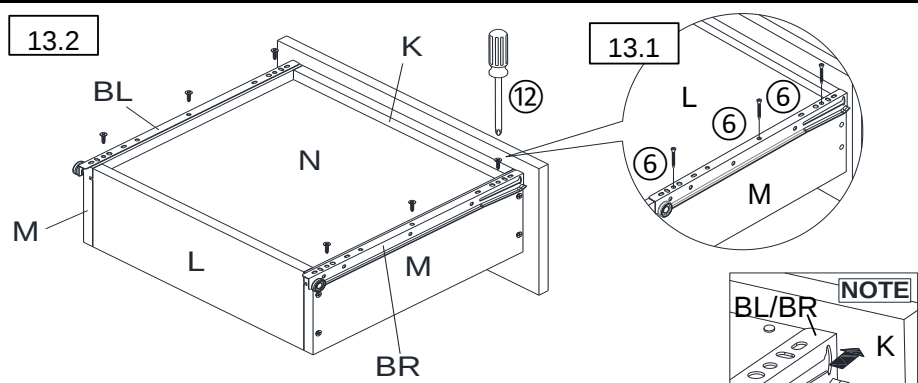


13.1) Attach Drawer Right Bottom Rail (BR) to Drawer Side Panel (M) using Screws(⑥) with Screwdriver(⑫) where indicated.

13.2) Repeat the same process on the Drawer Left Bottom Rail (BL).

Tighten the Screws fully in a sequential manner.

 
Step 14

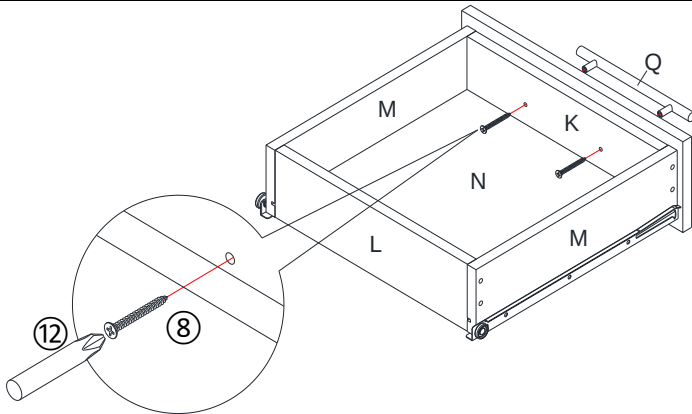

Attach Handle (Q) to Drawer Front Panel (K) using Handle Screws(⑧) with Screwdriver(⑫).

Tighten the Screws fully in a sequential manner.

 Step 15

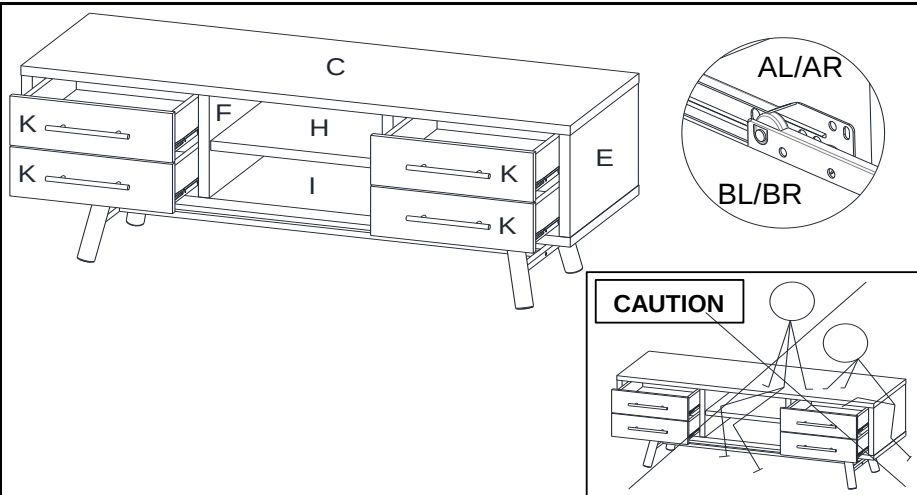


Put Drawer Assembly in place by aligning the rails.

Cabinet Restraint Device Installation Instructions



WARNING

 Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: ALWAYS secure this furniture to the wall using Cabinet Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

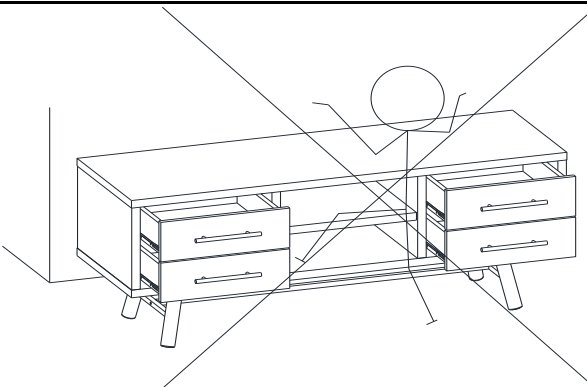


Usage For TV Cabinet Restraint Device:

To secure TV Cabinet against wall, attach two Metal Brackets(15) on wall and product, use Cabinet Restraint Strap(19) to connect the Metal Brackets(15).

Instructions:

 
Step 16

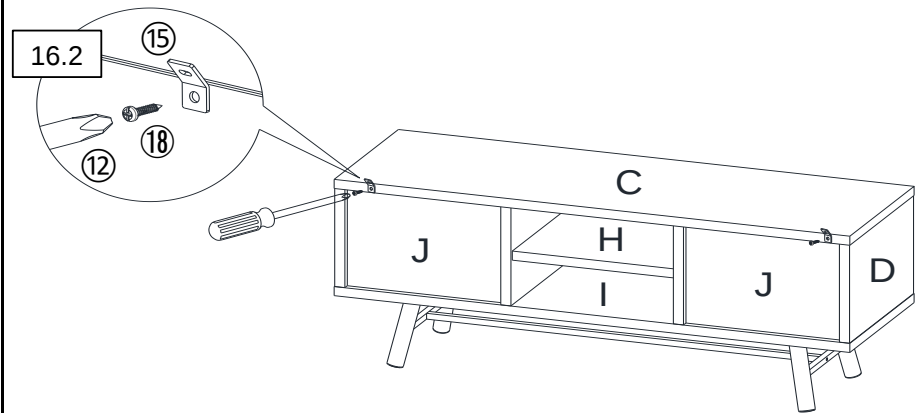

16.1) Turn the TV Cabinet so the back side faces you.

16.2) Attach Metal Brackets(15) to Top Panel (C), where labeled, using Pan Head Screws(18) with Screwdriver(12).

 Step 17

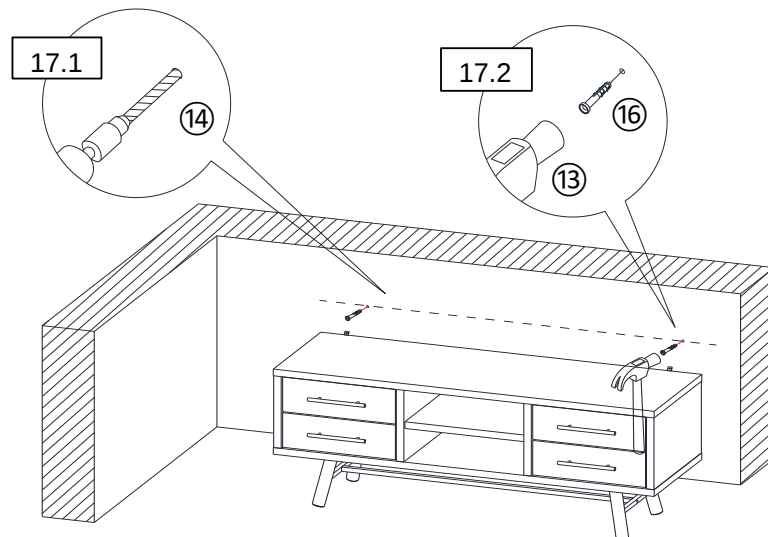

17.1) Drill two holes on wall at same height as Metal Brackets(15) on TV Cabinet with Power Drill(14).

You can mark these points in two ways as below:

 
1) Move the TV Cabinet back to the wall. Mark two points same height as TV Cabinet on the wall.

Note: The Metal Brackets (15) need to be secured to solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.

2) Measure the height of the Metal Brackets(15) with ruler/measuring tape and mark on wall to keep them accurate and same height.


17.2) Insert Wall Plugs(16) into drilled holes on wall with Hammer(13).

Step 18

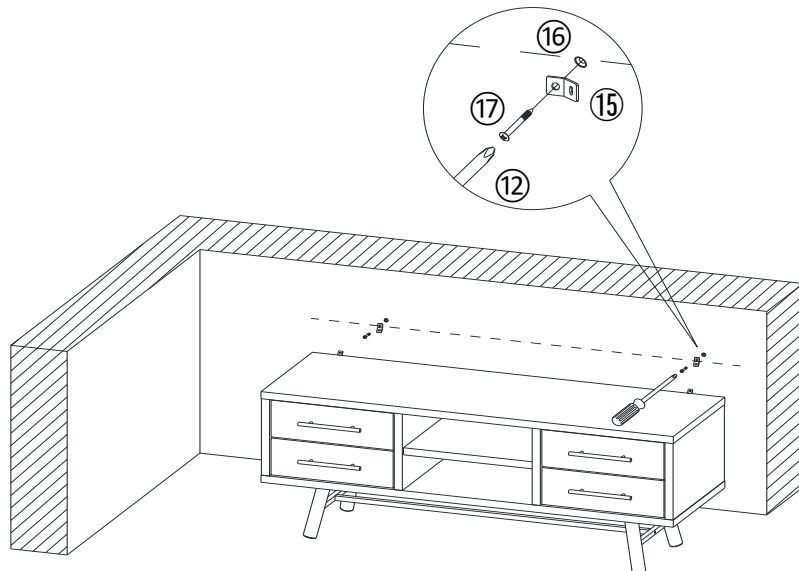

Attach Metal Brackets(15) to Wall Plugs(16) using Wall Plug Screws(17) with Screwdriver(12).

 
Step 19

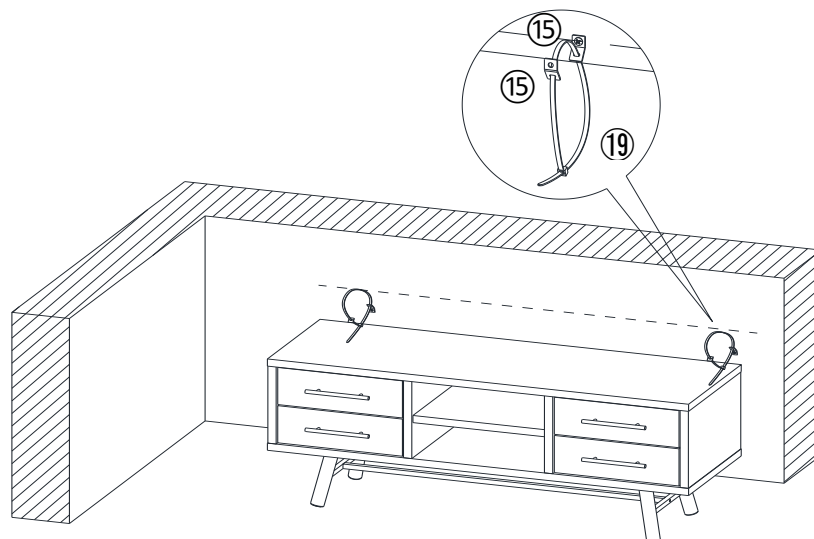

Move TV Cabinet to the wall.

Pull the Cabinet Restraint Straps (19) through the Metal Brackets(15) on the wall and TV Cabinet one by one, and pull the Cabinet Restraint Straps (19) tight.

 Step 20

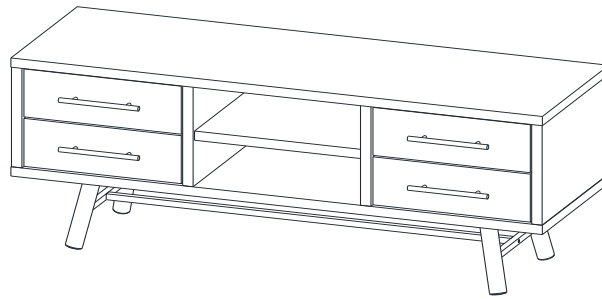

Your TV Cabinet is ready for use.

This TV Cabinet can only be used on a flat, level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.