 
 
 
 

 

 

 
 
 




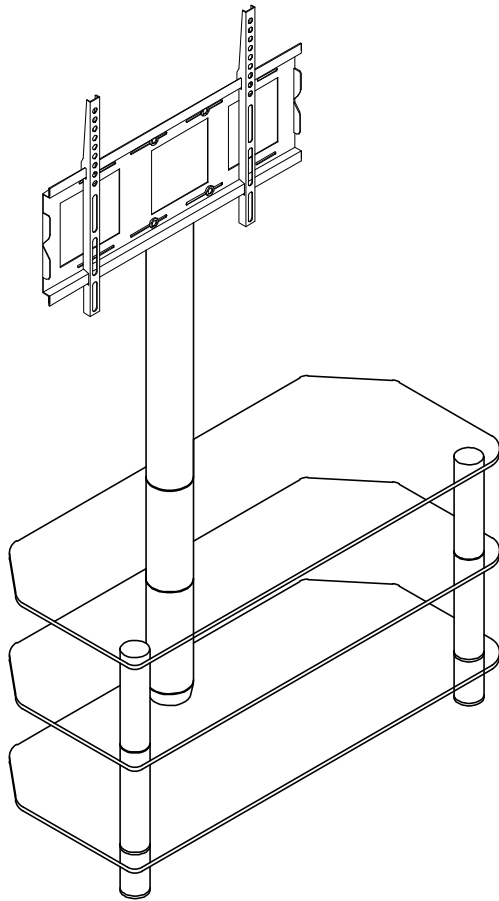

 




 
 









**Model:ATV900**



## Parts check-list

No.	Description	Qty.
A		1
B		2
C		2
D		<b>2</b>
E		2
F		1
G	 8.35" (212mm)	1
H		1
I	 17.3" (440mm)	1
J	 6.69" (170mm)	1
K	 8.03" (204mm)	1
L		2
M		1

No.	Description	Qty.
N		2
O		2
P	 M6x490	2
Q	 M8x468	1
R	 M10x645	2
S		9
T	<b>Screws for TV</b>	1
U	 U: X1  U: X1	1
V	 (13#) V: X1  (17#) V: X1  (5mm) V: X1	1
W	 (Rubber washer) W: X2  W: X2  W: X2	1
X	 X: X2  X: X2	1
Y	 Y: X2  Y: X2	1

# GUIDE TO ASSEMBLY

**1** A+DX2+K+P+Q+SX2

No Spacer.

**2** B+CX2+G+SX2

**3** B

**4** E+F+H+L+SX1+U+V3

**5** R

**6** I+J+O+SX4+V2+X

Please don't fully tighten until Step 8 to fix all the screws in the right holes.

**7** M+W1

Side View

**8** V1+V3+W2+W3

Side View

Make sure fully tighten all screws before putting on your TV.

**9** N+T

Curved or Recessed TV      Flat Panel TV

Choose right screws for TV

NO.	Part Description	Part Sketch Map	QTY
1	M6		4
2	M6		4
3	M8		4
4	M8		4
5	Space		4
6	Square Washer		4

Screws for TV (PACK)

**10** Y