


OUTDOOR KITCHEN

 
 

 
 
 
 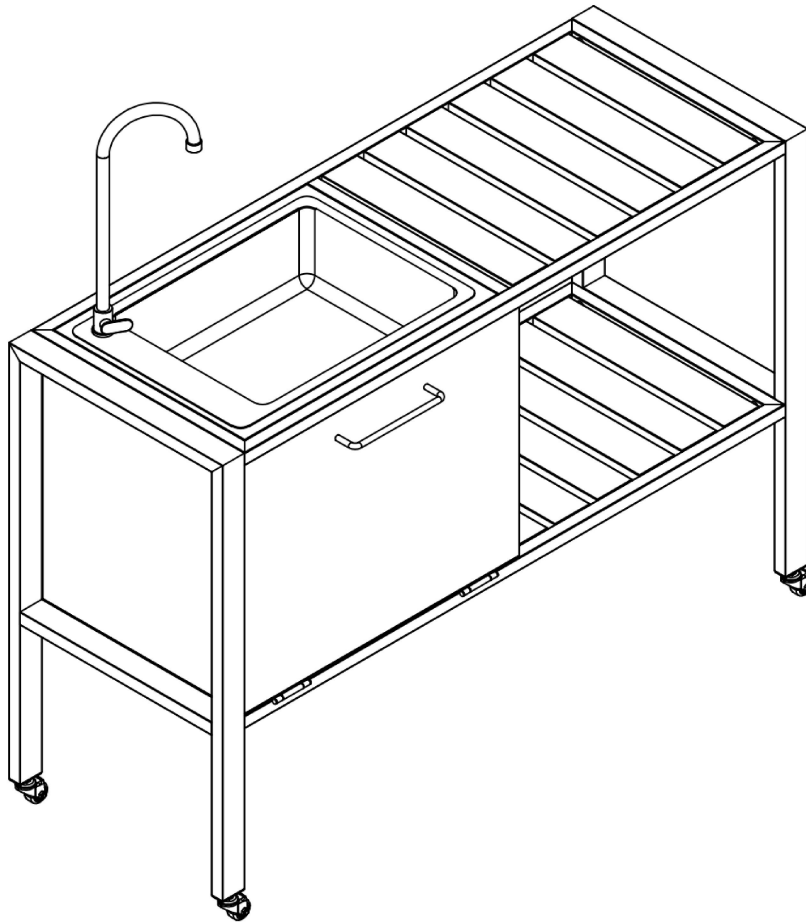



Before You Start

Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble.


Important Notes


Small parts are included; we advise you to keep them away from children and pets.

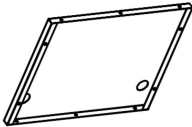NO.	PARTS	DESCRIPTION	QTY
A		Bottom Shelf Panel	1
B		Top Shelf Panel	1
C		Main Outer Side Panel	2
D		Back Panel	1
E		Inner Right Side Panel	1
F		Inner Left Side Panel	1
G		Flip Door	1
H	 M4x8MM	Installation Screw (M4x8mm)	14
I	 M6x10MM M6x35MM	Installation Screw M6x10MM M6x35MM	18PCS 8PCS
J		Allen Wrench	2
K		Casters	4
L		Door Hinge	2
M		Sink with Faucet	1

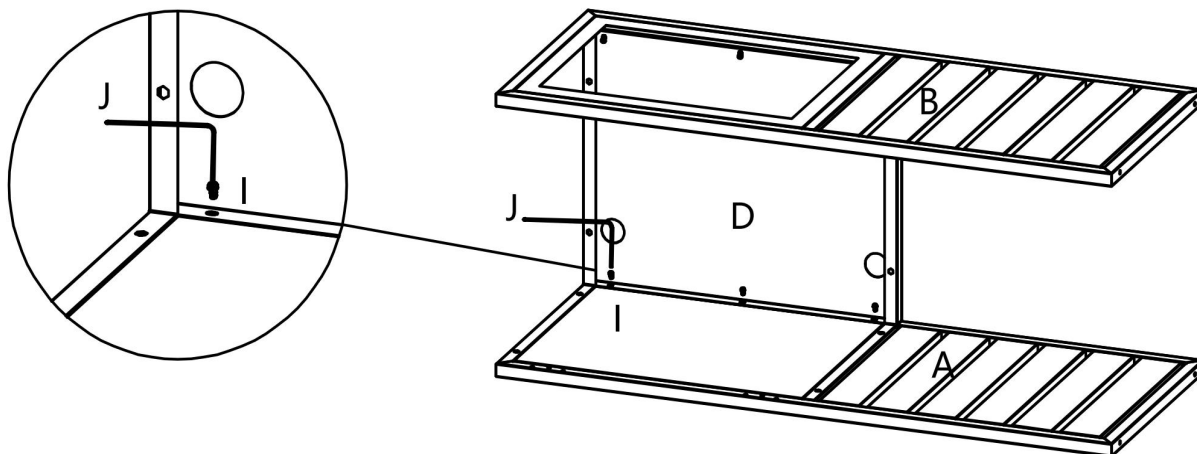



Attach the Bottom Shelf Panel (A) and Top Shelf Panel (B)
to the Back Panel (D) using the Installation Screws (I).

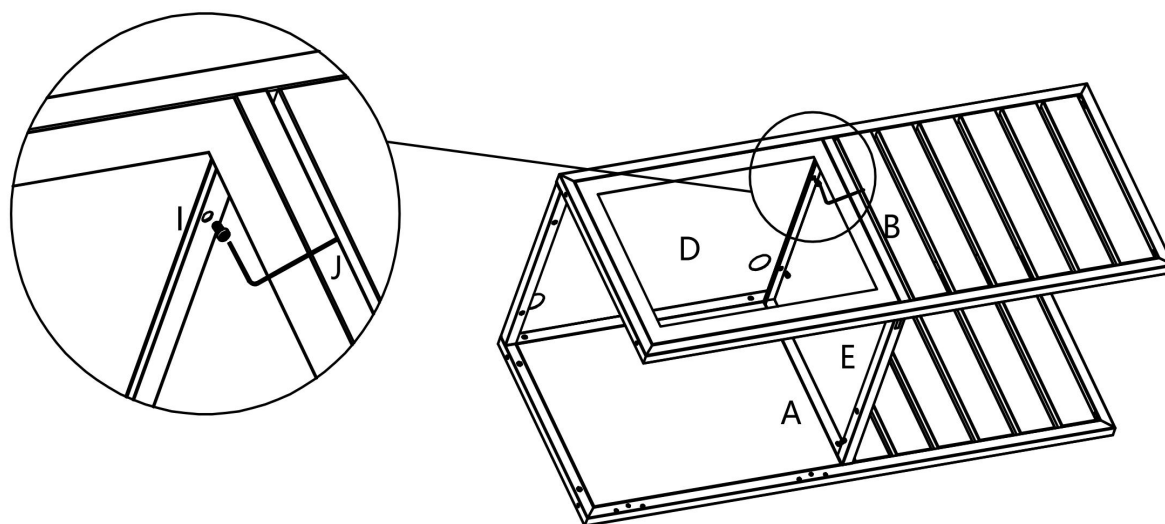

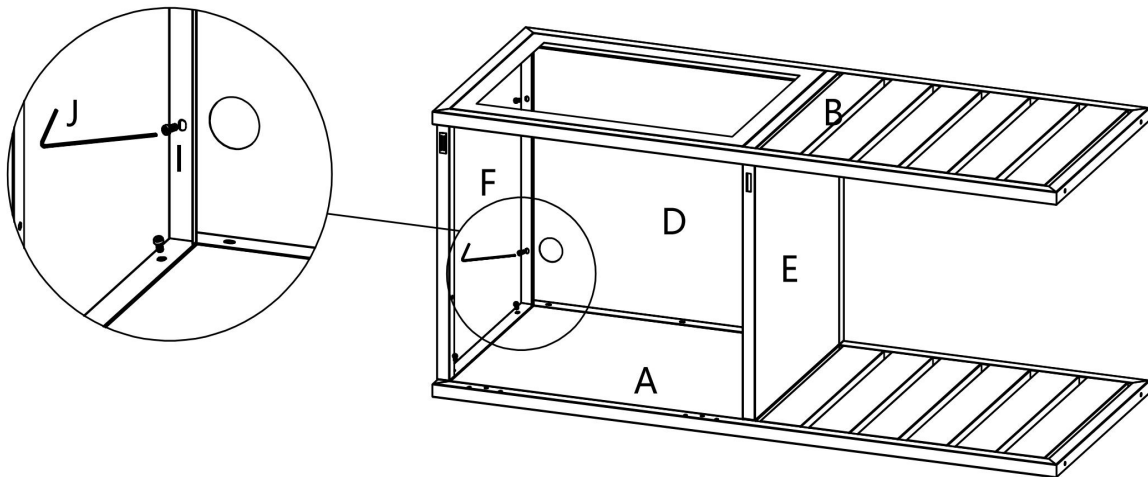


Secure the Inner Right Side Panel (E) and Inner Left Side Panel (F) to the assembled back and shelf panels using the Installation Screws (I).

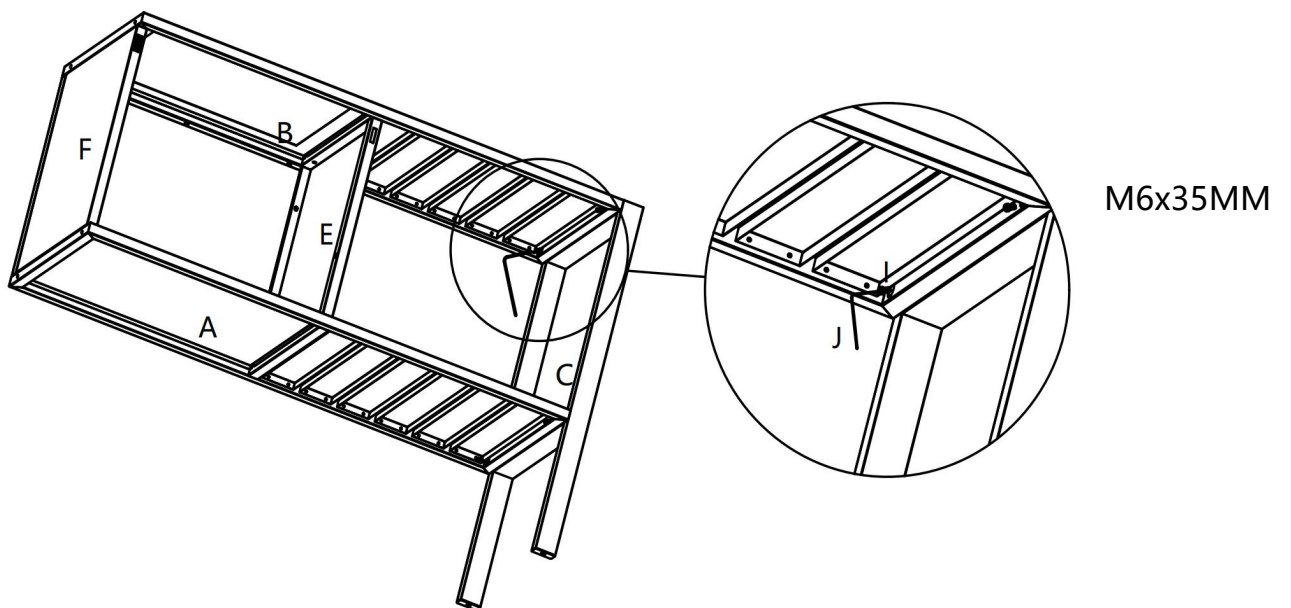


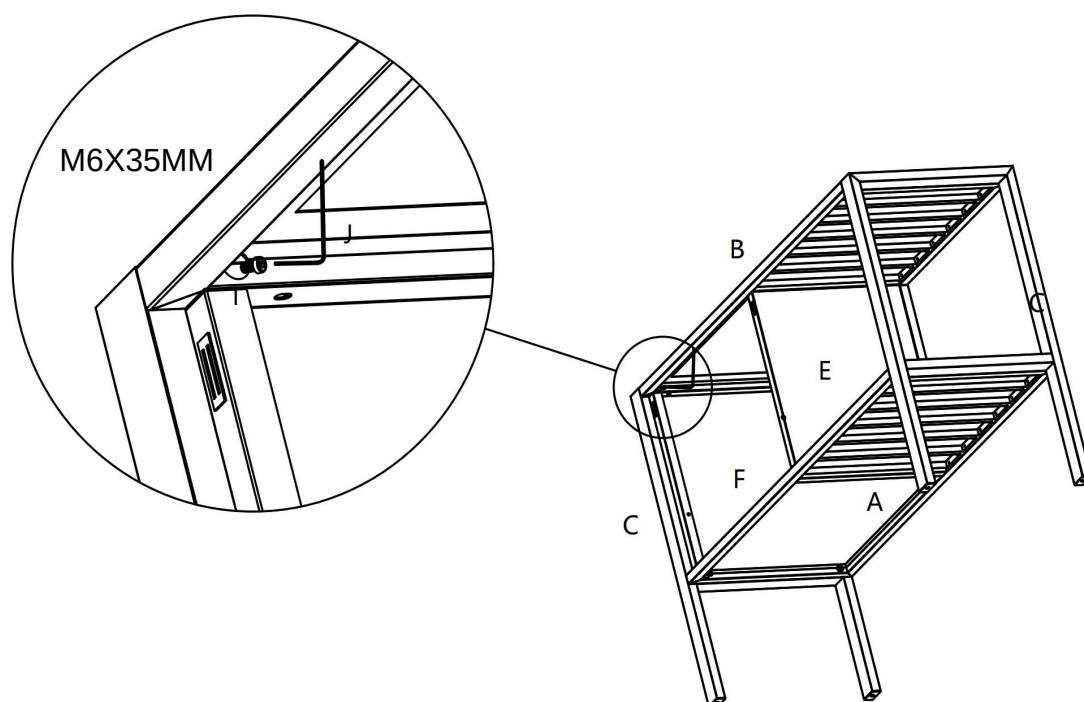


Align the two Main Outer Side Panels (C) on both sides of the inner body. Secure them using the longer M6x35mm Installation Screws (I).

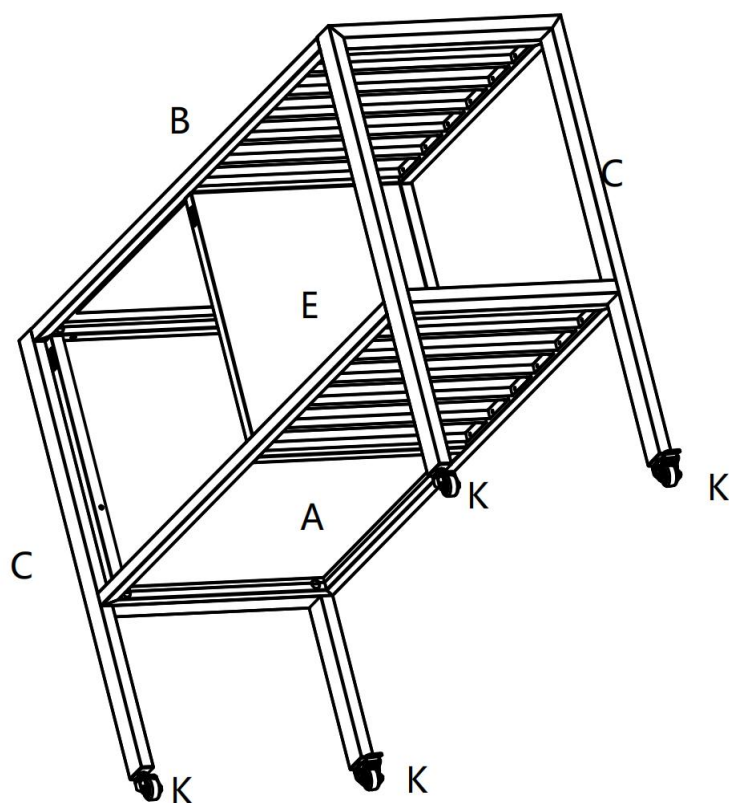


Install the Casters

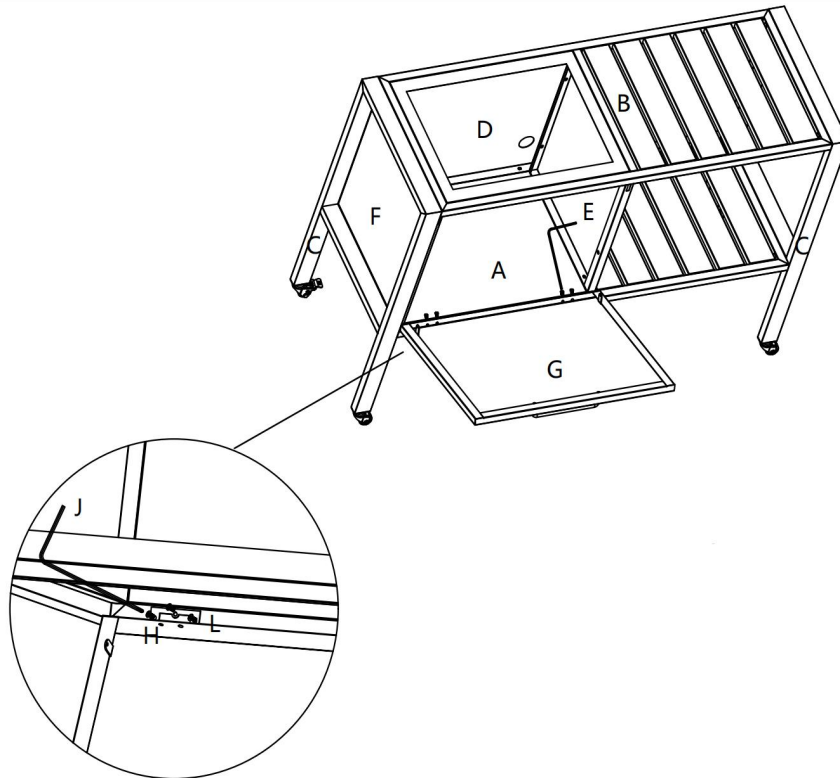

Turn the cart upright. Attach the Door Hinges (L) to the frame and the Flip Door (G) using the M4x8mm Screws (H).

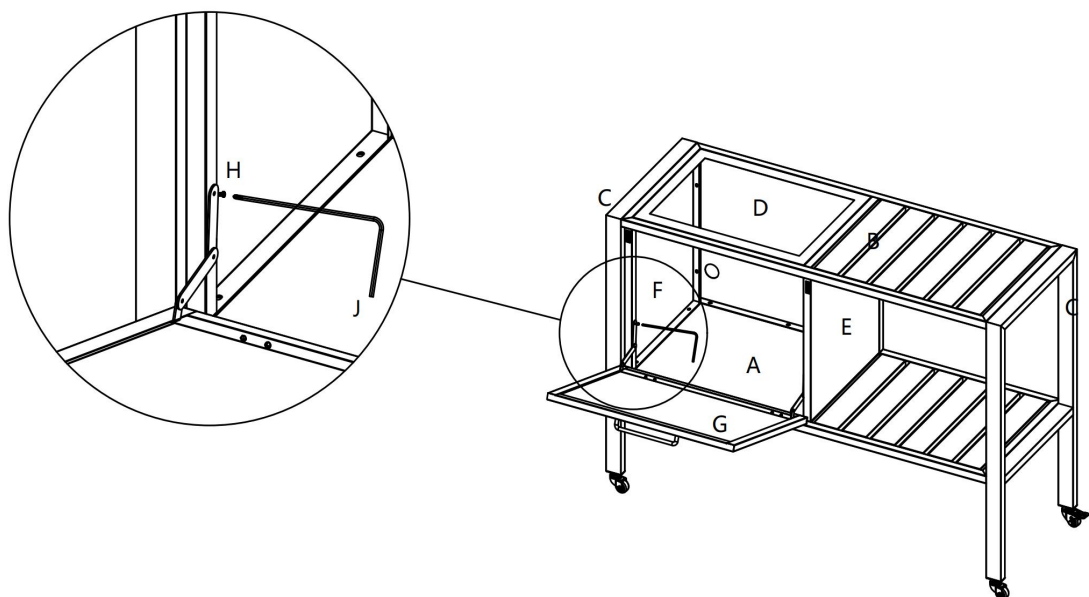

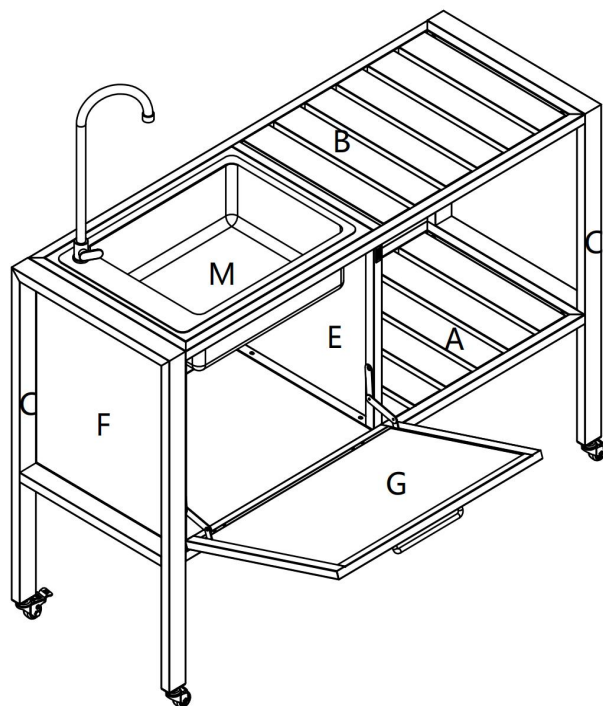

Finally, insert the Sink with Faucet (M) into the designated opening at the top left of the cart.

