

Bazyths


ENJOY YOUR NEW BAZYTHS SMART TOILET

Please contact Bazyths Support if you have any questions.

INSTRUCTION

BAZYTHS SMART TOILET

Concealed cistern series

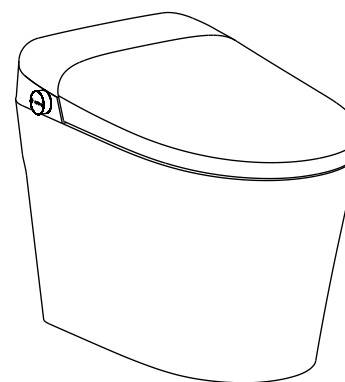


- Thank you for purchasing our product. Before using, please read the instruction carefully. Please keep the instruction properly for further reference.
- Our company reserves the right of final interpretation for this manual. The manual is subject to change without notice.

Catalogue


| | |
|---------------------------------------|----|
| Packing List | 02 |
| Installation of the Battery Box | 04 |
| Components | 05 |
| Technical Drawing | 06 |
| Features | 06 |
| Attentions | 10 |
| Installation Instruction | 17 |
| Preparation before Use | 22 |
| Panel Instruction | 23 |
| How to Use | 27 |
| Function Setting and Adjustment | 28 |
| Cleaning and Maintenance | 34 |
| Troubleshooting | 38 |
| Warranty | 39 |
| Function List | 40 |
| Product Specification | 41 |
| Acceptance Record | 42 |

Packing List


Dear user,
Please count the following items after opening the package:

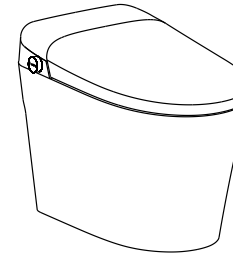


Smart Toilet

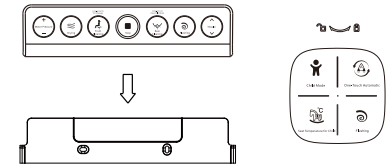


Remote Control & Mounting Bracket
Requires 2 AAA alkaline batteries
(batteries not included).

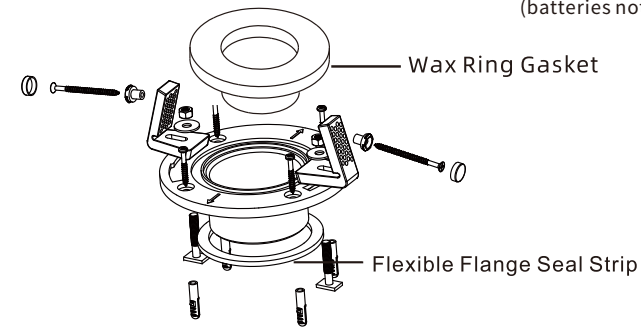

Flange, Sealing Wax Rings,
Mounting Accessory Kit

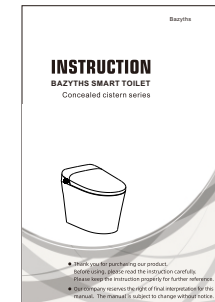

Instruction Manual

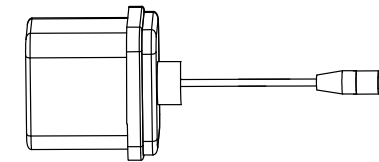


Backup Battery Box
for Power Outage Flush
Requires 10 AA alkaline batteries to enable flushing
during a power outage(batteries not included, please
purchase separately)


Packing List

Dear user,

Please count the following items after opening the package:

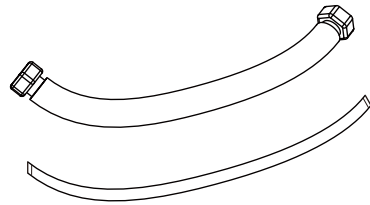

 
1 Braided Hose (for Flushing Water)
1 Plastic Hose (for Cleansing Water)
(Pre-installed)



Spare Part: 3/8" Female
to 1/2" Male Adapter


If your existing shut-off valve has a 3/8" outlet, you can use this spare part to connect it to our smart toilet without the need for replacing the valve.

Shut-off Valve & T-Valve

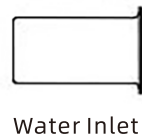


Water Inlet

 1/2" Nom Outlet




1/2" Nom/Comp Inlet


T-Valve
with Filter

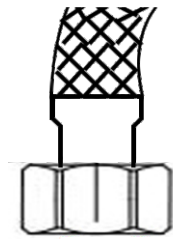


Braided Hose
for Flushing Water

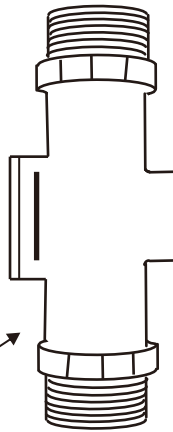

Plastic Hose
for Cleansing Water

 

Shut-off Valve

 

Battery Box for Power Outage Flush

Installation of the Battery Box for Power Outage

1. This battery box is for use as backup during power outages. **The battery box must not be used simultaneously with a plugged-in power source when the toilet is in operation.** It is recommended to connect it to the main unit only during power outages. We accept no responsibility for the consequences of using dual power sources at the same time, and such usage is not covered by the warranty.

2. Before activating the power outage flushing function, install 10 AA alkaline batteries (batteries not included, please purchase separately) in the battery box in advance (open the battery box with a screwdriver). Do not mix new and old batteries, batteries of different models, or batteries from different brands. When replacing the batteries, ensure that all are replaced at the same time.


3. Please follow the "+" and "-" signs on the battery box when installing batteries. This battery box is a series battery group, and no single cell can be reversed. Failing to do so may cause battery damage, and in severe cases, may pose safety hazards such as explosion and combustion.

4. Take out the battery connection cable from the rear side of seat cover and connect it to the battery box, ensuring that it is plugged in place.


5. Do not disassemble the battery box unnecessarily. After replacing the battery, make sure to seal the battery box tightly. If moisture from the bathroom gets into the box, it could cause the batteries to rust and become damaged.

6. When replacing batteries, disconnect the battery box from the main unit.


7. To avoid potential hazards, this battery box cannot be recharged.

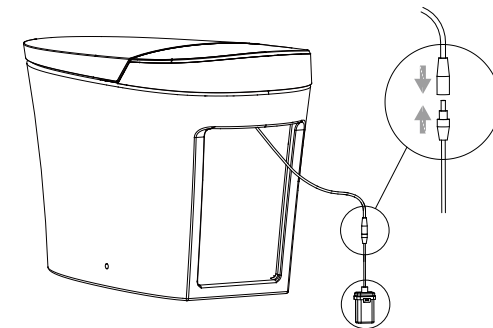

Components

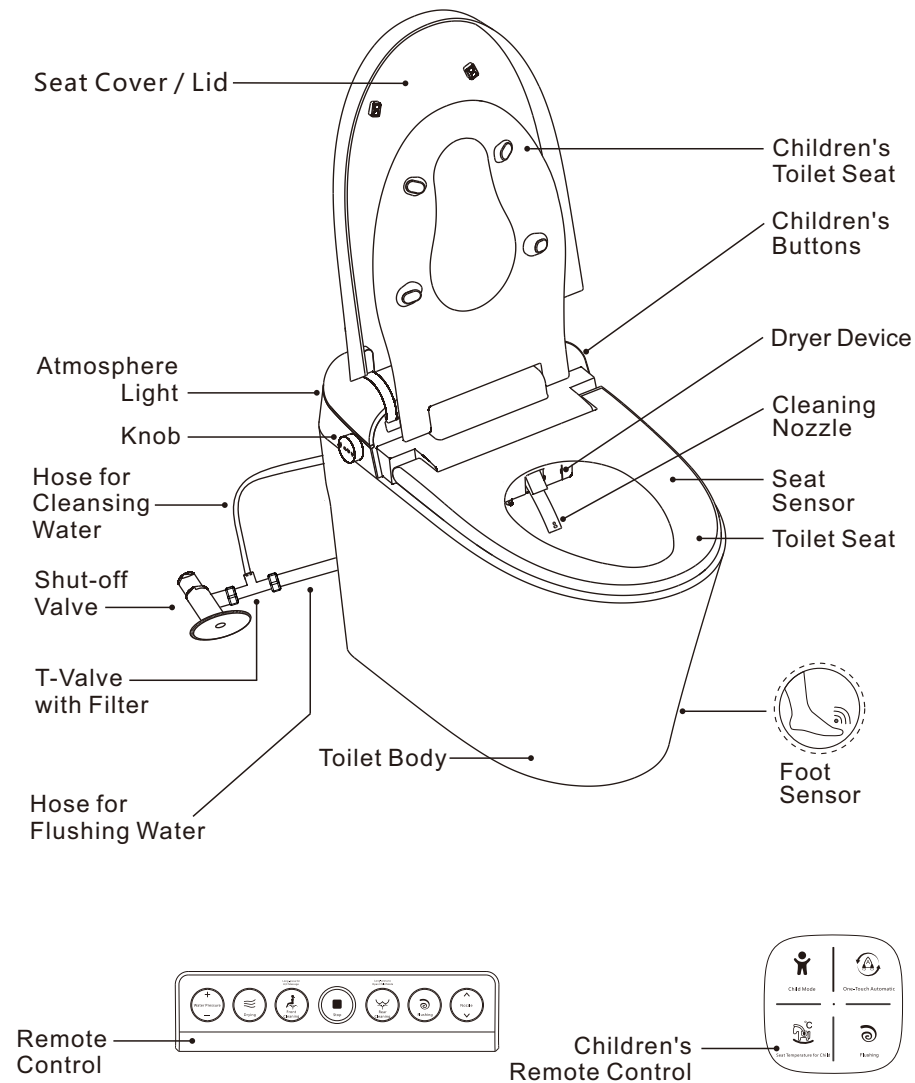

Technical Drawing

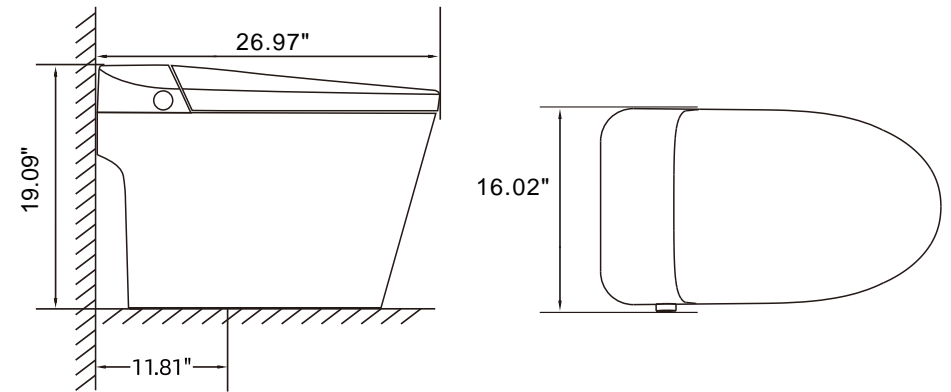

Features

Note: The following functions can also be controlled via the remote. More details are provided later in the manual.

Automatic Opening of the Toilet Lid / Automatic Closing of the Lid & Toilet Seat

The toilet lid automatically opens when the user approaches the toilet. The seat and lid automatically close 2 minutes after the user leaves the toilet's sensor range. Press the Dryer button on the remote control to turn this function on or off.

Foot Sensor to Open/Close the Lid or Seat

Opens or closes the toilet lid or toilet seat when the user moves their foot near the sensor.

Rear Wash

Water is released from the single nozzle for a powerful cleaning effect. The cleaning cycle lasts for 90 seconds. You can stop the cycle at any time by pressing the side knob once or by pressing the "Stop" button on the remote control.

Feminine Wash / Front Wash

Designed for gentle cleaning specifically for female use. The 90-second cleaning cycle can be stopped at any time by pressing the side knob once or the "Stop" button on the remote control.

Features

Warm Air Dryer

The warm air dryer has 4 temperature settings (room temperature, high, medium, low) for drying after cleansing. When the user is seated, they can activate the dryer function directly by turning the side knob twice in the same direction. The drying cycle lasts for 3 minutes.

One-Twist Quick Mode (Wash + Flush + Dry)

When you activate a cleaning mode using the knob (rear wash or feminine wash), the system will automatically follow a one-twist sequence: wash, flush, and dry. Each cleaning cycle lasts 90 seconds, followed by automatic flushing and a 3-minute drying cycle.

If the full 90-second wash cycle is not needed, you can skip directly to the drying phase. For example, if the rear wash is currently active, simply turn the knob in the rear wash direction again to skip the remaining wash time and proceed to the drying function.

Remote Control

All functions can be accessed via the wireless remote control.

Rear Wash with Moving Nozzle

The nozzle moves back and forth to provide a thorough cleaning over a wider area. To toggle between moving and non-moving cleaning, simply press the current wash button again on the remote control (for example, if rear wash is active, briefly press the rear wash button again to toggle). Please note that only the remote control can be used to switch between moving and non-moving cleaning modes.

Feminine Wash with Moving Nozzle

The nozzle moves back and forth to provide gentle cleaning over a wider area.

Hot and Cold Massage

The nozzle alternates between warm and cool water for a massaging effect. After the user is seated and a cleaning mode (rear wash or feminine wash) is activated, press and hold the feminine wash button on the remote control for 5 seconds to start the hot and cold massage. A single beep will sound to confirm activation. The nozzle alternates between 10 seconds of cool water and 5 seconds of warm water, continuing until the current cleaning mode ends (90 seconds). To deactivate the hot and cold massage, press and hold the feminine wash button on the remote control for 5 seconds again. Two beeps will sound to confirm deactivation. On some models, the night light will also flash as an indicator when turning off the hot and cold massage.

Cleansing Strength Adjustment

Adjust the cleansing strength/water pressure according to your preference.

Cleansing Position Adjustment

Adjust the cleansing position by moving the nozzle back and forth.

Cleansing Water Temperature Adjustment

4 levels of cleansing water temperature adjustment: normal (room temperature), high, medium, and low.

Seat Sensor

All corresponding functions will be activated and ready after the user is seated.

Toilet Seat Temperature Adjustment

Heated seat with 4 levels of temperature adjustment: normal (room temperature), high, medium, and low.

Auto Off-Seat Flush

Automatically flushes after use when the user stands up from the toilet seat.

Foot Sensor Flush

Flush by moving the foot near the sensor.

Flush by Remote Control

Flush by pressing the flush button on the remote control.

Flush by Side Knob

Flush by pressing the side knob on the smart toilet.

Night Light

The night light is designed to be gentle on the eyes. It provides enough illumination to navigate the bathroom without turning on harsh overhead lights.

Nozzle Cleaning

Press and hold the corresponding button on the remote control when the seat is unoccupied. The nozzle will enter self-cleaning mode, making daily maintenance easy.

Nozzle Auto Cleaning

The nozzle will automatically clean itself before and after use.

Power Outage Flush

Equipped with a backup battery box, the backup battery can be activated for flushing during a power outage.

Children's Mode Features

- **One-Button Cleaning:** A single press activates a child-friendly automatic cleaning cycle, making it easy and safe for kids.
- **Preset Seat Temperature:** The child seat maintains a fixed 86°F for consistent comfort and safety.
- **Gentle Water Temperature:** Default 95°F, adjustable up to 100°F during use.
- **Low Water Pressure:** Set to the lowest level for a gentle wash; cannot be adjusted.
- **Soft Warm Air Drying:** Operates at a preset 95°F for a comfortable drying experience; cannot be adjusted.
- **Safety Lock on Other Functions:** In Children's Mode, the foot sensor, remote lid opening, and seat flipping functions are disabled to prevent accidental operation.
- **Automatic Exit & Flush:** Exiting Children's Mode triggers an automatic flush for added convenience.

Attentions




WARNING



NO WATER

Do not pull the plug with wet hand.

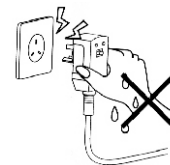

▲ Otherwise, it may cause electric shock.



PROHIBIT

Do not pour water, detergent or deodorant on the smart toilet main unit and power plug. Otherwise:



▲ It may cause fire, electric shock, short circuit or damage.

▲ Injury or indoor water seepage may occur due to product damage.



PROHIBIT

When there is thunder, do not touch the power plug.

▲ Otherwise, it may cause electric shock.



PROHIBIT

Do not touch the water inlet hose to the power plug or outlet.

▲ Otherwise, it may cause fire, electric shock, heating, or short circuit due to condensation.



PROHIBIT

Do not damage the power cord or plug. Do not forcefully drop, pull, twist, bend, scratch, process, heat, place heavy objects on, tie, or clamp the power cord or plug.

▲ Otherwise, it may cause product damage. Continuing to use the product in a damaged state may cause fire, electric shock, heating, or short circuit.



Do not use power outlets that are loose or malfunctioning.

▲Otherwise, it may cause fire or short circuit.

PROHIBIT



Please use power outlets and wiring tools within the specified range.


▲When the wiring exceeds the specified range of the outlet, it may cause fire due to overheating.

PROHIBIT



Do not use a power source other than the specified one (AC 120V, 60Hz). Please do not plug in until the inlet valve opens.

PROHIBIT

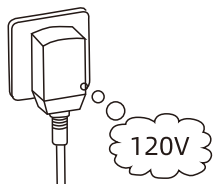

▲Otherwise, it may cause fire.



Do not disassemble, repair, or modify this product on your own.

▲Otherwise, it may cause fire, electric shock, heating, short circuit or damage.

NO DISASSEMBLE



Do not install on a moving vehicle, ship, or other mobile structure. Otherwise:

▲It may cause fire, electric shock, short circuit, or malfunction.

PROHIBIT

▲The seat ring, seat cover, and smart toilet main unit may be damaged due to detachment and falling.



When the smart toilet malfunctions, do not continue to use it. In the following situations, turn off the power and close the water inlet valve to stop the water supply.

PROHIBIT

*Water leaks from the hose or product inside to the outside.

*The product has cracks or damage.

*Abnormal sound or odor.

*Product smoking.

*Product abnormal heating.

*The cushion of the seat ring falls off.

▲Continuing to use the product in a malfunctioning state may cause fire, electric shock, heating, short circuit, injury, or indoor water seepage.



Do not use water sources other than tap water or potable well water (groundwater). Otherwise:

PROHIBIT

▲It may cause corrosion in components or machine malfunctions.

▲It may cause skin inflammation or burns due to unclean water.



Do not put your fingers or other objects into or block the warm air outlet, and do not place or cover objects or clothing on the warm air outlet.

PROHIBIT

▲Otherwise, it may cause burn, electric shock, or burning of accessories.



Beware of low-temperature burns.

MANDATORY

▲Improper use of the warm seat ring may result in low-temperature burns.

▲If sitting on the seat ring for a long time, please set the temperature of the seat ring to normal/unheated (room temperature).

▲When using the warm seat ring or warm air drying function, please set the temperature of the seat ring to normal/unheated (room temperature) and the temperature of the warm air dryer to the lowest setting for the following groups of people.

* Children, the elderly, and those who are unable to adjust the temperature to a suitable level themselves.

* Individuals with behavioral impairments such as patients or people with disabilities.

* Individuals who have taken hypnotic drugs (such as sleeping pills, cold medicine, etc.), heavy drinkers, and those who are excessively fatigued must use this product under the supervision of a responsible person.



Please confirm that the power outlet has been waterproofed.

MANDATORY

▲Make sure of the position of the outlet before installation and keep it away from the bathtub as much as possible.

▲If it is not waterproofed, it may cause fire or electric shock.

▲For the installation and waterproofing of the outlet, please consult qualified professionals.



Please confirm that the outlet being used is correctly grounded.

MANDATORY

▲Otherwise, it may cause electric shock due to malfunction or short circuit.

▲When installing the ground wire, please entrust a professional installation company.



Do not pull out the power plug by holding the power cord. When unplugging the power plug, do not hold the power cord, but hold the power plug.

MANDATORY

▲Otherwise, it may cause fire or heating due to damage to the power cord.



Please make sure to firmly insert the power plug into the outlet.

MANDATORY

▲Otherwise, it may cause fire, heating, or short circuit.



If the power cord is damaged, it must be replaced by the manufacturer, maintenance department, or other professionals to avoid potential hazards.

MANDATORY



When performing maintenance (not include the nozzle cleaning function), be sure to turn off the power.


MANDATORY

▲Otherwise, it may cause electric shock.



This is an electrical product. Do not install it in places where it is easy to be splashed with water or where the humidity is high. When using it in the bathroom, please install an exhaust fan or ventilation opening to keep the bathroom well ventilated.

MANDATORY

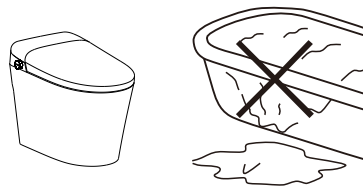

▲Otherwise, it may cause fire or electric shock.



When removing the smart toilet main unit, be sure to disconnect the power.

MANDATORY

▲Otherwise, it may cause fire or electric shock.



Individuals with physical, sensory, or cognitive disabilities, or those lacking experience and knowledge of this product (including children), must use this product under the supervision of a responsible person. Children should not play with this product.

MANDATORY

▲Otherwise, it may cause burn, electric shock, fire, or injury.



NO BURNING

Do not let cigarettes or other sources of fire get close to the product.

▲Otherwise, it may cause fire.



PROHIBIT

When maintaining plastic parts (seat ring, seat cover, etc.) and water inlet hoses, please use kitchen detergent (neutral). Do not use the following items: toilet cleaner, household detergent, gasoline, benzene, washing powder, or nylon brushes. Otherwise:

▲It may damage plastic parts, causing cracks and resulting in personal injury or malfunction.

▲It may damage the water inlet hose and cause water leakage.



PROHIBIT

Do not forcibly impact the product. Do not place heavy objects on or stand on the seat ring, seat cover, or smart toilet main unit. Otherwise:

▲The product may crack, and the smart toilet main unit may detach and fall, causing personal injury.

▲Injury or indoor water seepage may occur due to product damage.



PROHIBIT

Do not use the smart toilet when its main unit is loose.

▲Otherwise, the smart toilet main unit may detach and fall, causing personal injury.



PROHIBIT

Do not use your hands to lift the smart toilet main unit by holding the seat ring or seat cover. Do not open the seat ring or seat cover when there are items on them.

▲Otherwise, the smart toilet main unit may detach and fall, causing personal injury.



PROHIBIT

Do not violently open or close the seat cover or seat ring, or swing the seat cover and seat ring quickly. Otherwise:

▲The flipping device may fail due to the powerful external force.

▲The main unit may break or detach from the toilet body due to powerful external force, causing personal injury.



PROHIBIT

Do not bend or damage the water inlet hose.

▲Otherwise, it may cause water leakage.



To prevent sudden water leakage, do not remove the filter in the t-valve when the shut-off valve is open.

PROHIBIT

- ▲ Otherwise, water may spray out.
- ▲ Please refer to the cleaning method for the water inlet filter described on page 33.



Please use the new hose component provided with the product. The old hose cannot be reused.

PROHIBIT

- ▲ Using the old hose component may result in water leakage or hose rupture.



When water leaks, be sure to turn off the shut-off valve.

MANDATORY



In order to prevent pipes or hoses from being damaged due to freezing, anti-freezing measures should be taken.

MANDATORY

- ▲ When the water inlet hose is frozen, it may damage the main unit of the smart toilet or the pipe and cause water leakage.
- ▲ If the room temperature is below 32°F/0°C, it is recommended to empty the water inside the product to prevent internal cracking due to freezing.



When the smart toilet is not used for a long time, be sure to drain the water from the smart toilet main unit and water inlet hose, and disconnect the power supply. When using it again, please first let the water flow through, and then use it. Otherwise:

MANDATORY

- ▲ It may cause skin inflammation due to water deterioration.
- ▲ If the power is always turned on, it may cause fire or heating.



When installing the water inlet filter, make sure to tighten it firmly to the correct position.

MANDATORY

- ▲ Otherwise, it may cause water leakage.



Do not use any paper other than toilet paper, and do not drop objects that may clog the drain into the toilet bowl.


MANDATORY

- ▲ Otherwise, it may cause blockages in the ceramic pipes of the toilet.



Do not operate the remote control with wet hands, and do not spill water on the remote control.

PROHIBIT

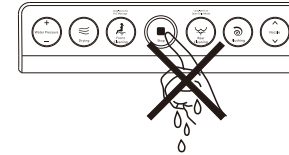

- ▲ Otherwise, it may cause remote control malfunctions.



Do not put any solid substances or corrosive liquids into the water tank.

PROHIBIT


- ▲ Otherwise, it may cause blockages or corrosion of the flushing water pipe.

Installation Instruction

Installation of the Smart Toilet

1. Confirmation of installation environment


Before installation, please confirm that the bathroom wall and floor tiles have been completed, and that the sewage pipes, water pipes, and electrical circuits have been reserved as shown in the figure below. This toilet rough-in is 300mm (11.81in); Water inlet pressure range: 0.15Mpa (dynamic) - 0.75Mpa (static); water inlet temperature: 4°C-35°C (39.2°F-95°F).

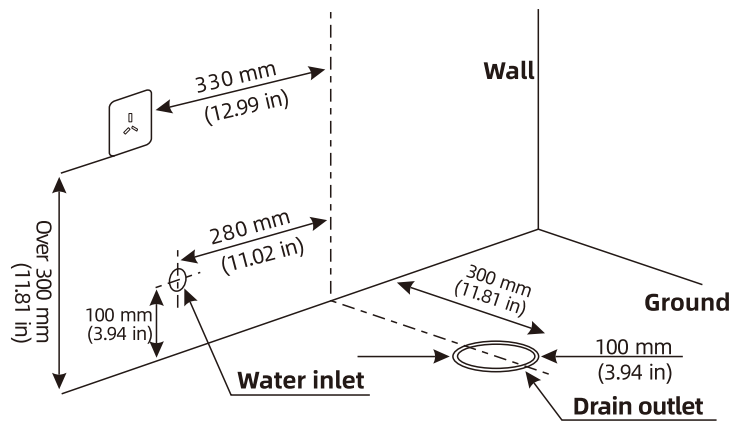

2. Assembly of dedicated shut-off valve

Install the shut-off valve provided with the product.

- Note: If your existing shut-off valve has a 3/8" outlet, you can use our Spare Adapter (Refer to page 3) to connect it to our smart toilet without the need to replace the valve.

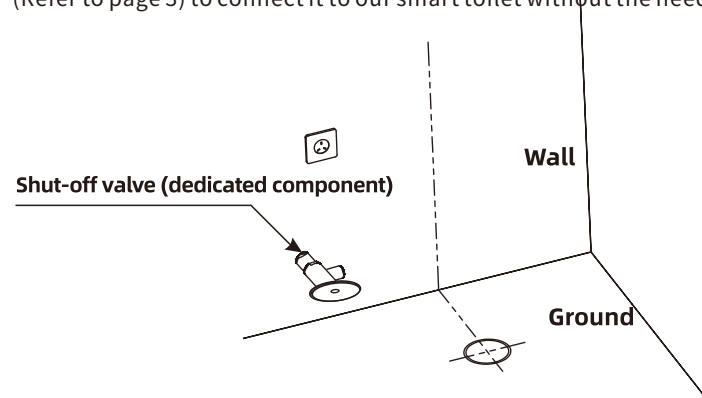

3. Installation and fixation of the toilet

The included flange is designed for an inside fit with a 4-inch drain pipe. If you have a 3-inch drain pipe, please purchase a compatible flange locally.


We recommend installing the flange about 1/4 inch (0.6 cm) above the finished floor to prevent leaks.

<1.1> Align the "flange-ABS" on the ground drain outlet, adjust the "flange-ABS" arrow to point vertically to the wall, and mark the drilling position of the ground. Drill four holes in the ground according to the marks.

<1.2> Install "Flexible Flange Seal Strip" at the bottom of "flange-ABS"

<1.3> Insert the "expansion plastic sleeve - small" completely into the small hole; Align the hole position and install "flange-ABS" and "sealing wax ring - thin"; Use "round head self tapping screw-5×36mm" to lock.

<1.4> Insert the "bolt-8×43mm" into the slot of "flange-ABS"; Adjust "bolt-8 x 43mm" to make the center line of the two bolts perpendicular to the arrow marked on the flange body.

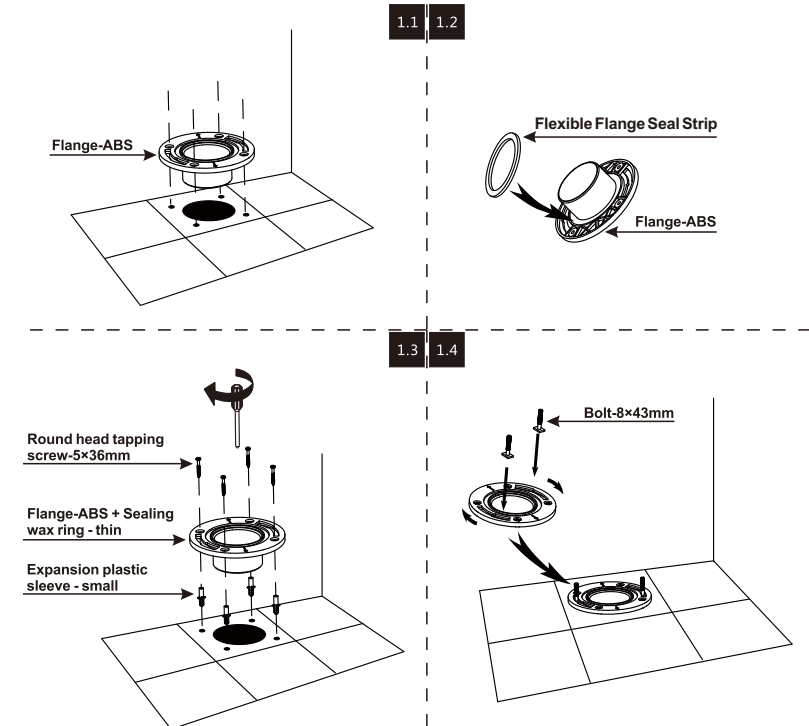


<2.1> Align the "Wax Ring Gasket" with the drain outlet and install it on the "flange-ABS". Insert two L-shaped plastic fixed blocks and gaskets into "bolt-7x43mm"; Then install the "large washer-8x24x1.8mm" and "nut 5/16" in sequence.

<2.2> Align the drain outlet of the intelligent toilet with the center of the flange for installation.


<2.3> Install the "T-shaped pad" on the small holes on both sides of the ceramic pan, and drive in the "flat head self tapping screw-5x75mm".

Note: If the screws securing the L-shaped plastic fixed block are too short, use the 90mm backup screws (included in the package).

<2.4> Cover the "T-shaped pads" on both sides with the "decorative caps".

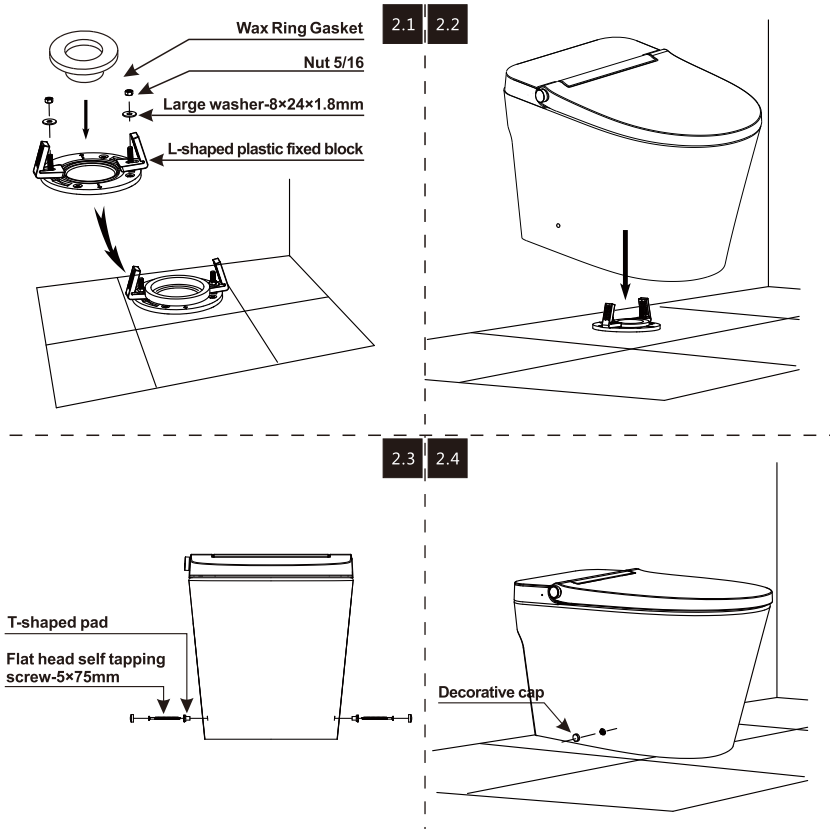


(3) Caulk the bottom of the toilet with silicone sealant.

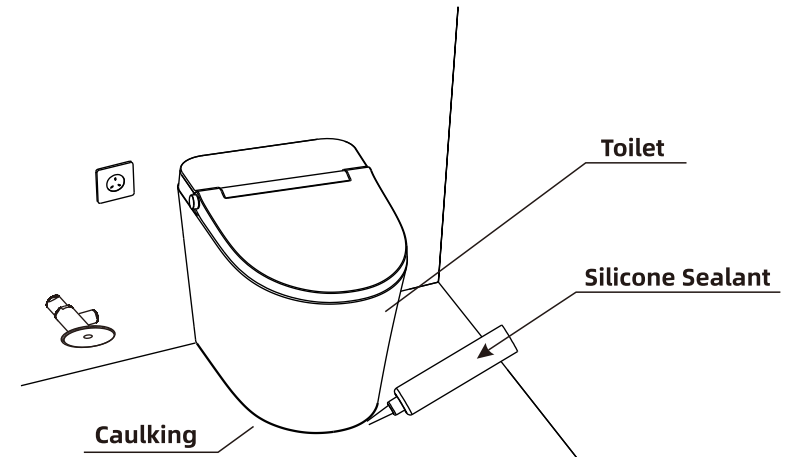

4. Connection of the water inlet hose

Connect the inlet hose with the shut-off valve & t-valve by using tools like wrench. (Valve Installation - Refer to Page 3 for Details)

● Notice: After installation, turn on the shut-off valve to check whether it leaks.

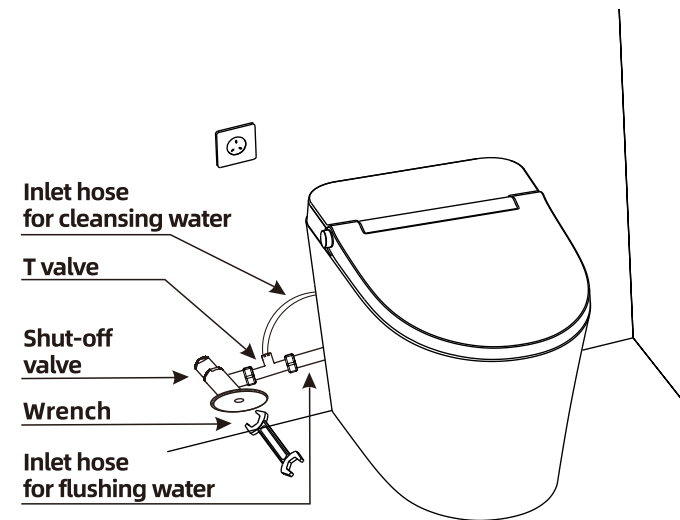

■ Installation of the Remote Control

1. Installation of remote control batteries.

Open the battery cover of the remote control and put two AAA alkaline batteries (batteries not included) into the remote control one by one.

- When installing the batteries, do not reverse the positive and negative sides of the batteries.
- Do not use different or different types of batteries at the same time.
- Remove the batteries when it is not in use for a long time.

2. Confirm the installation location of the remote control.

 
 
Install the remote control in a suitable area where it is easy to get or operate when user sit on the smart toilet.

3. Install the remote control bracket on the wall.

Peel off the protective tape of 3M adhesive on the back of the bracket and apply to the selected dry tile surface.

4. Install the remote control.


Align the remote control with the bracket, insert it from top to bottom, and the installation is completed.




Preparation before Use

1. Open the shut-off valve

Turn the valve counterclockwise to fully open the water supply valve.

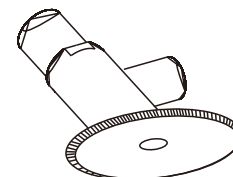

2. Plug the power plug into the outlet.

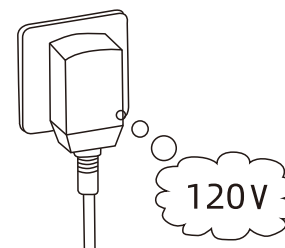

Plug the power plug into a 120V power outlet. The smart toilet will perform a self-check run once, and the main unit will be in standby mode.

- When performing a self-check, the toilet will automatically open and close the lid/ seat ring, and reset itself. It is forbidden to block it manually.
- Do not use wiring that exceeds the power supply specifications, such as an extension cord.
- The outlet must be reliably and safely grounded.


3. Adjust the cleansing water temperature and the seat temperature to the appropriate level.

4. Refer to Function Setting and Adjustment on Page 28 and use the remote control to operate various functions.


Panel Instruction

This product is designed primarily for remote control operation, with main unit panel operation as a supplement.

■ Remote Control Panel

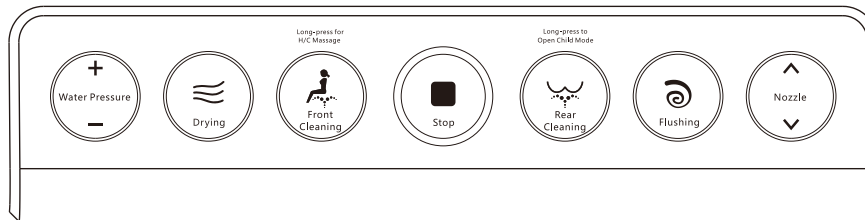

Front

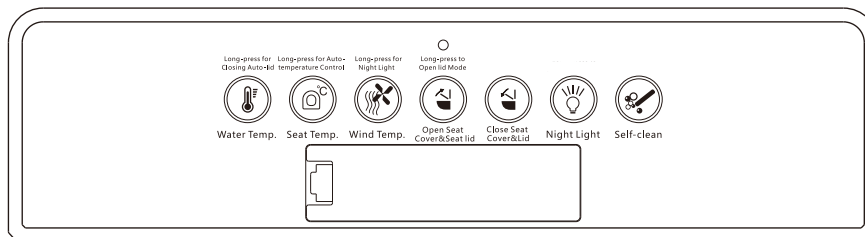


Back

● Remote control matching method:


Turn to the rear cleansing direction for 3 seconds, you will hear the short sound, and the screen will be flashed once, second turn to the front cleansing direction for 3 seconds, enter into the "di - di - di" mode, if the remote control do not match the toilet successfully in 10 seconds, the screen (full screen) will be flashing, if it read the remote control serial number, the screen will be restored into normal after a long sound.

◆ Child Remote Control Panel

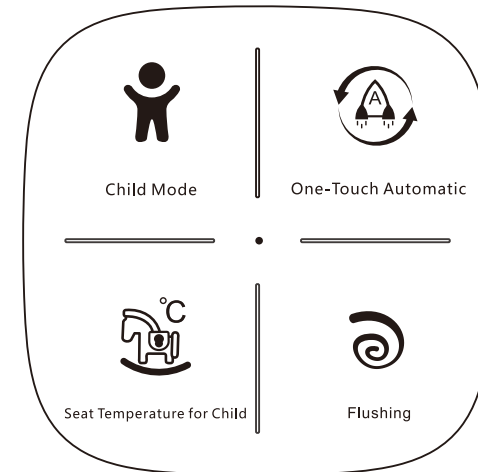

Note: Different models of remote controls may differ slightly in appearance and function, please refer to the actual details.

■ Function Side Knob (with Light Ring) on the Main Unit.

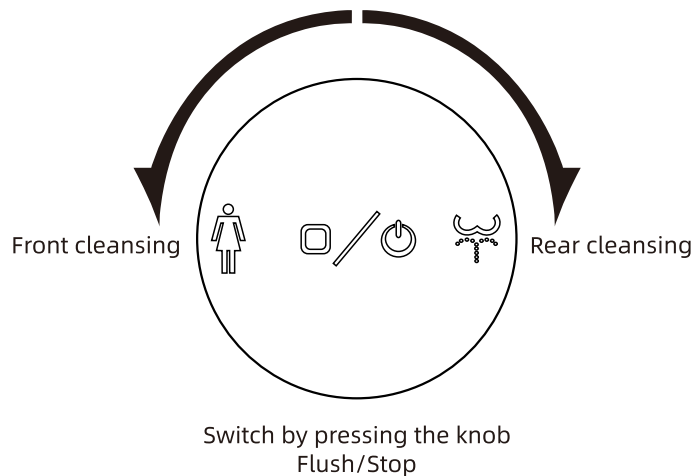







- When in non-working condition (e.g. not cleansing or drying), press the knob down vertically to flush once; hold the knob down vertically for 4 seconds to turn the product on or off.
- When in a seated position, rotate clockwise to activate the rear cleansing function; rotate counterclockwise to activate the front/female cleansing function; press down vertically to stop the running function (such as rear cleansing, female cleansing, drying).
- When in the rear cleansing or front cleansing mode, rotate the knob in the same direction once more to activate the drying function.

Note: One-Twist Quick Mode (Wash + Flush + Dry)

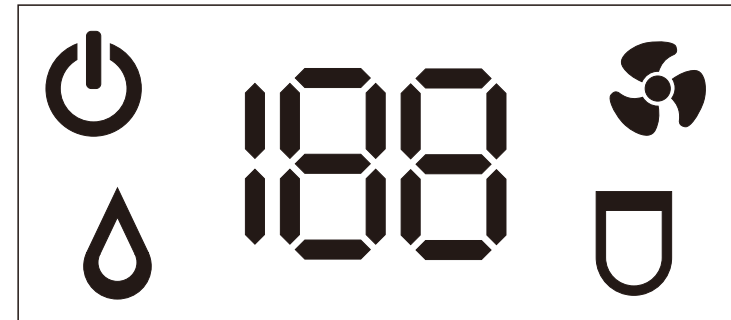- When you activate a cleaning mode using the knob (rear wash or feminine wash), the system will automatically follow a one-twist sequence: wash, flush, and dry. Each cleaning cycle lasts 90 seconds, followed by automatic flushing and a 3-minute drying cycle.
- If the full 90-second wash cycle is not needed, you can skip directly to the drying phase. For example, if the rear wash is currently active, simply turn the knob in the rear wash direction again to skip the remaining wash time and proceed to the drying function.

■ Display Screen on the Main unit




-  Power indicator: Lights up when the main unit is turned on.
-  Temperature level: Displays the set temperature when the main unit is turned on.
-  Air temperature icon: When the icon lights up, it shows the set temperature of the air dryer.
-  Seat temperature icon: When the icon lights up, it shows the set temperature of the toilet seat.
-  Cleansing water temperature icon: When the icon lights up, it shows the set temperature of the cleansing water.
- The screen cycles through the set temperatures for the water, seat, and air dryer every 30 seconds.
- When the user leaves the toilet sensor area, the screen will automatically turn off after approximately 30 seconds.

How to Use

■ When Sitting on the Seat

- Upon hearing the "beep" sound, the various functions of the smart toilet will start.
- The nozzle will clean itself automatically.

■ Start Rear Cleansing or Front Cleansing Function

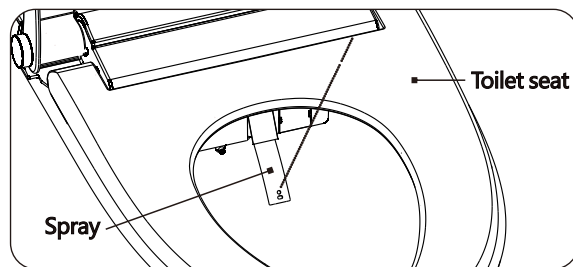

- Start the rear cleansing or front cleansing function by the remote control.
- Adjust the cleansing position and water pressure by the remote control.
- Start the drying function by the remote control.
- Press "stop" button to stop the bidet function (rear cleansing, front cleansing or drying).

■ When standing up from the seat

- The toilet will auto flush once.

Function Setting and Adjustment

■ How to Turn On/Off the Radar Sensor Function

When people get close to about 30cm in front of the toilet, the lid will auto open. Long press the button (Ⓜ) of "Close the lid" on the remote control to turn on/off this function.

■ Lid/Seat open

This product has the clamshell turning circle function, the human body is walking to the front of the toilet foot induction flip new circle. Press the flip circle function key of the remote control, and turn over the seat cover and seat ring.

Foot clamshell cover : In the state of not sitting, when the seat cover in the low, the seat side sensor, seat cover + child turn up at the same time, when the seat cover + child in high, adult seat in low, induction a seat up, when the seat cover and two seat high at the same time, induction a closed seat cover ring, and flush a (the last operation execution flush cover no longer flush).

Remote mustache cover loop : In the state of the cover, press the remote control flip cap function key, press once, the seat cover + child seat up, press again, the adult seat up, the adult seat up, press once, the adult seat down; press the cap function key, the seat cap down, and flush once (the last operation flush the cover is no longer flush), if the seat cover is low at the same time, press the cap function key will not have any operation.


When the seat toilet is working (washing, women washing, flushing), etc., the flip circle function will be set to pause.




1. When people approach, automatically turn over the seat cover + the child seat ring.
2. Turn up the adult seat.
3. Automatic close the cover and flush for 2 minutes.

■ Children's mode

This product has children's mode function, one key automatic operation, convenient for children to use.

Child mode : Short press the remote control child mode button  or the side child mode button, open the child mode, flip / flip ring until the child seat is closed.

Short press the remote control child mode button  inch or side child mode button, exit the child mode and flush. In child mode, the power lamp flashes, and the remote control and foot sense flip / flip / close cover function is invalid.


One-button cleaning for children: In child mode, press the function button of child remote control, the water temperature is 95°F, can be closed or adjusted to 100°F in use ; the maximum pole position in cleaning can be adjusted in use ; cleaning water pressure default lowest gear, no adjustment in use ; wind temperature default 95°F, no adjustment in use.

■ Rear Wash

This product has the function of rear cleaning by using single hole nozzle.

You can press the button  on remote control to enter the rear cleaning state, by using single hole nozzle.

In the state of rear cleaning, you can press this button again to enjoy moving cleaning (the nozzle moves back and forth) . Then pressing this function button again, you can stop the moving cleaning (the nozzle stops moving) , and then switch the cleaning state. And you can operate it circularly.


- The rear cleaning function will be off automatically for 90 seconds. You can directly switch to other functions or press the button  to stop within 90 seconds.
- The nozzle will auto-clean before and after rear cleaning function.

■ Feminine Wash


This product has the function of front cleaning by using a feminine applicator for gentle cleaning.


You can press the button  on the remote control to enter the moving cleaning state and enjoy the gently care.

In the state of lady washing, you can press this button again to enjoy wide washing (the nozzle moves back and forth). Then pressing this button again, stop the moving cleaning (the nozzle stops moving) to switch the cleaning state. You can operate it circularly.


- Front cleaning function will be off automatically in about 90 seconds. It can be directly switched to other functions or press the button  to stop it directly.
- The nozzle will auto-clean before and after Front cleaning function.


■ Wash Water Pressure Adjustment

In the state of moving cleaning or front cleaning, press the button  to adjust the strength of water pressure according to your preference.


- 4 levels of water pressure are available. Press the button  to start this function and adjust it to the comfortable water pressure intensity.

■ Wash Nozzle Position Adjustment

In the state of moving cleaning or front cleaning, press the button  to move the nozzle back and forth and adjust to the appropriate cleaning position to your preference.


- 5 levels of nozzle position are available. Press the button  to start this function and adjust it to the comfortable cleaning position.

■ Wash Water Temperature Adjustment

Pressing the button  on remote control, you will hear "di" and it will enter the state of water temperature. Then you can adjust it to the comfortable water temperature for cleaning.


- 4 levels of water temperature are available: normal, high, medium and low. The water temperature will switch to another level once you press the button of water temperature.

■ Hot and cold massage


Long press the remote control woman wash function key  , the water temperature alternately cold, water temperature room temperature to the setting file alternately change. If the setting file is room temperature file, it is an alternating change from room temperature file to first gear.

■ Drying Function

Press the button  on the remote control, it will dry the wet part.

- The drying function will be off automatically in about 3 minutes. You can directly switch to other functions or can press the button  to stop it directly within 3 minutes.

■ Drying Temperature Adjustment

Pressing the button  on remote control, you will hear "di" and it will enter the state of dryer temperature. Then you can adjust to the comfortable dryer temperature.

- 4 levels of dryer temperature normal are available: normal, high, medium and low temperature. The dryer temperature will switch to another level once you press button of dryer temperature once.

■ Child seat ring temperature regulation

Press the temperature function key  of the child remote control seat to sleep, the host response prompt sound "drop", enter the setting child ring seat temperature on / off.

- The seat temperature is adjustable in 2 gears. Normal temperature level and low level, respectively. Each time the seat temperature function key, the seat temperature switches to another gear.


■ Seat Temperature Adjustment

Press the seat temperature function  of the remote control, the host response prompt sound "drop", enter the seat temperature setting state, adjust to the appropriate seat temperature.


- The seat temperature is adjustable in 4 gears. They are room temperature grade and high, medium and low grade respectively. Each time the seat temperature function key, the seat temperature switches to another gear.


■ Night Light

This product is equipped with lighting function, which is convenient for nightly use.

- Long press the remote control wind temperature function key  to enable or turn off the lighting function, the light light on or off.

■ Nozzle Self-Cleaning

Press the remote control self-cleaning function key , the water will flow from the inside of the nozzle, clean the nozzle.

- Head cleaning is only effective if people are not seated.
- The nozzle cleaning time is about 60 seconds. Press the  to end.

■ Power Button

Long press the host knob for 4 seconds : to turn the host system on or off.

■ Remote Flush

You can press the flushing button  to flush the toilet once.

- Flushing when in the state of cleaning, the function of cleaning will be stopped.

■ Manual Flush

Pressing the flushing rotary knob vertically, and then flushing the toilet once.

- This function would be available even when the host system is shut down.
- Flushing when in the state of cleaning, the function of cleaning will be stopped.

■ Foot-Sensor Flush

Designed for men to urinate, no need to bend down to find the buttons or remote control to flush. Foot sensor can achieve flush.

- ◆ Using capacitive induction technology, the tip light stick ceramic induction area icon, the foot left after the start.

■ Power-Outage Flushing

In the case of no municipal power supply, long press the side knob for 3 seconds to wake up the internal power supply of the host. Short press the knob again, that is open the power outage flushing function.

■ Smart Seat Temperature

When connect the power, toilet will be set to intelligent seat ring temperature mode, which will adjust the temperature of seat ring automatically according to the indoor temperature.


Pressing the remote control button  to close the intelligent seat ring temperature mode, and long pressing the remote control button  or re-connect the power of toilet to enter the intelligent seat ring temperature mode.

Note : The instructions for use is the full function operation description,see the "Function List" for the model configuration table

Cleaning and Maintenance

■ Clean and Maintain the Power Plug

Please clean the power plug regularly. When cleaning, remove the power plug from the outlet and wipe it with a dry cloth.

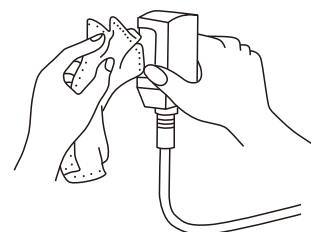

- Dust accumulation on the power plug may cause fire.

■ Clean and Maintain the Main Unit of the Smart Toilet


When cleaning the surface of the main unit, please wipe it with a soft, wet cloth.

- When cleaning and maintaining the smart toilet main unit, please pull the power plug out of the outlet to avoid any contact with water.
- If the surface has stubborn stains, you can use a soft, wet cloth with neutral kitchen detergent to clean it.


■ Clean and Maintain the Ceramic Part of the Smart Toilet


You can pour a neutral toilet cleaner onto a soft brush or sponge and use it to clean the ceramic part of the smart toilet. Rinse the area with tap water after cleaning.

- Do not use detergents or disinfectants that contain chlorine or are acidic.
- Do not use brushes that contain abrasive materials.

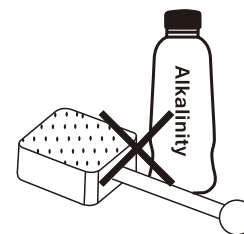


■ Clean and Maintain the Nozzle


When the smart toilet is turned on, press the remote control button  to activate the nozzle cleaning function. The nozzle will extend and clean itself with water, and you can use a toothbrush to clean it at the same time. Please do not forcefully stretch the nozzle. When the nozzle moves forward, the nozzle can be removed and cleaned separately.

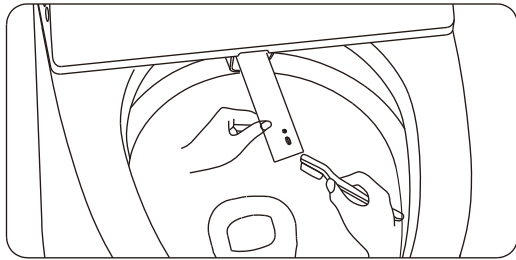


◆ Detachable nozzle model cleaning method

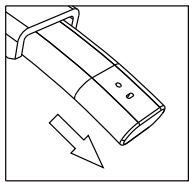

1. Press the button of self-cleaning on remote control to extend out the nozzle.

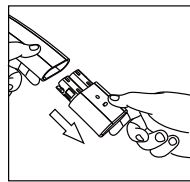

2. After the nozzle is extended, pull out the front nozzle with hand.

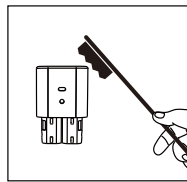


3. Use a toothbrush to clean the nozzle.

■ Clean and Maintain the Water Inlet Filter in the T-Valve

- Turn off the shut-off valve first to stop water supply.
- Remove the lock and the filter from the t-valve.
- Clean the filter with a brush or running water.
- Reinstall the filter. Make sure to screw it back in securely and not to leave behind the lock.

- Once the filter is cleaned and reinstalled, turn on the supply valve and check for any leaks. If there are any leaks, please double-check and reinstall the filter as needed.

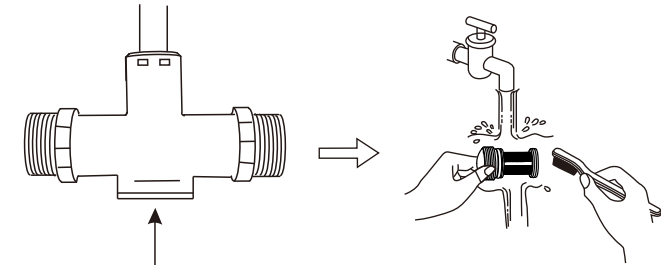

Remove the Lock and the Filter



■ When not in use for a long time

When not using this product for a long time, please be sure to drain all the water from the smart toilet and use a dry towel to absorb any remaining water to prevent water deterioration and freezing. Also, turn off the power and remove the battery from the remote control

(1) Close the shut-off valve and stop the water supply.

(2) Unplug the power plug from the outlet.

(3) Remove the water hose from the shut-off valve, drain the water from the hose, and then reinstall it.

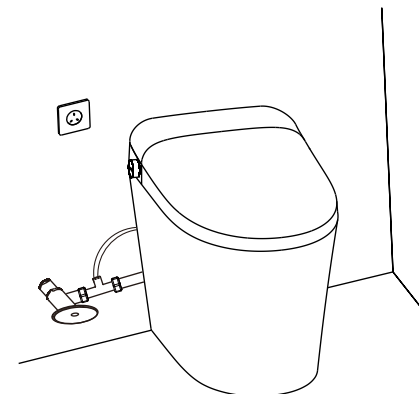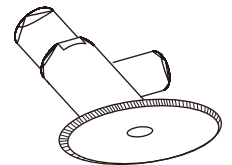

- When using again, open the shut-off valve, plug the power plug back into the outlet, turn on the power to use.

■ When Freezing Occurs

In cold seasons, the smart toilet may be damaged due to internal freezing. To prevent freezing, keep the power connected and perform the following operations:

(1) Set the seat temperature and water temperature to the highest setting.

(2) If the water hose inside freezes and causes the spray water to be blocked and unable to be ejected, please use a cloth soaked in warm water to warm up the water hose and slowly thaw it. You can also turn on the heater to warm up the room and let it thaw on its own.

■ When Condensation Appears

Due to the difference in temperature and humidity between bathroom and the ceramic parts/surface of the smart toilet, water droplets (condensation) may appear on the ceramic parts and surface of the main unit. Please ventilate the bathroom sufficiently to avoid condensation.

- When condensation appears, wipe it with a dry cloth.

■ Replacing the Remote Control Battery

When the remote control becomes unresponsive or the indicator light does not light up, please replace the battery with a new one.

- When installing the battery, do not reverse the positive and negative poles.
- Do not use batteries of different ages or different types at the same time.
- When not in use for a long time, be sure to remove the battery.

Troubleshooting

Some malfunctions can be resolved by simple operations. Please confirm the following items before authorizing a professional to repair the product.

| Problem | Possible Reason | Solution |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Press the power button and it does not work (the ambient light is not on). | Is the power outlet powered on? | Please confirm whether there is a power failure or whether the circuit breaker has tripped. |
| | Is the power plug switch in the off position? (Is the power plug indicator light off?) | Press the reset button on the power plug to light up the indicator light. |
| | Is the power plug plugged in properly? | Reconnect the power plug and insert it completely. |
| The remote control is insensitive or unresponsive. | Is the remote control battery dead? | Replace with a new battery. |
| The seat temperature, water temperature, and drying temperature are not hot enough. | Are the temperature settings appropriate? | Use the remote control to set the corresponding temperature. |
| The button does not respond. | During normal operation, some buttons may not respond. | Some operations cannot be performed simultaneously (such as flushing during cleansing). Please read this manual carefully. |
| The nozzle does not spray water or the water pressure is weak. | Is the tap water turned off? | Wait for the tap water supply to be restored. |
| | Is the water supply valve open? | Turn on the water supply valve. |
| | Is the filter clogged? | Clean the filter. |
| No alarm sound. | Is the water pressure too low? Is the water pressure setting on the remote control at the lowest level? | Press the button  to increase the water force. |
| | After sitting down, did you hear the prompt tone "beep"? Are you sitting within the effective range of the sensor? | Please sit on the seat and adjust to an appropriate sitting position. |
| Radar sensing doesn't work or doesn't work as expected. | Is the radar sensing too sensitive? | It is recommended to restart or turn off the radar sensing function. (Refer to page 28 for instructions.) |

Warranty

Warranty Period: One year from the date of purchase.

What's Covered:

This product is warranted to be free of defects in materials and workmanship for one year. During the warranty period, if any defects or malfunctions occur, we will provide free replacement parts to ensure your satisfaction.

Note: This warranty is limited and does not cover damage caused by improper use, or maintenance.

Caution

• Prohibited Cleaners:

Do not use cleaners containing abrasive materials, ammonia, bleach, acids, waxes, alcohol, solvents, or any other products not recommended for chrome finishes. Doing so may damage the product and void the warranty.

• Proper Use and Maintenance:

Ensure the product is used and maintained according to the user manual. Failure to follow these instructions may result in damage not covered under warranty.

Function List

| CONFIGURATION FUNCTION | ZY695A Family |
|-----------------------------------------|---------------|
| Auto Lid | ● |
| Foot Sensor to Open the Lid | ● |
| Buit in tank | ● |
| Children's Mode Features | ● |
| H/C Massage | ● |
| Rear Cleansing | ● |
| Rear Cleansing with Nozzle Oscillation | ● |
| Front Cleansing | ● |
| Front Cleansing with Nozzle Oscillation | ● |
| Cleansing Strength Adjustment | ● |
| Cleansing Position Adjustment | ● |
| Cleansing Water Temperature Adjustmengt | ● |
| Warm Air Drayer | ● |
| Seat Sensor | ● |
| Seat Ring Temperature Adjustment | ● |
| Remote Control | ● |
| Off Seat Auto Flush | ● |
| Foot Sensor Flush | ● |
| Flush by Remote Control | ● |
| Flush by Side Knob | ● |
| Night Light | ● |
| Nozzle Cleaning | ● |
| Nozzle Auto Cleaning | ● |
| Power Outage Flush | ● |

● Indicates this product contains the function, blank indicates no function.

Remarks : The function of different items may be different from the above list , detailed function is in accordance with the actual product.

Product Specification

| | | | |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Rated Voltage | 120V~ 60Hz | | |
| Rated Power | 1200W (water intake temperature of 59°F [15°C(±1°C)], water pressure of 0.24MPa, maximum level for front cleansing) | | |
| Power Cord Length | 1.2M | | |
| Water Pressure Range | 0.15MPa (dynamic pressure) ~ 0.75MPa (static pressure) | | |
| Flush Water Consumption | 1.03 gallons per flush (Less than 4.0L) | | |
| Cleansing Water Consumption | Less than 13.5oz/min (Less than 0.4L/min) | | |
| Energy Consumption per Unit Cycle | Less than 0.03kWh | | |
| Overall Unit Waterproof | IPX4 | | |
| Product Dimensions | LWH: 27.83*15.31*17.951in (685*407*485mm) | | |
| Product Weight | 94.8 lbs (39KG) | | |
| Bidet Function | Water Heating Method | Instantaneous Heating | |
| | Water Pressure | 4-level adjustable | |
| | Water Temperature | 4-level adjustable: 1st level 95°F, 2nd level 100°F, 3rd level 104°F, room temperature | |
| | Maximum Power for Water Heating | 1200W | |
| | Safety Device | Thermal Fuse | |
| Heated Seat Ring | | Children's seat ring | Adult seat ring |
| | Heating Power | 45W | 45W |
| | Seat Ring Temperature | 1st level 95 ° room temperature | 4-level adjustable: 1st level 95 °, 2nd level 100 °, 3rd level 104 °, room temperature |
| | Safety Device | Thermal Fuse | Thermal Fuse |
| Drying Function | Wind Speed | Greater than 8.9 mph (Greater than 4m/s) | |
| | Heating Power | 270W | |
| | Wind Temperature | 4-level adjustable: 1st level 95°F, 2nd level 113°F, 3rd level 131°F, room temperature | |
| | Safety Device | Reversible Thermal Protector, Thermal Fuse | |

Acceptance Record

After the installation is complete, please test run the toilet and fill out the record sheet with the results:

| Acceptance Item | Acceptance Result |
|-----------------------------------------------------------------------------------------|--------------------------------------------------|
| Is the power outlet AC 120V±10%, load ≥1200W? | |
| Is the power outlet loose, or is the power connection in bad contact? | |
| Is each accessory securely connected without water leakage? | |
| Is the toilet's ambient light on? | |
| Is the bidet nozzle leaking? | |
| Is the "flip" function of the lid/seat working properly? | |
| Is the "rear cleansing" function working properly (including levels adjustment)? | |
| Is the "front cleansing" function working properly (including levels adjustment)? | |
| Is the "oscillating cleansing" function working properly (including levels adjustment)? | |
| Is the "water temperature" working properly (including temperature adjustment)? | |
| Is the "seat ring temperature" working properly (including temperature adjustment)? | |
| Is the "nozzle cleaning" function working properly? | |
| Is the remote control working properly? | |
| Is the manual and automatic flushing function working properly? | |
| Is the "drying" function working properly (including levels adjustment)? | |
| Remark: | |
| Retailer: | Installation personnel: Acceptance tester: Date: |