 
 
 
 
 
 
 
 
 
 

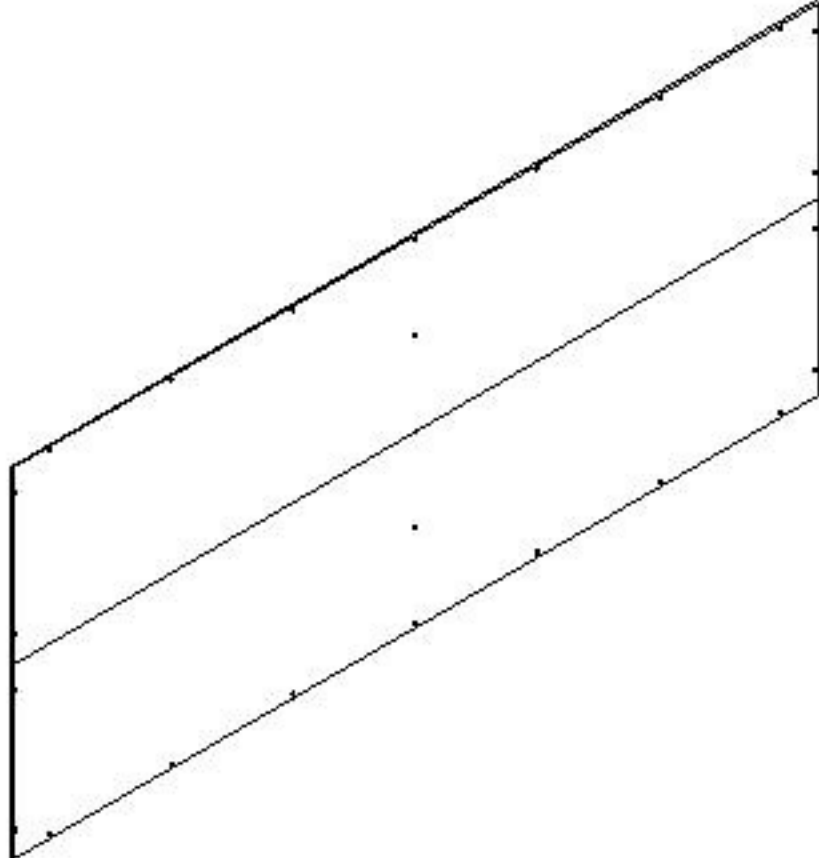 
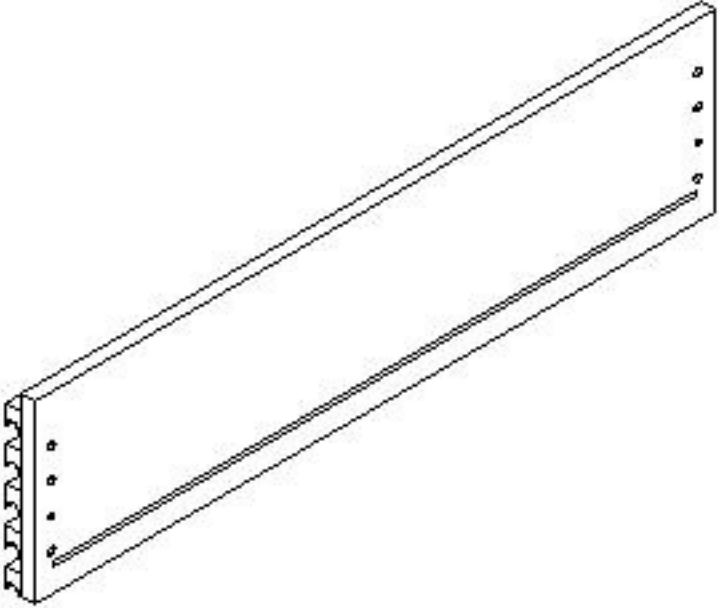 
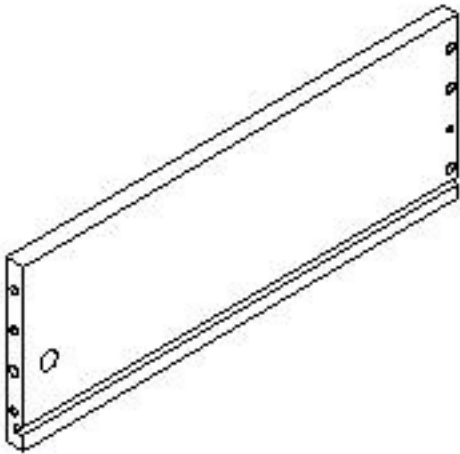 
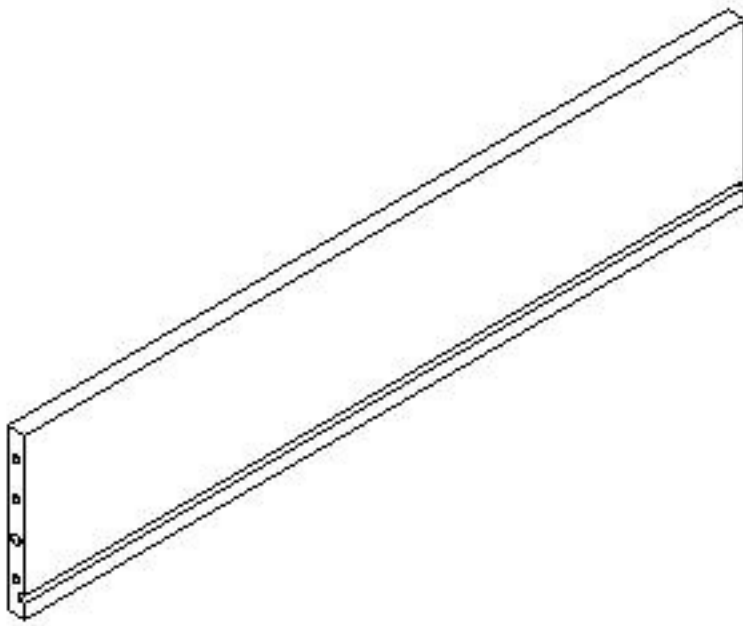 
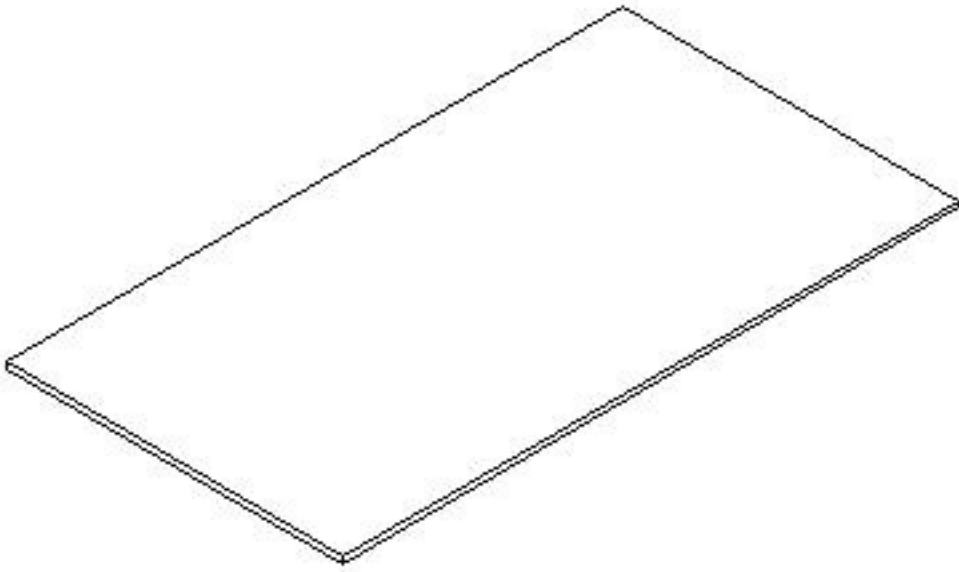 
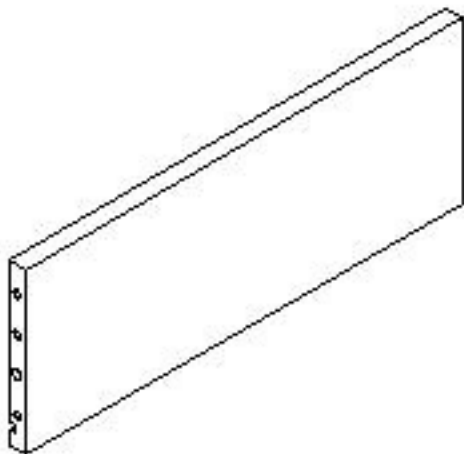 
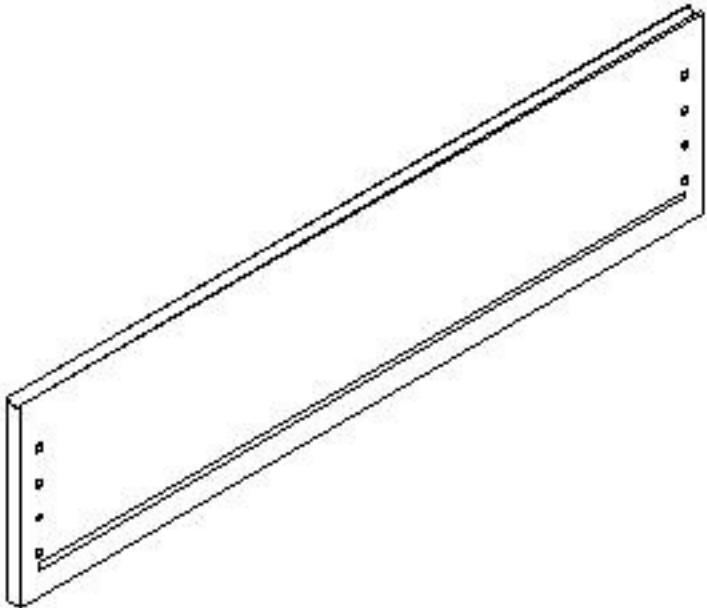 
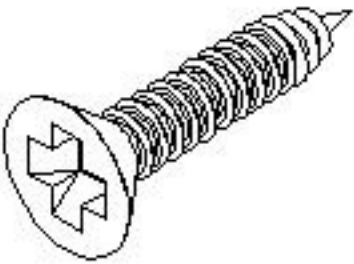 
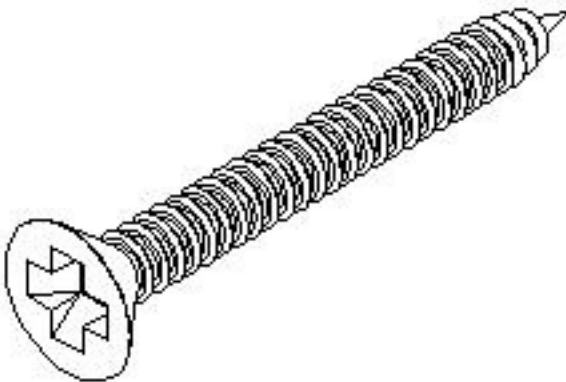 
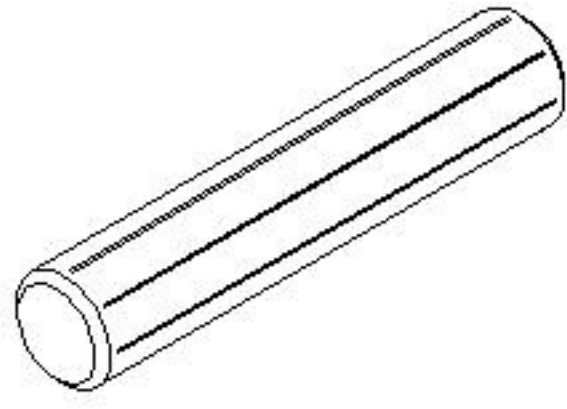 


ASSEMBLY INSTRUCTION


6-DRAWER DRESSER

| | | | |
|---|---|---|---|
| A Top Panel | B Left Side Panel | C Right Side Panel | D Bottom Frame |
|  |  |  |  |
| 1pc | 1pc | 1pc | 1pc |
| E Partition | F Left Bottom Leg | G Right Bottom Leg | H Back Bottom Leg |
|  |  |  |  |
| 1pc | 1pc | 1pc | 1pc |
| I Top Bar | J Center Bar | K Support Stand | L Back Plywood |
|  |  |  |  |
| 2pcs | 2pcs | 1pc | 1pc |
| M Top Drawer Front | N Left Drawer Side | O Drawer Back | P Drawer Base |
|  |  |  |  |
| 2pcs | 6pcs | 6pcs | 6pcs |
| Q Right Drawer Side | R Center & Bottom Drawer Front | S Screw M3 x 16mm | T Screw M4 x 38mm |
|  |  |  |  |
| 6pcs | 4pcs | 72pcs | 15pcs |


U Dowel
M8 x 35mm

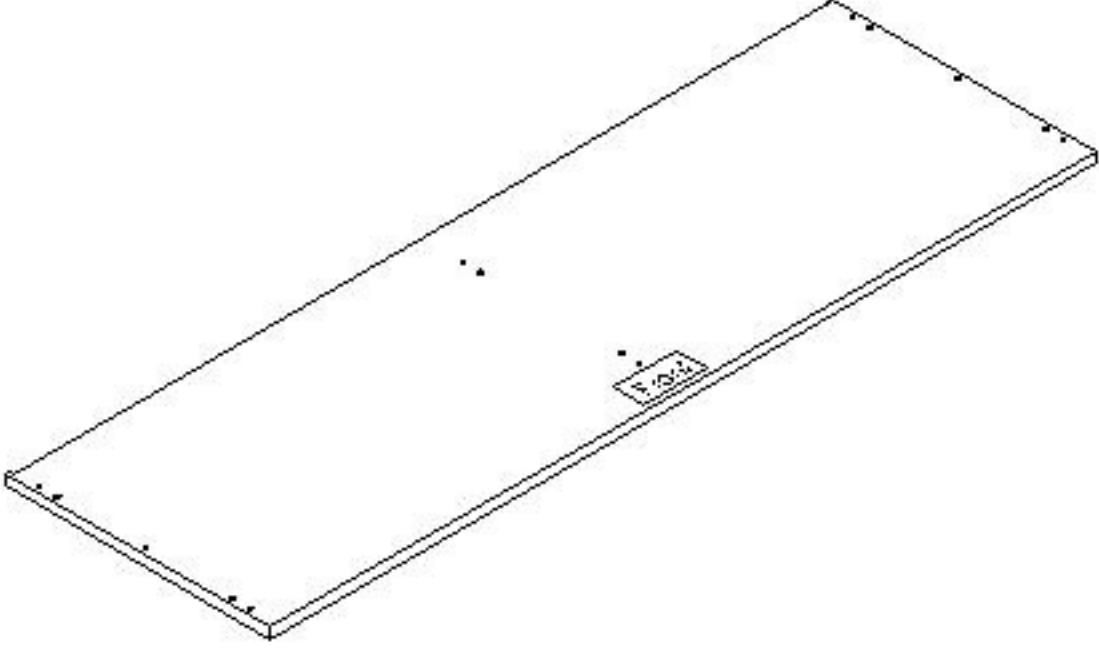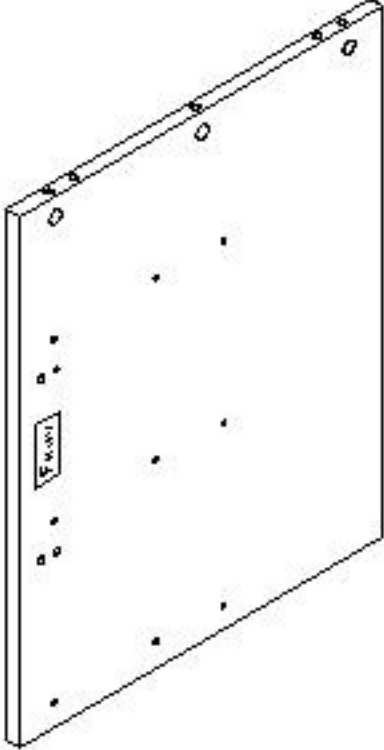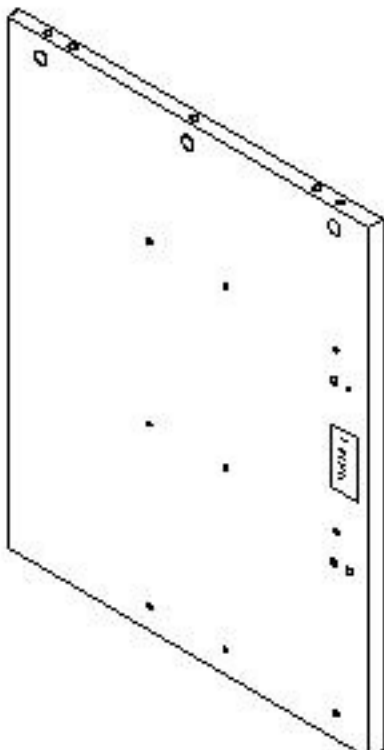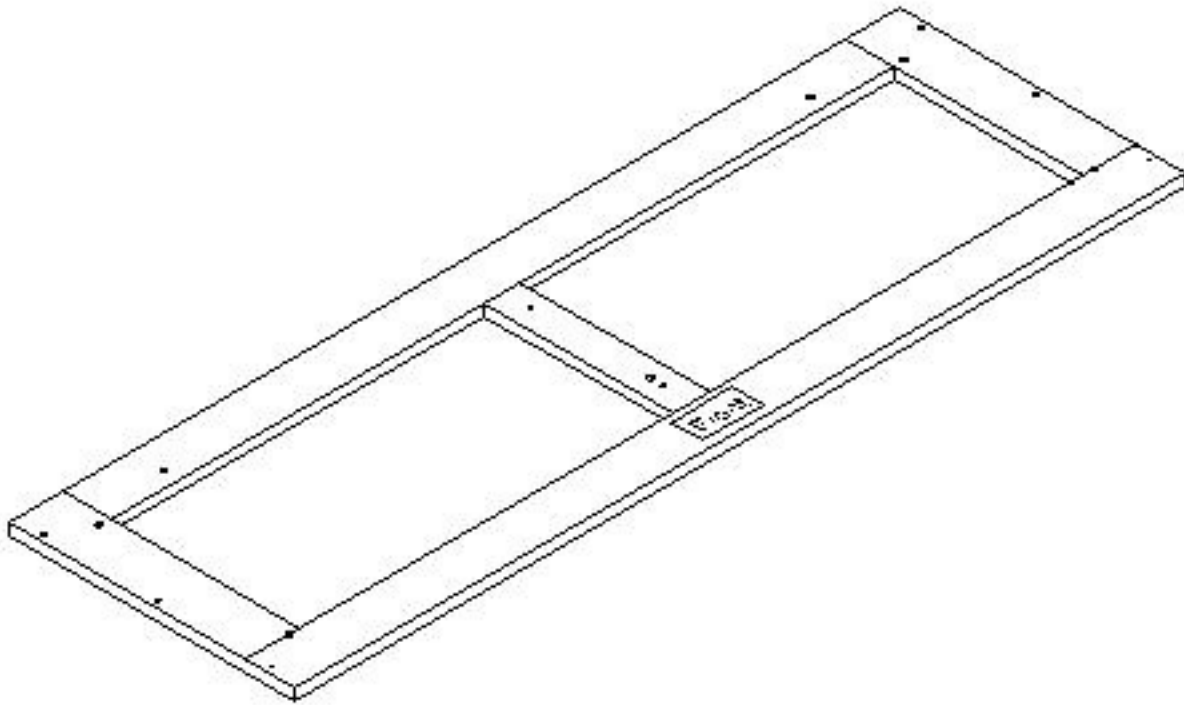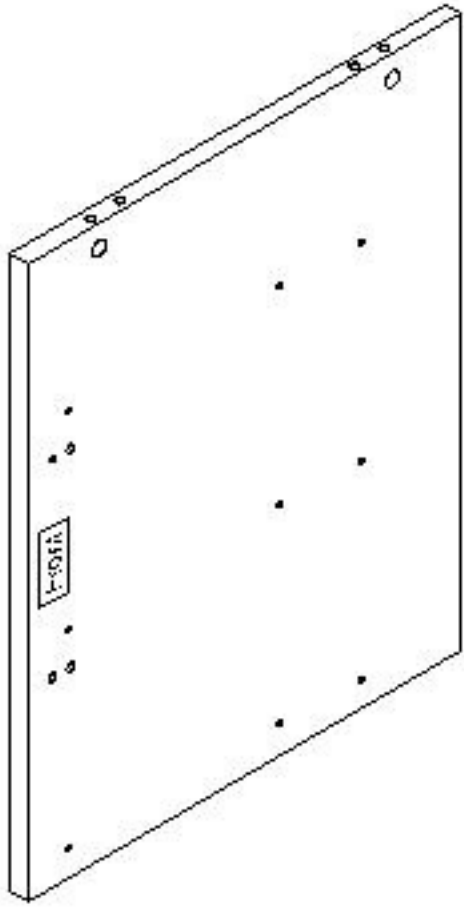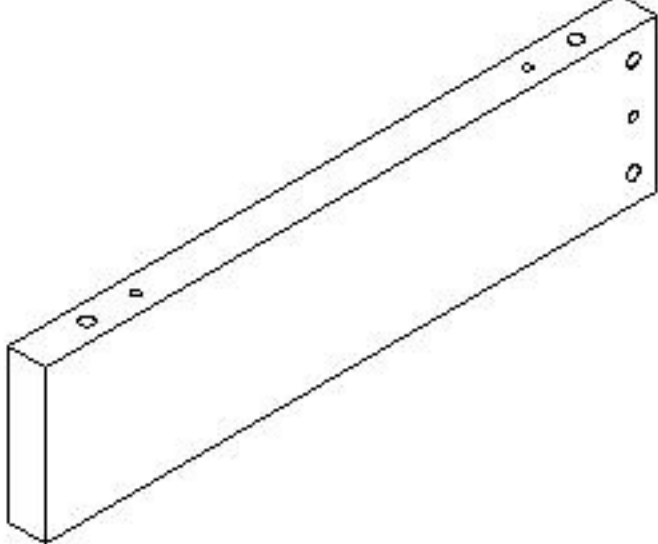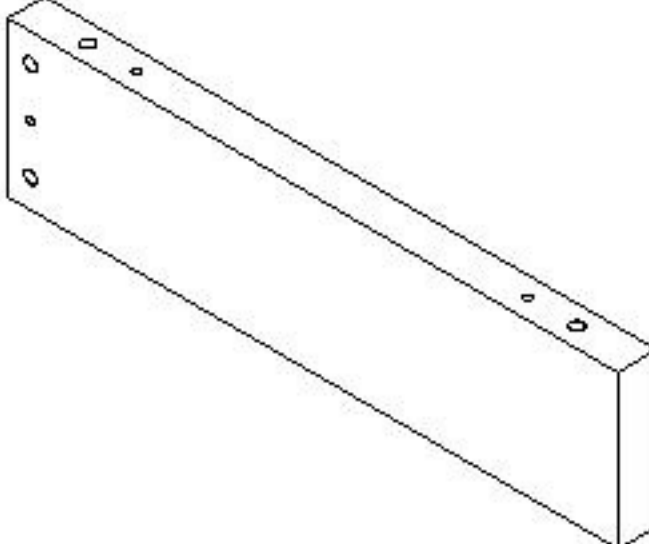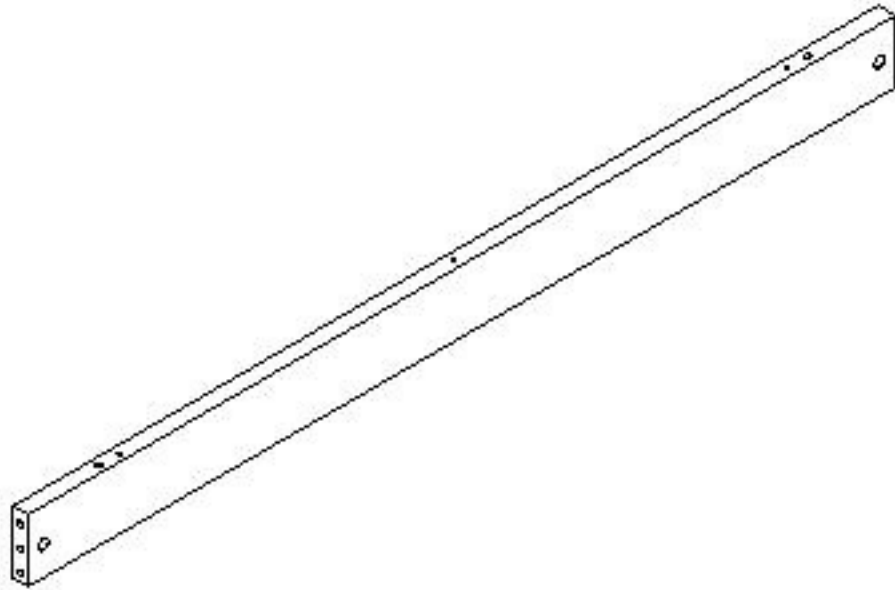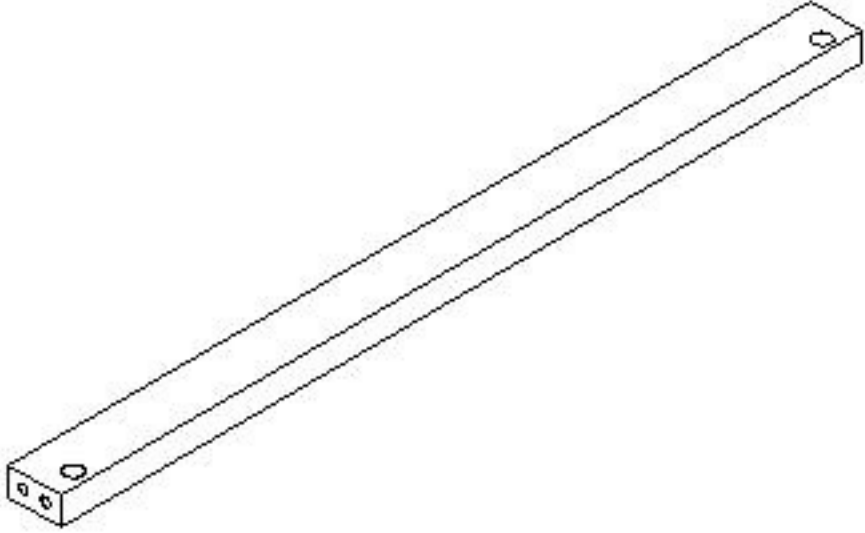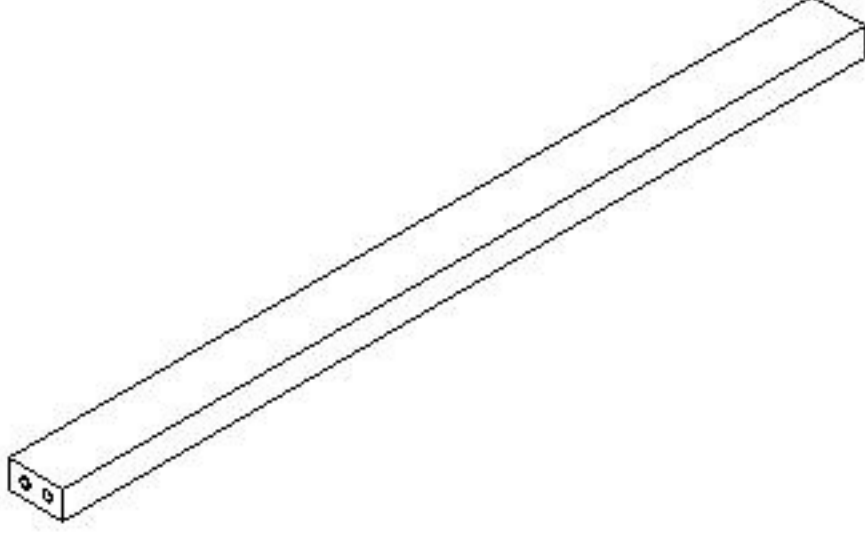

 
V Cam Lock
15 x 12mm

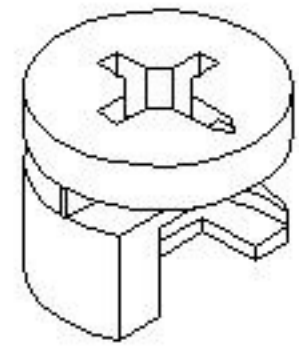

W Cam Bolt
5 x 25mm

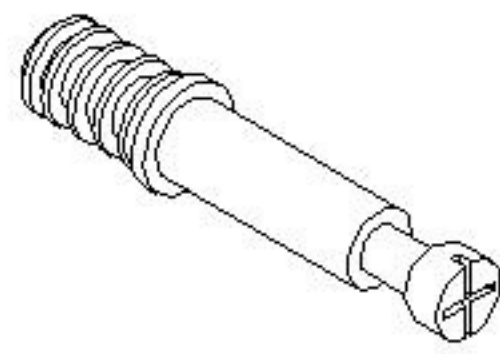 


X Dowel
M6 x 30mm

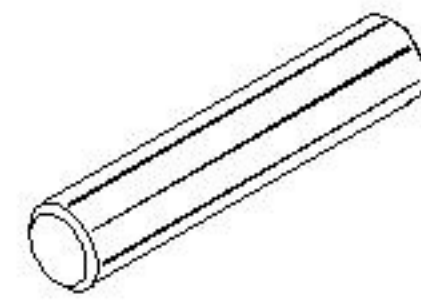 

34pcs

 
Y Runner
250mm

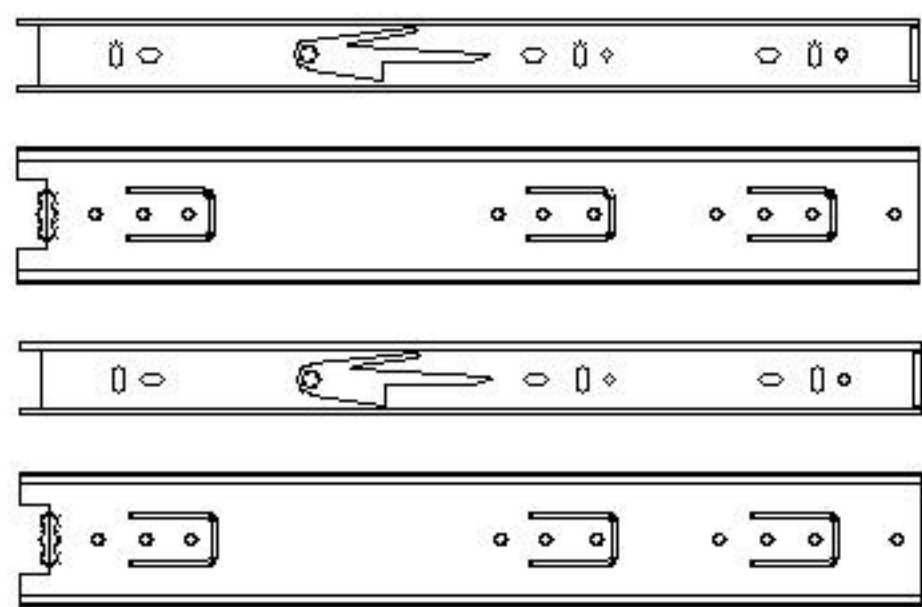

6sets

38pcs

 
Z Cam Lock Cover
17 x 5mm

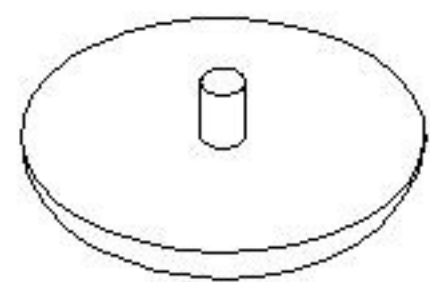

38pcs

38pcs

 
AA Panhead Screw
M4 x 16mm-Black

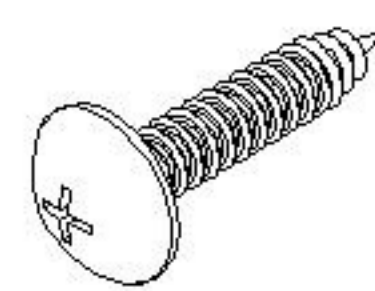


24pcs

72pcs

 AB Anti-Tipping Kit

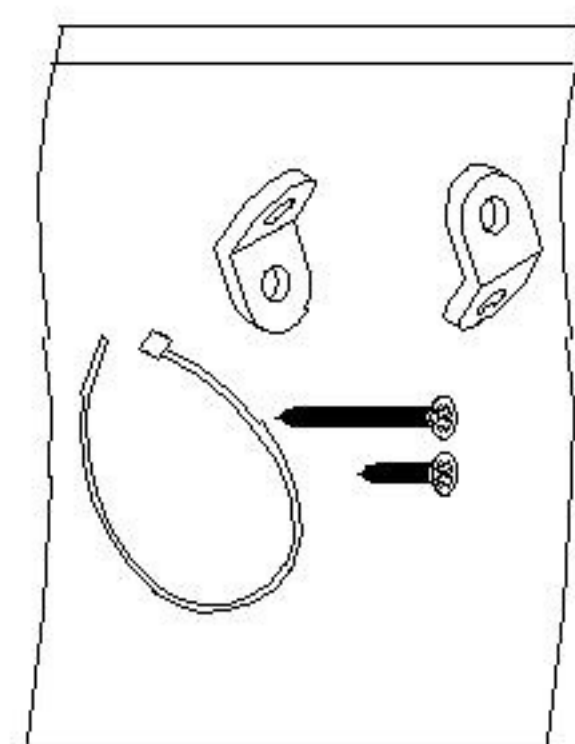


1set

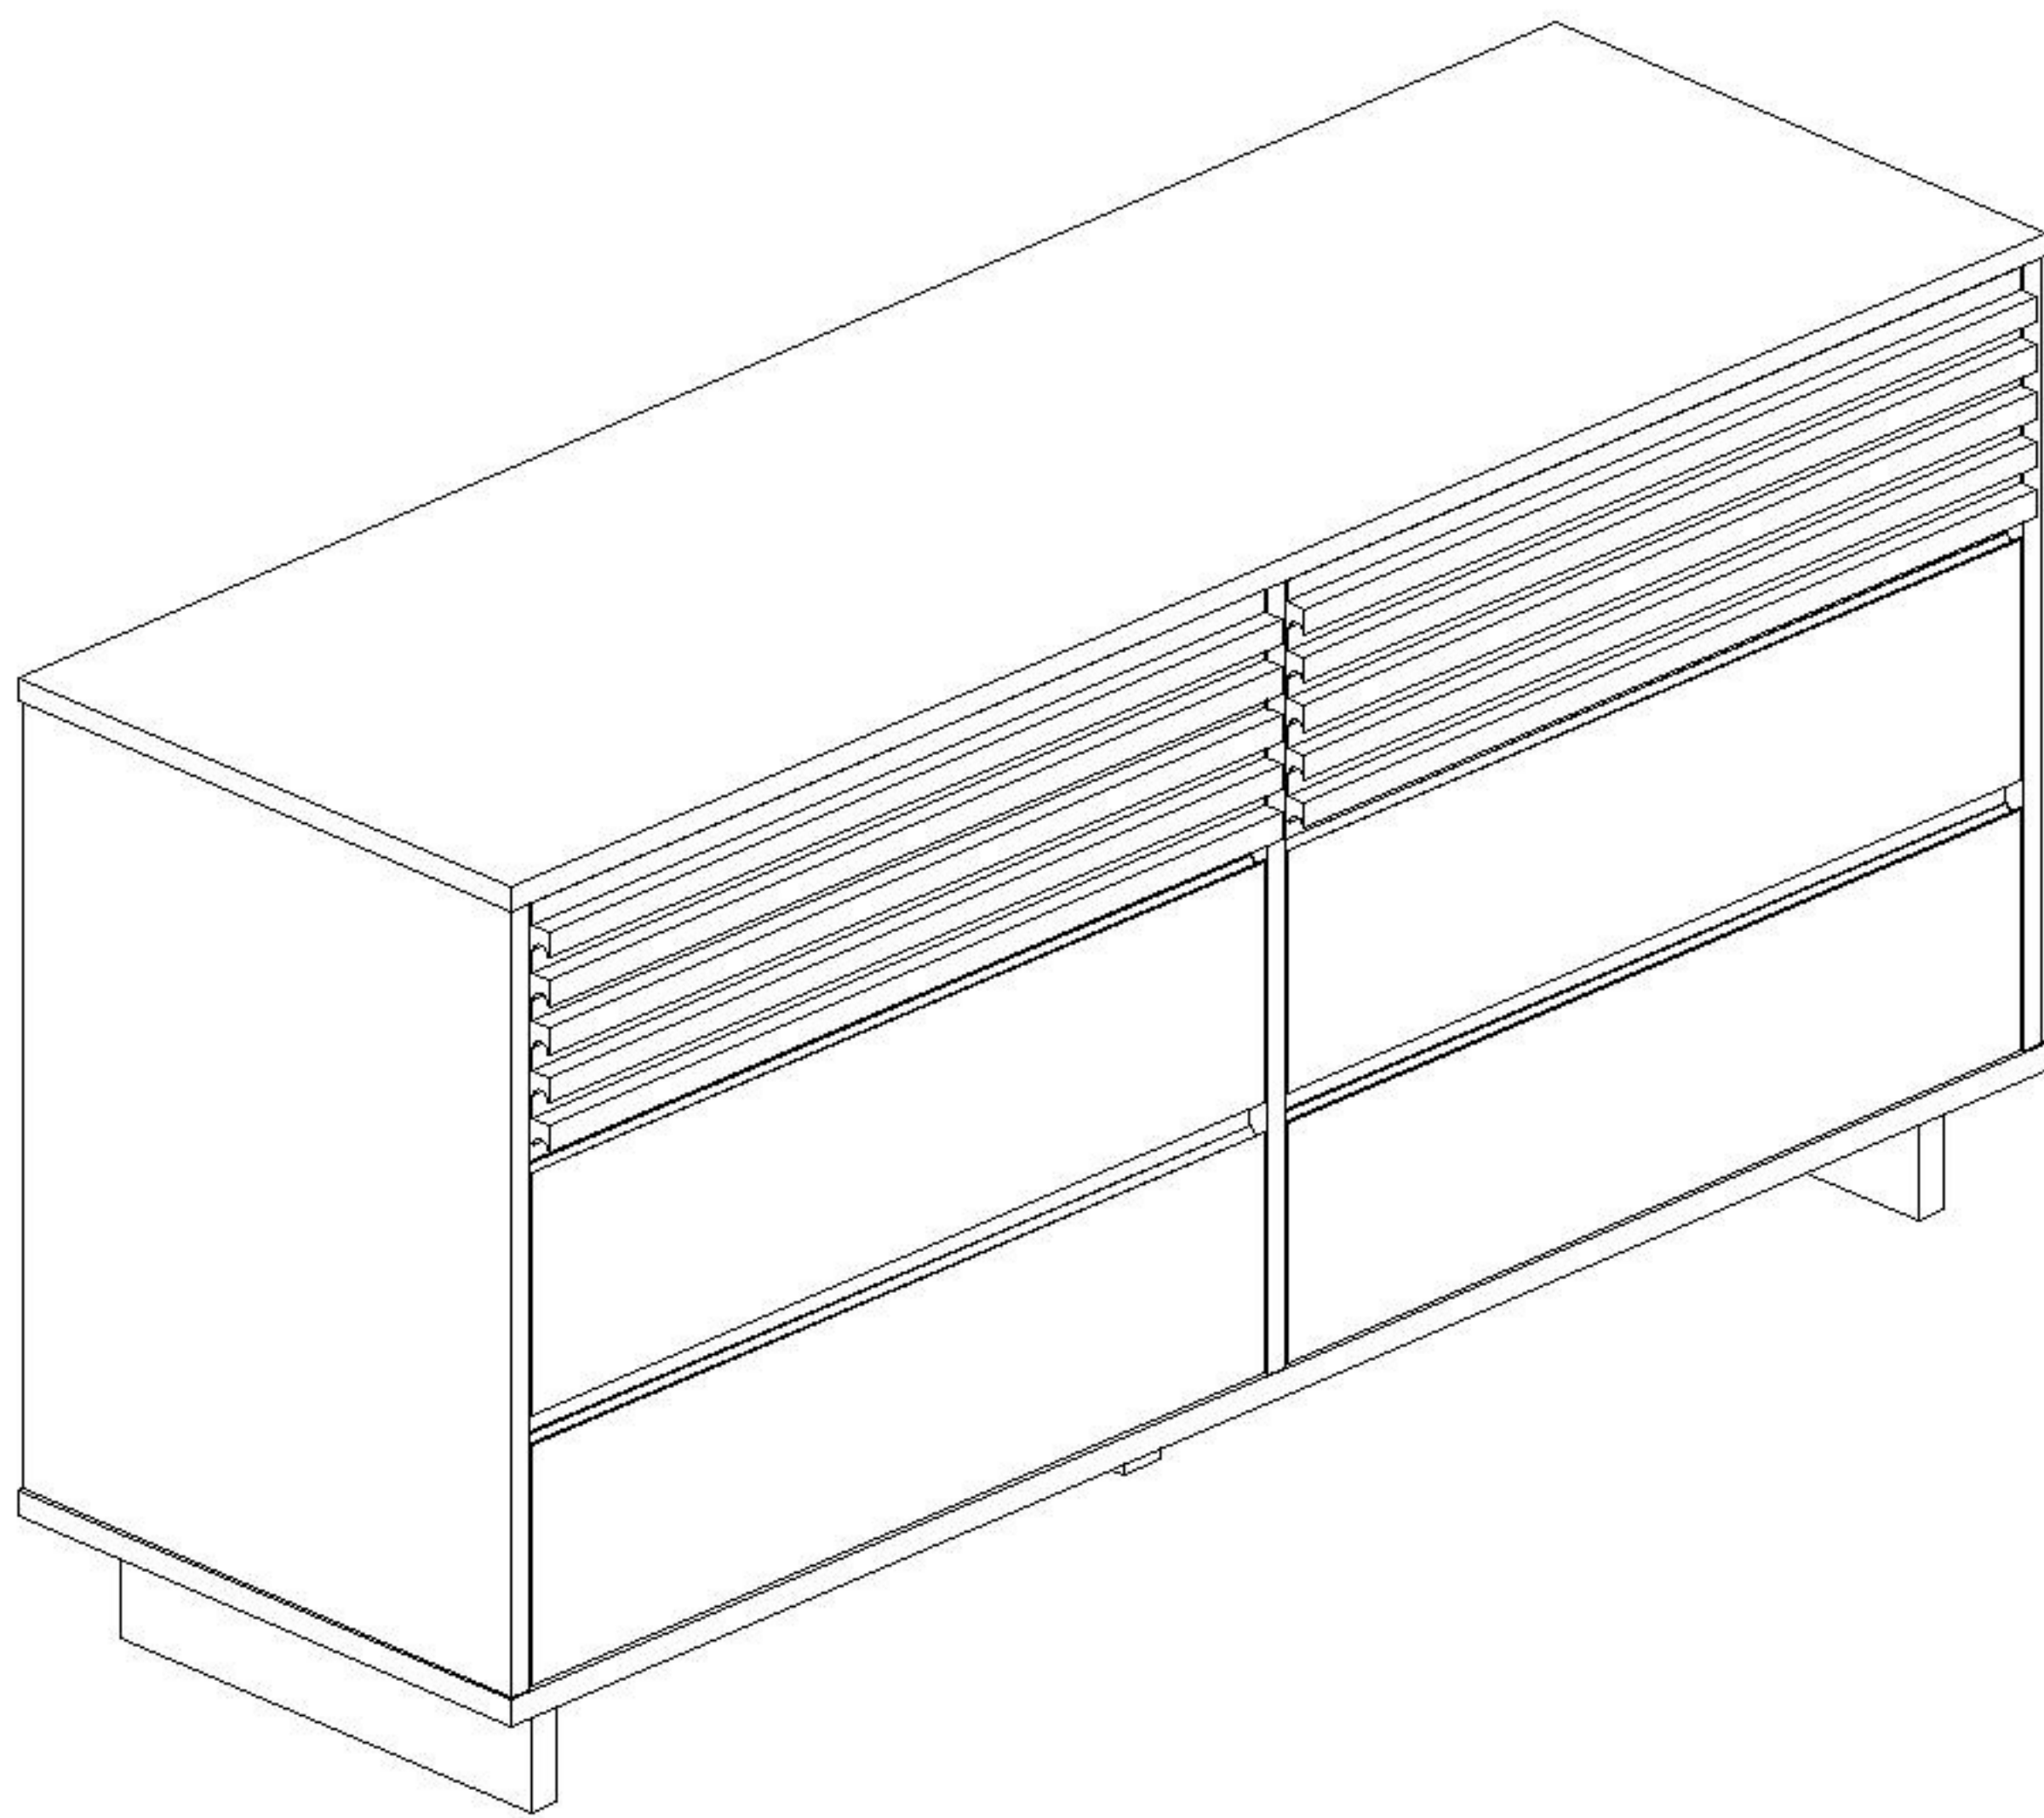 


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 1 Attach Cam Bolt (W) to Top Panel (A).

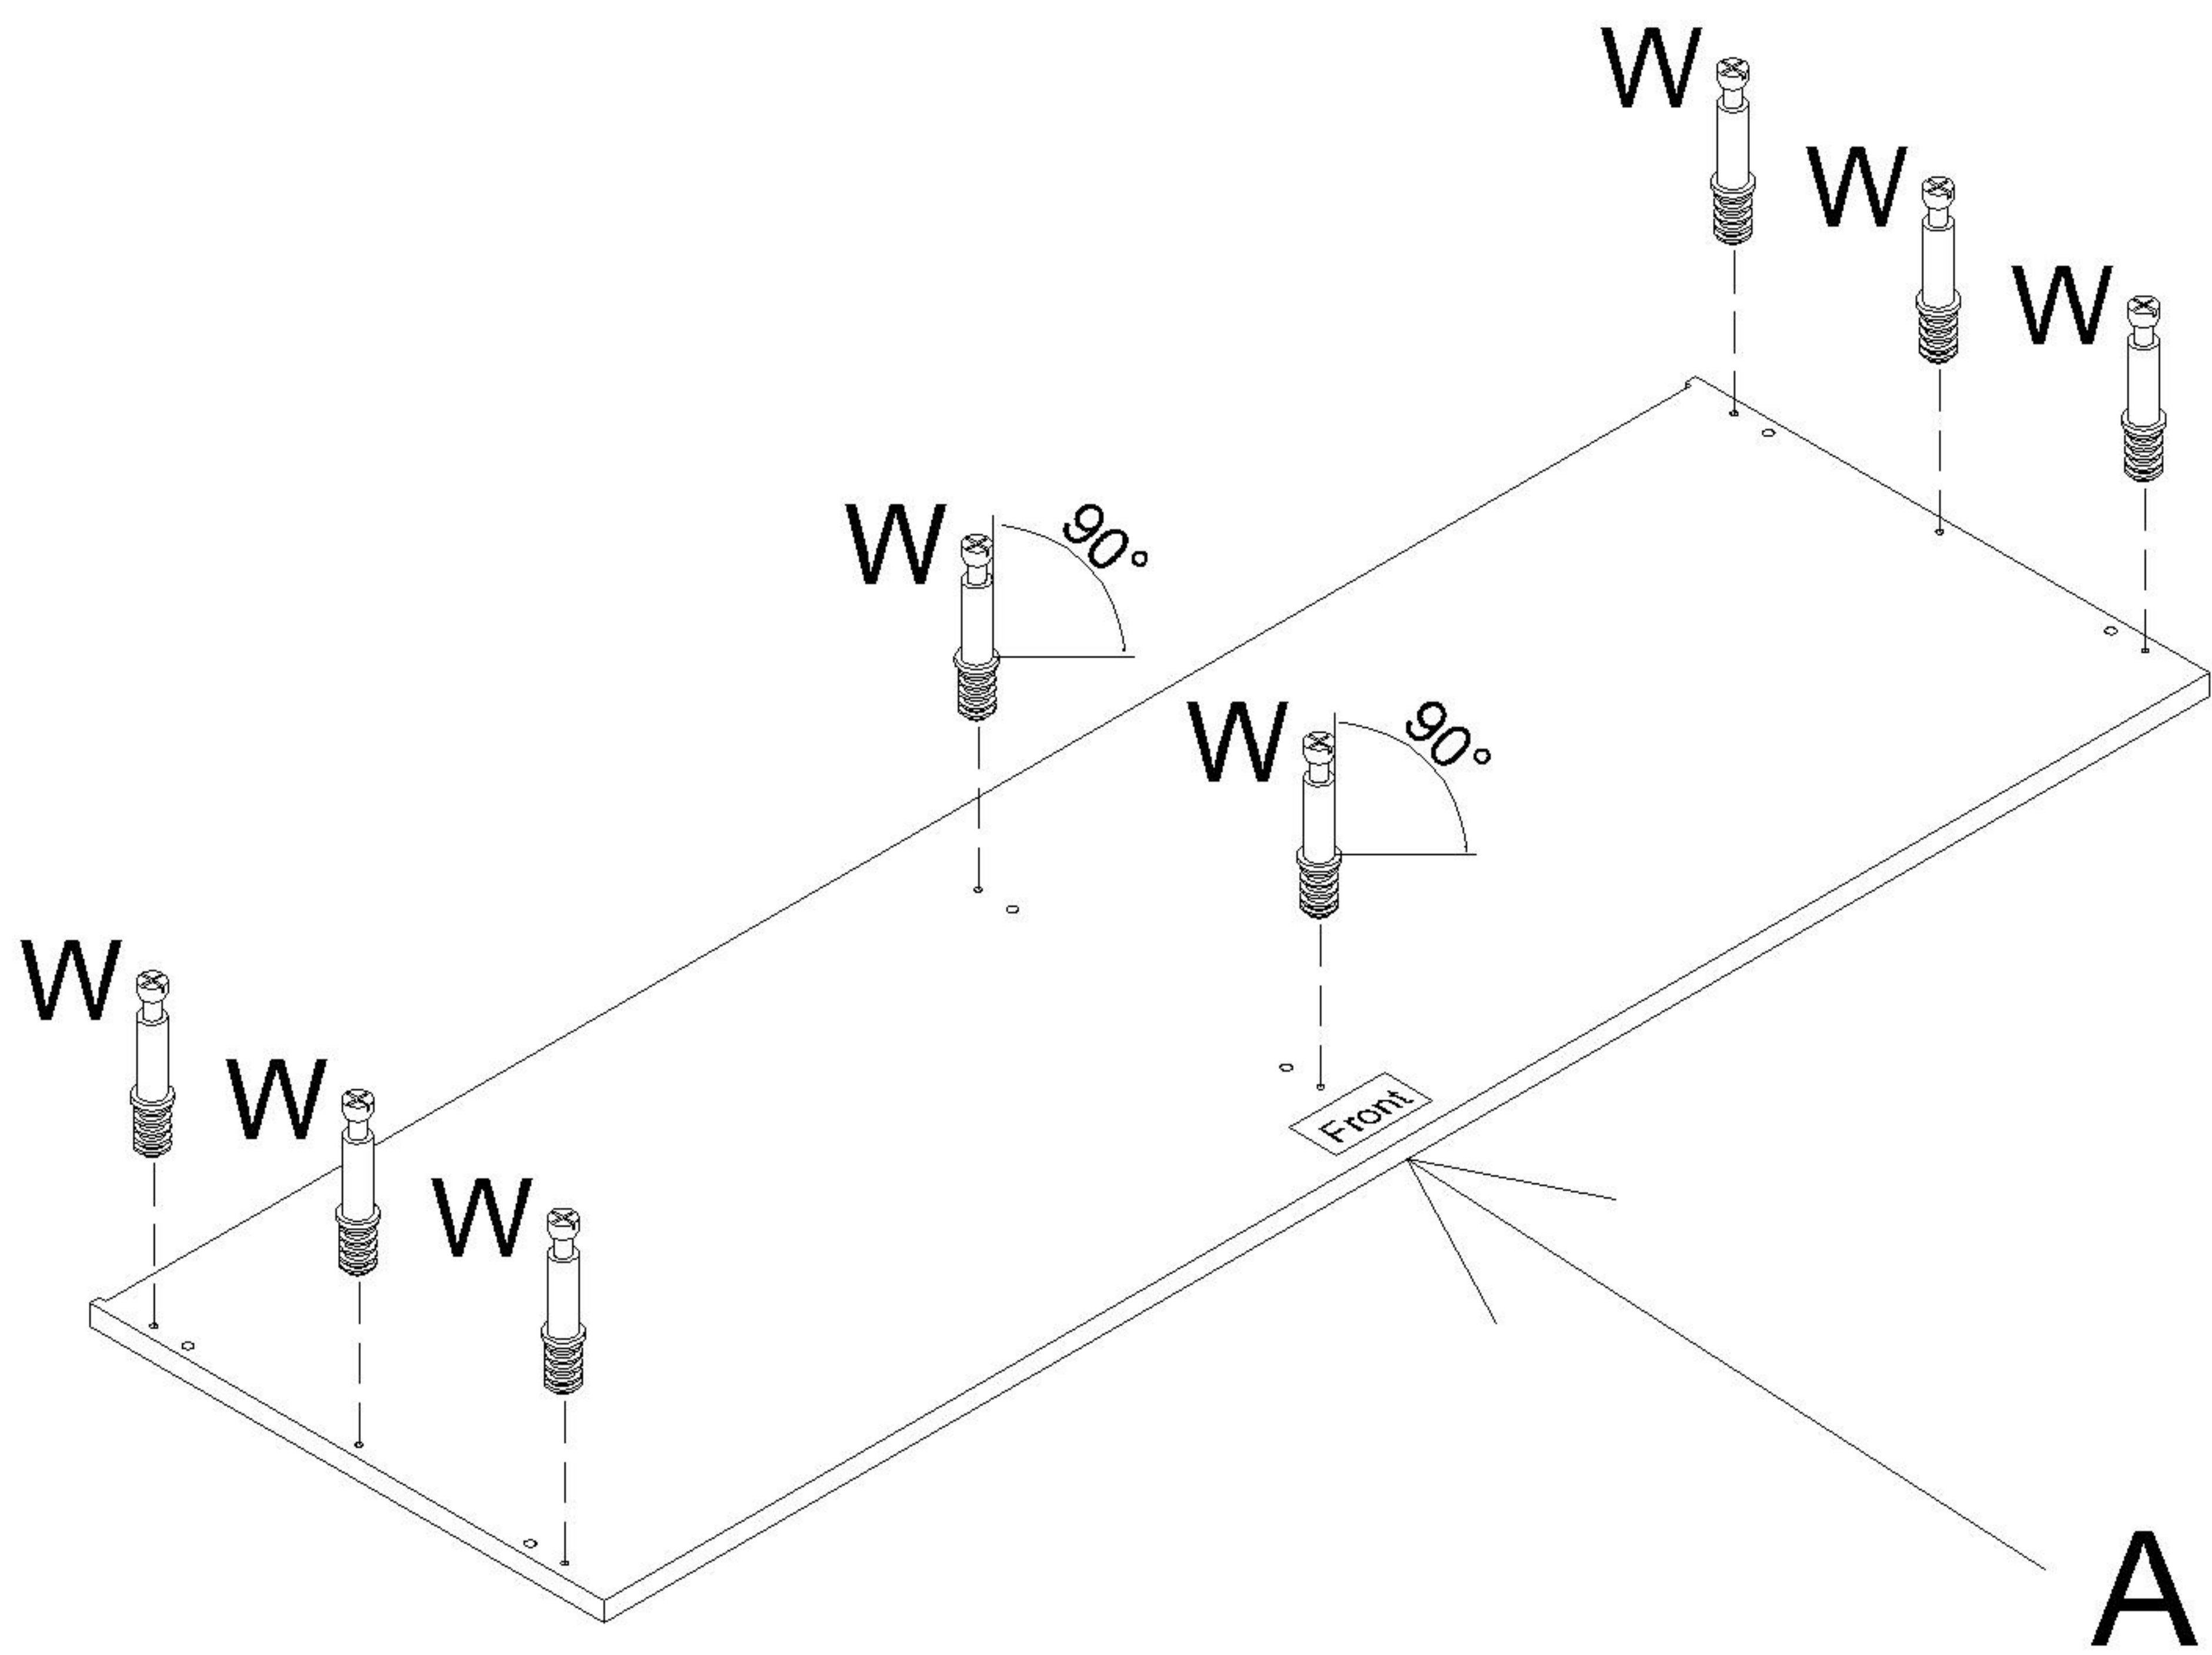

2 Attach Dowel (U) to Left & Right Side Panel (B & C). Attach Cam Lock (V) to Left & Right Side Panel (B & C). Attach Cam Bolt (W) to Left & Right Side Panel (B & C).

 NOTE : - Make sure arrows on each Cam Lock (V) points towards nearest edge with holes.

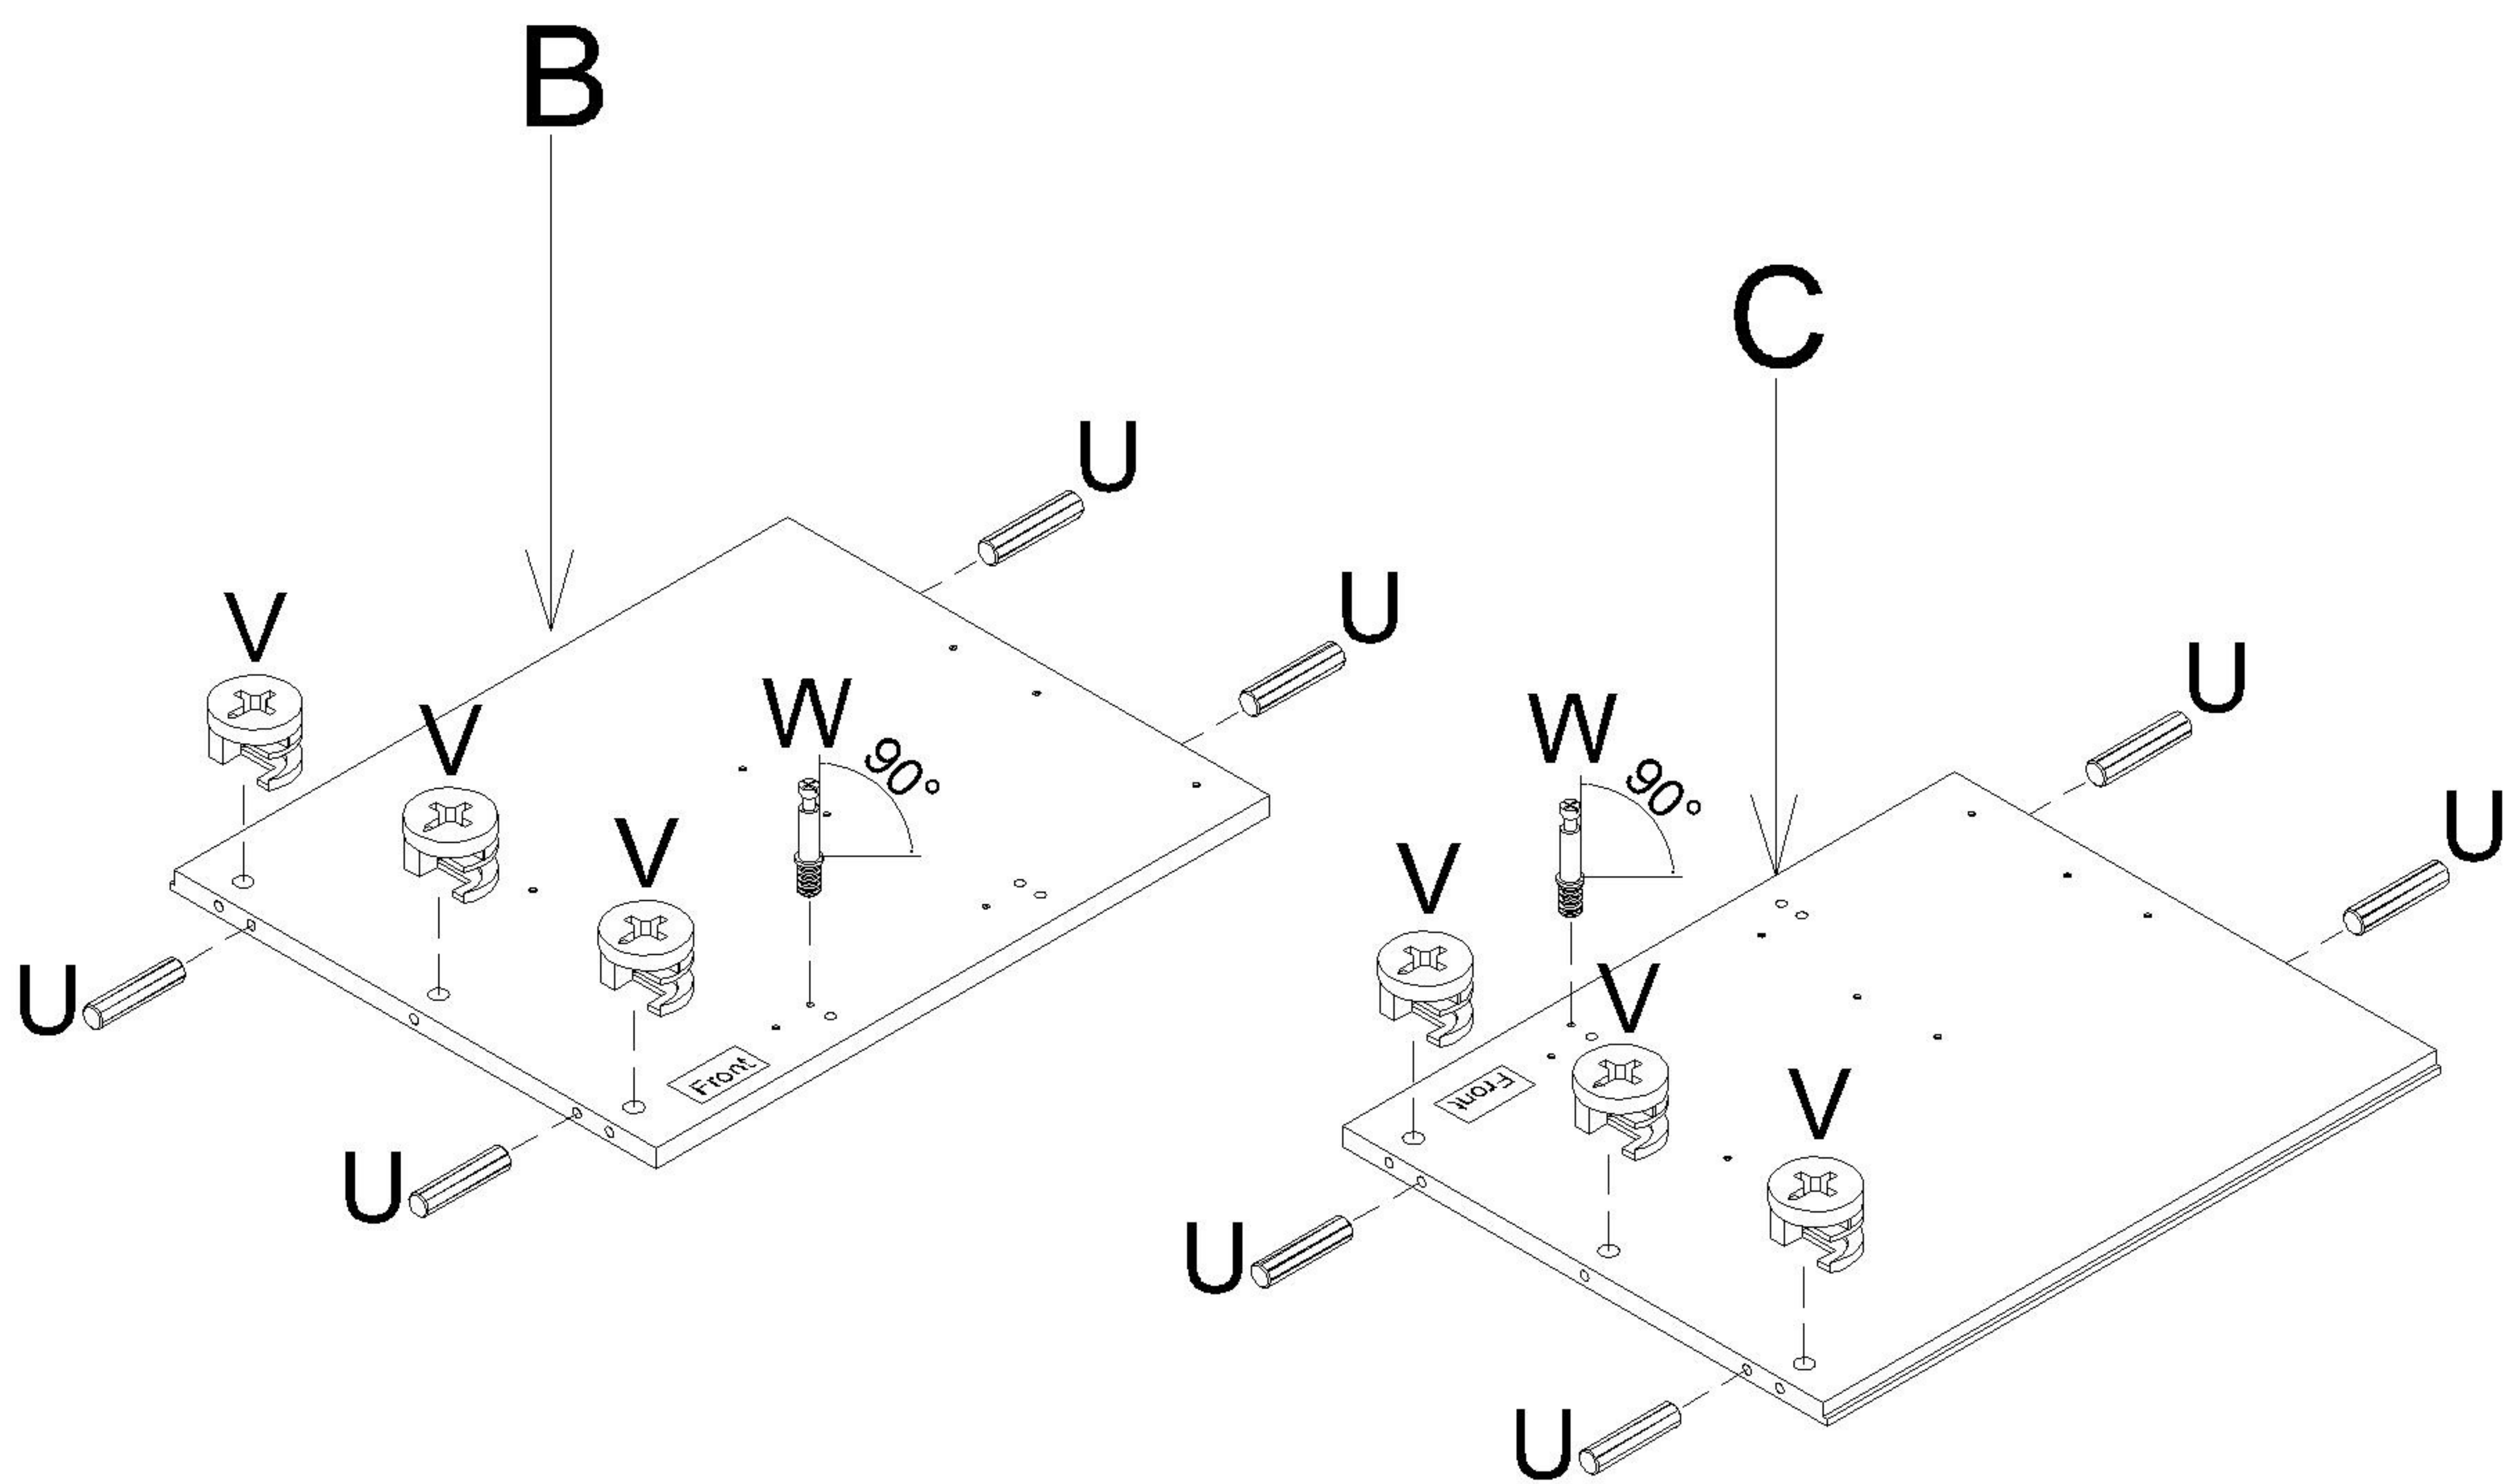


3


Attach Runner (Y) to Left & Right Side Panel (B & C) and use Screw (S) to secure.

NOTE : - Do not over tighten the Screw (S).

 - Screw (S) should be assembled from the front of the runner. Start from S^1 , S^2 then S^3 .
- Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole.

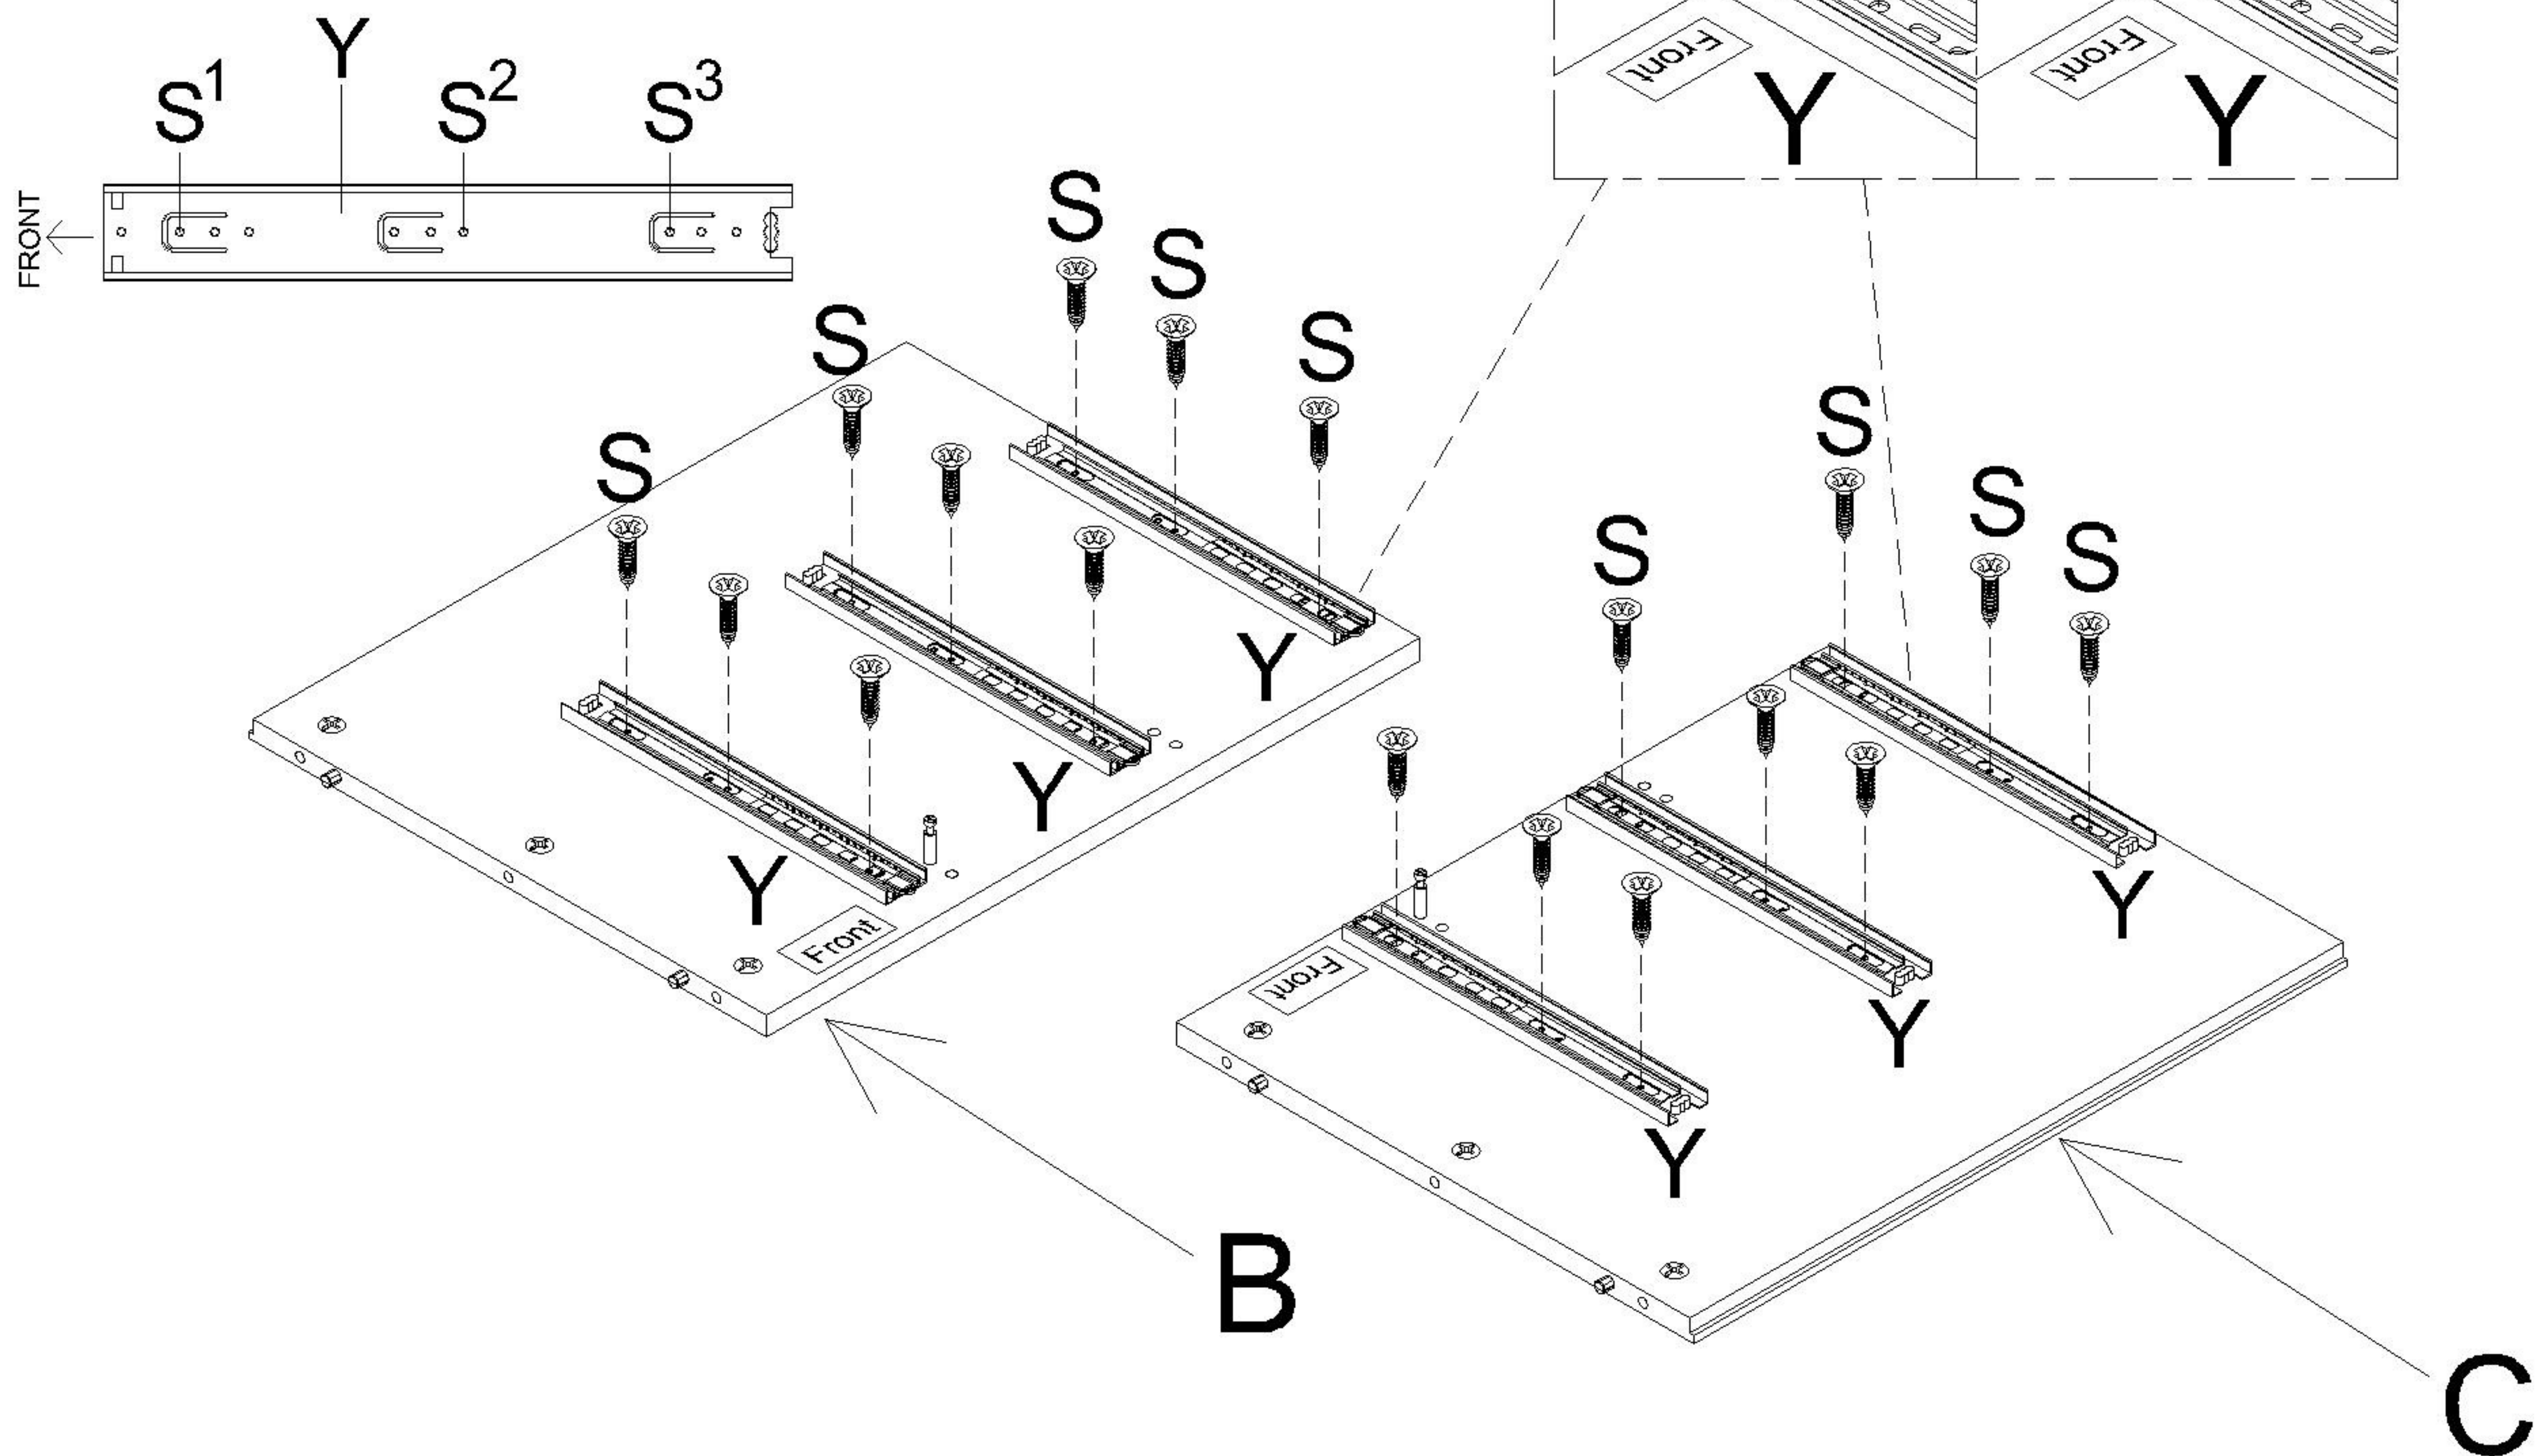

EXTENSION RUNNER DISASSEMBLE STEPS:

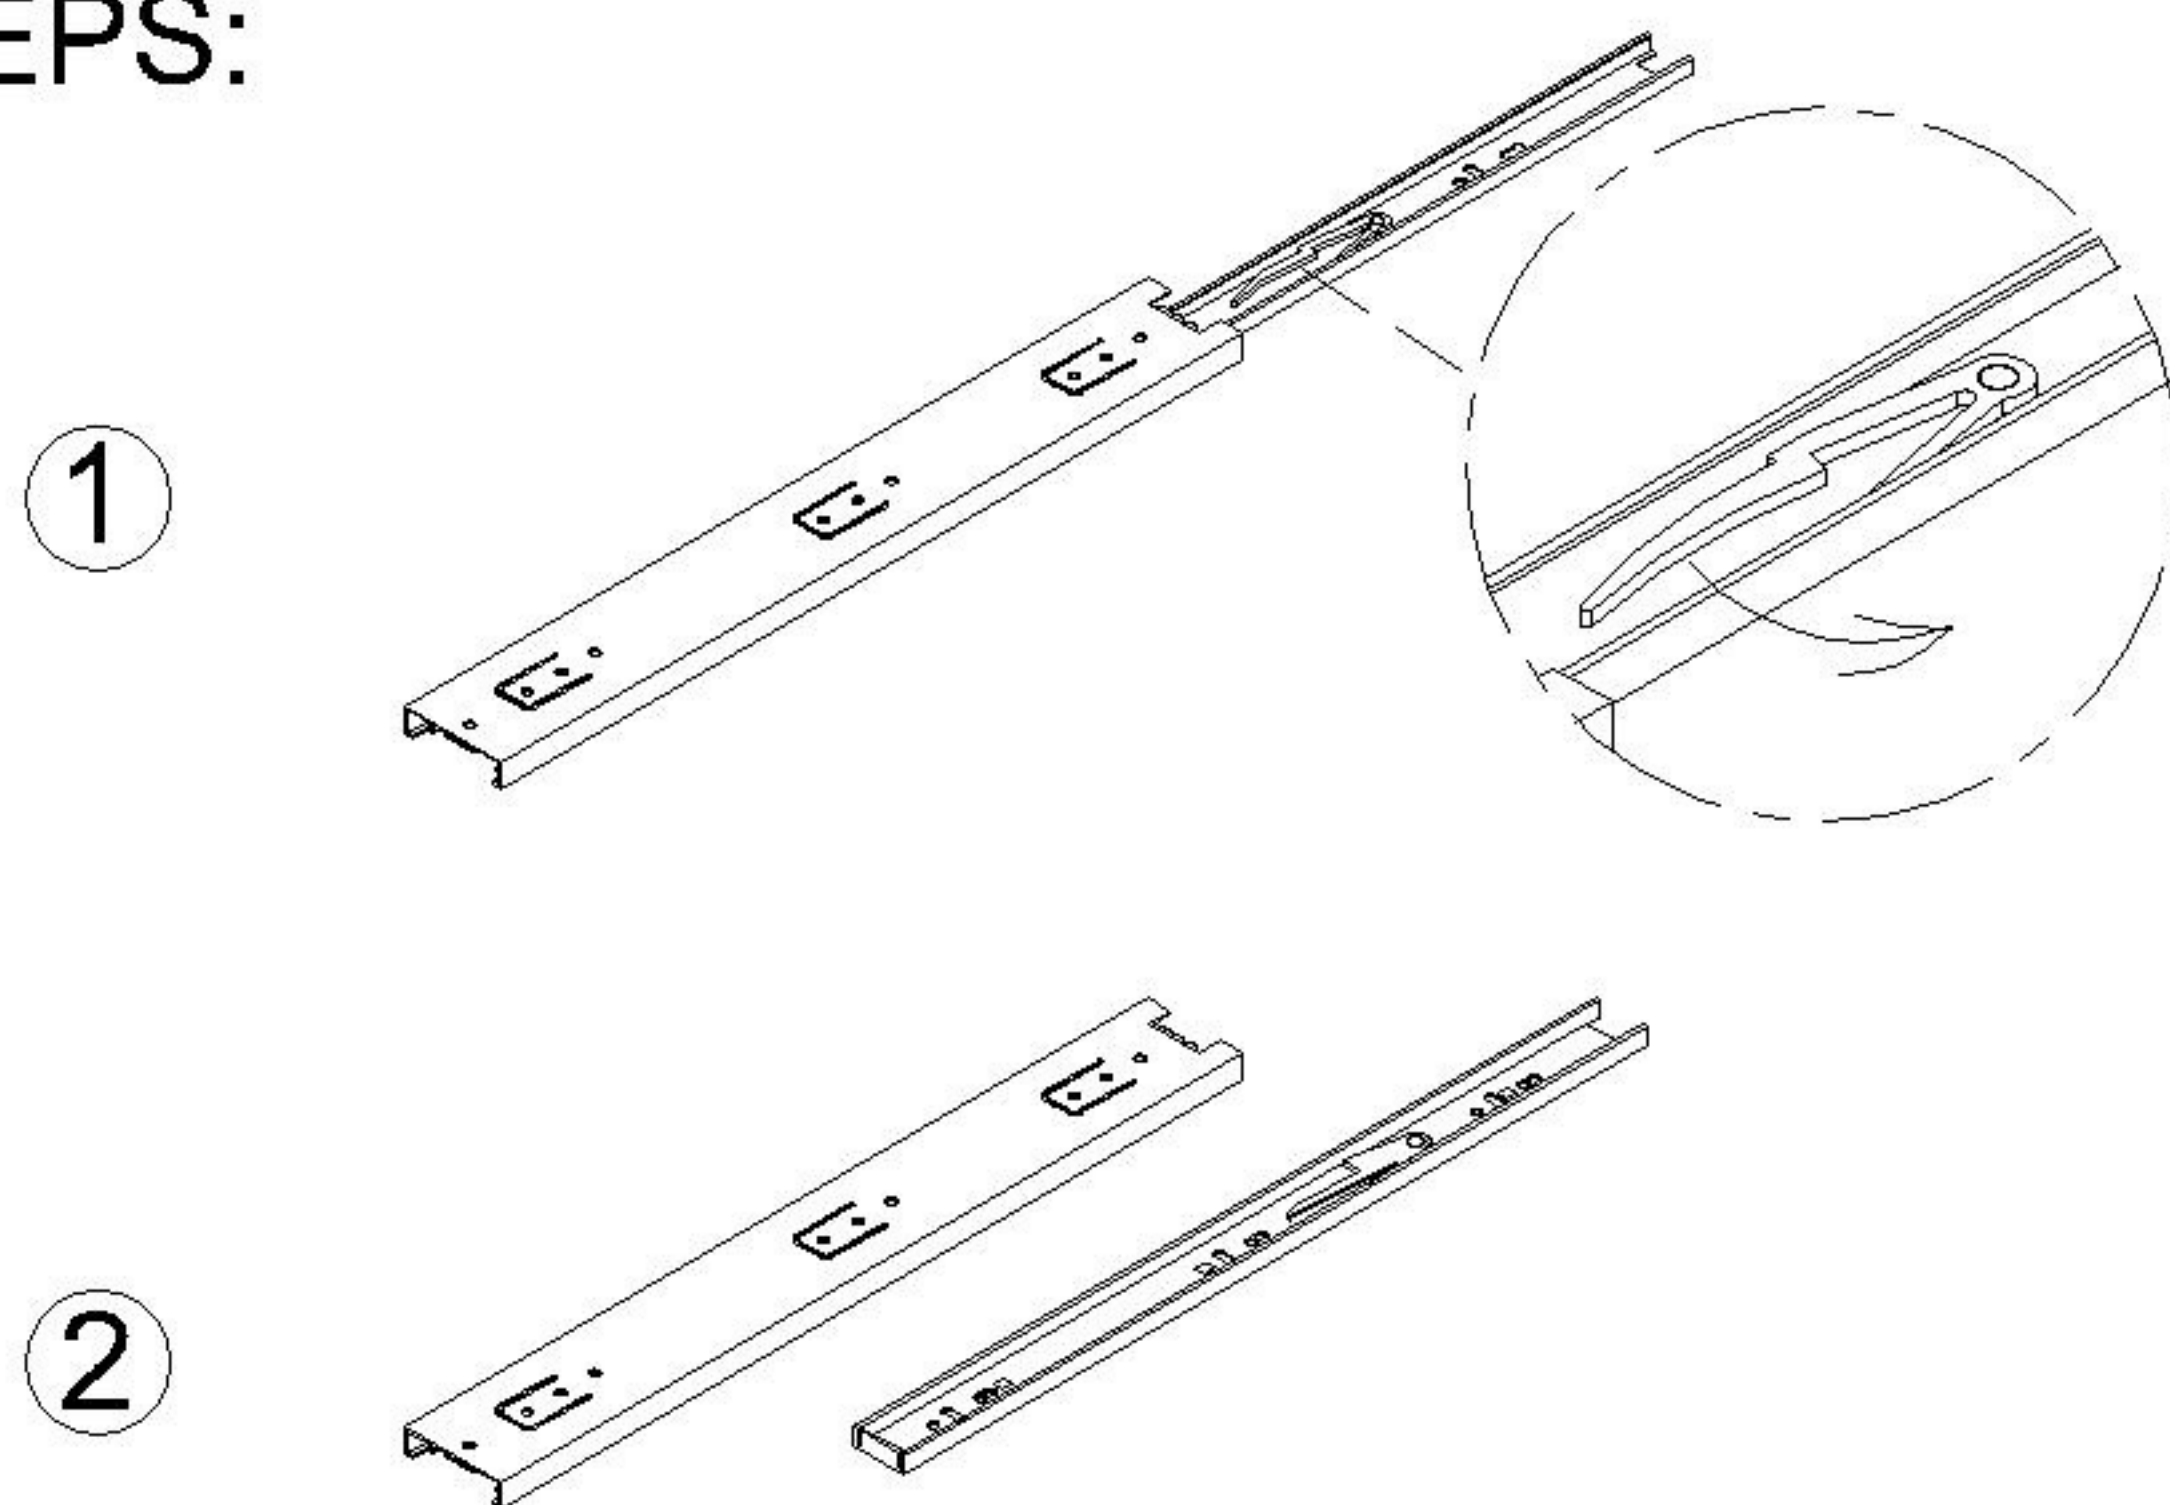 


Disassemble the Runner (Y) to 2 parts. Fix 1 part on the Left & Right Side Panel (B & C) and fix the other part on the Left & Right Drawer Side (N & Q).

4

Insert Dowel (U) to Partition (E). Attach Cam Lock (V) to Partition (E).

 
NOTE : - Make sure arrows on each Cam Lock (V) points towards nearest edge with holes.

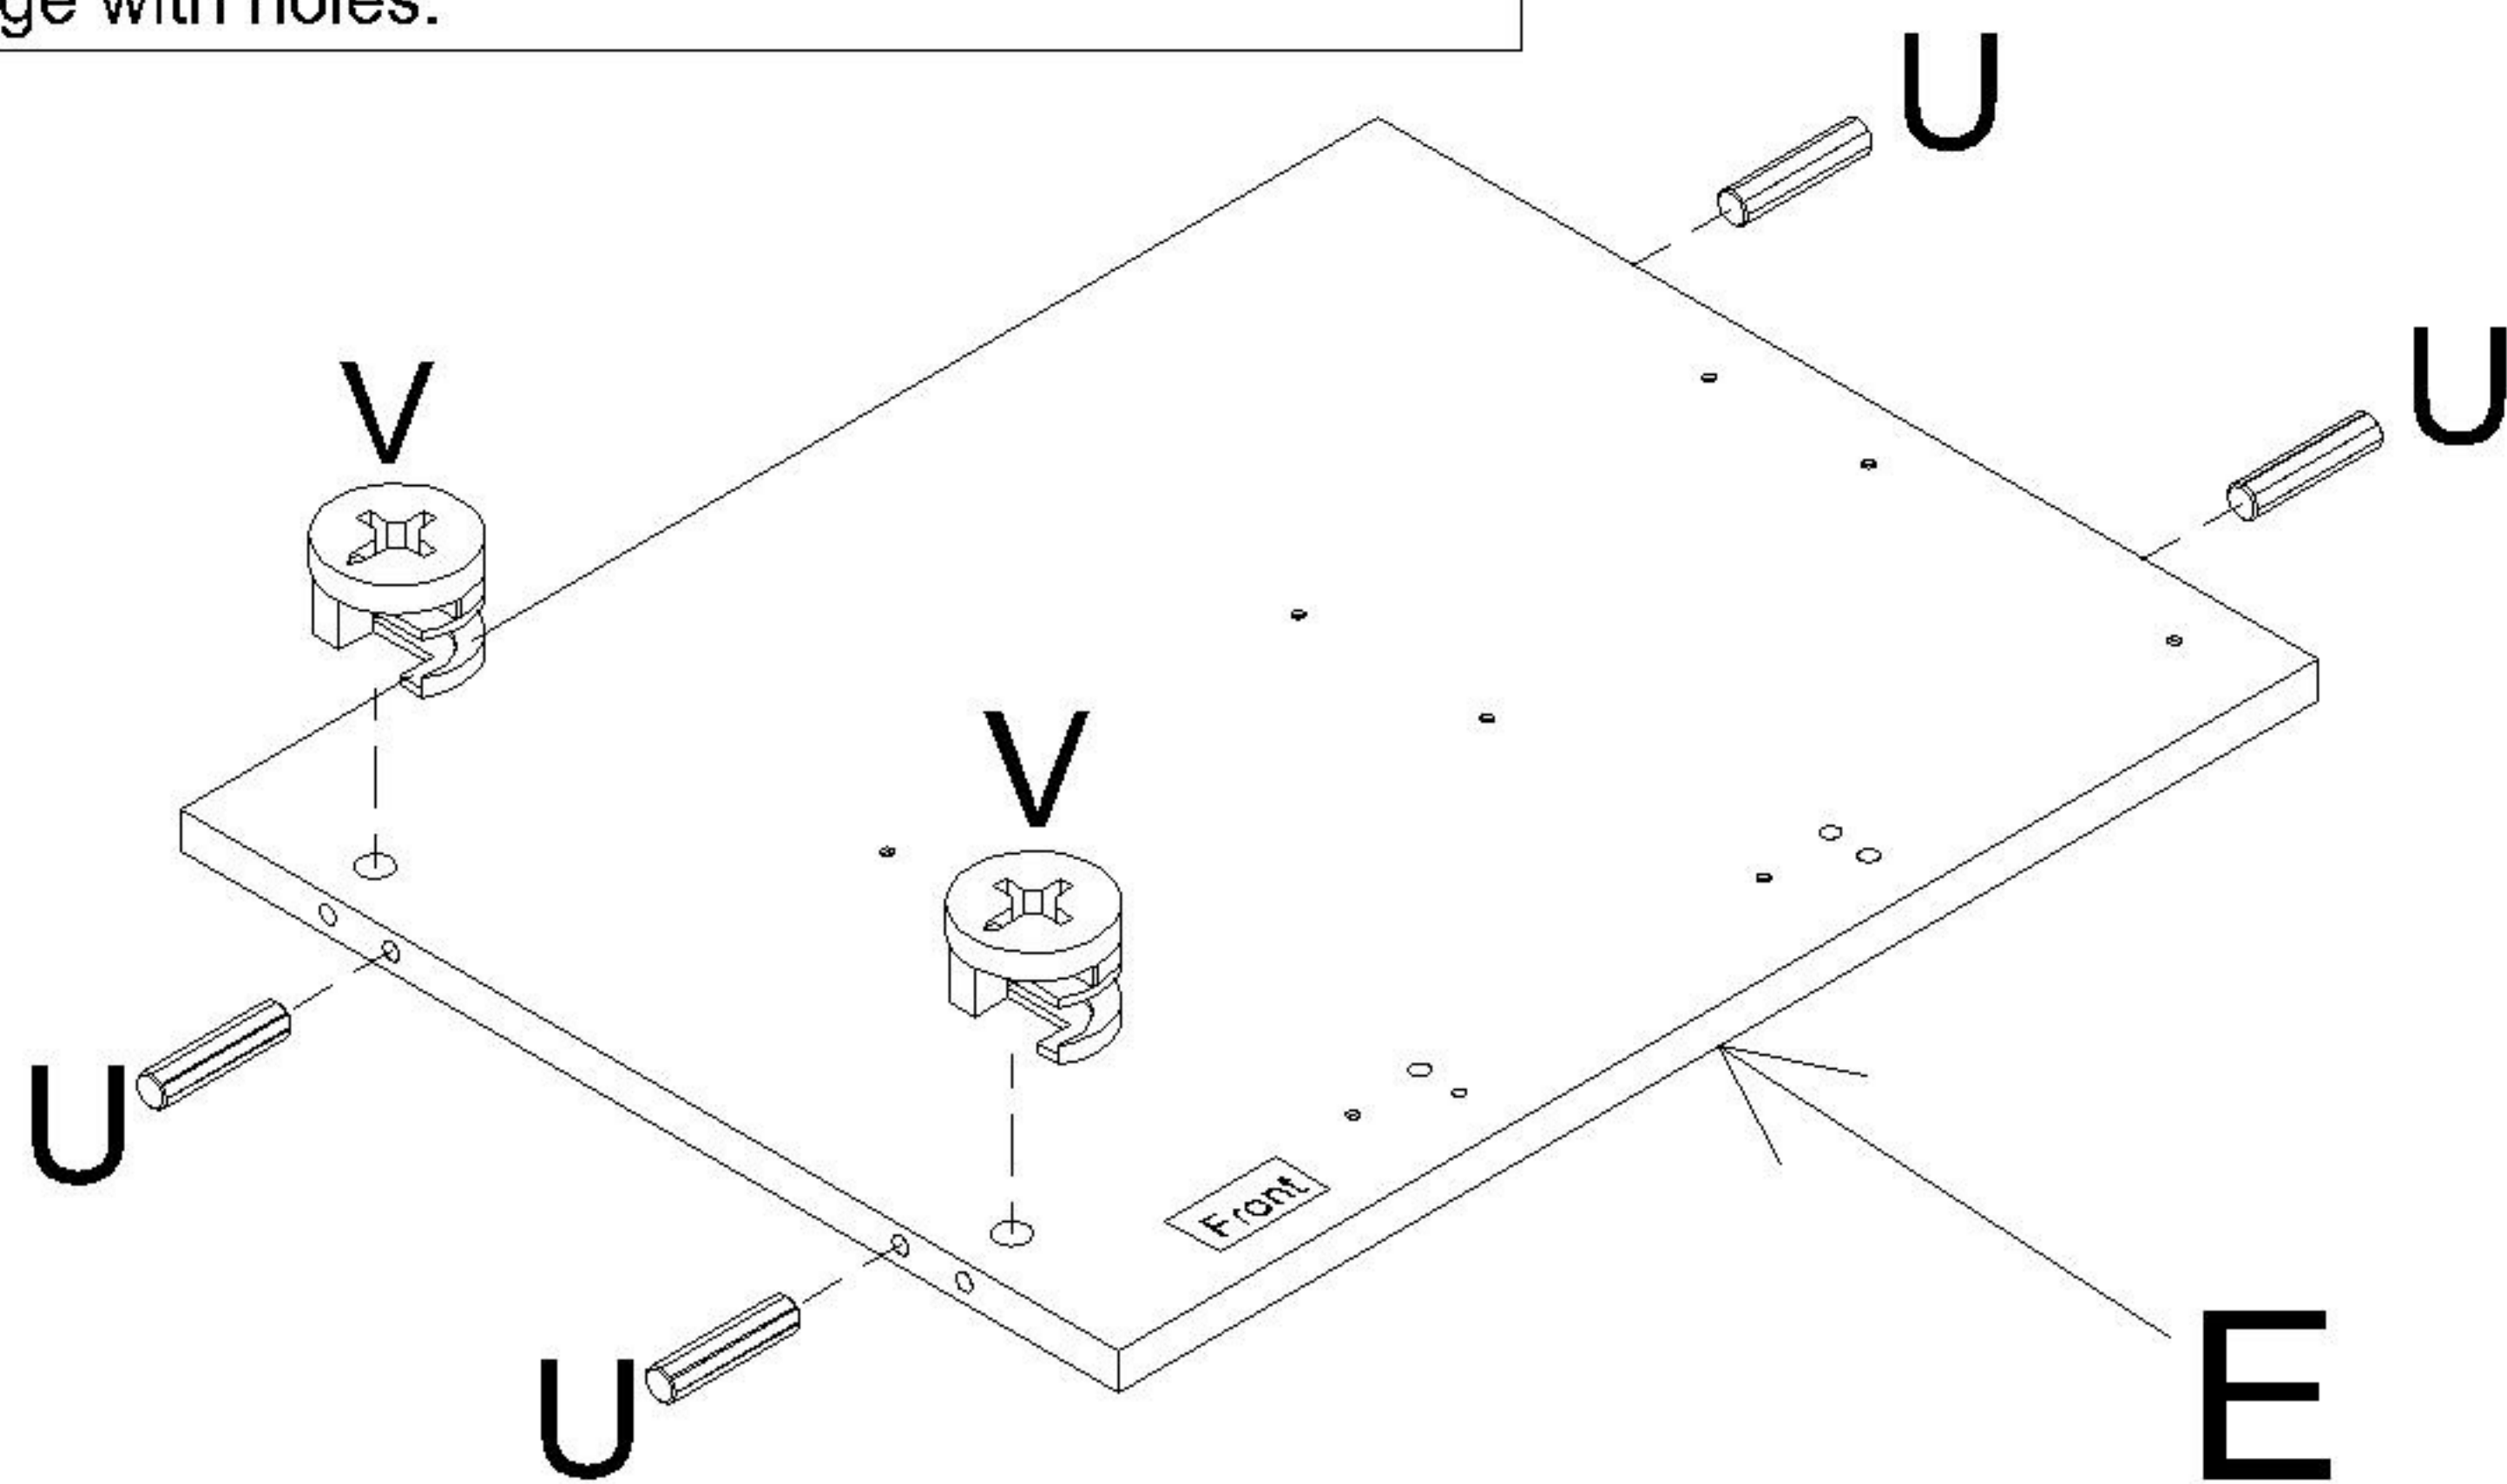


5

Attach Runner (Y) to both sides of Partition (E) and secure with Screw (S). Attach Cam Bolt (W) to both sides of Partition (E).

 NOTE : - Do not over tighten the Screw (S).
 - Screw (S) should be assembled from the front of the runner. Start from S¹, S² then S³.
 - Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole.

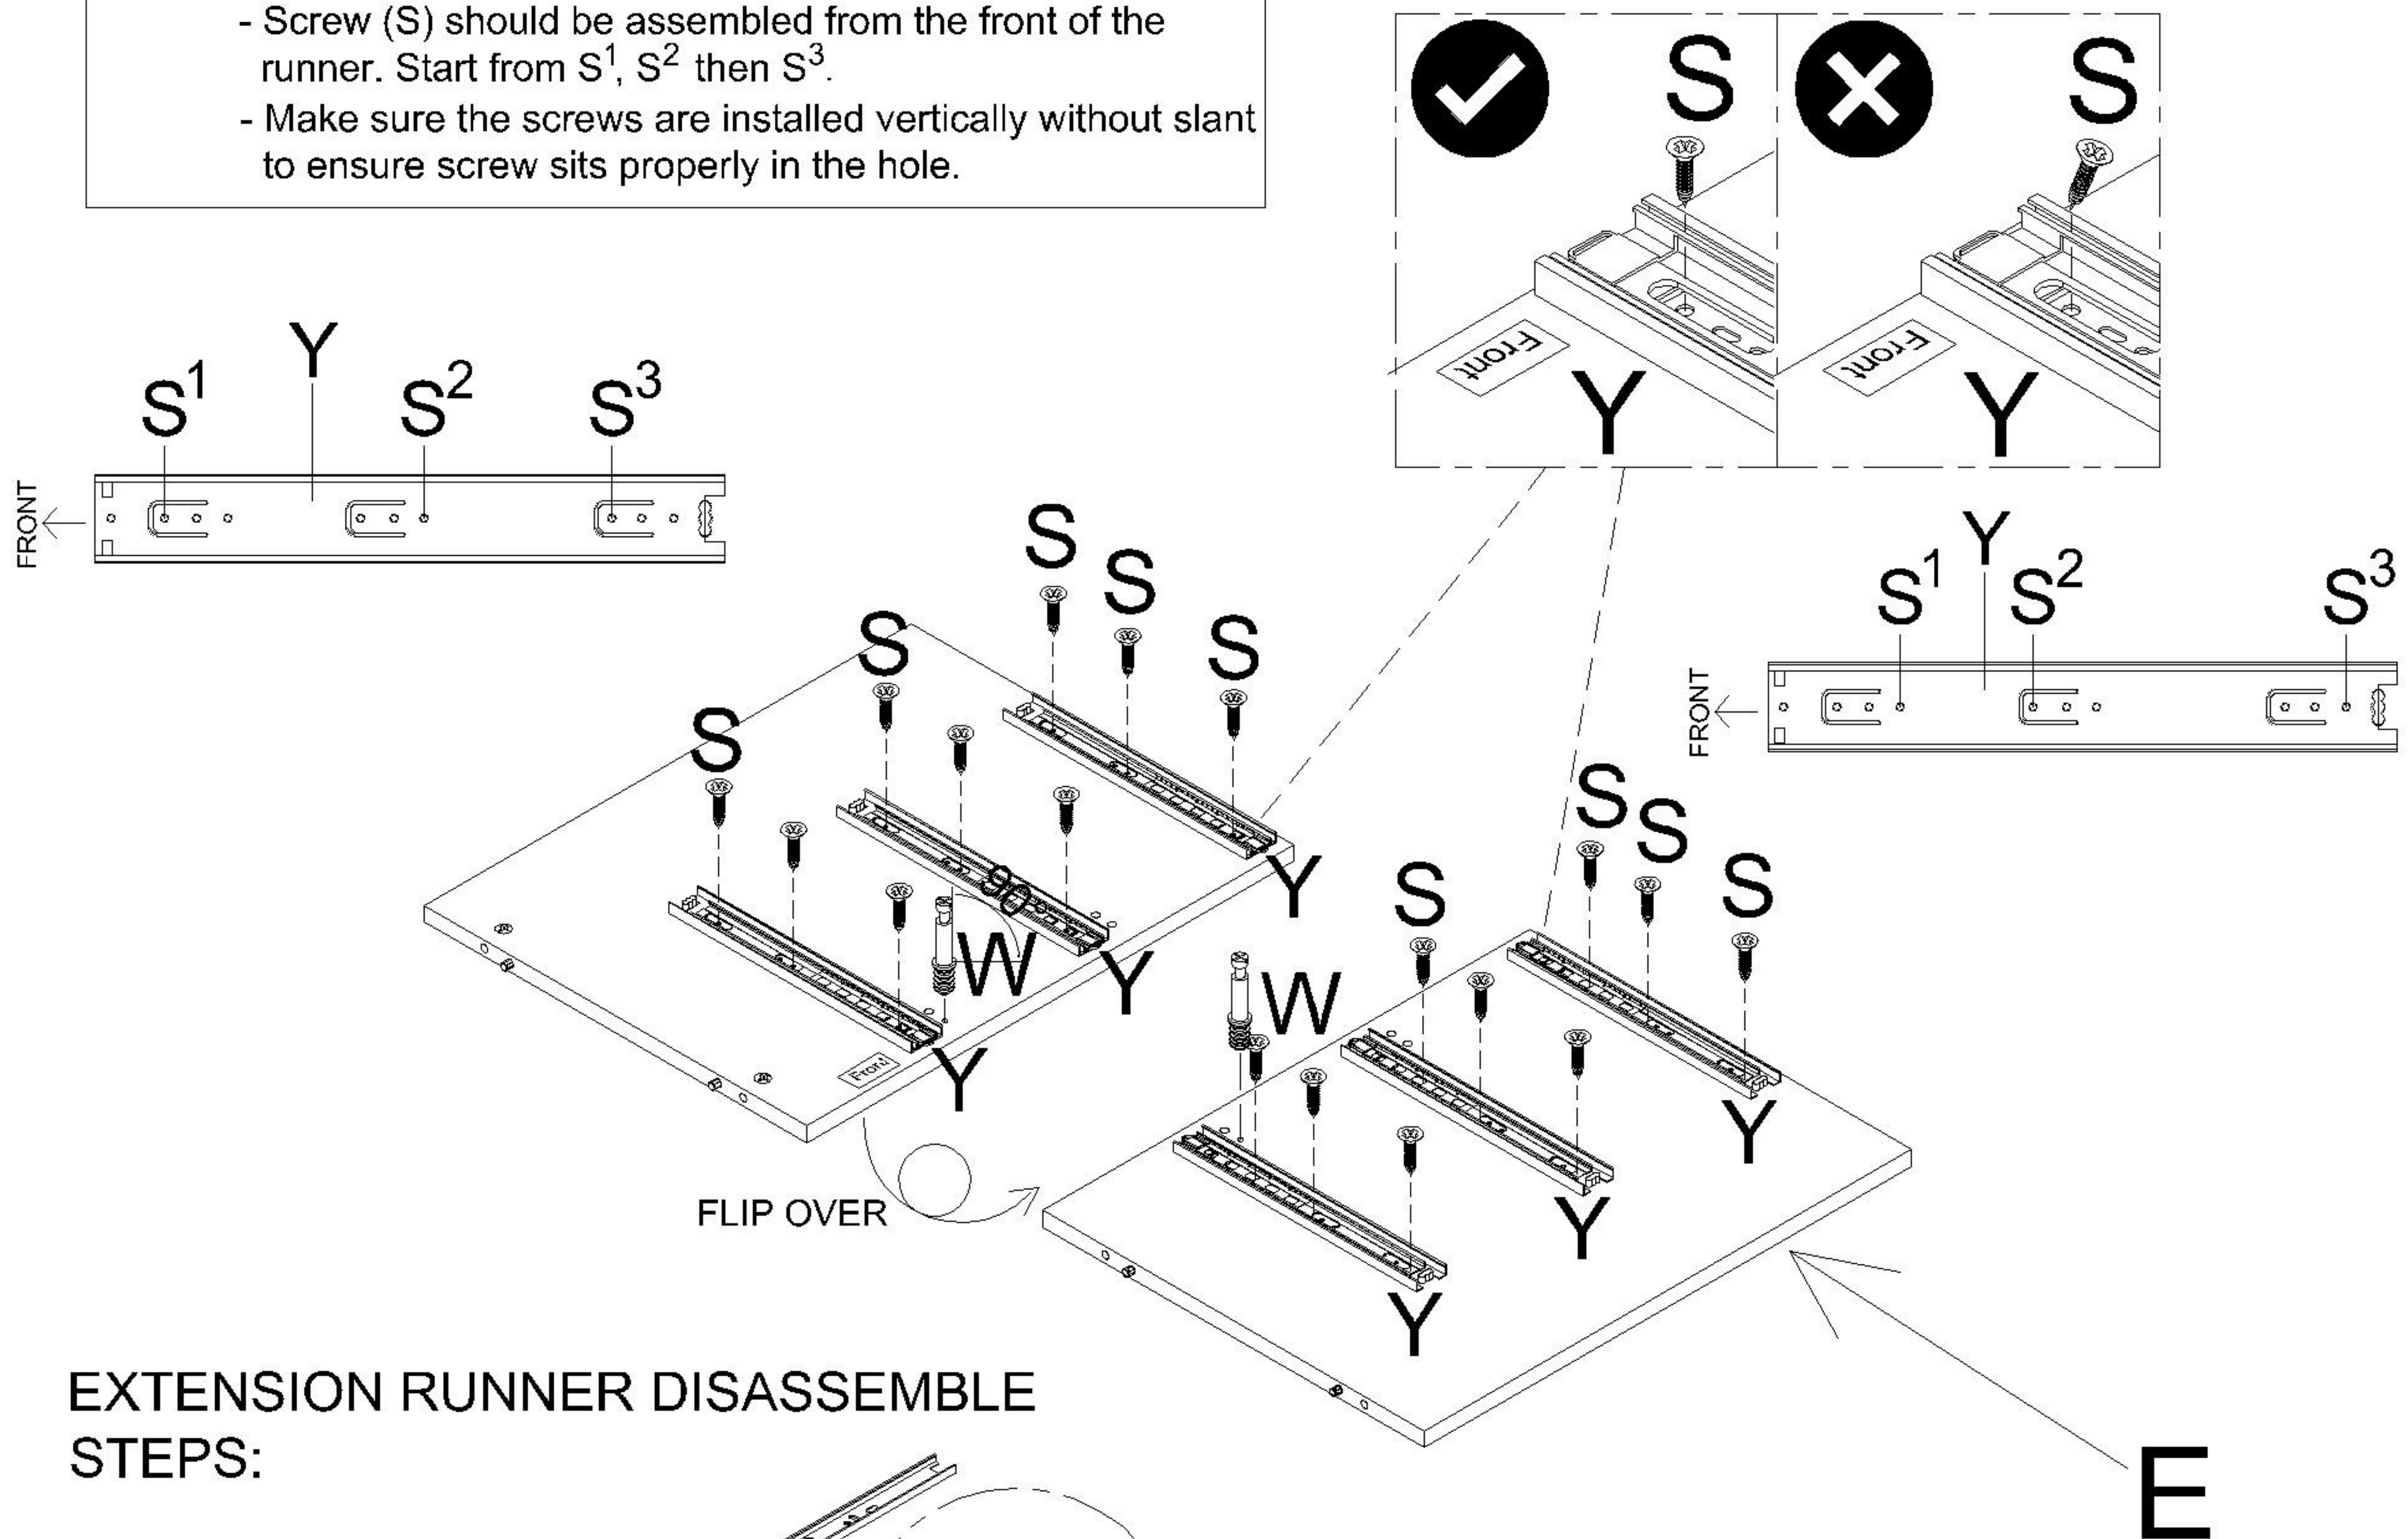

EXTENSION RUNNER DISASSEMBLE STEPS:

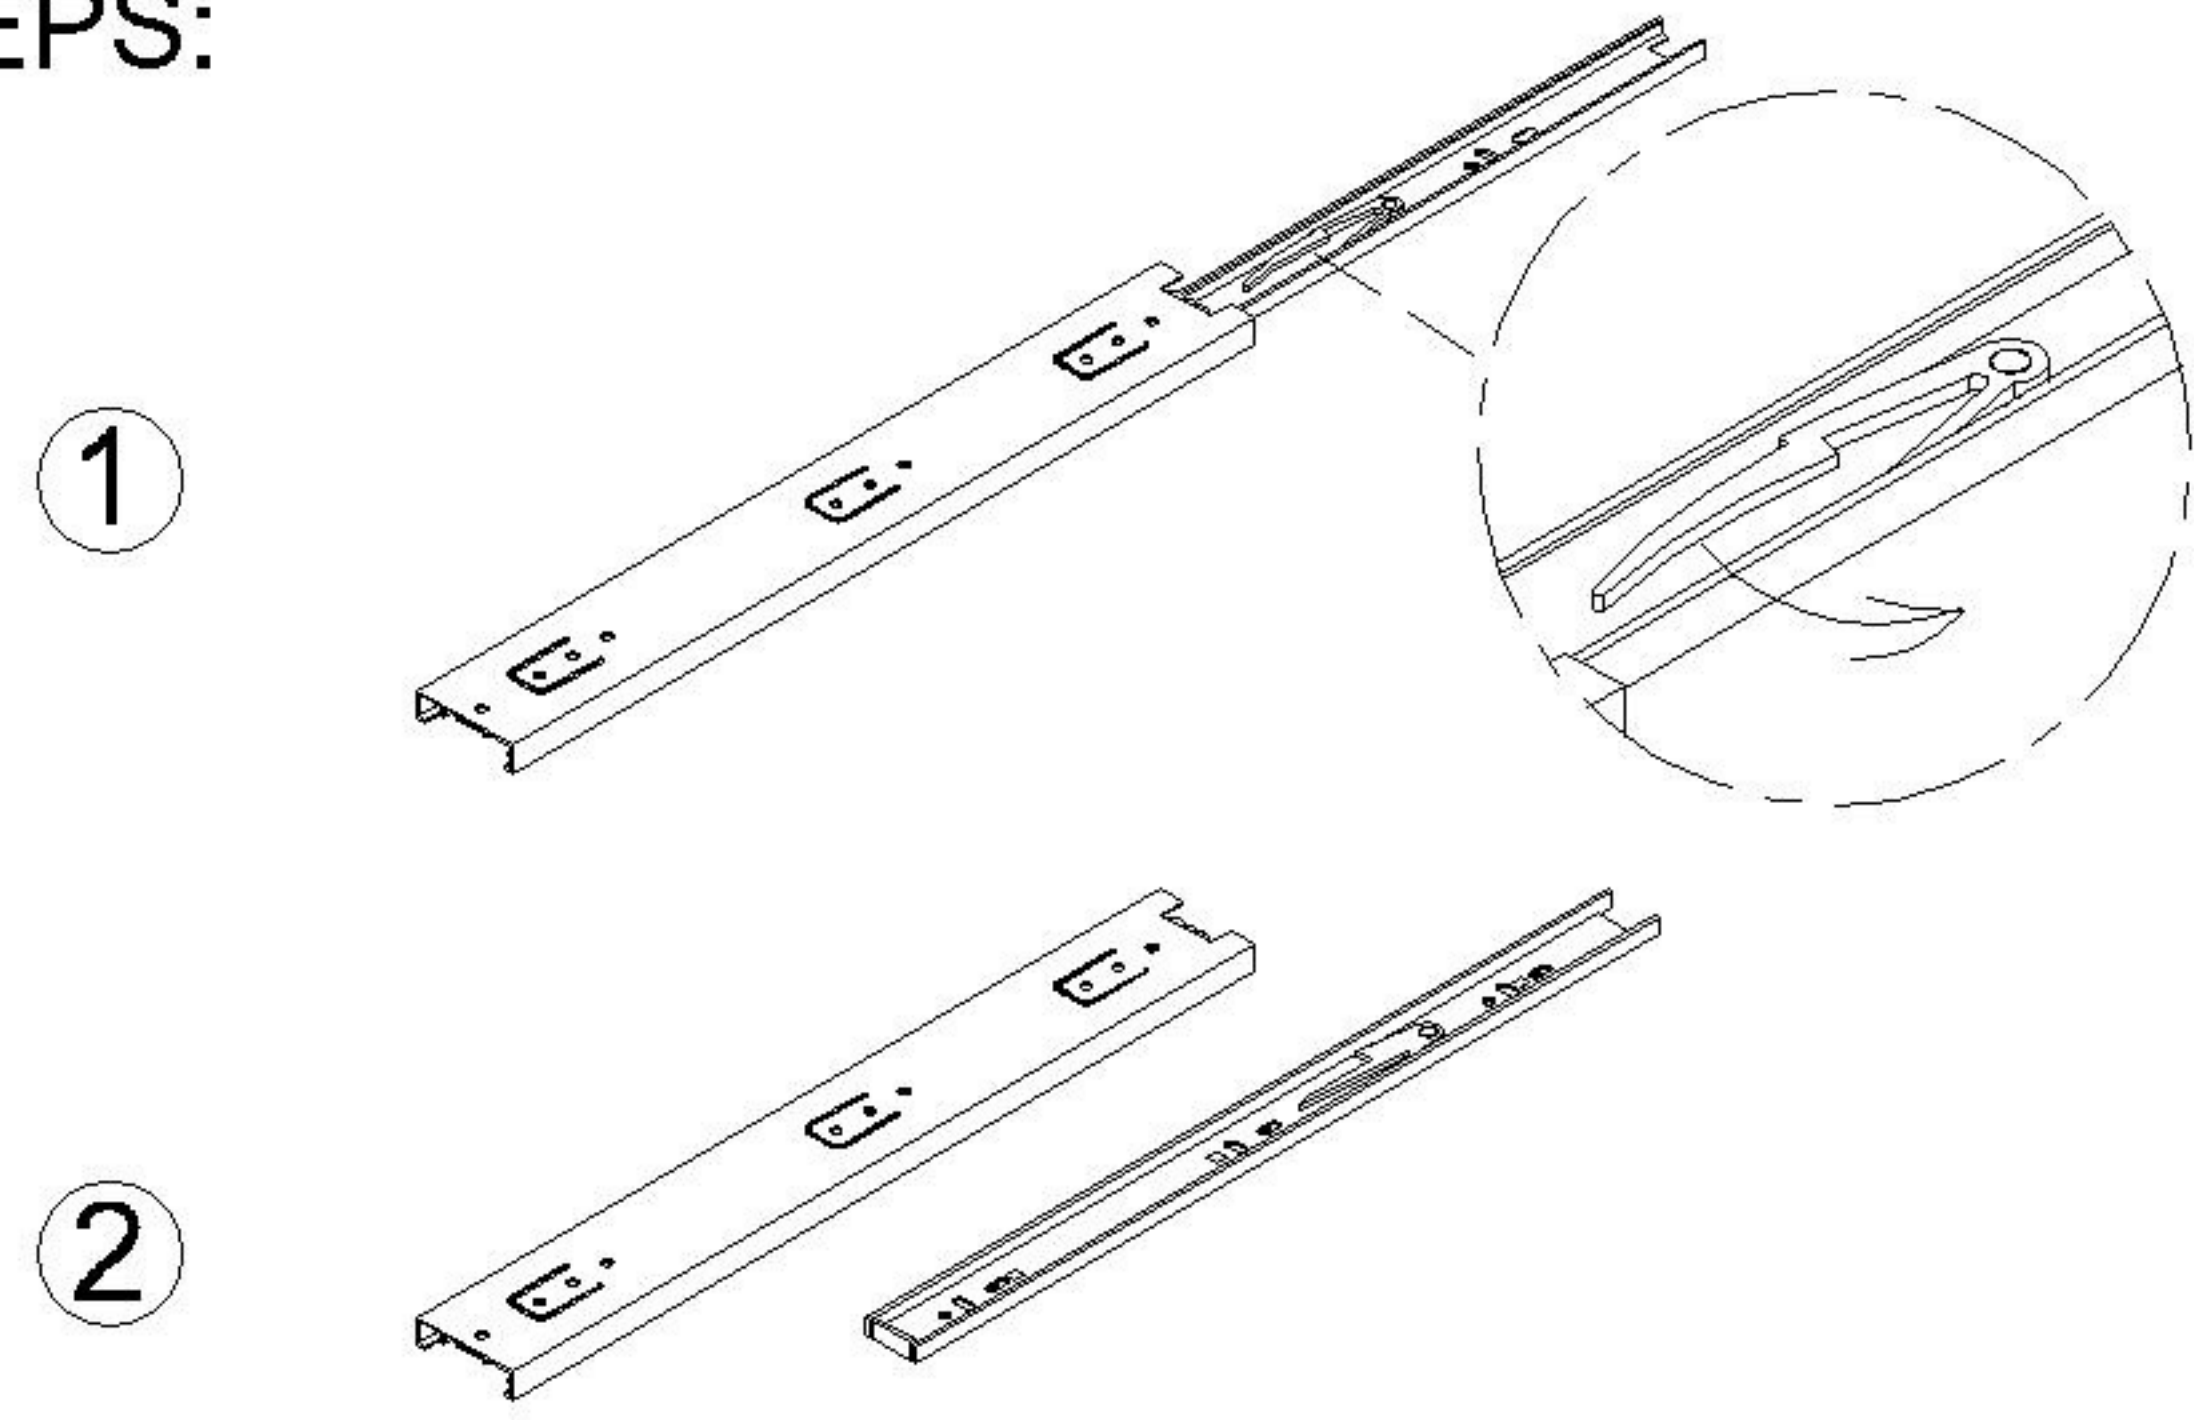 


Disassemble the Runner (Y) to 2 parts. Fix 1 part on the Partition (E) and fix the other part on the Left & Right Drawer Side (N & Q).

6


Attach Dowel (U) to both Top Bar (I) and Center Bar (J). Attach Cam Lock (V) to Top Bar (I).

 NOTE : - Make sure arrows on each Cam Lock (V) points towards nearest edge with holes.

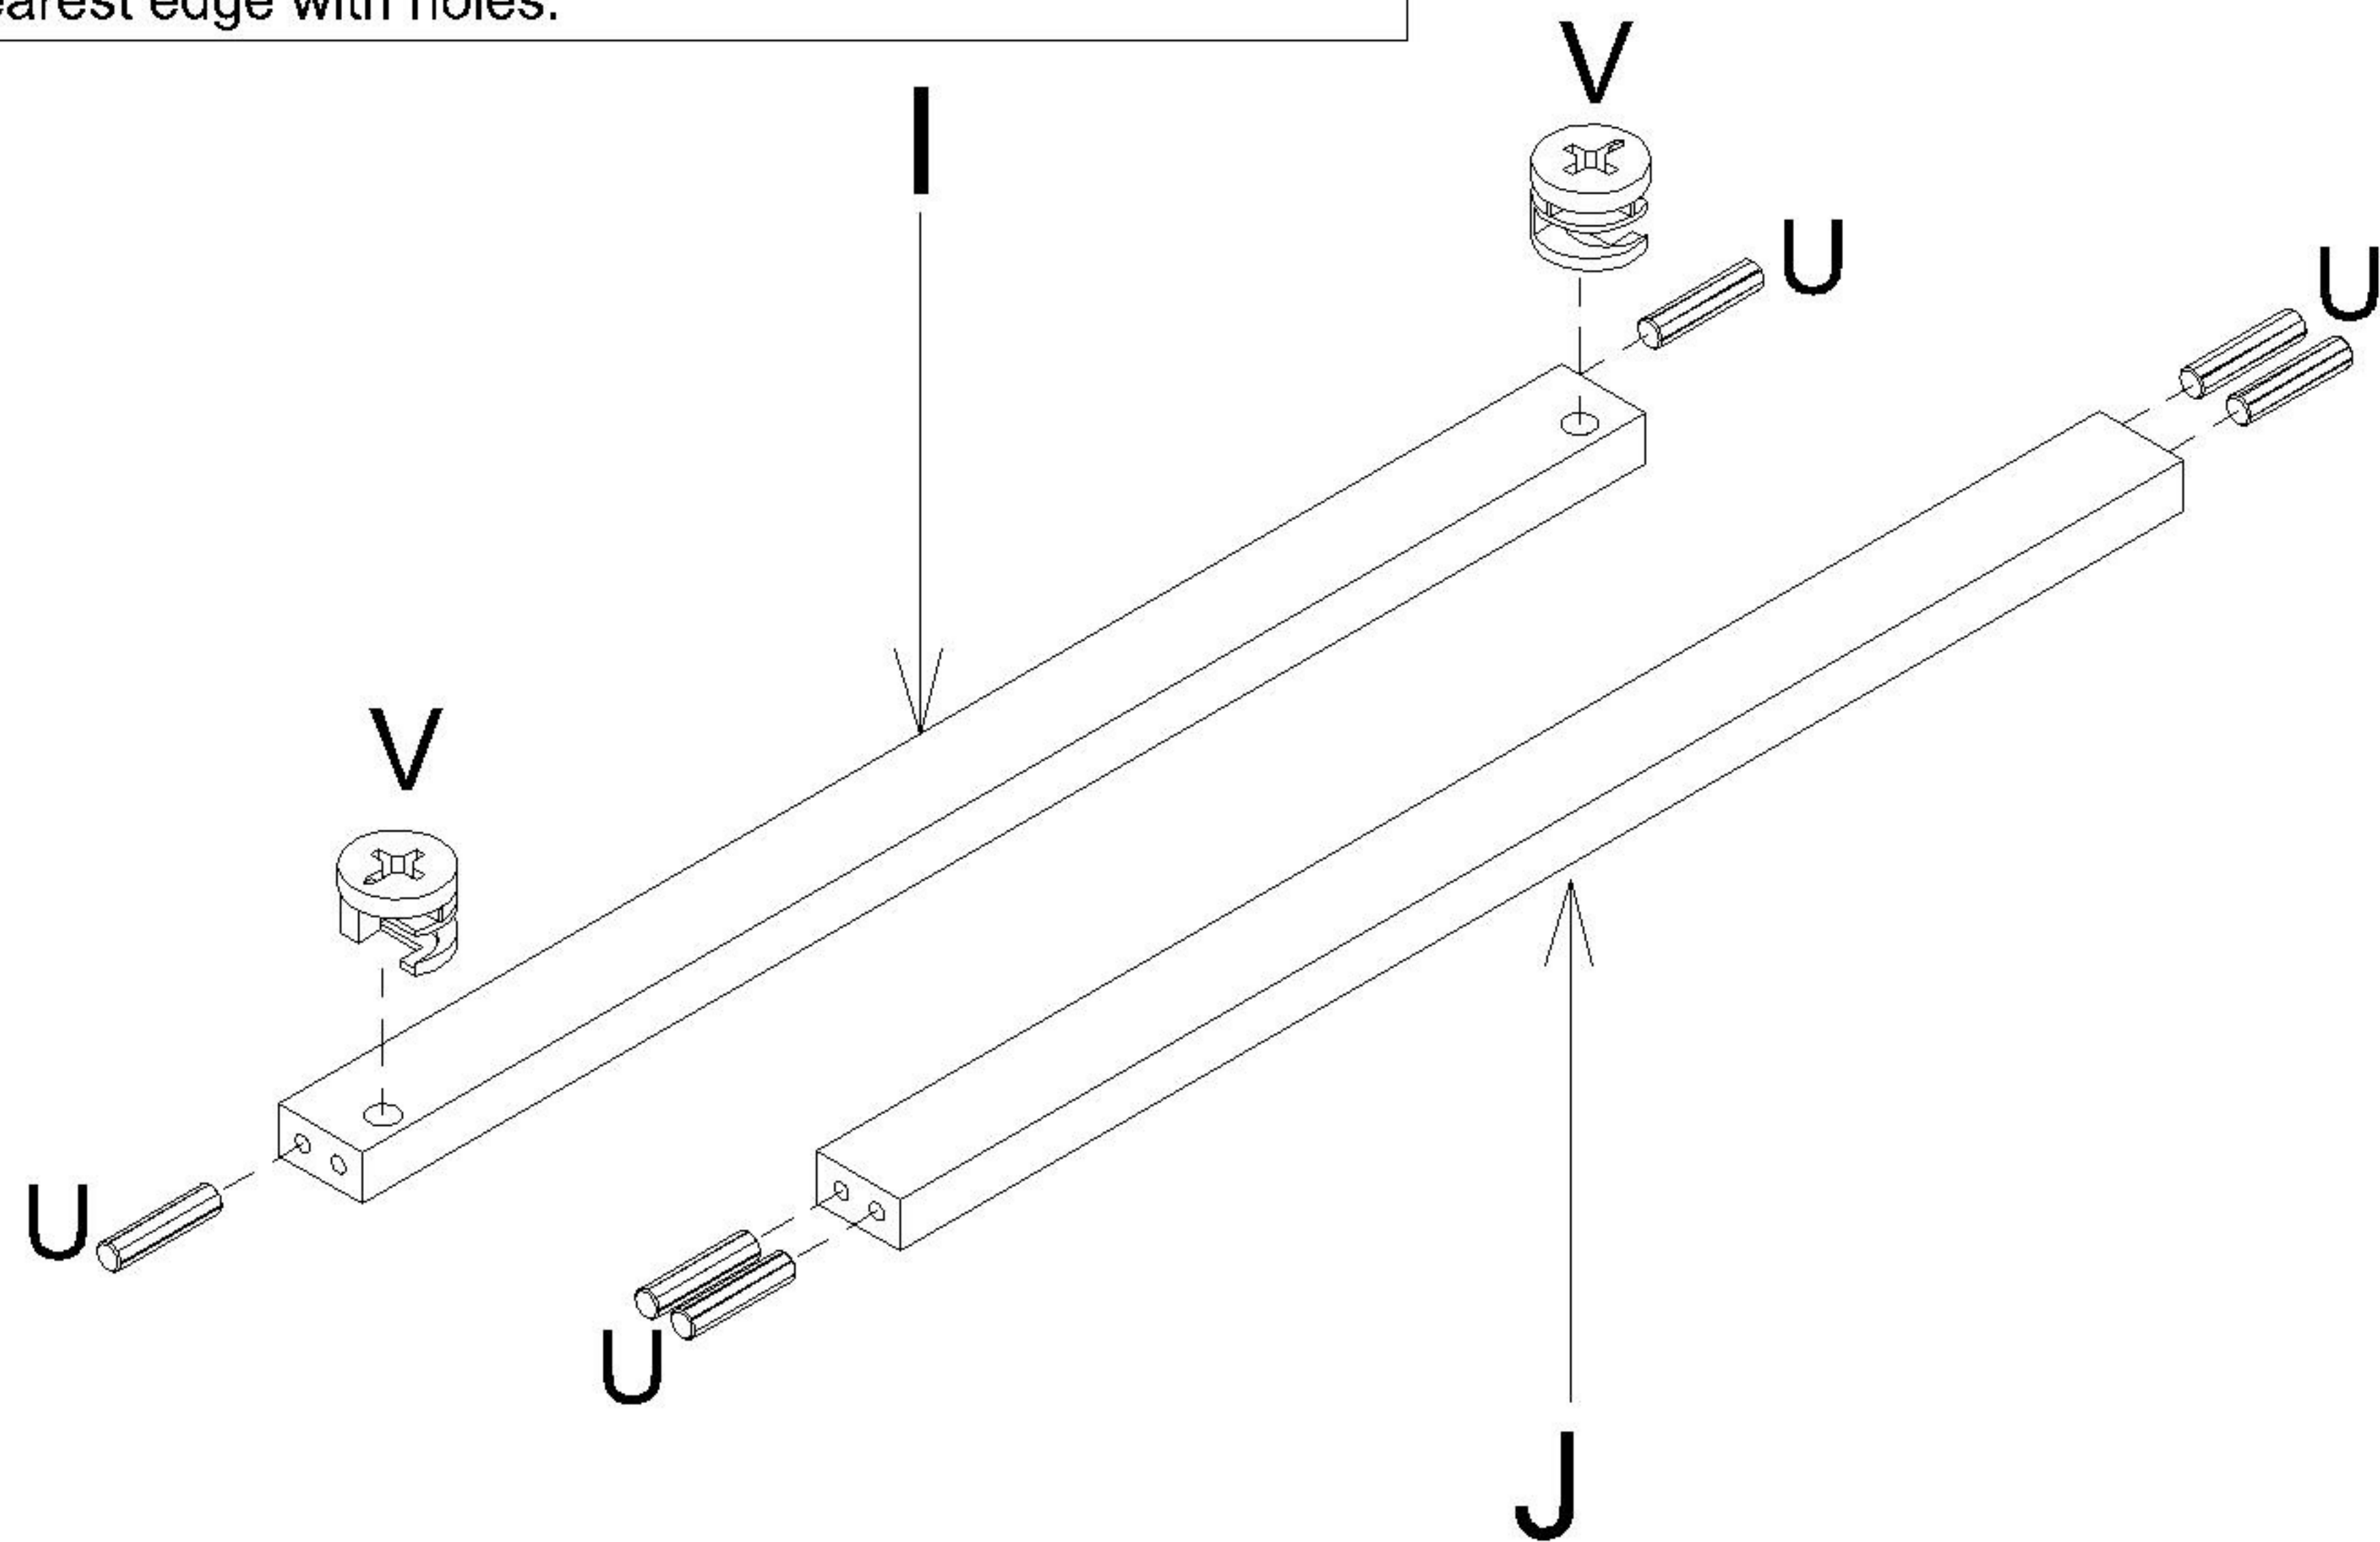


7 Attach Dowel (U) to Left & Right Bottom Leg (F & G) and Back Bottom Leg (H). Attach Cam Bolt (W) to Left & Right Bottom Leg (F & G). Attach Cam Lock (V) to Back Bottom Leg (H).

 NOTE : - Make sure arrows on each Cam Lock (V) points towards nearest edge with holes.

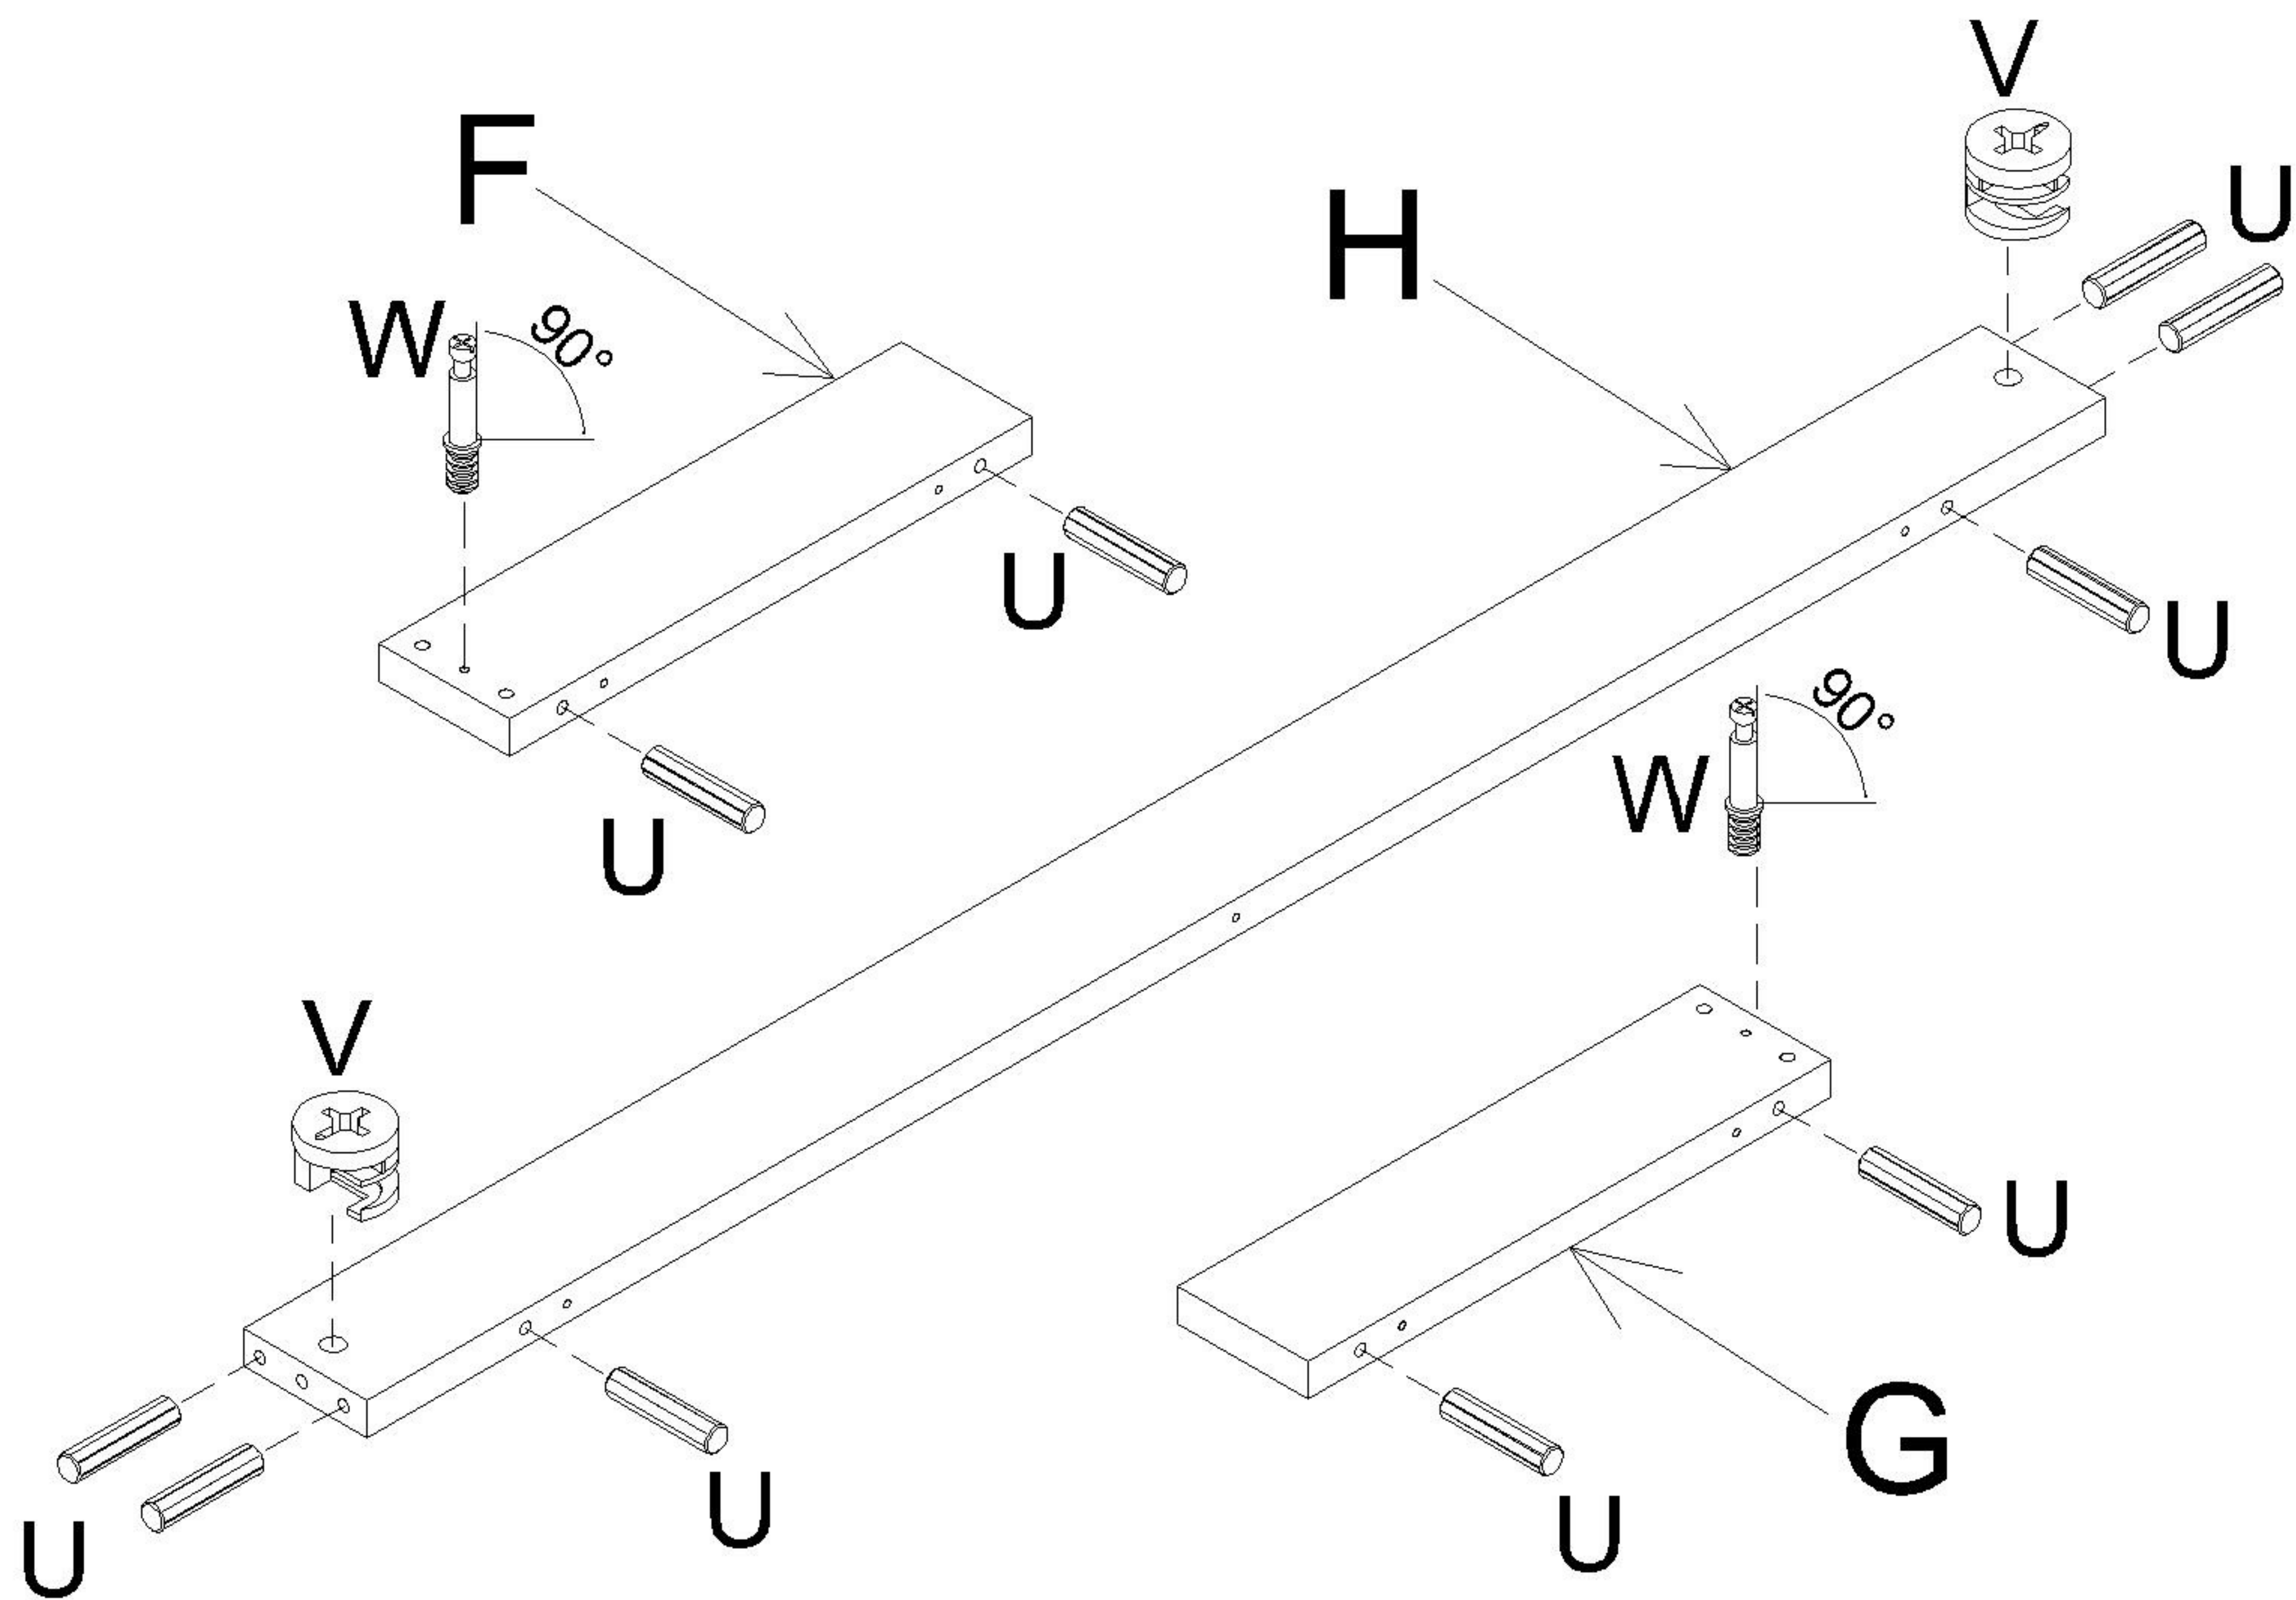

8 Attach Left & Right Bottom Leg (F & G) to Back Bottom Leg (H) and secure with the Cam Lock (V) attached in previous step. Cover Cam Lock (V) with Cam Lock Cover (Z).

 
NOTE : - Do not over tighten the Cam Lock (V).

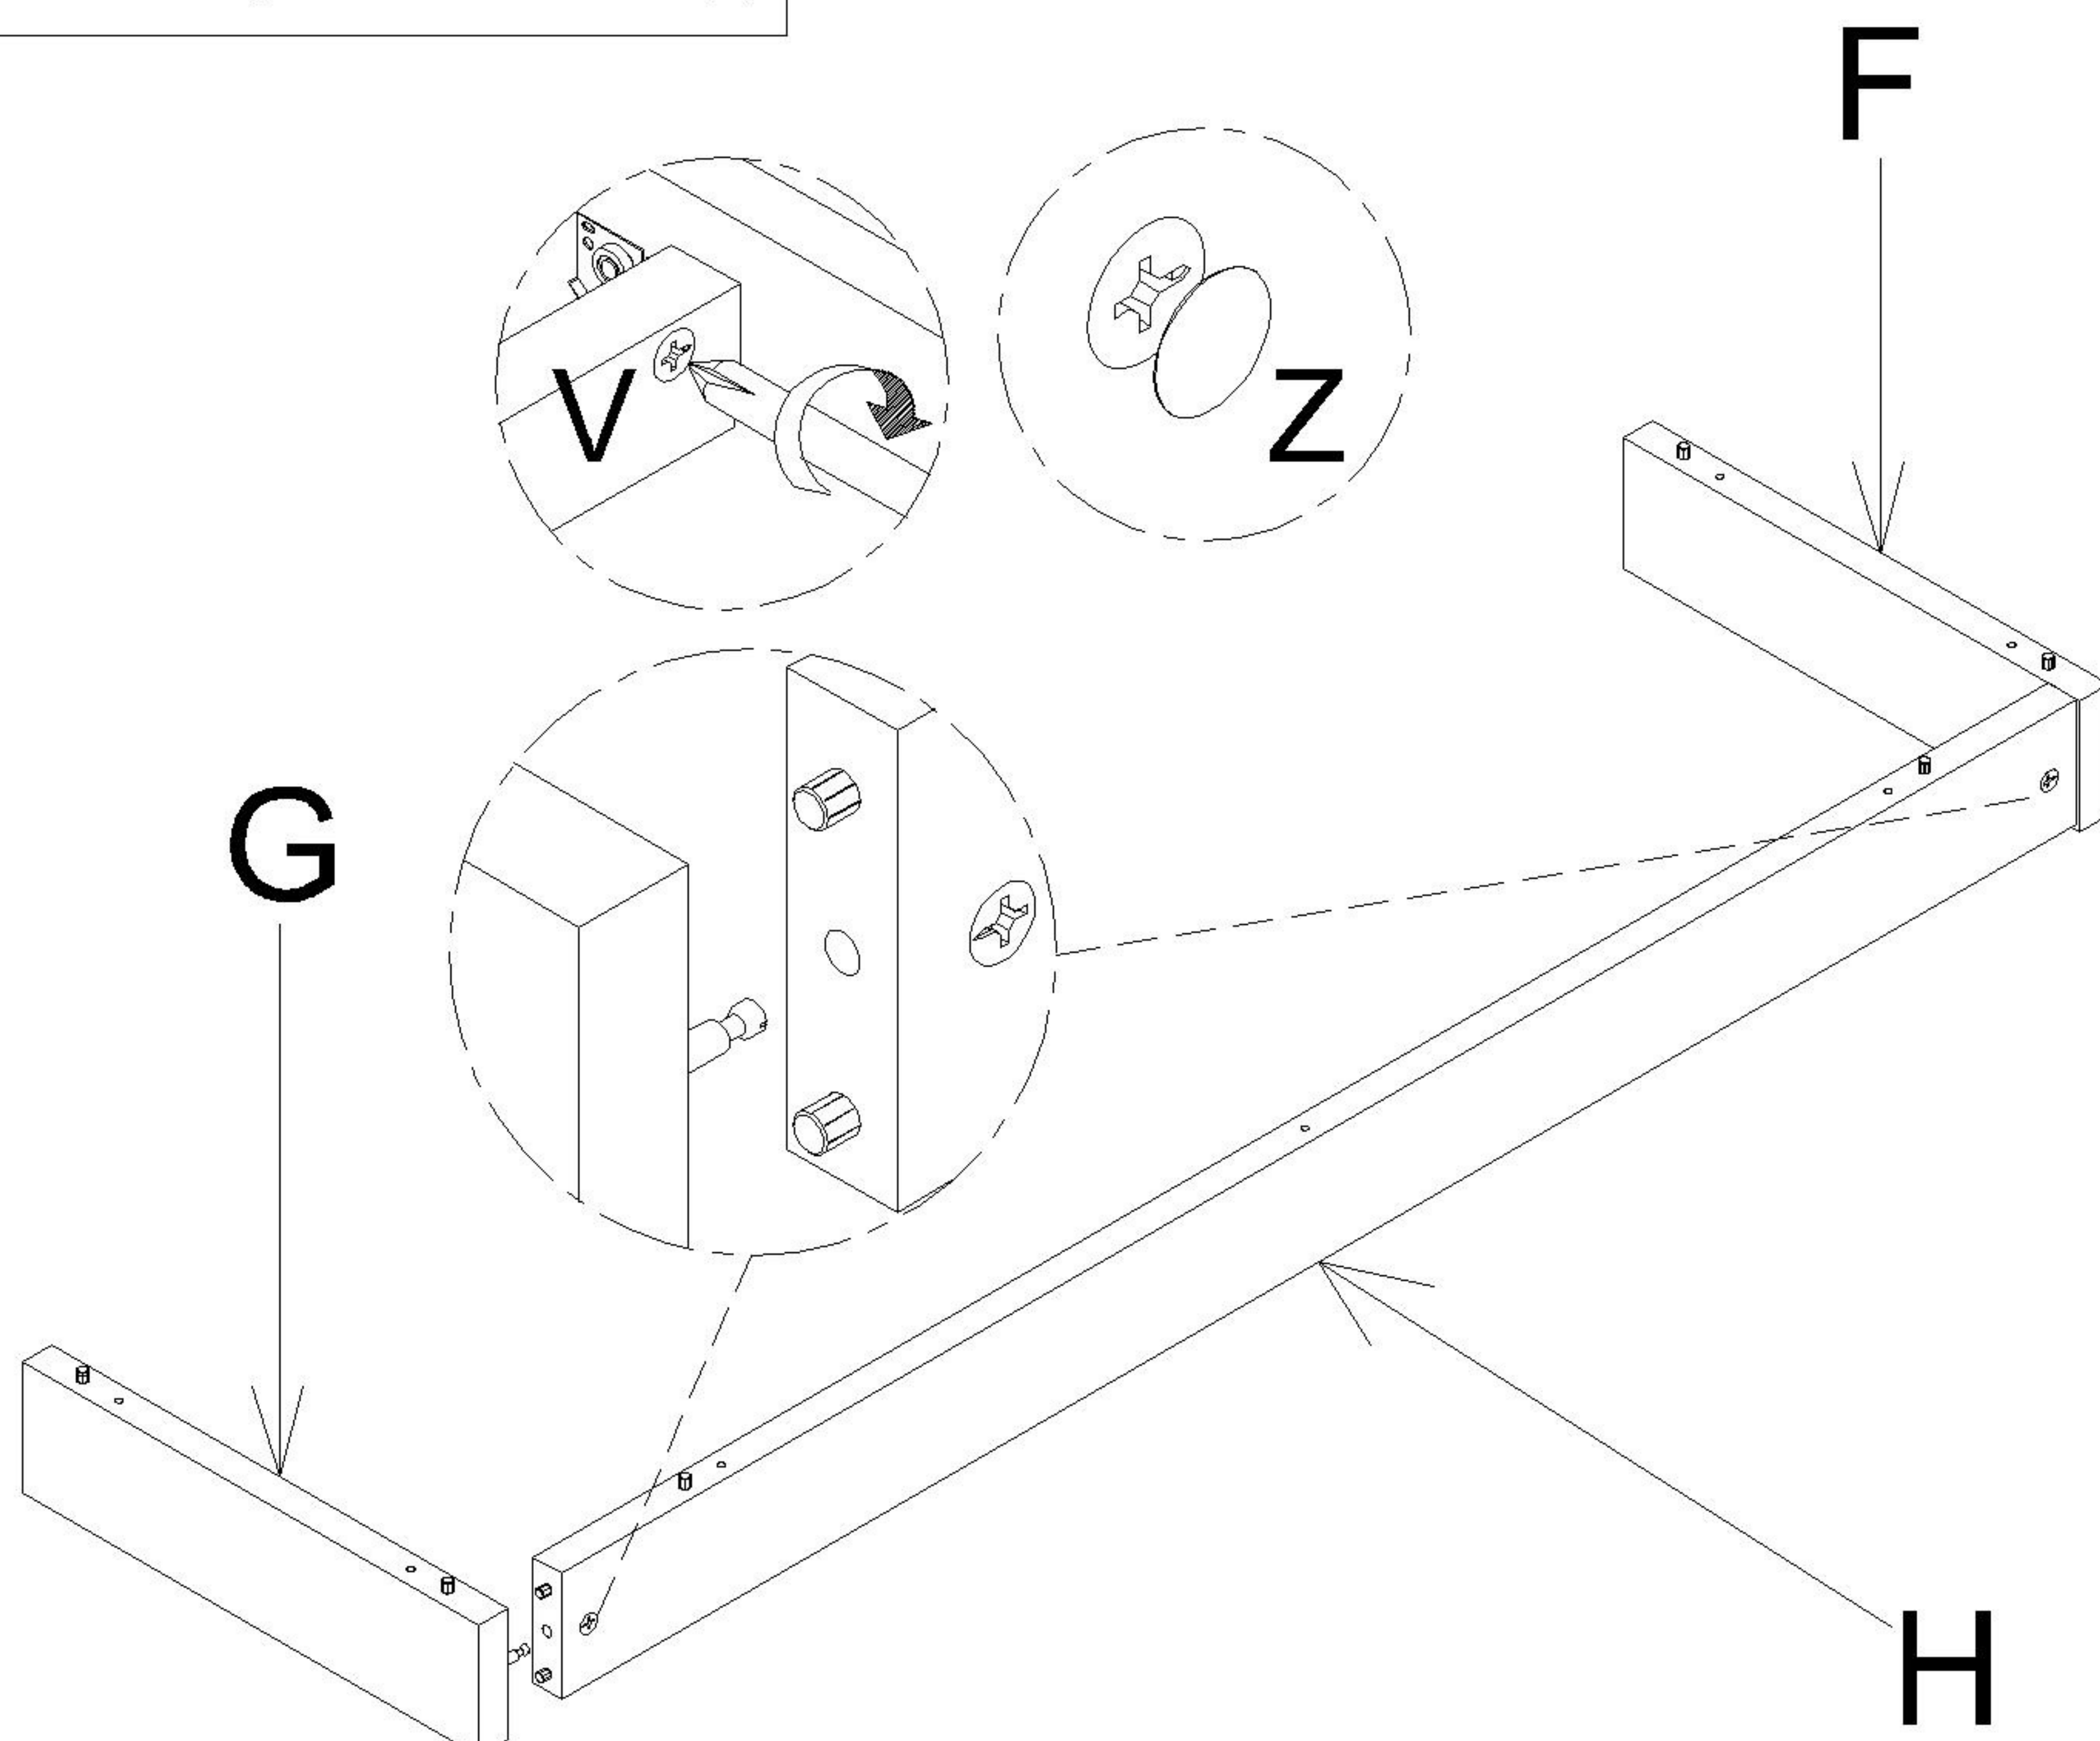

9

Turn over the assembled leg, attach to Bottom Frame (D) and secure with Screw (T).

 
NOTE : - Do not over tighten the Screw (T).

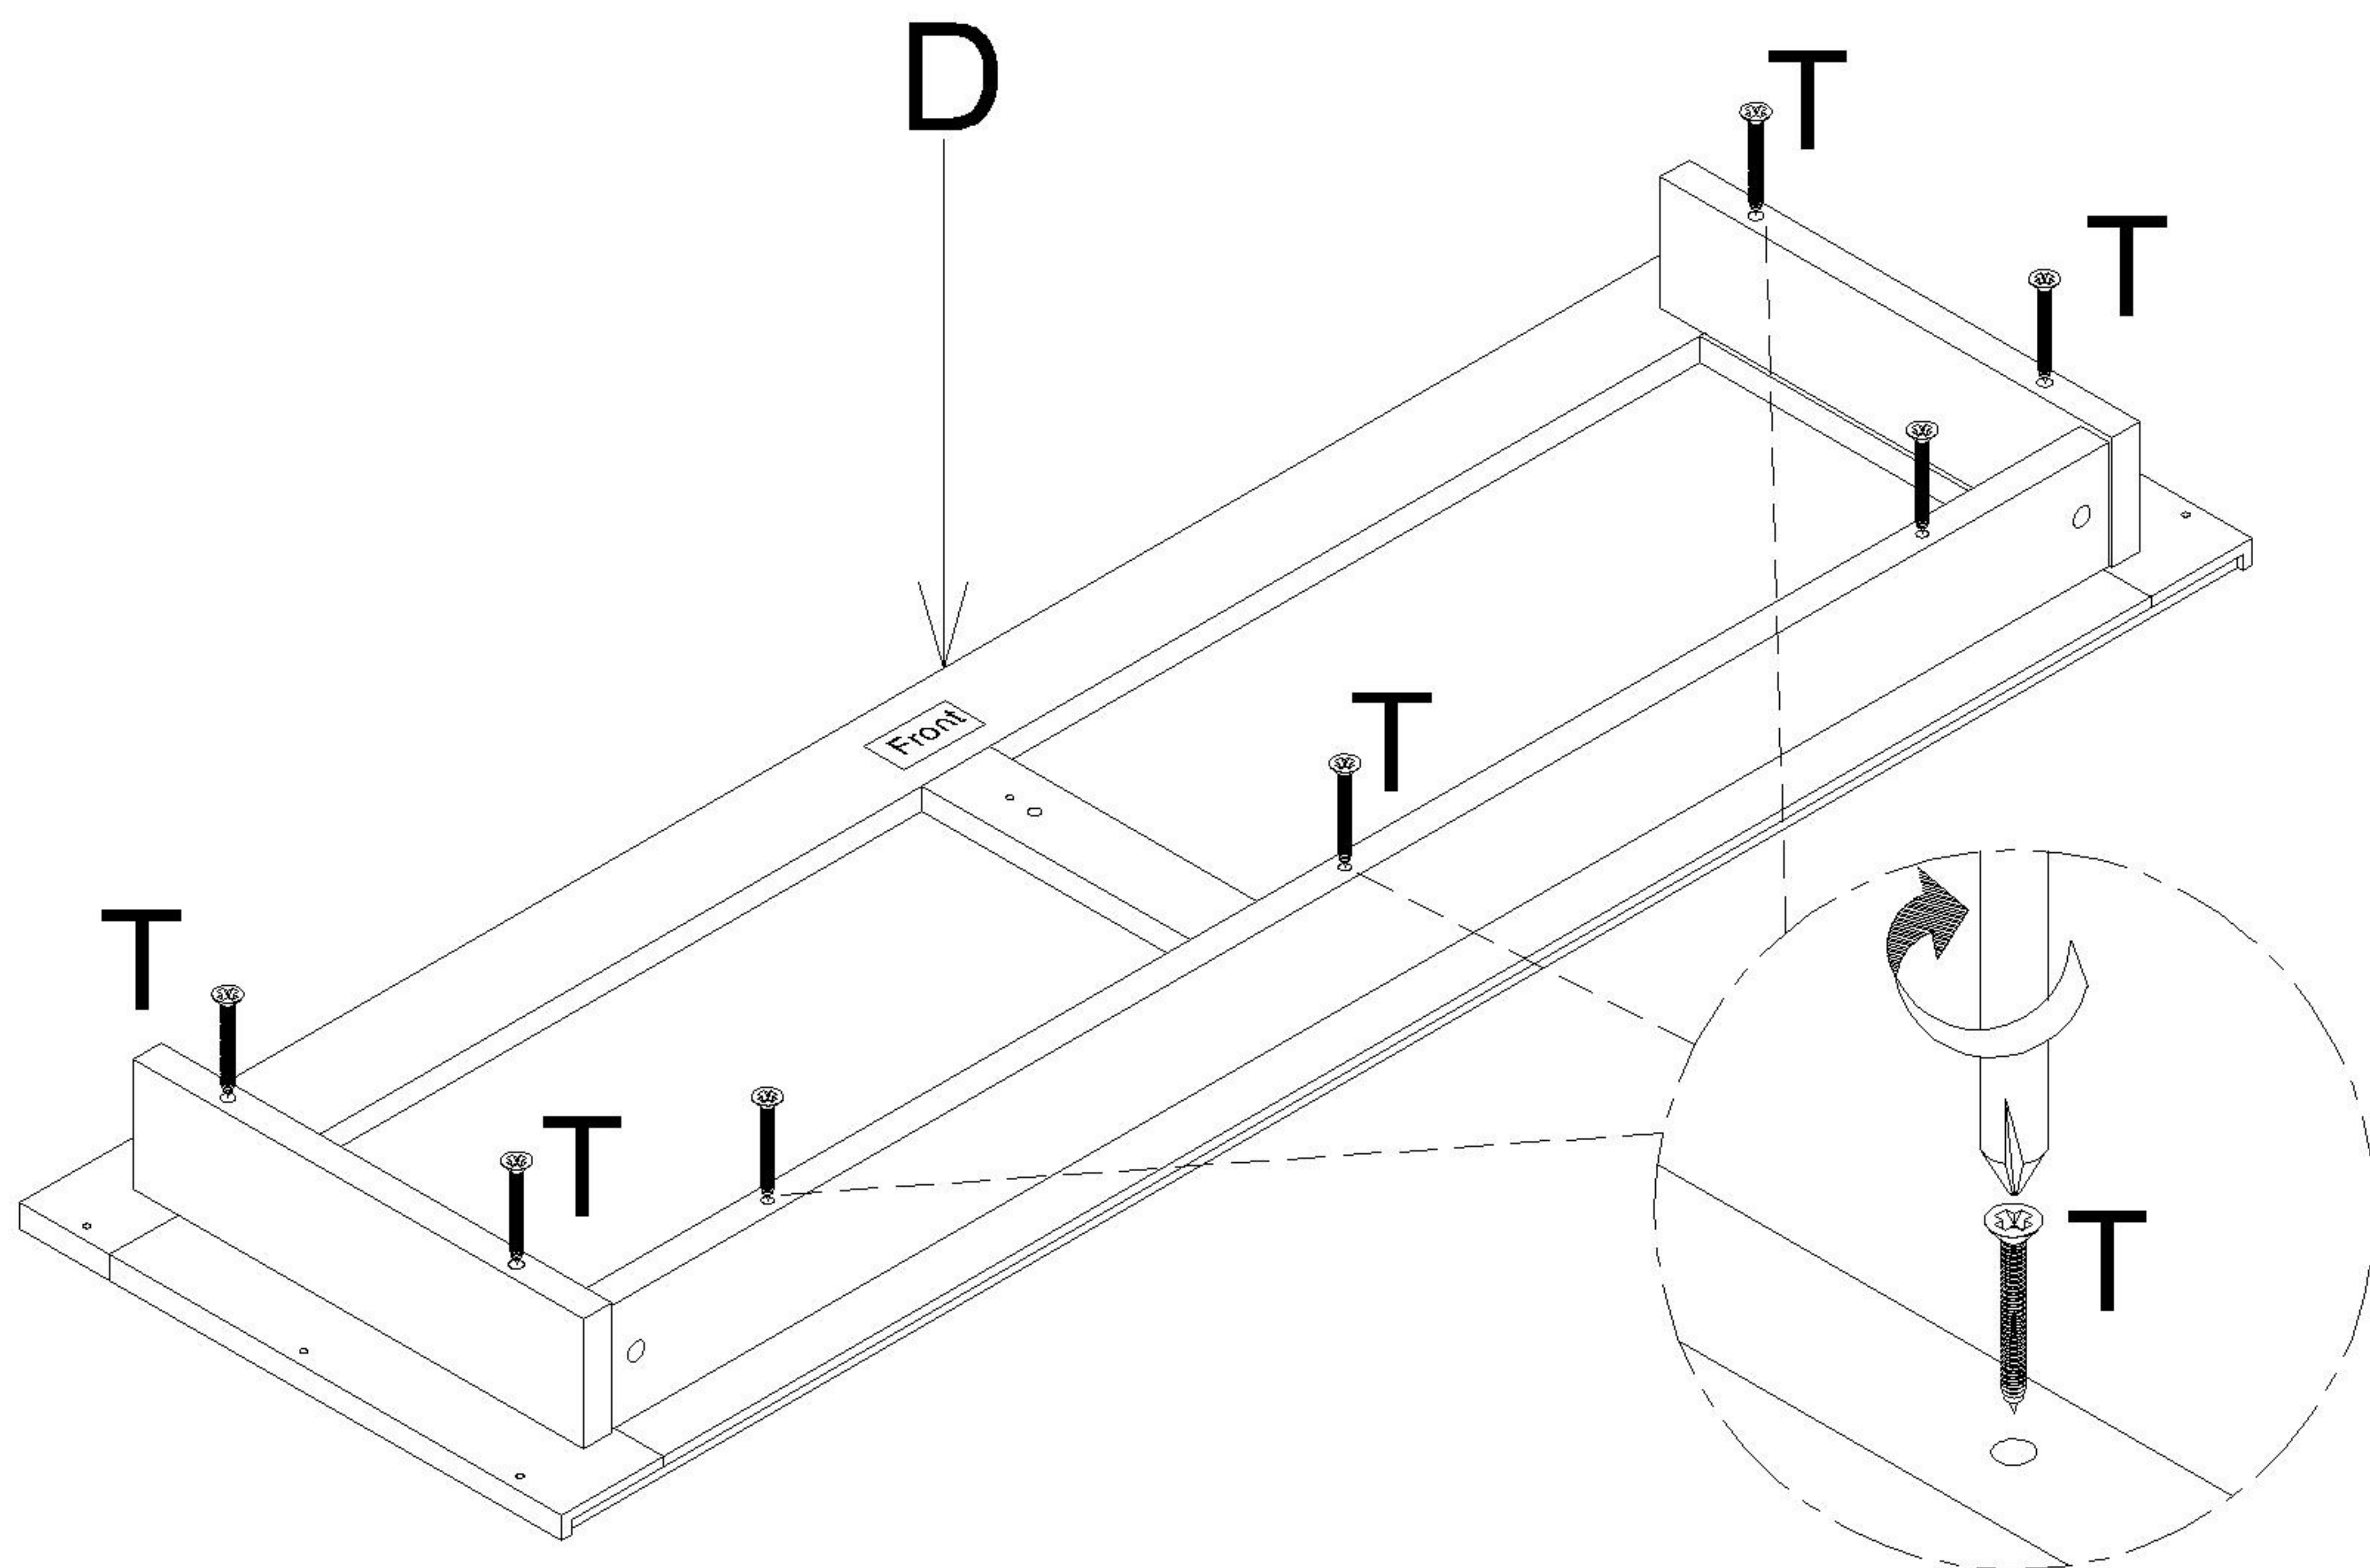

10


Attach Top Bar (I) & Center Bar (J) to Left & Right Side Panel (B & C) and secure with the Cam Lock (V) attached in the Step 6. Cover Cam Lock (V) with Cam Lock Cover (Z).

 NOTE : - Do not over tighten the Cam Lock (V).

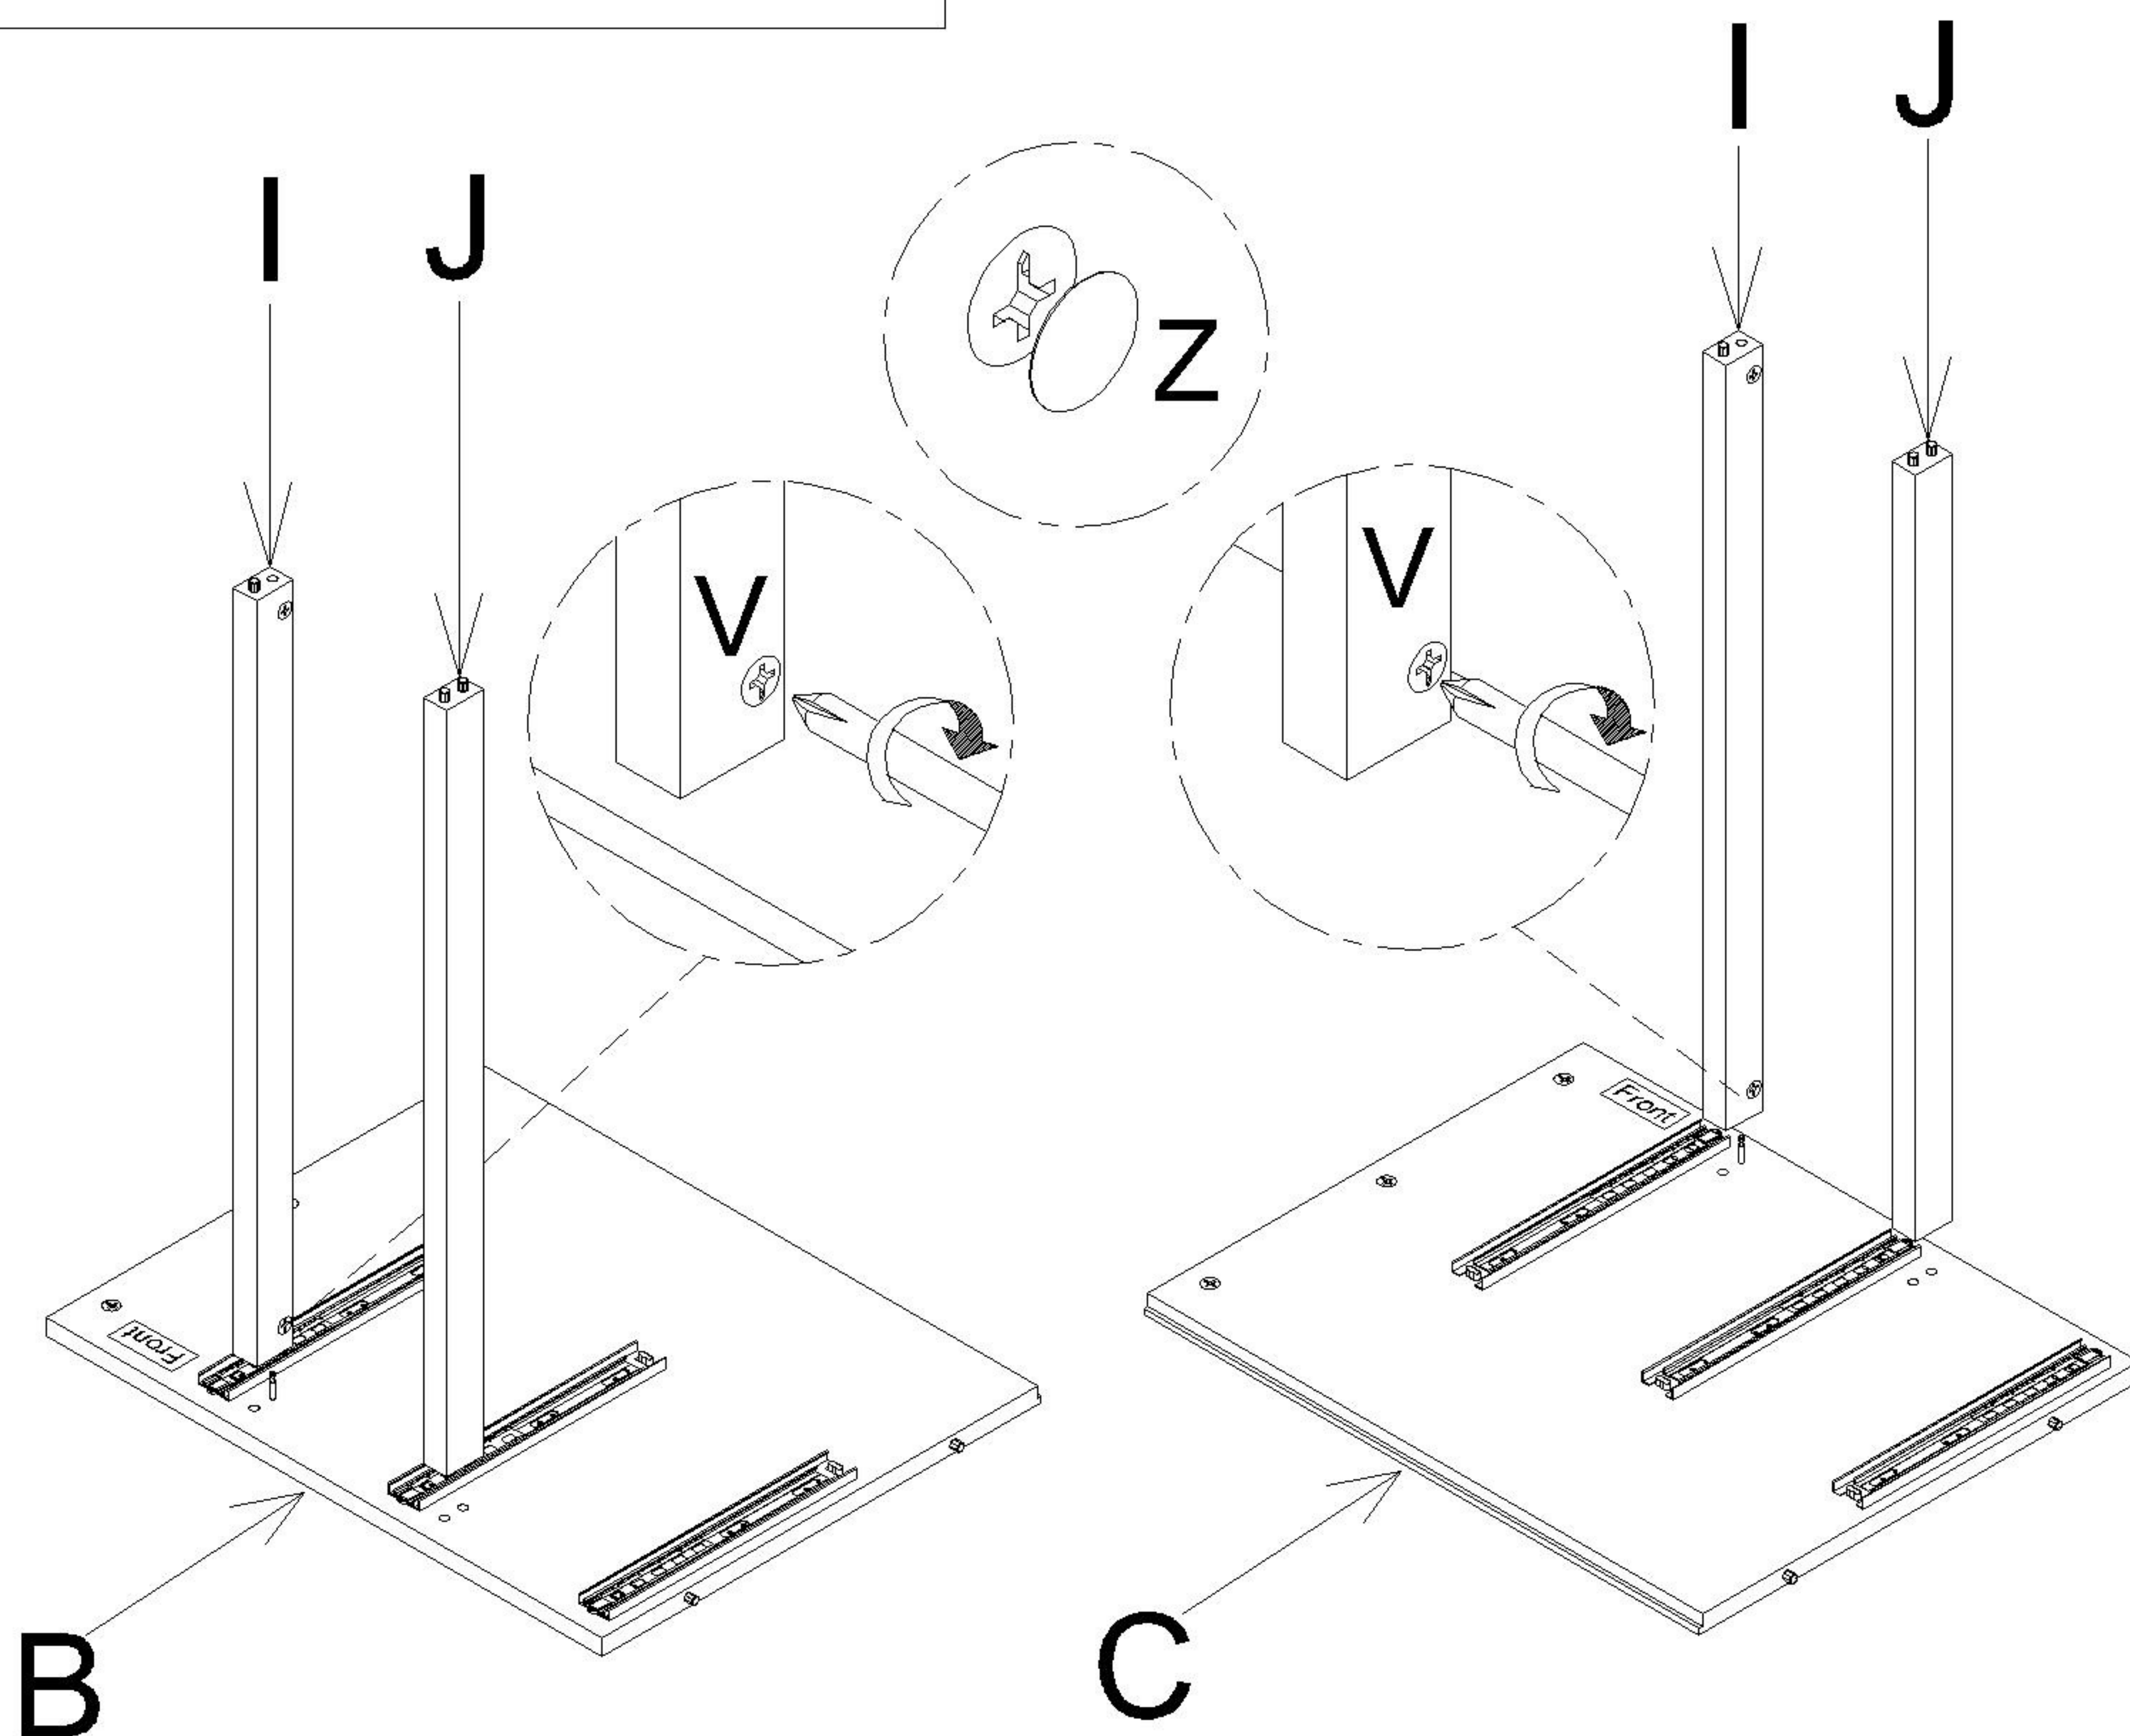


11 Attach Partition (E) to Top Bar (I) & Center Bar (J) and secure with the Cam Lock (V) attached in the Step 6. Cover Cam Lock (V) with Cam Lock Cover (Z).

 NOTE : - Do not over tighten the Cam Lock (V).

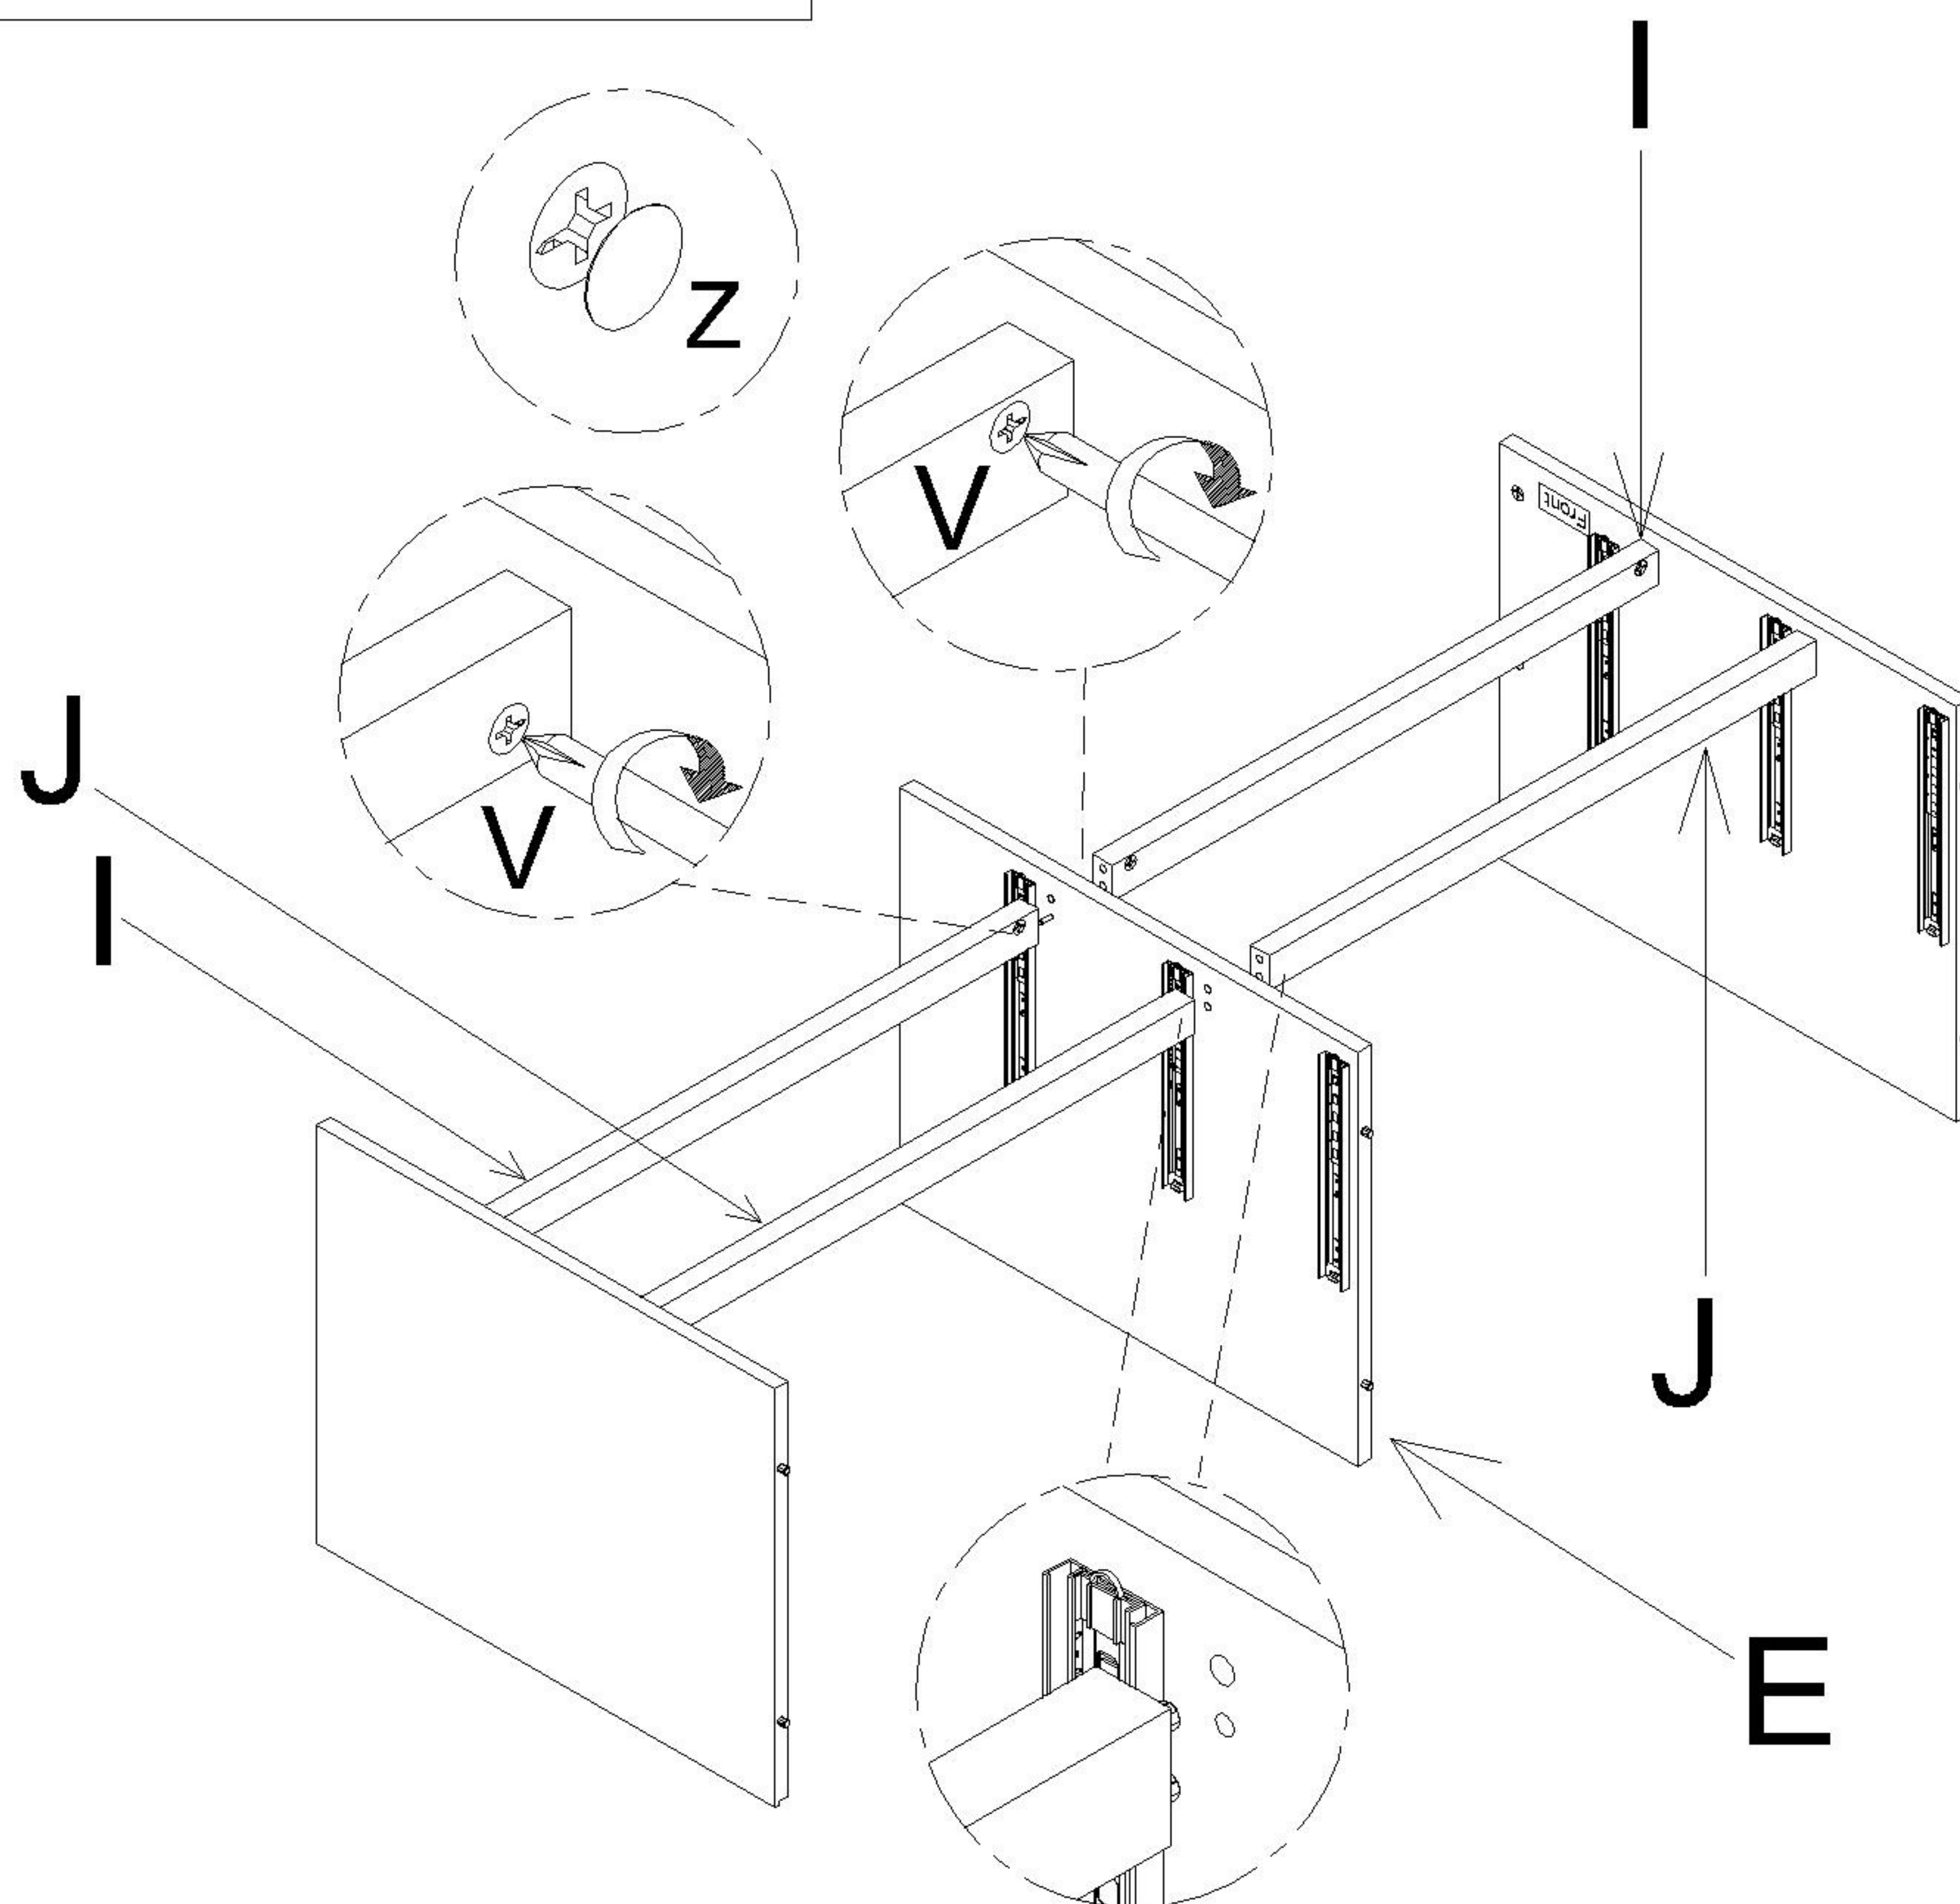


12 Attach Bottom Frame (D) to underneath of Left & Right Side Panel (B & C) and secure with Screw (T). Attach Support Stand (K) to Bottom Frame (D) and turn clockwise to secure.

 NOTE : - Do not over tighten the Screw (T).

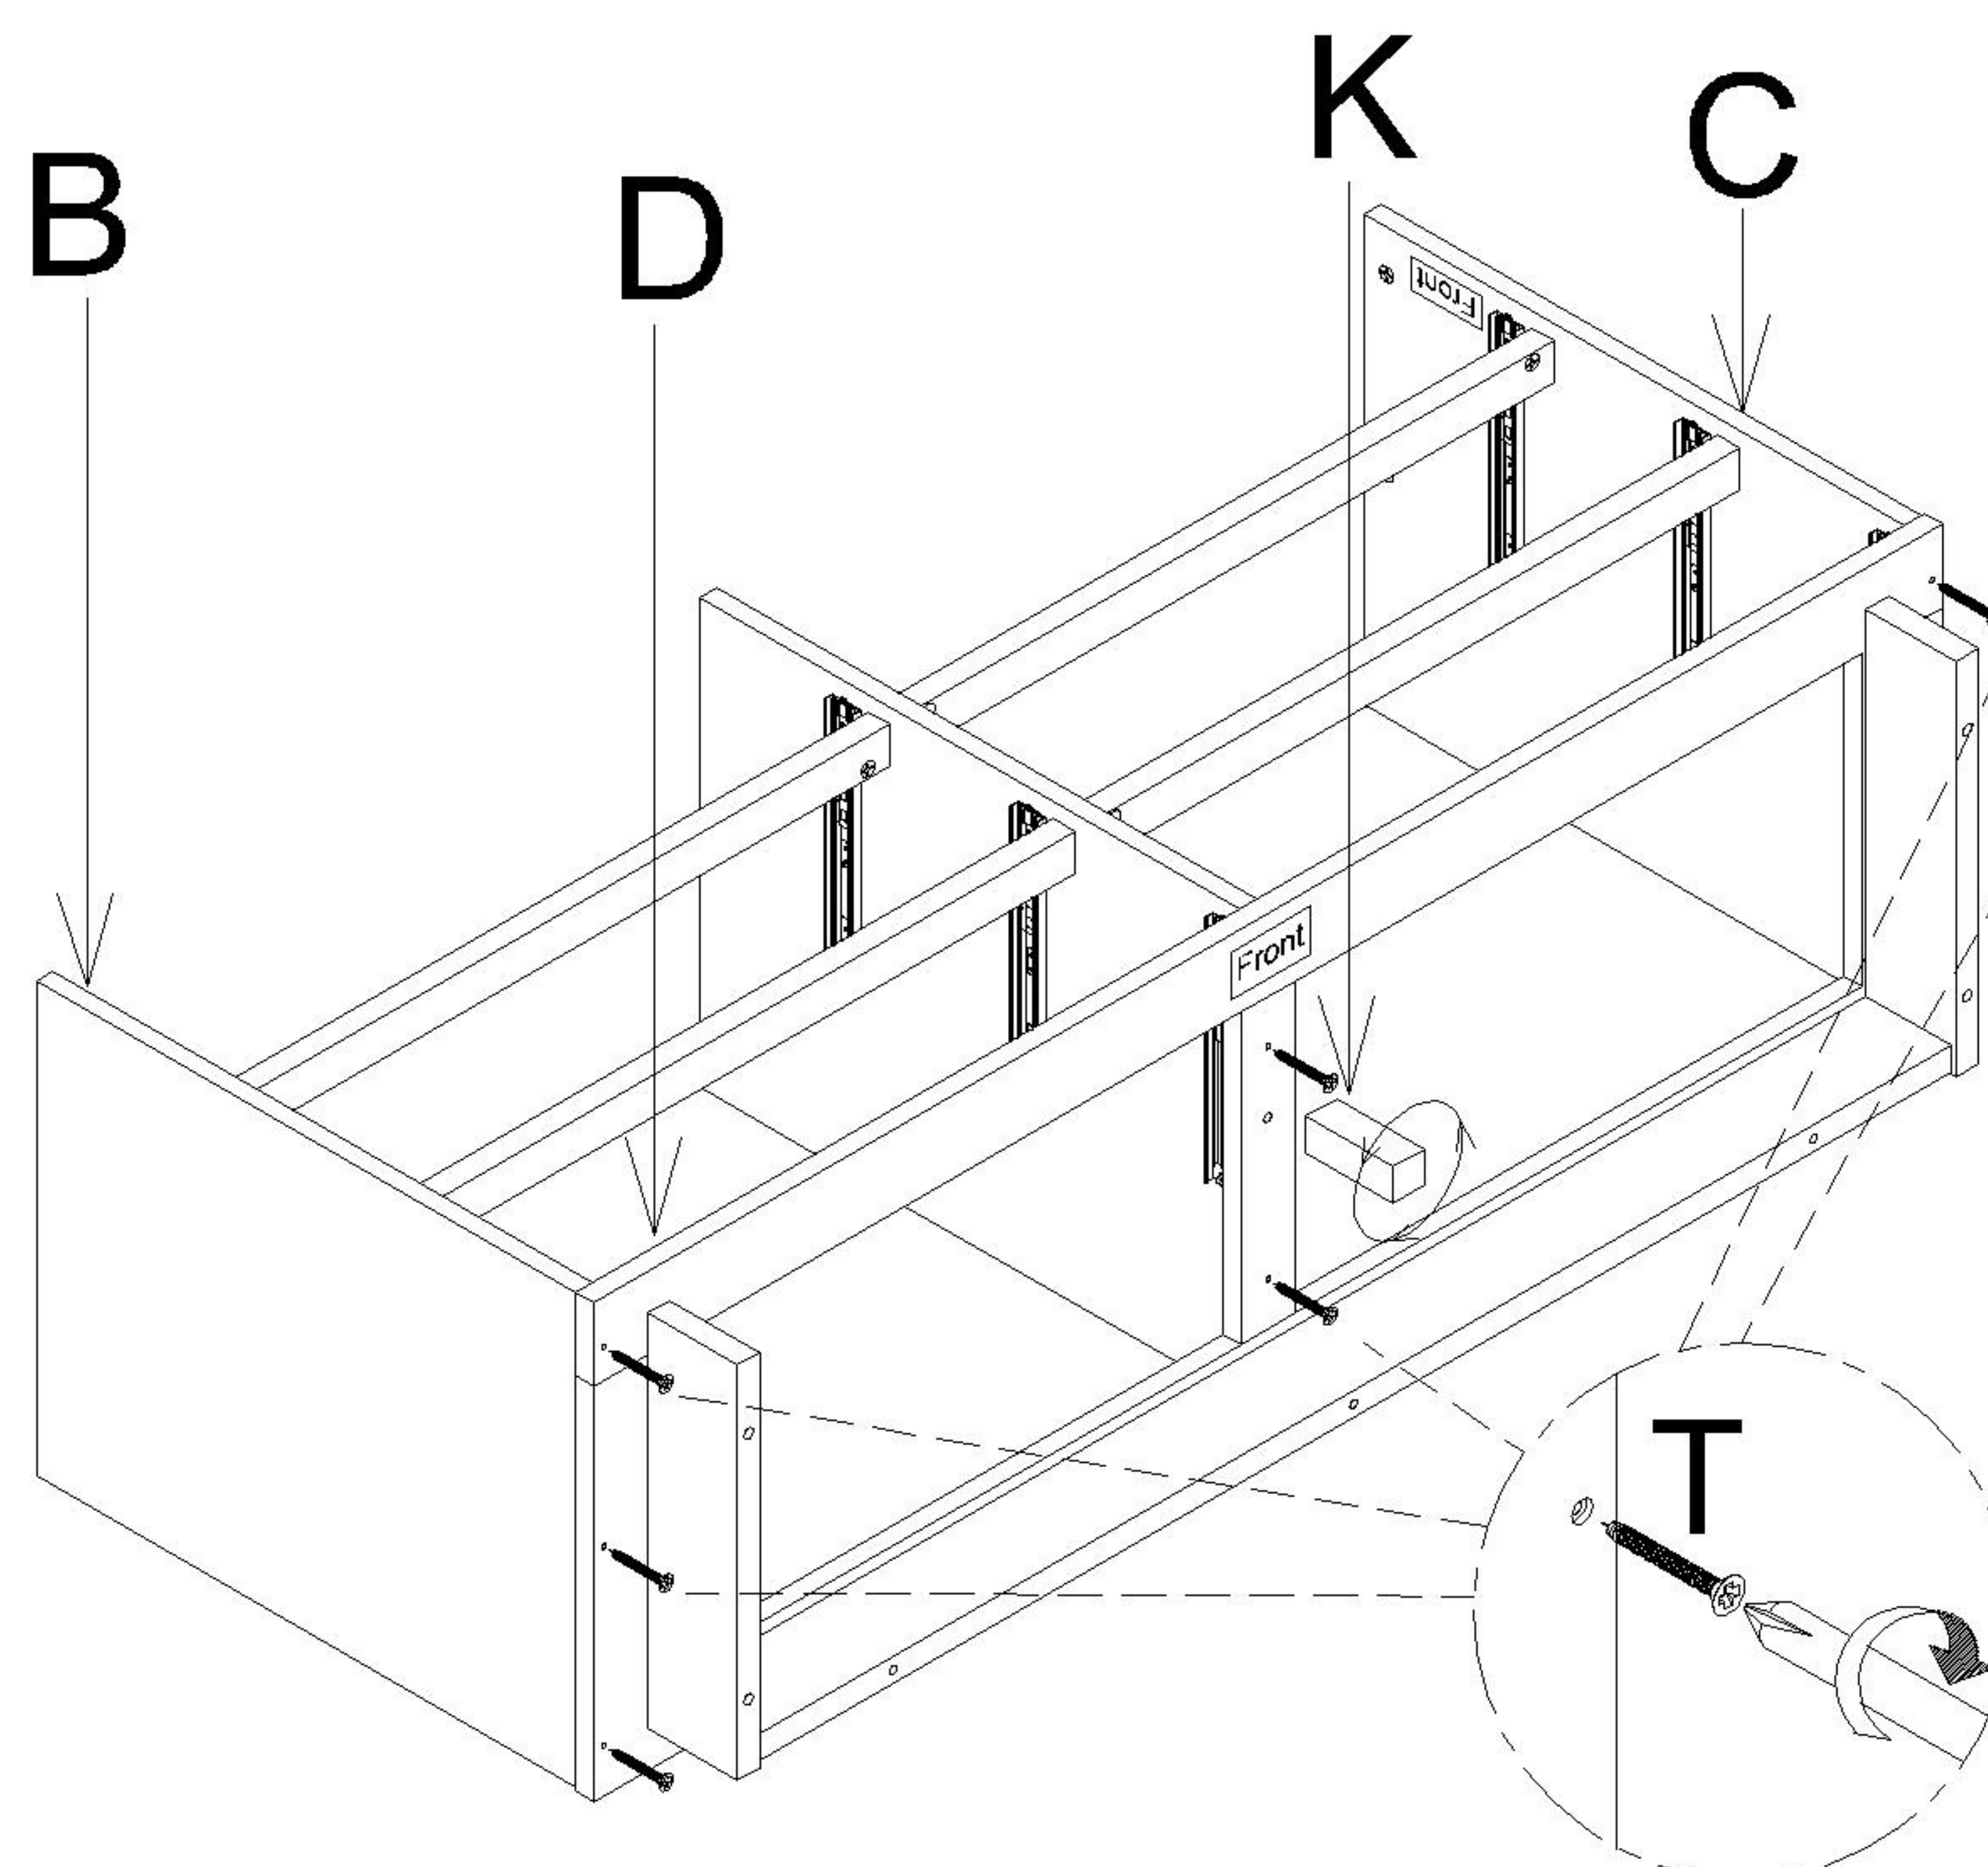


- 13** Stand the assembled unit up. Attach Top Panel (A) to Left & Right Side Panel (B & C) and secure with the Cam Lock (V) attached in the Step 6. Cover Cam Lock (V) with Cam Lock Cover (Z).

 NOTE : - Do not over tighten the Cam Lock (V).

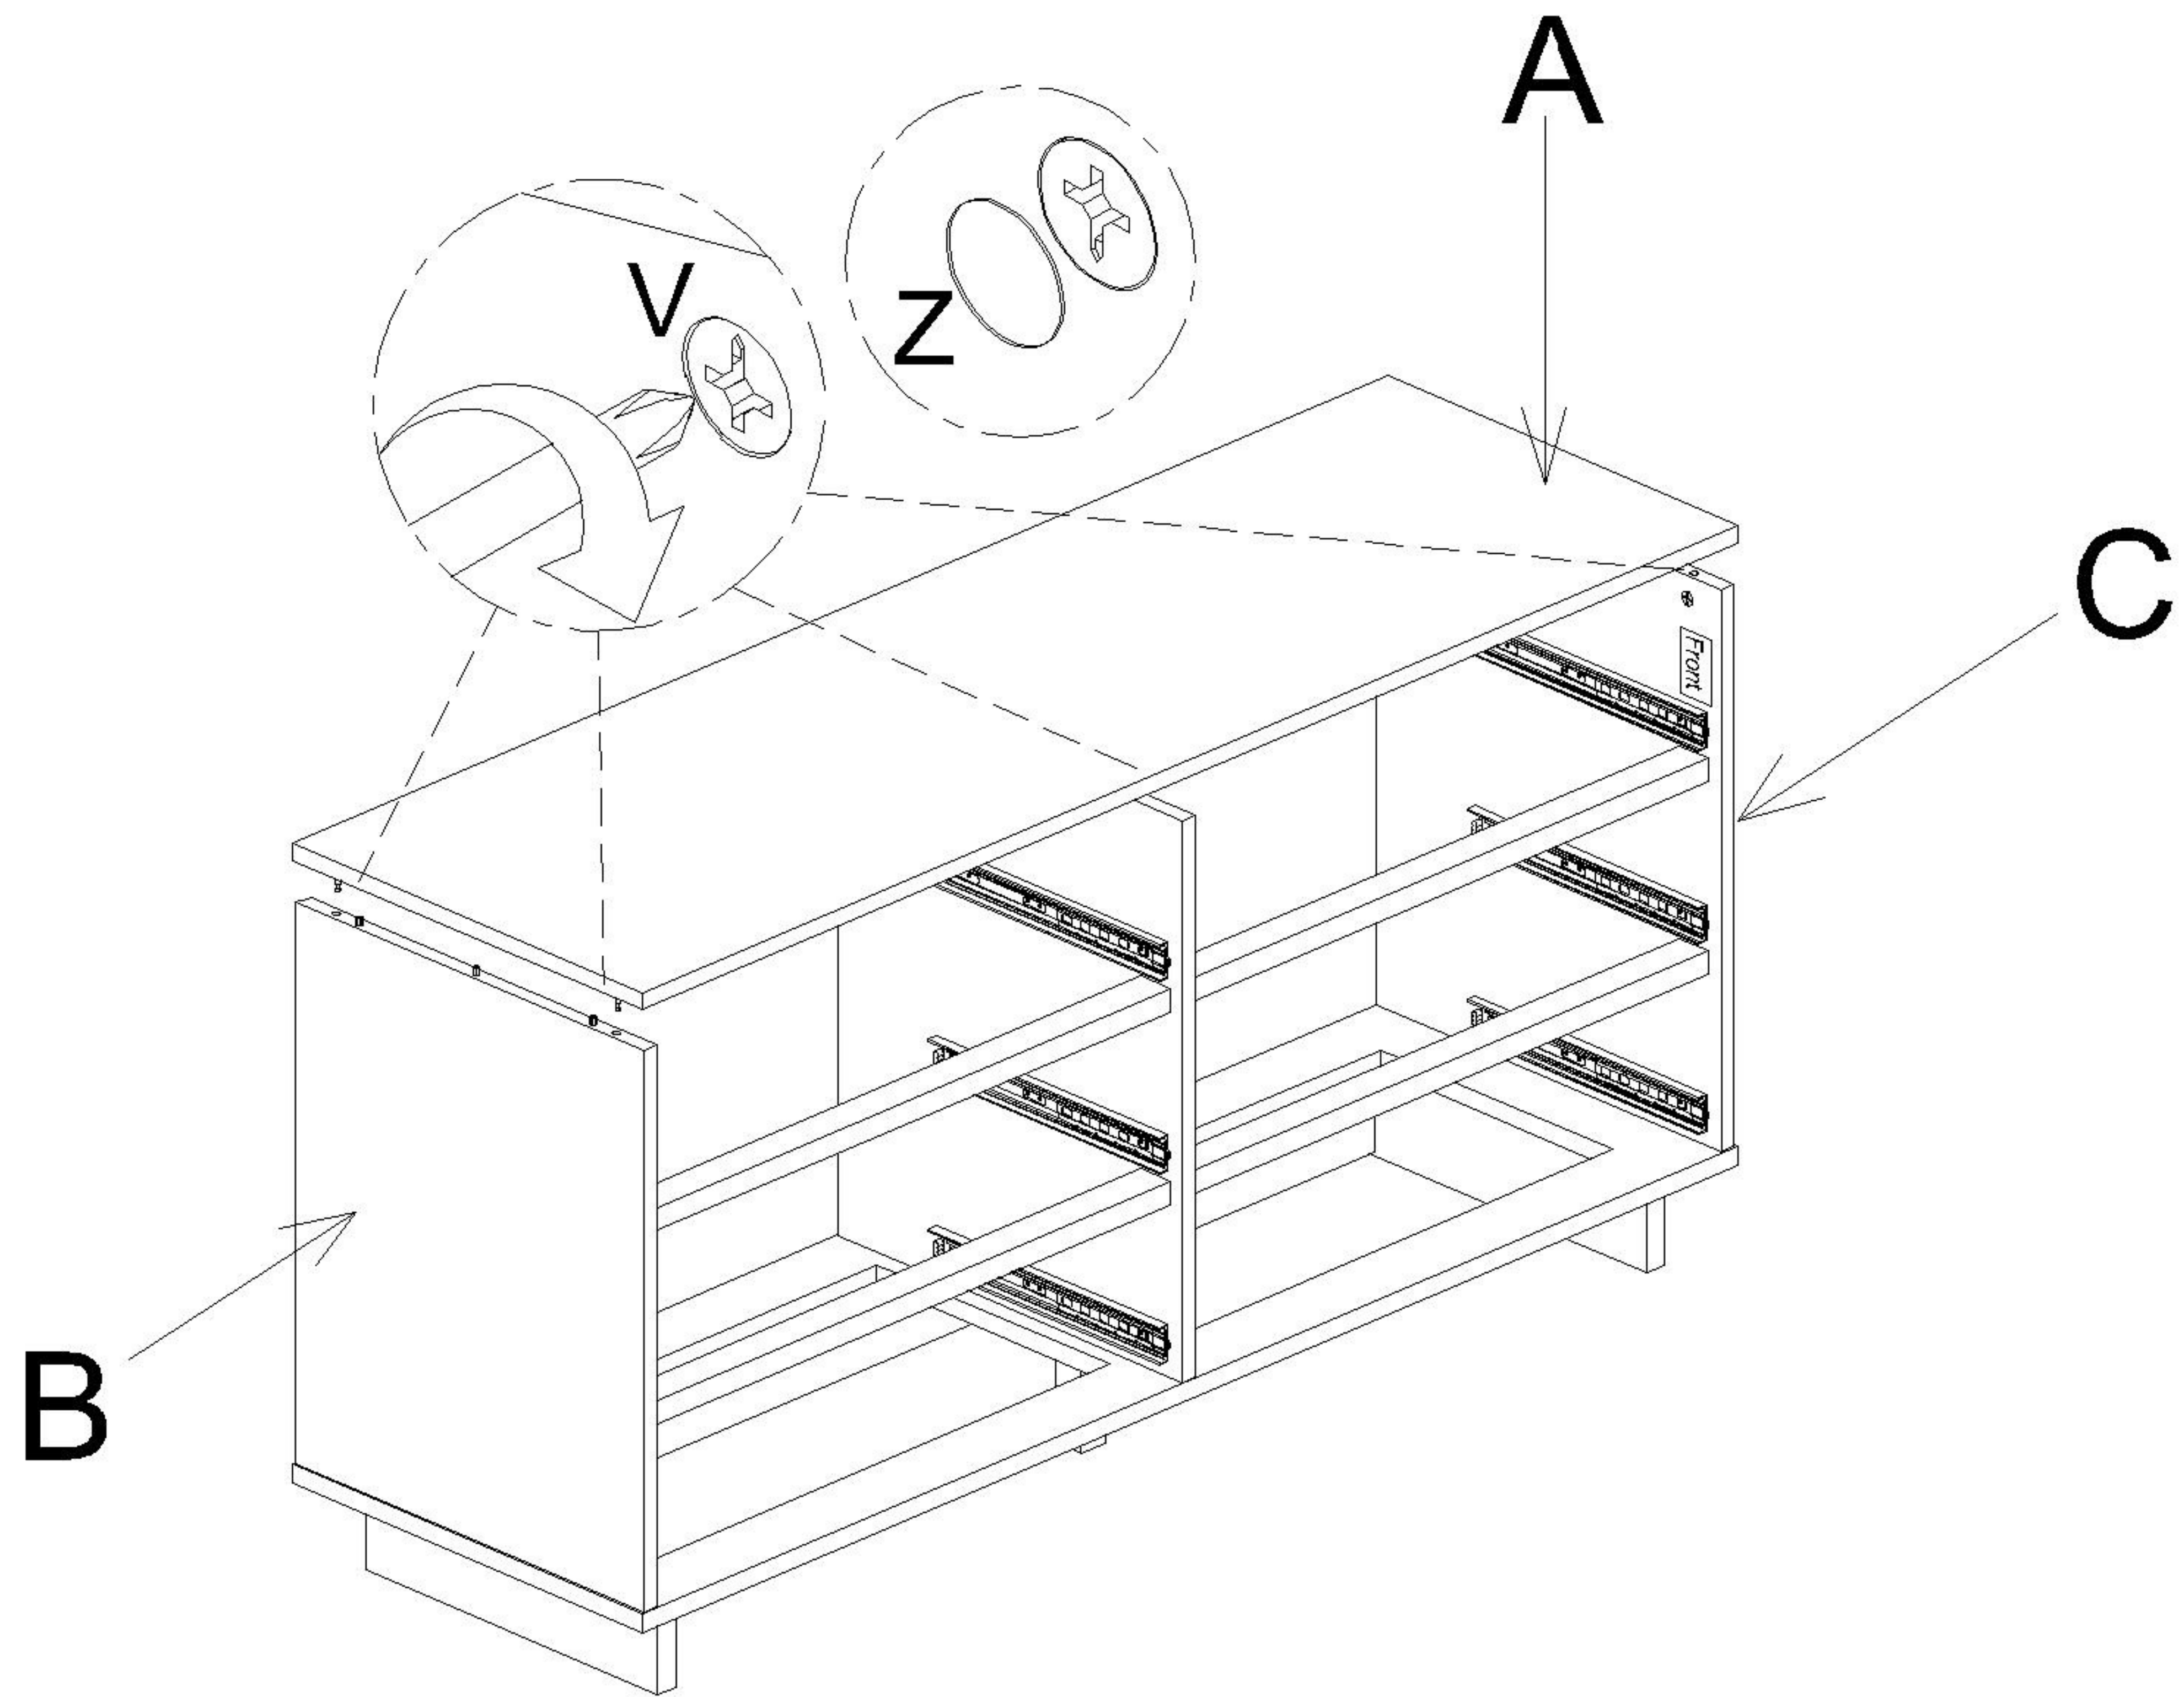


- 14** Attach Back Plywood (L) to assembled unit and secure with Panhead Screw (AA).

 NOTE : - Do not over tighten the Panhead Screw (AA).

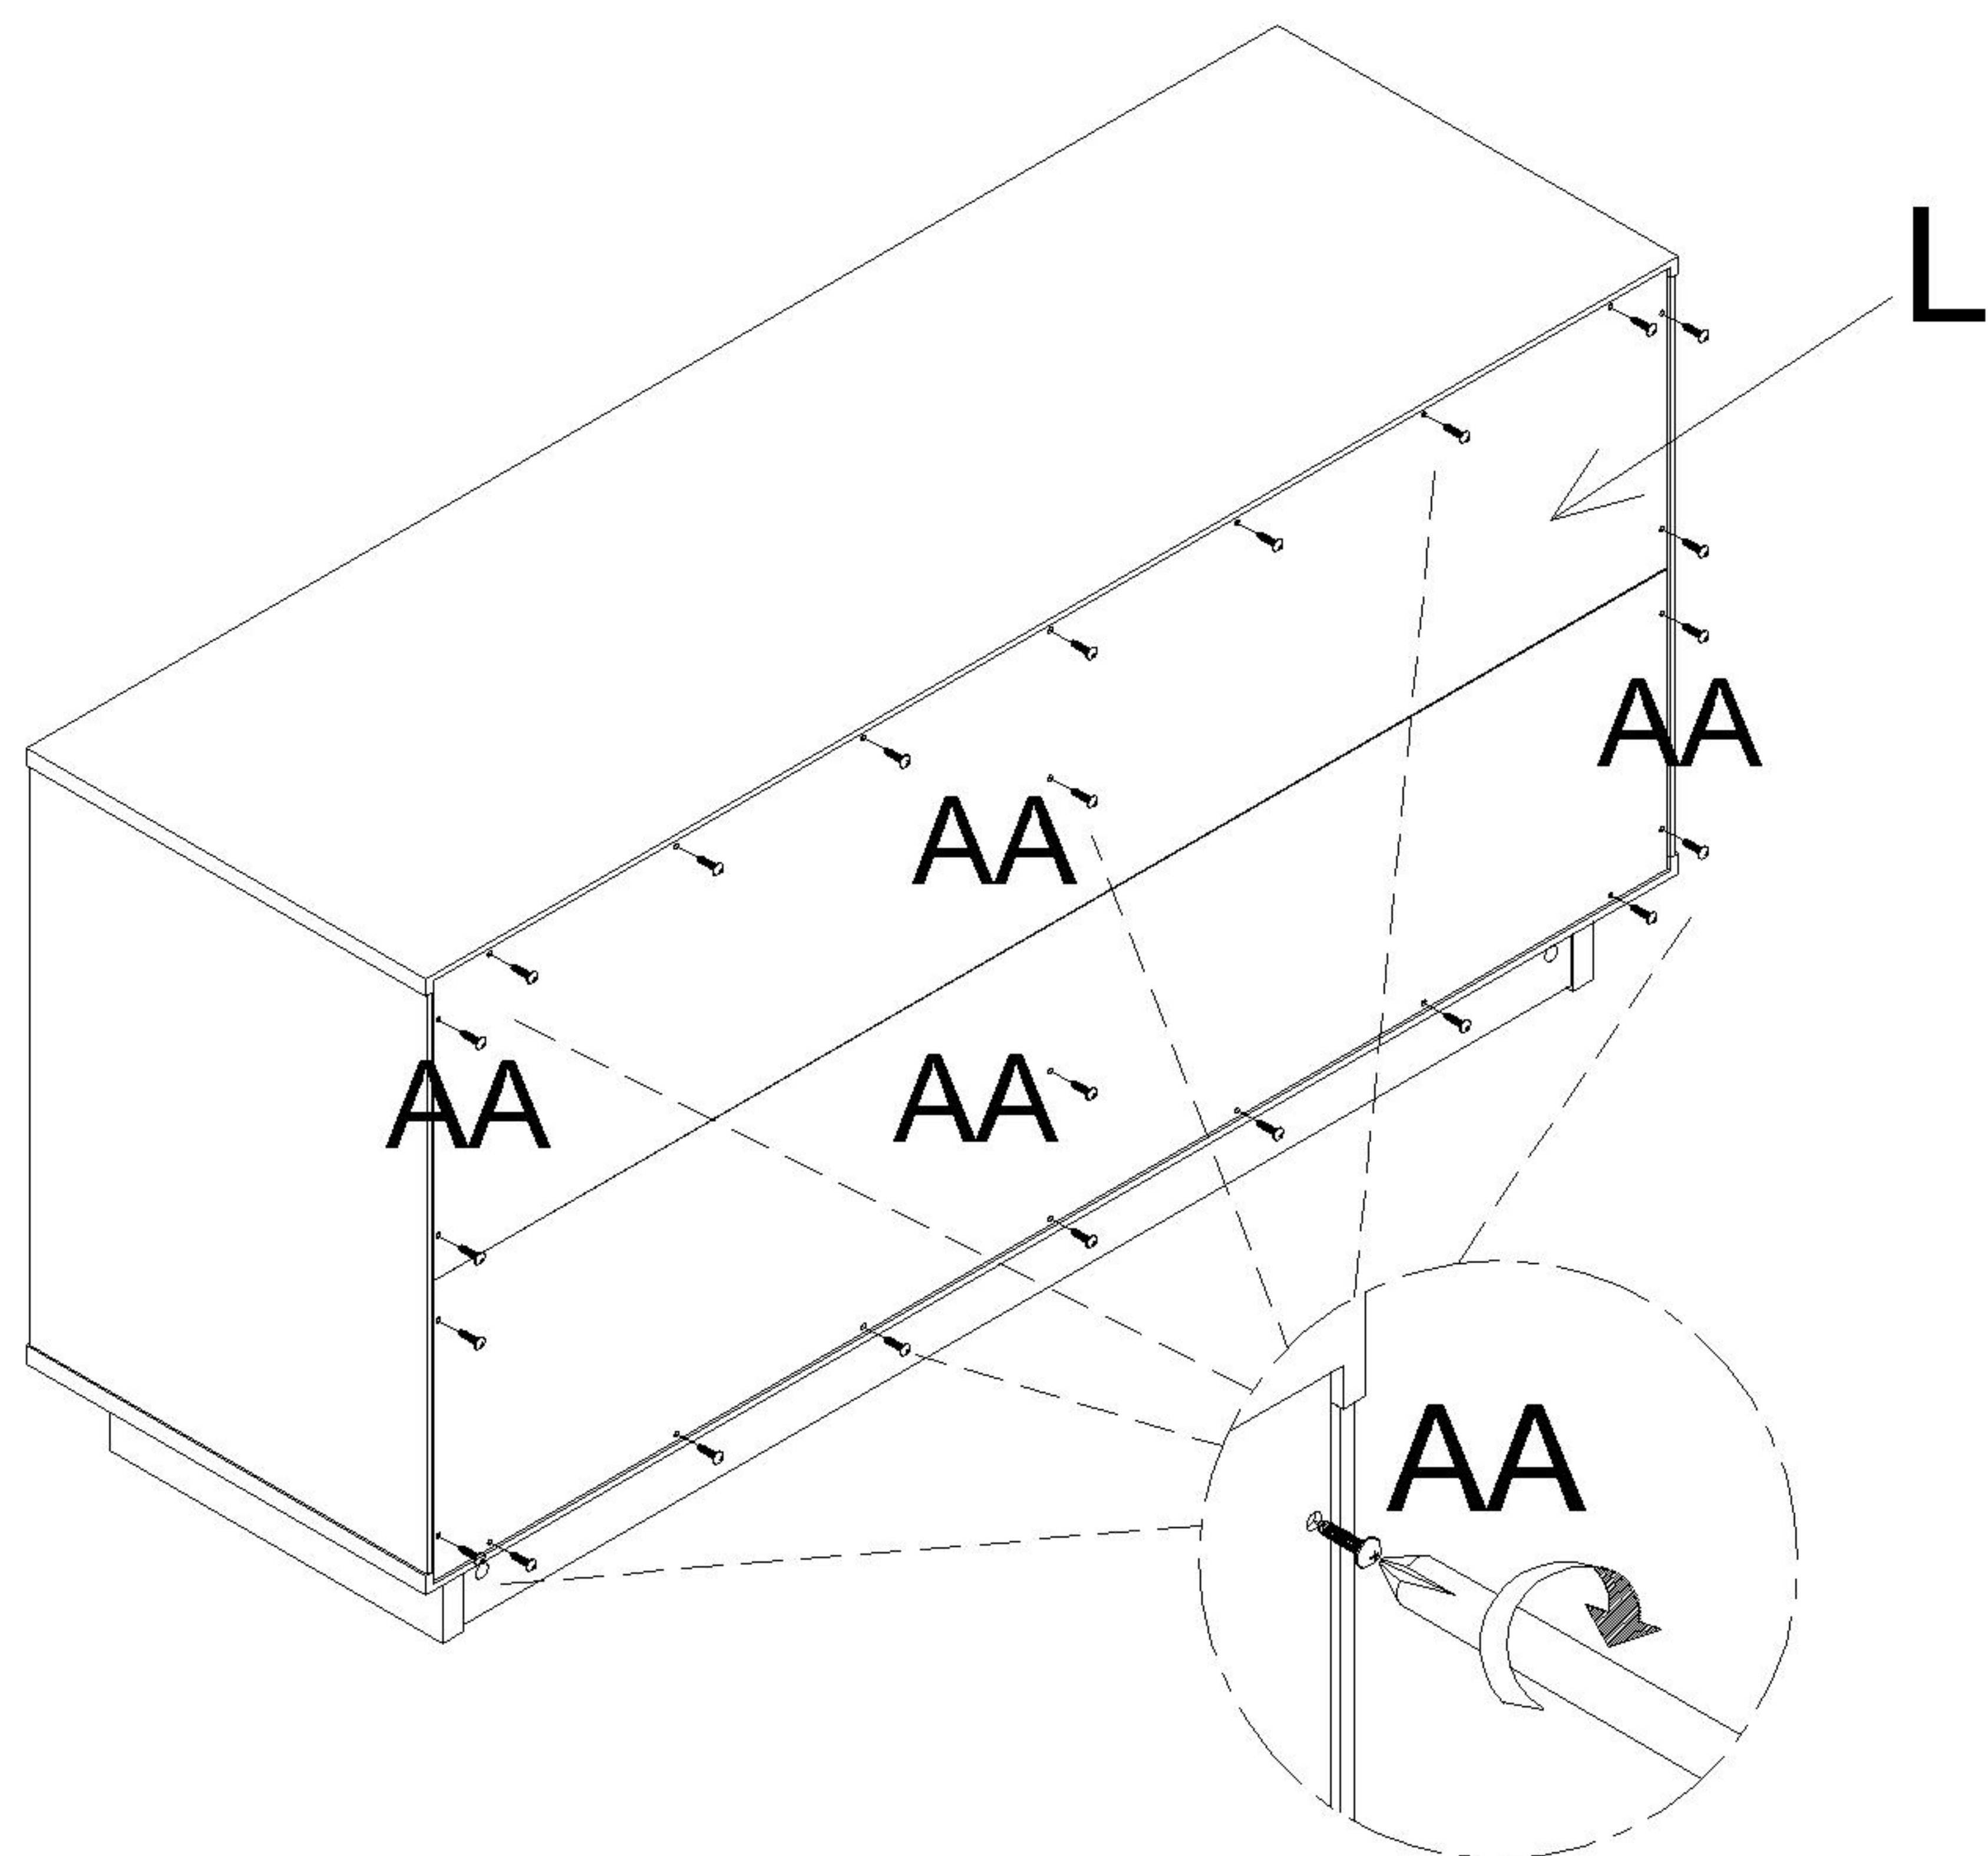

15

 
Attach Runner (Y) to Left & Right Drawer Side (N & Q) and secure with Screw (S).

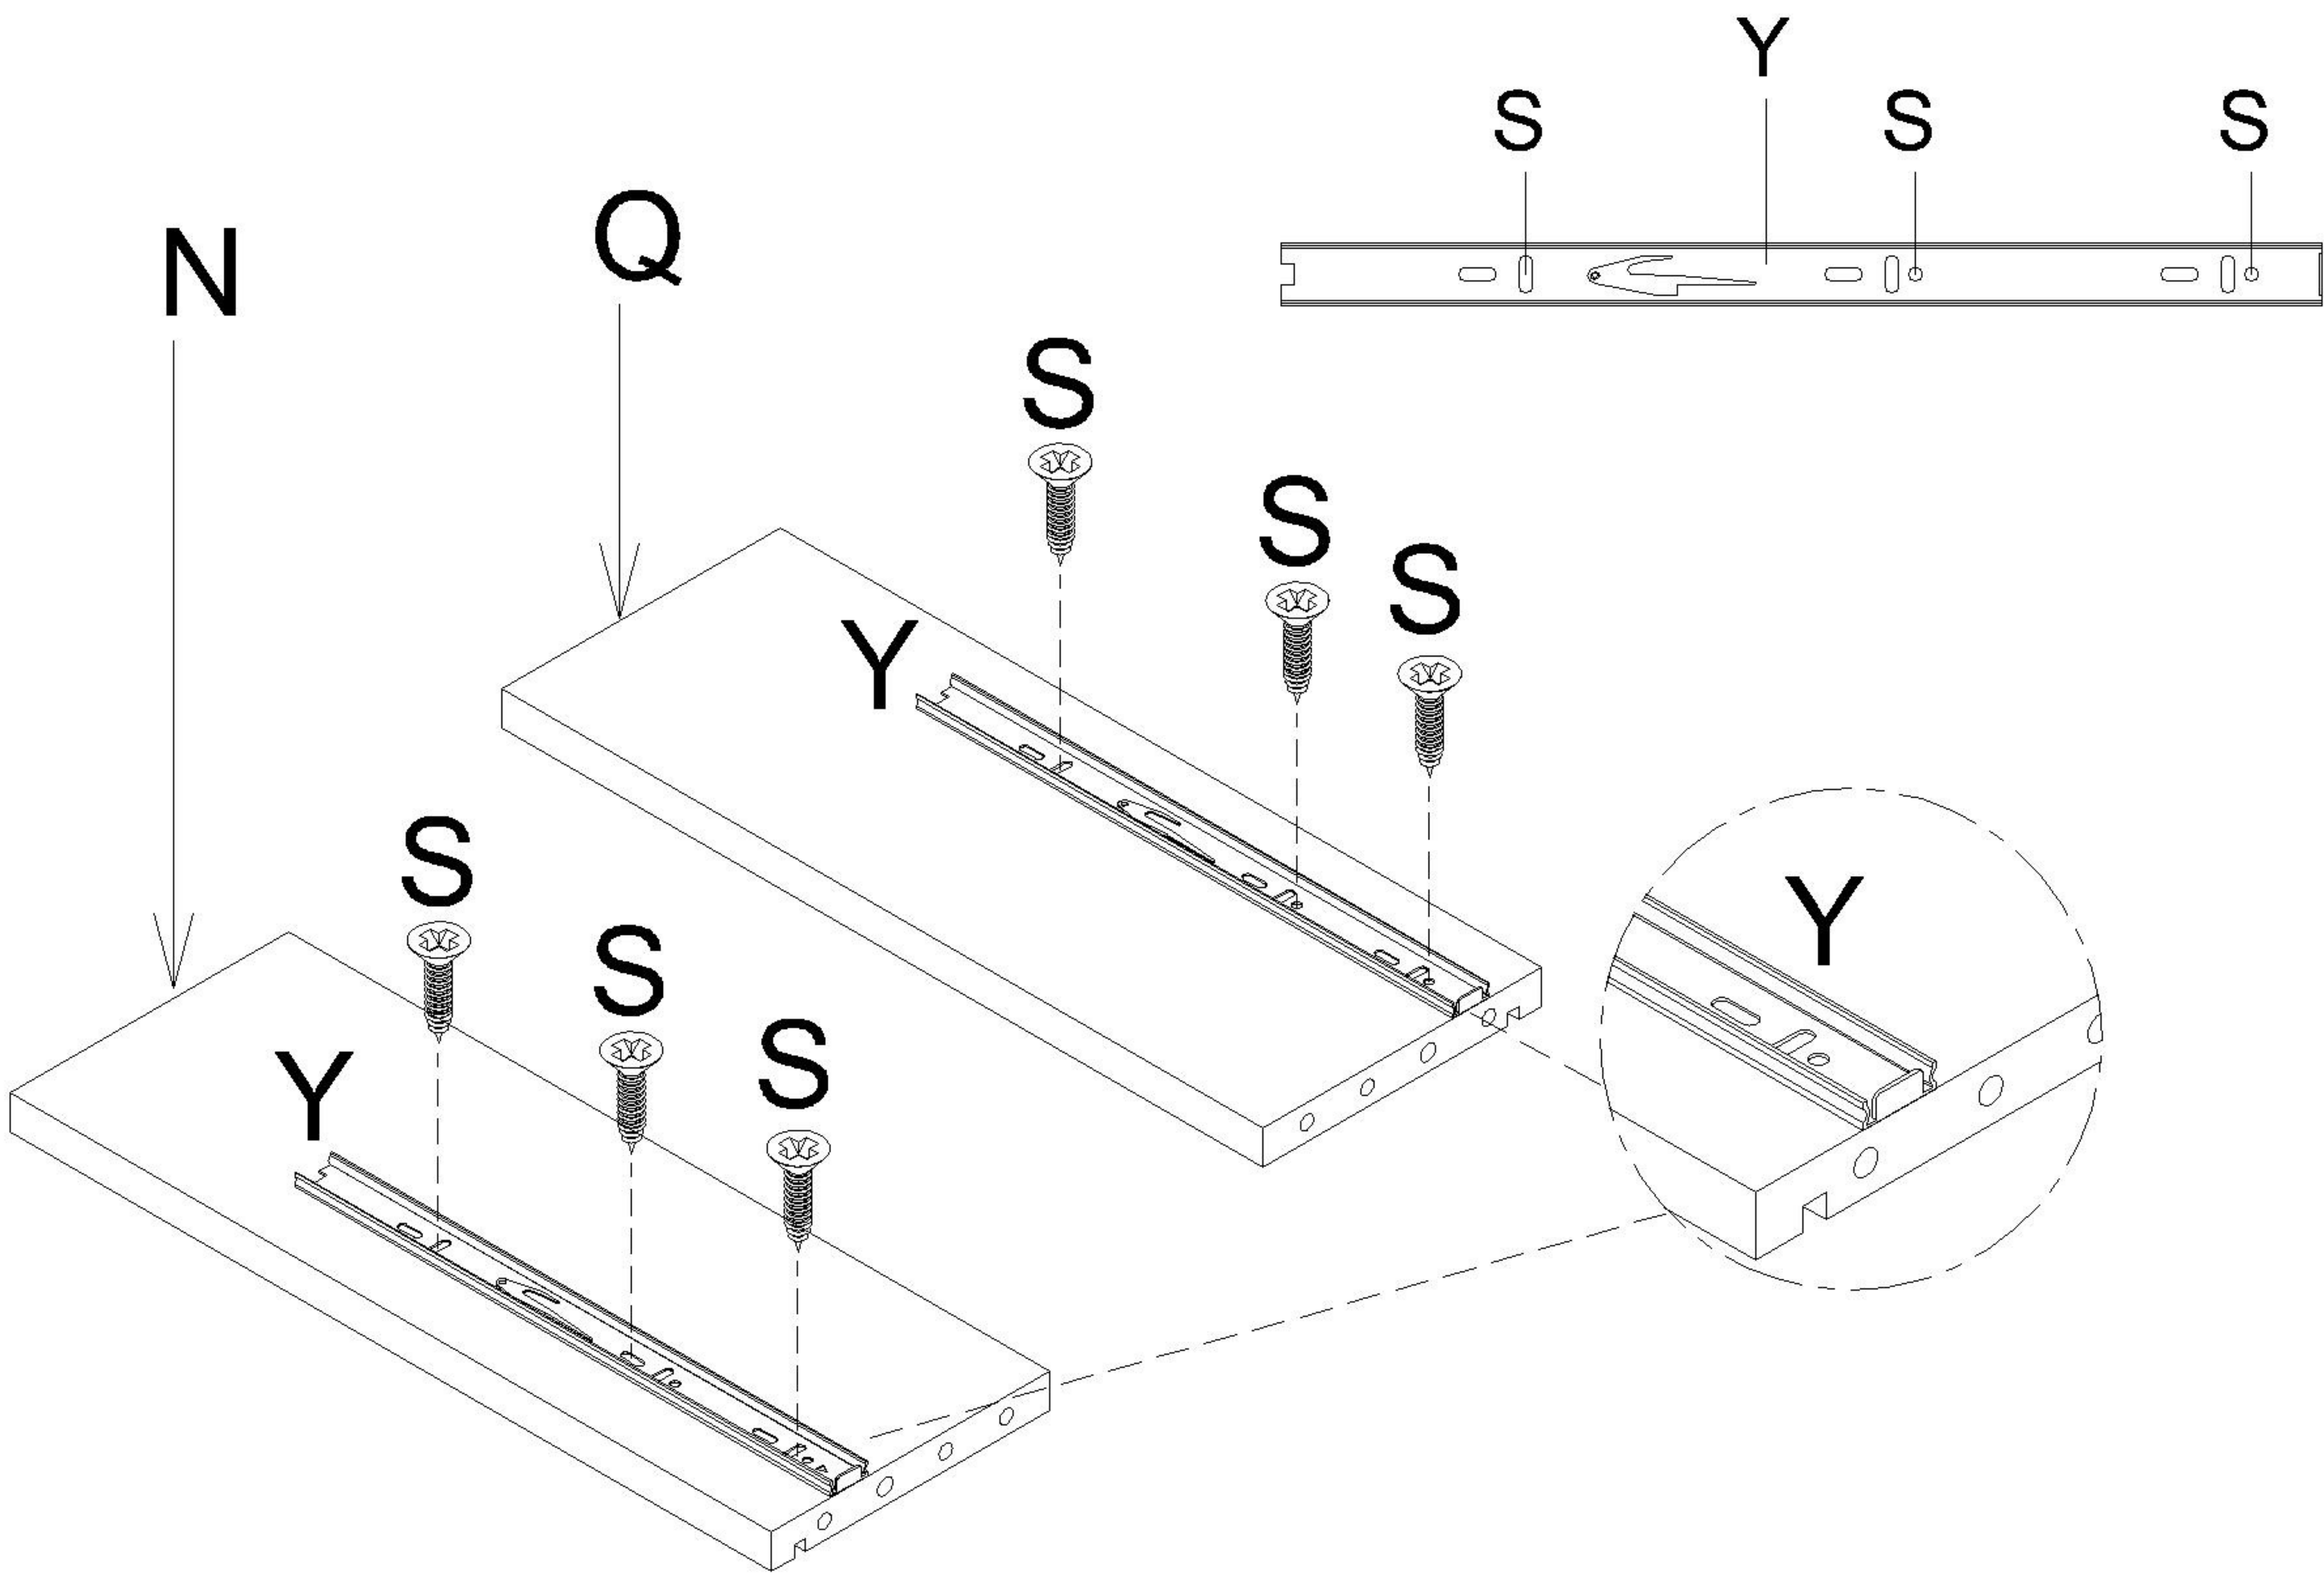

16


Insert Dowel (X) and Cam Lock (V) to Left & Right Drawer Side (N & Q) and Drawer Back (O). Attach Cam Bolt (W) to Top Drawer Front (M), Bottom Drawer Front (R), and Left & Right Drawer Side (N & Q).

 NOTE : - Make sure arrows on each Cam Lock (V) points towards nearest edge with holes.

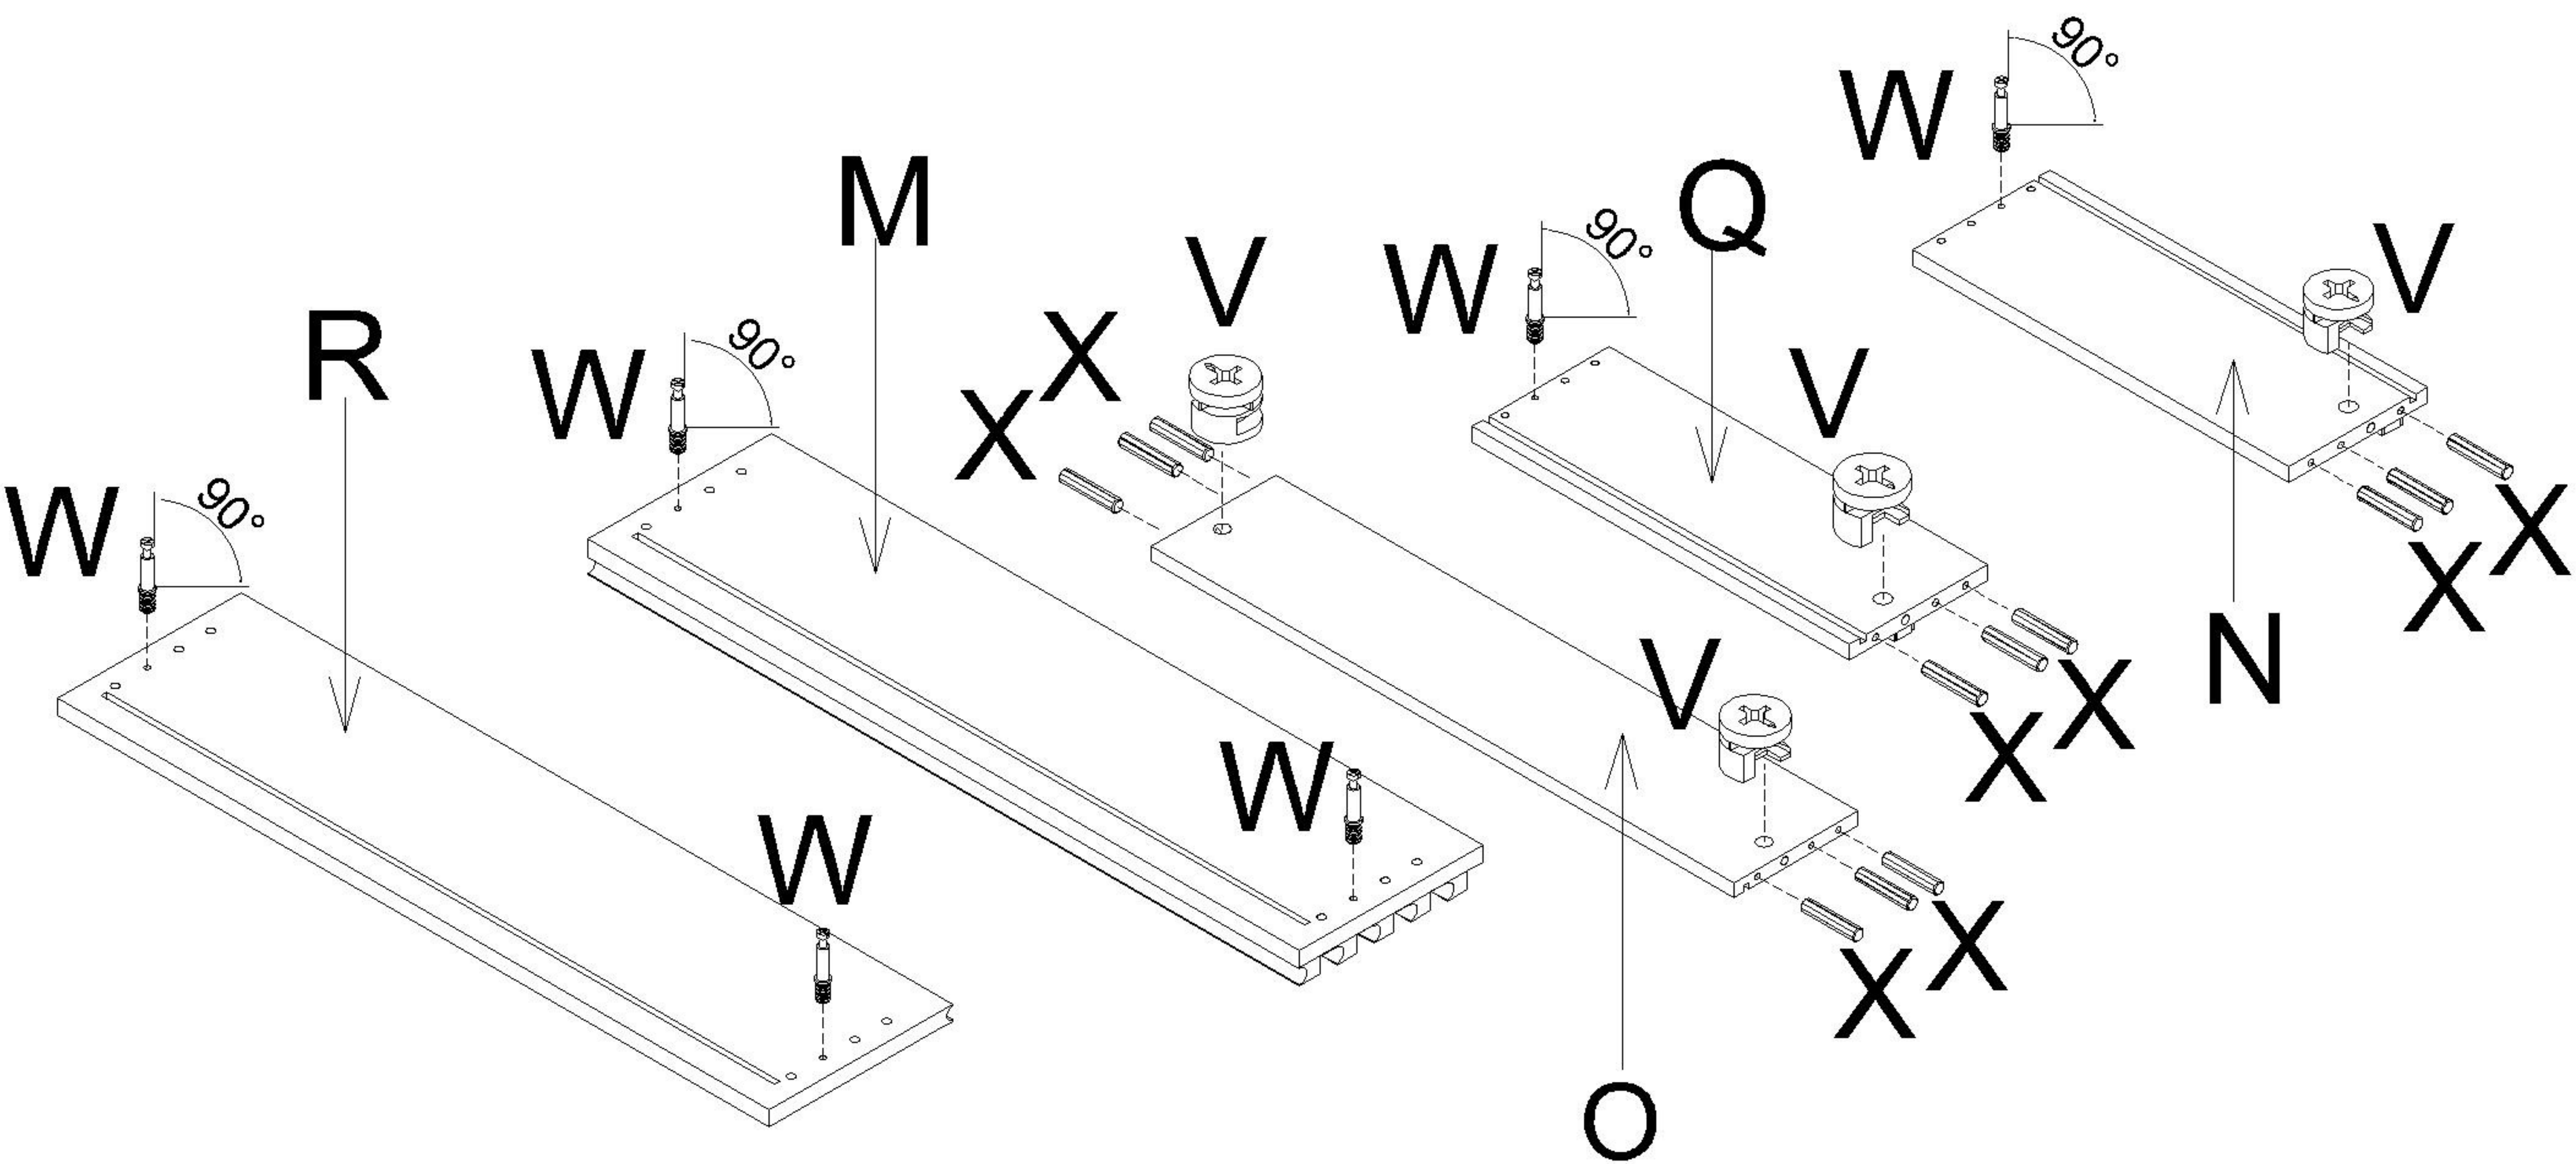


17 Attach Left & Right Drawer Side (N & Q) to Drawer Back (O) and secure with the Cam Lock (V) attached in previous step. Cover Cam Lock (V) with Cam Lock Cover (Z).

 NOTE : - Do not over tighten the Cam Lock (V).

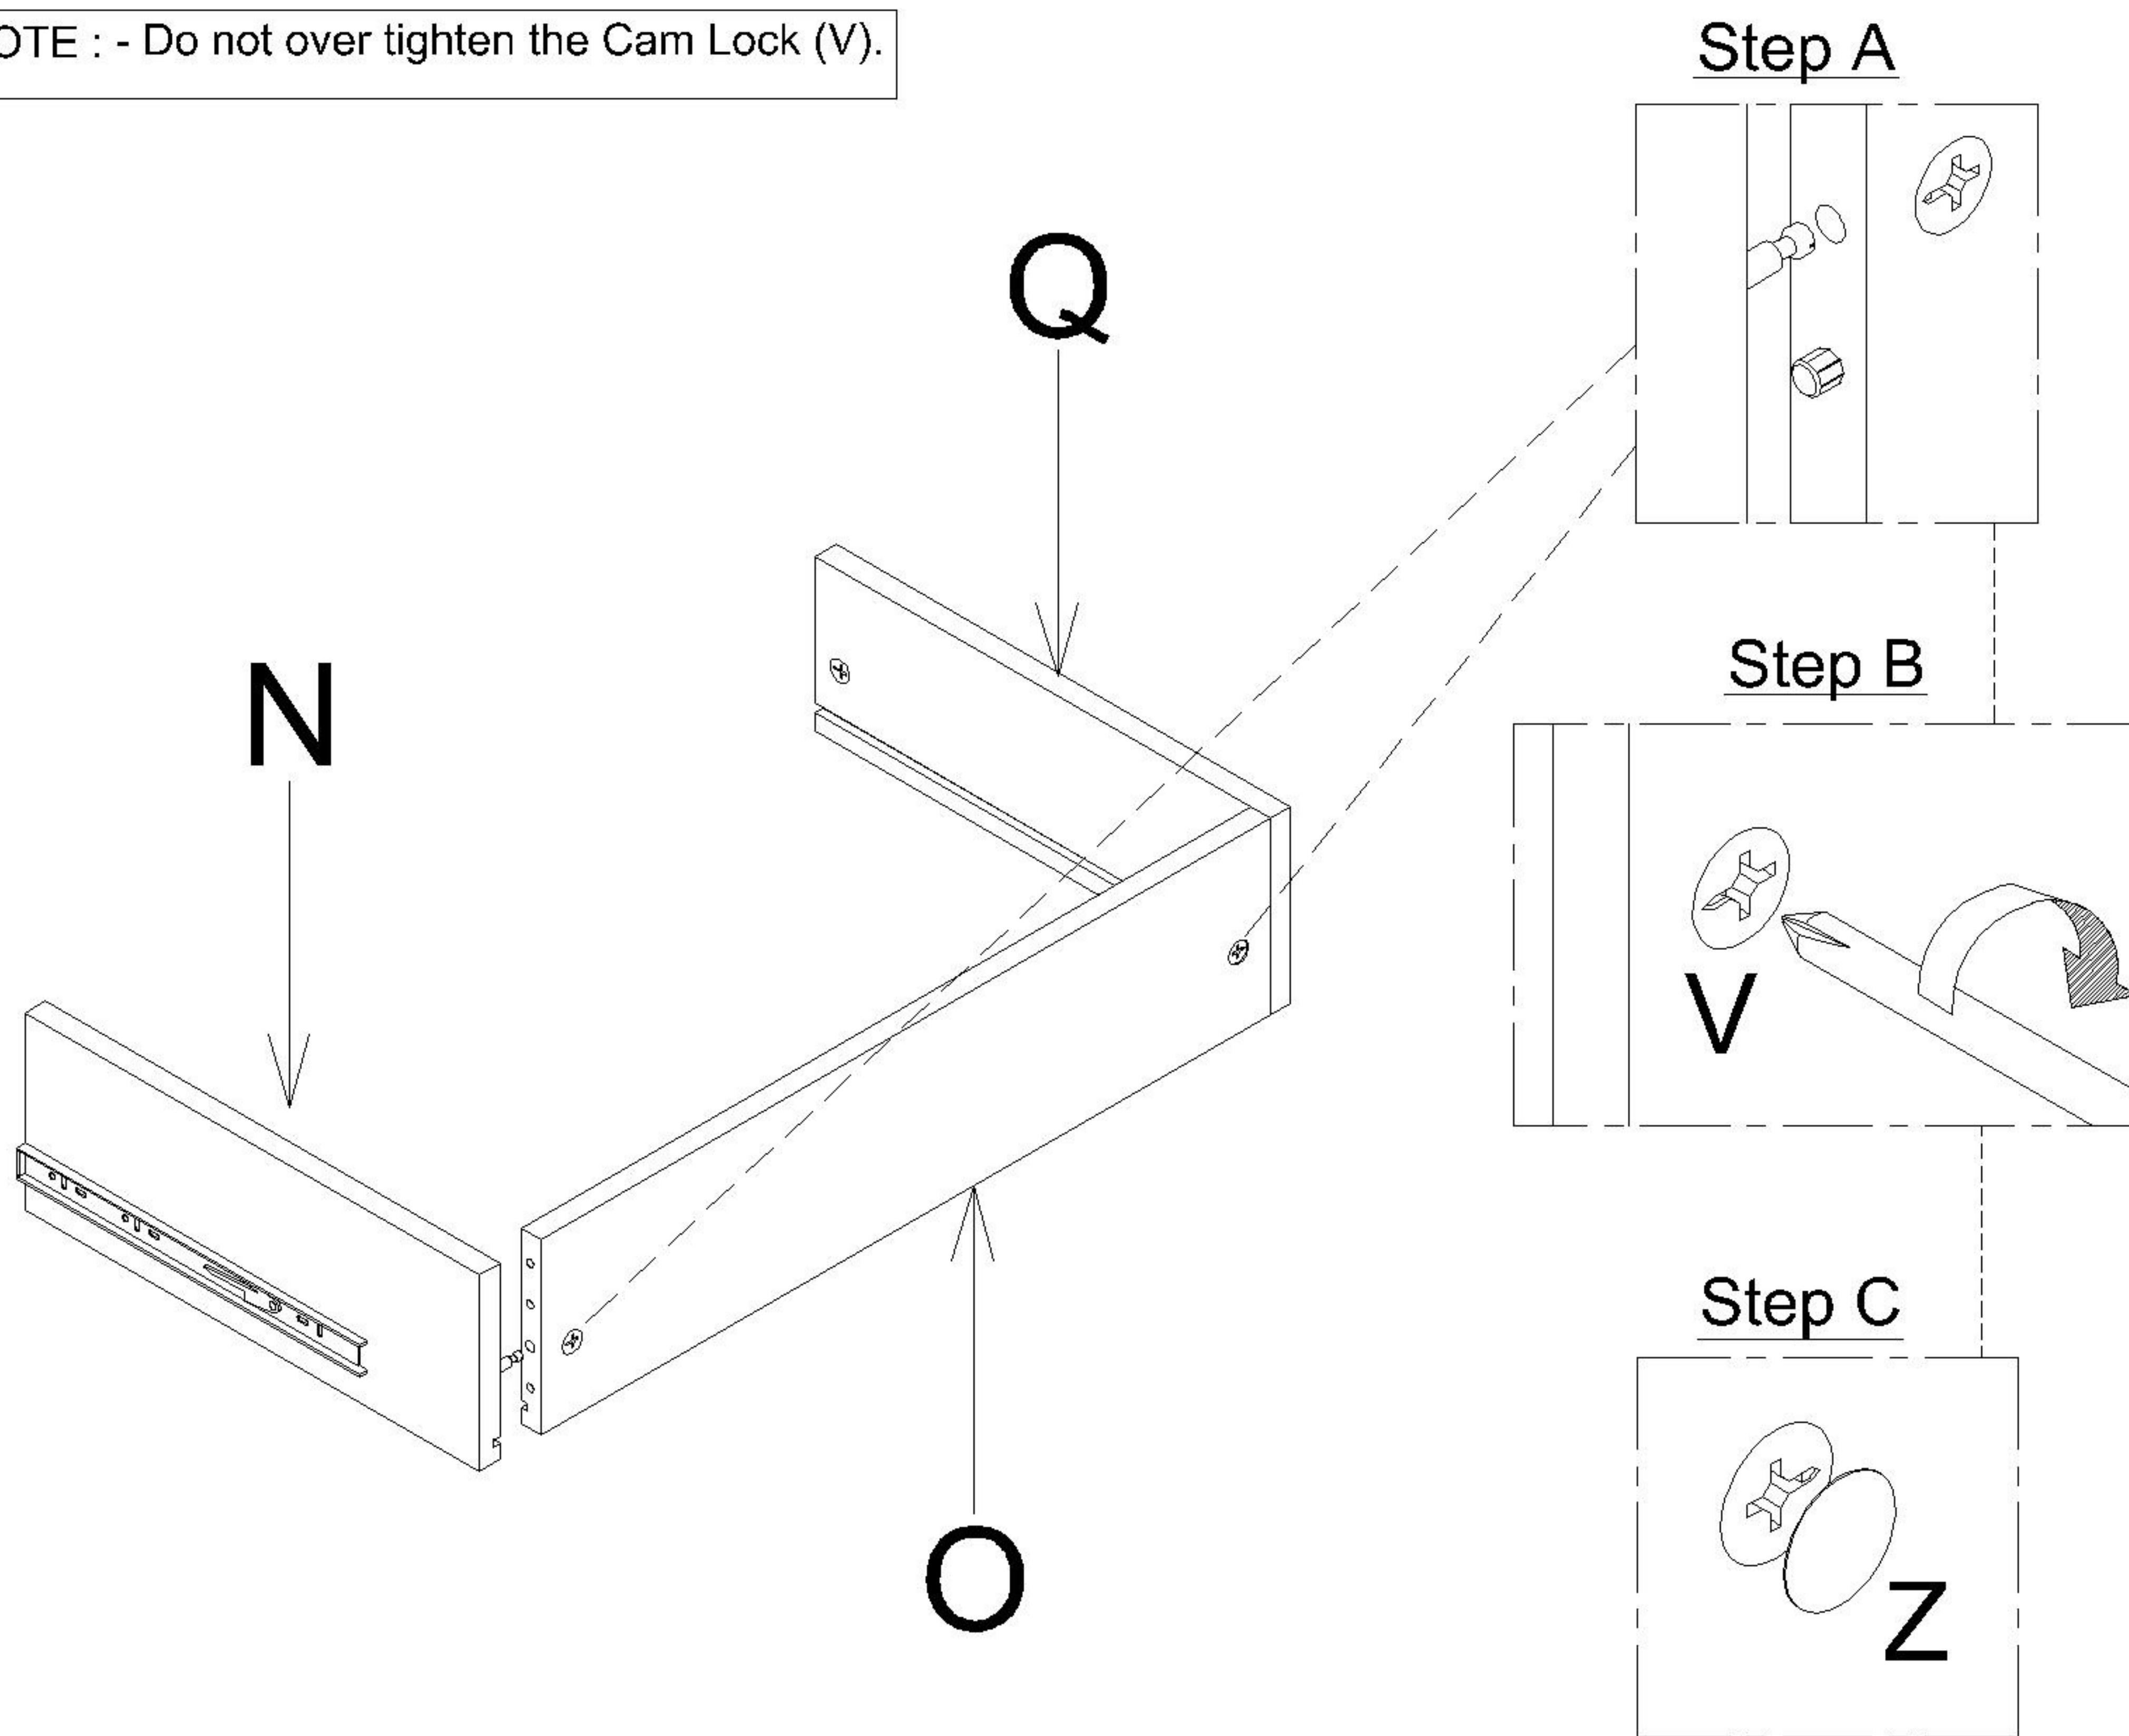


18 Slot Drawer Base (P) into corresponding grooves. Attach Top Drawer Front (M) to Drawer Box and secure with the Cam Lock (V) attached in previous step. Cover Cam Lock (V) with Cam Lock Cover (Z).

 NOTE : - Do not over tighten the Cam Lock (V).

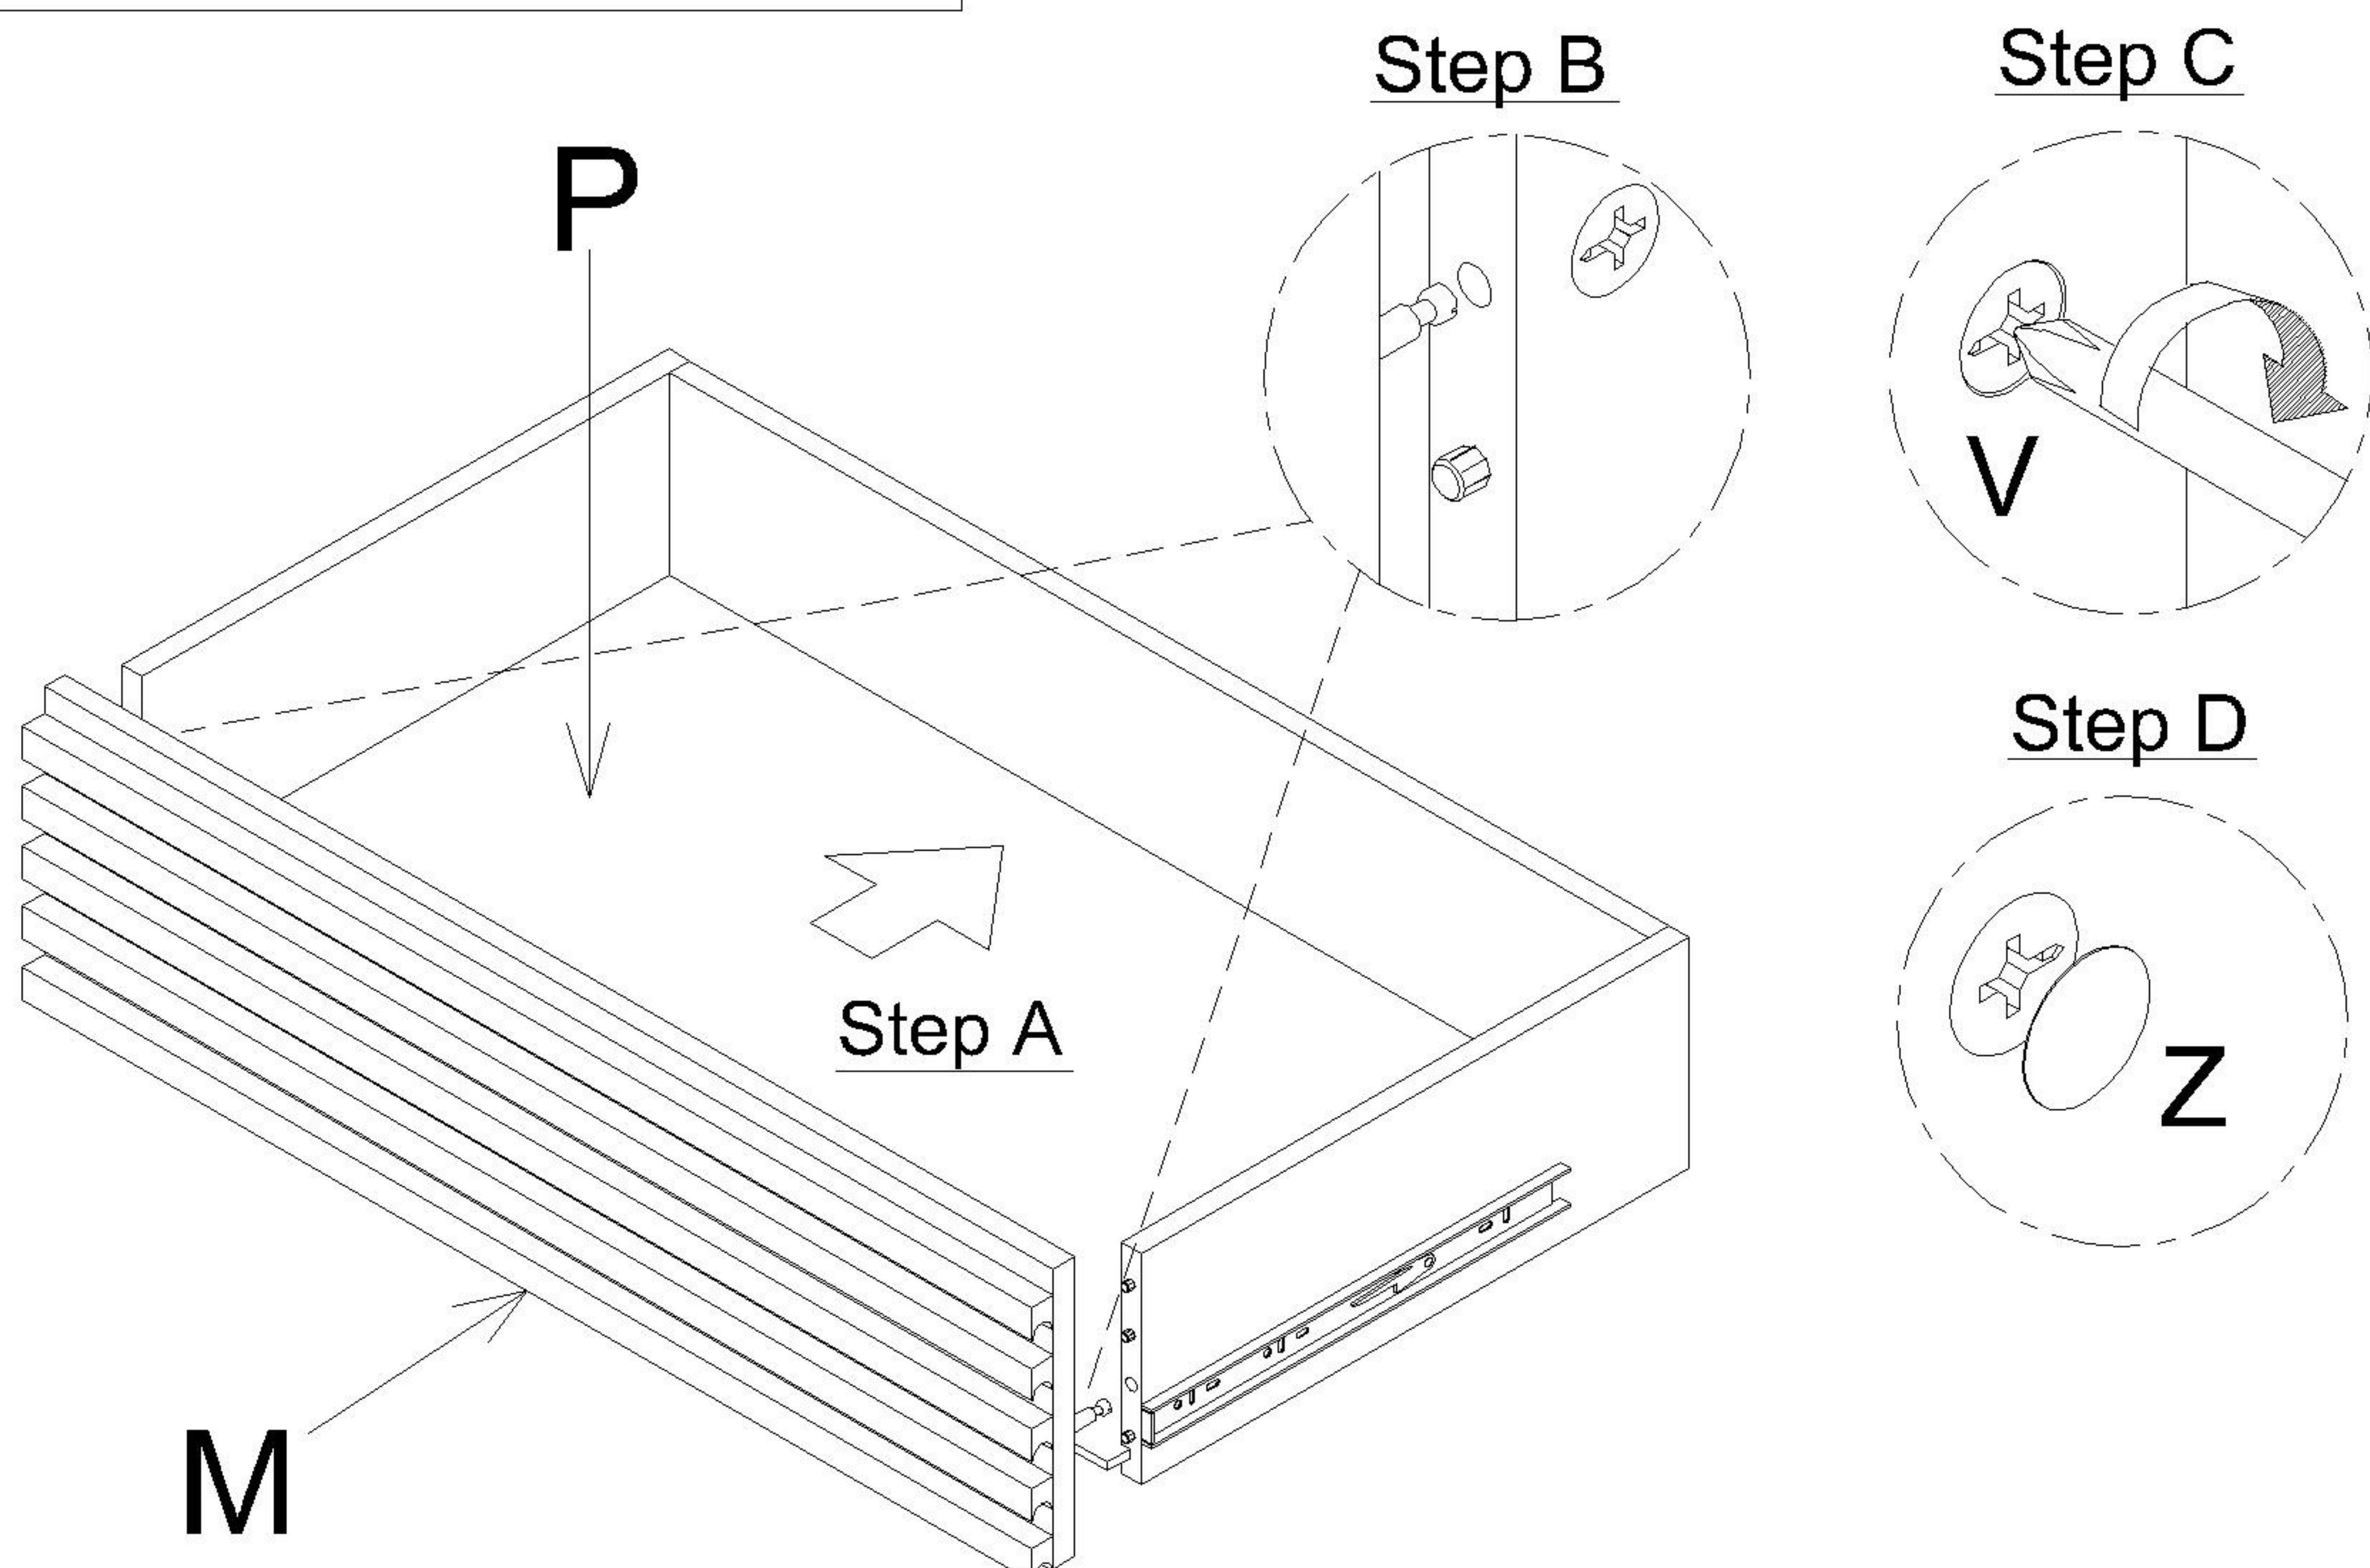


19 Slot Drawer Base (P) into corresponding grooves. Attach Center & Bottom Drawer Front (R) to Drawer Box and secure with the Cam Lock (V) attached in previous step. Cover Cam Lock (V) with Cam Lock Cover (Z).

 
NOTE : - Do not over tighten the Cam Lock (V).

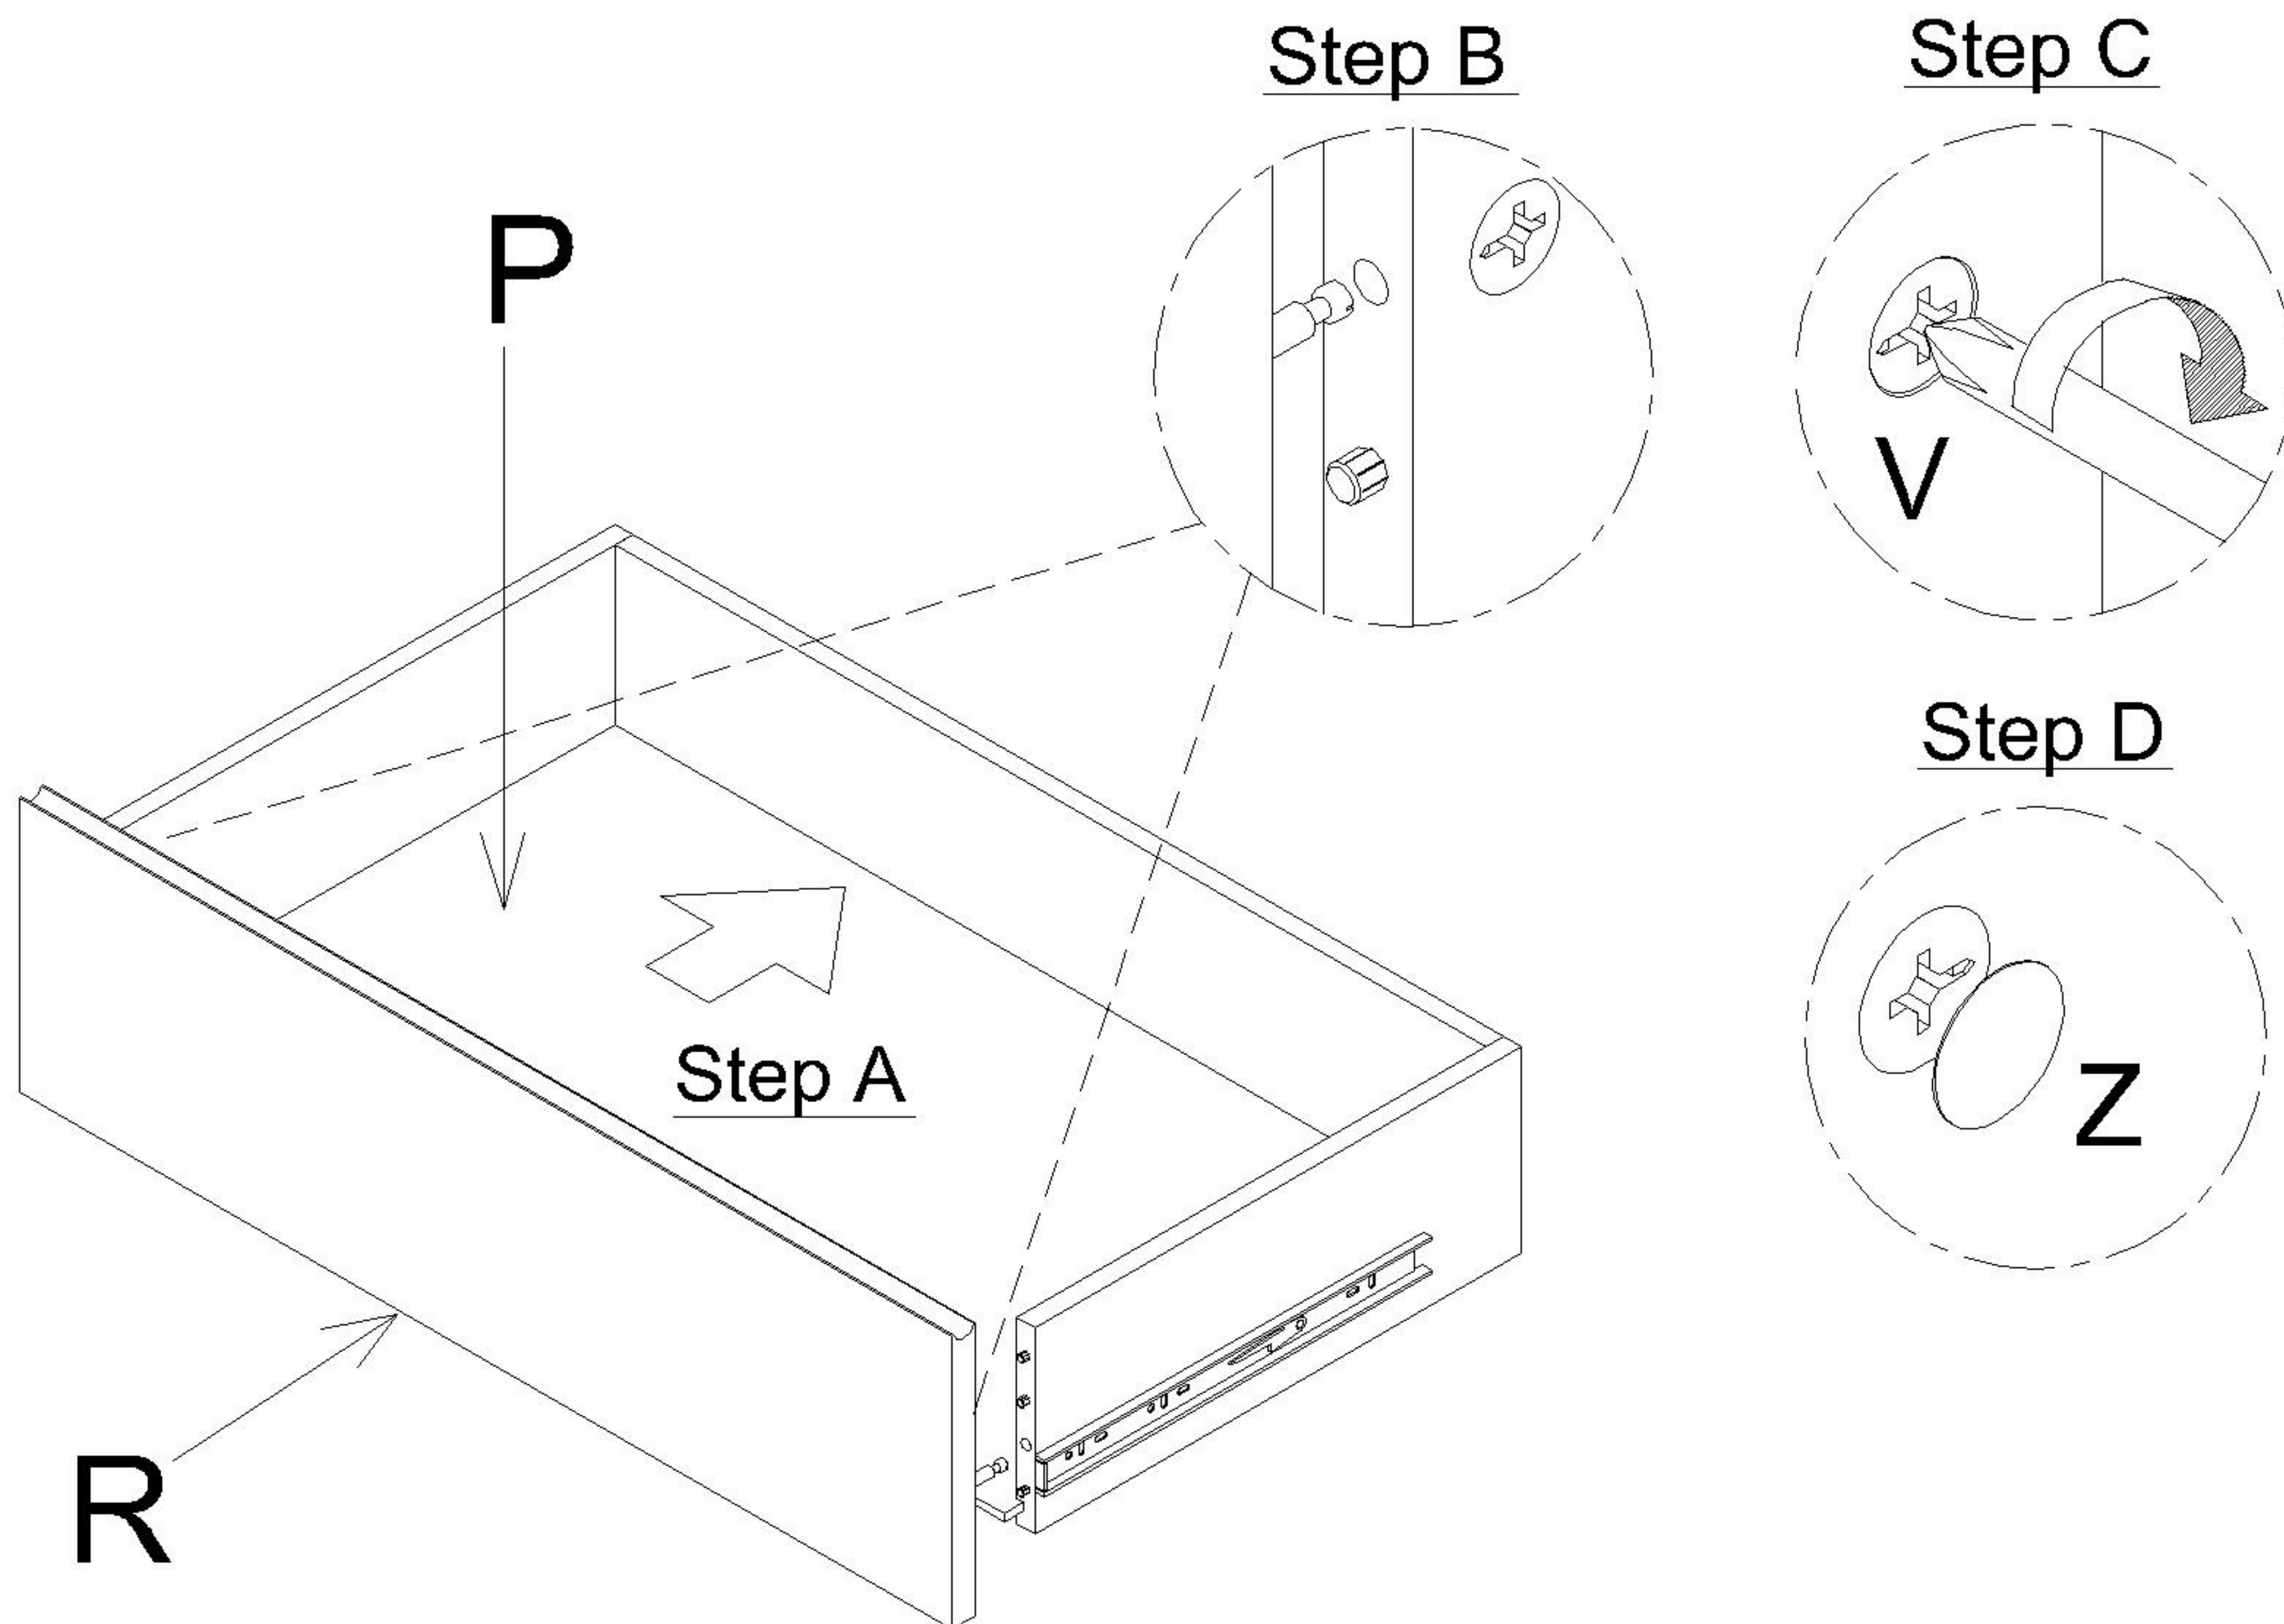

20 Slot Drawers into assembled unit.

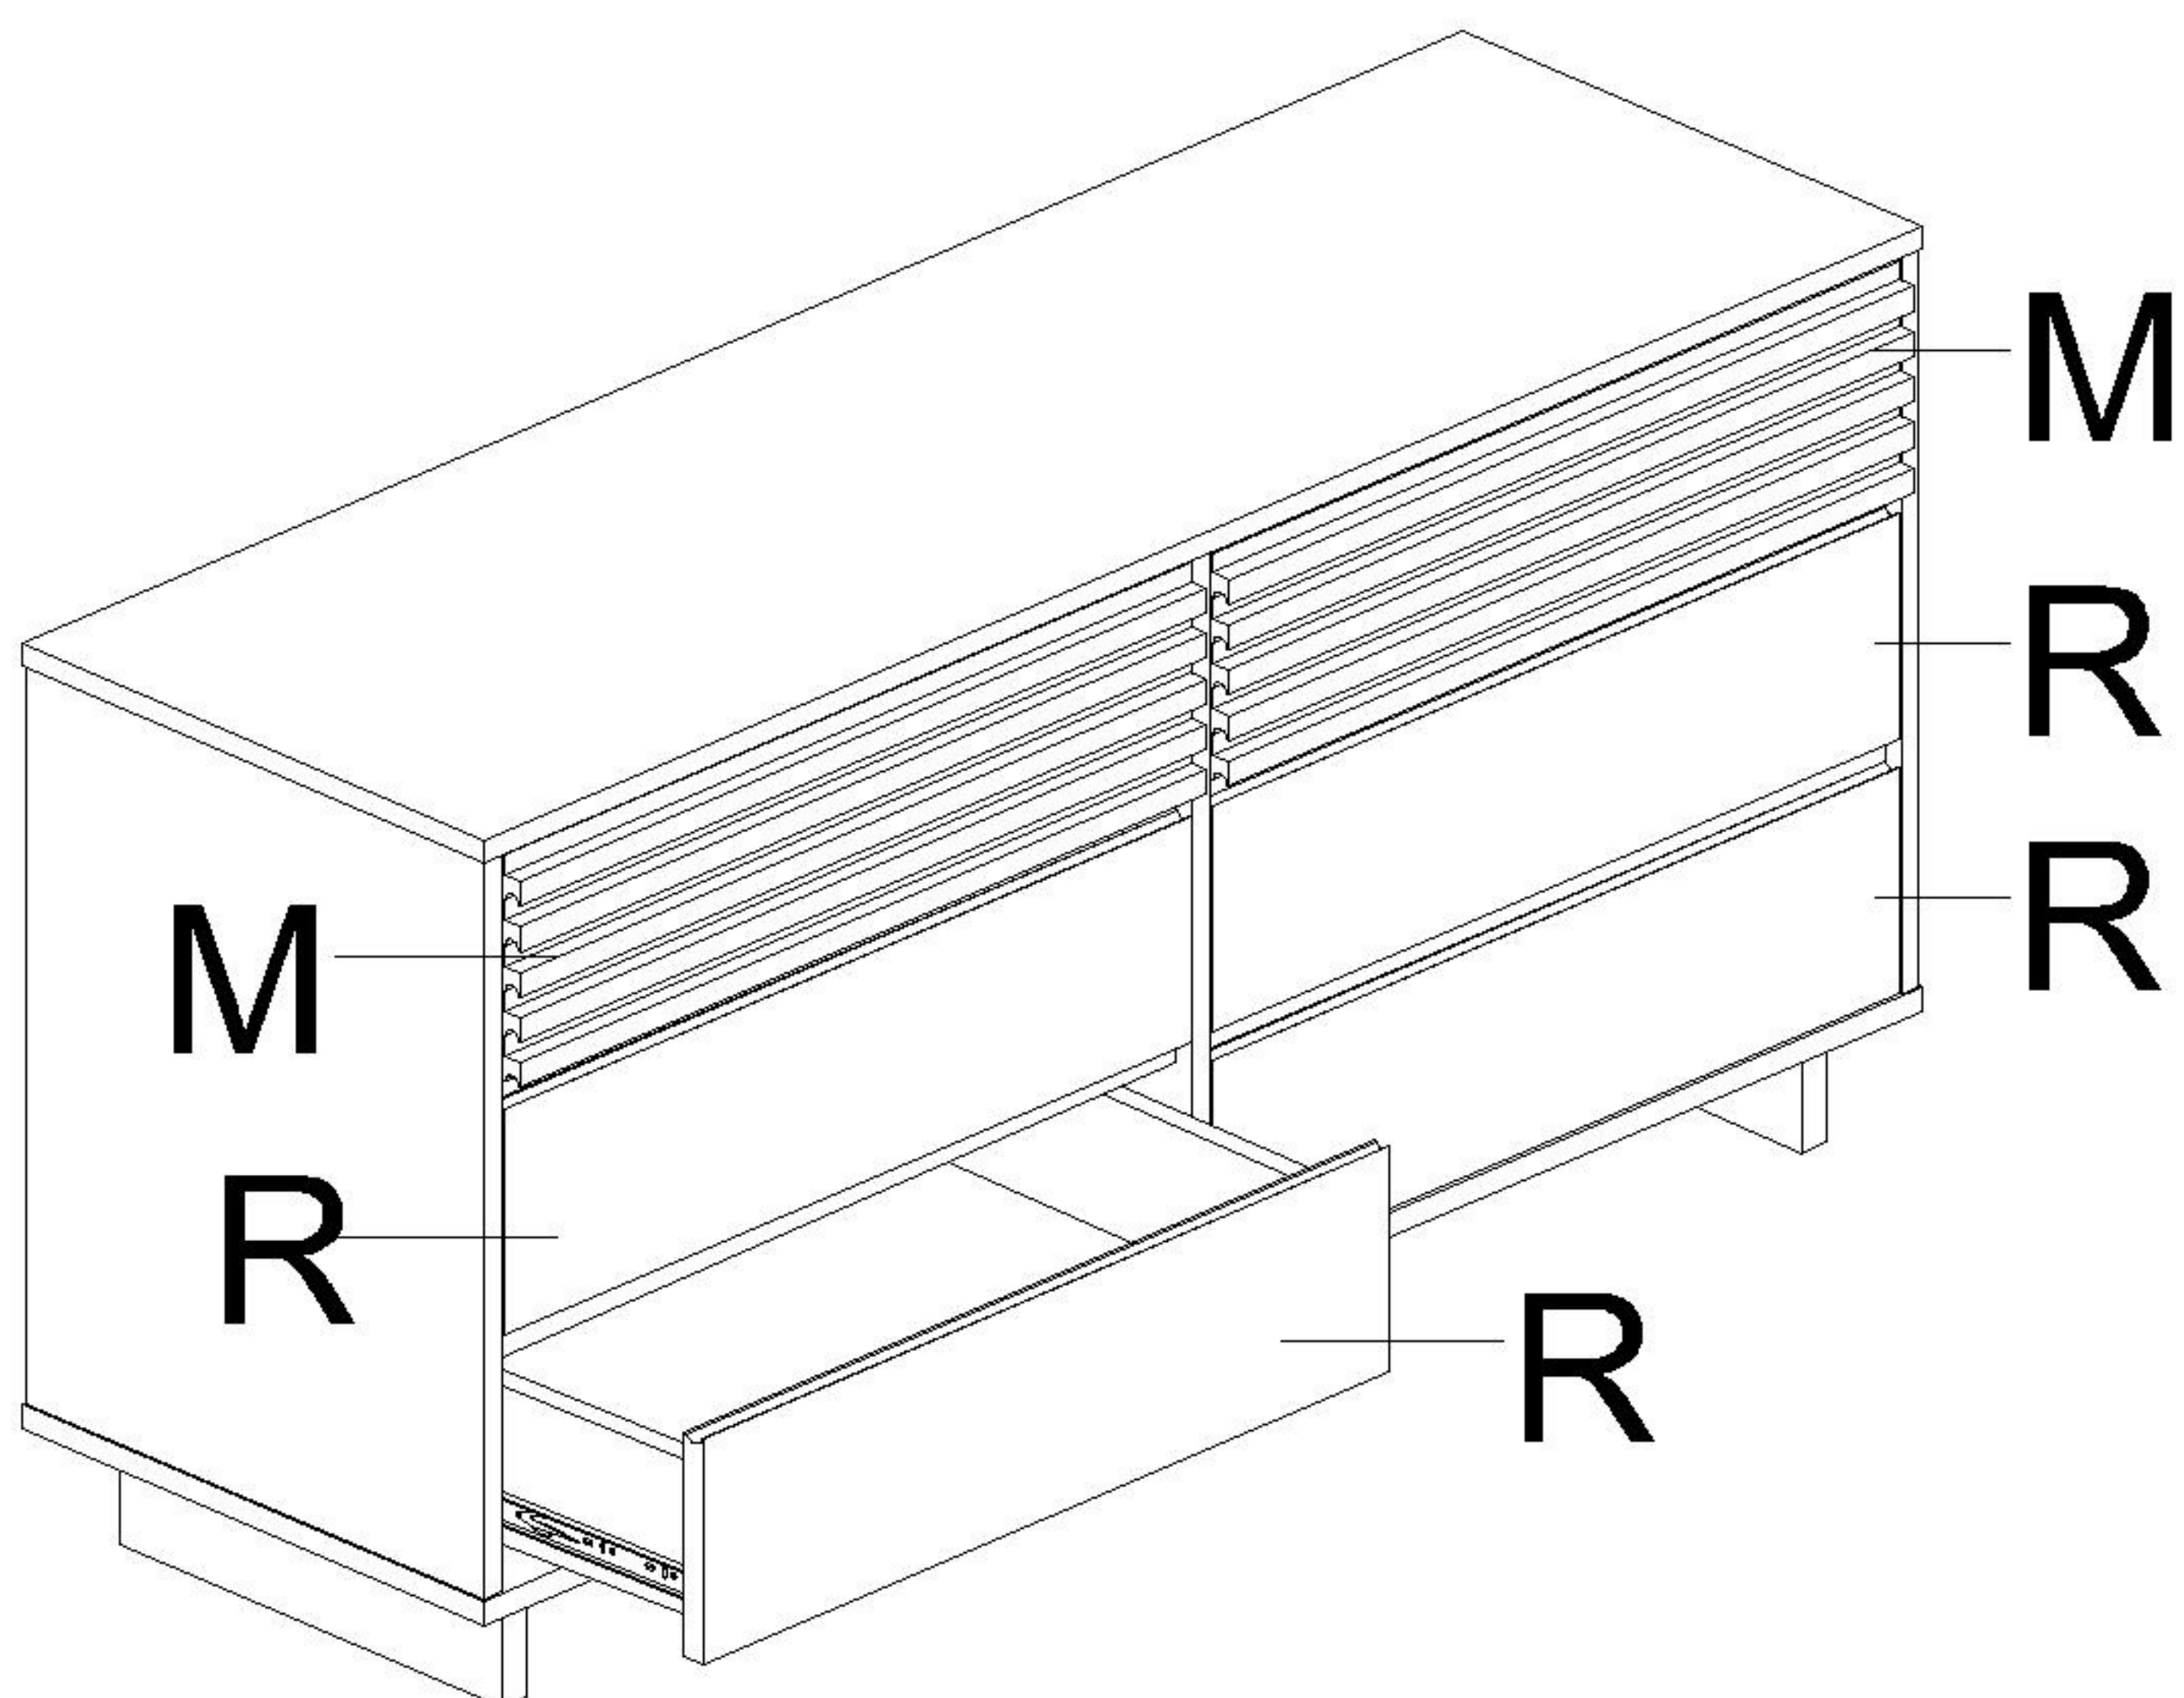 


EXTENSION RUNNER ASSEMBLE STEPS:

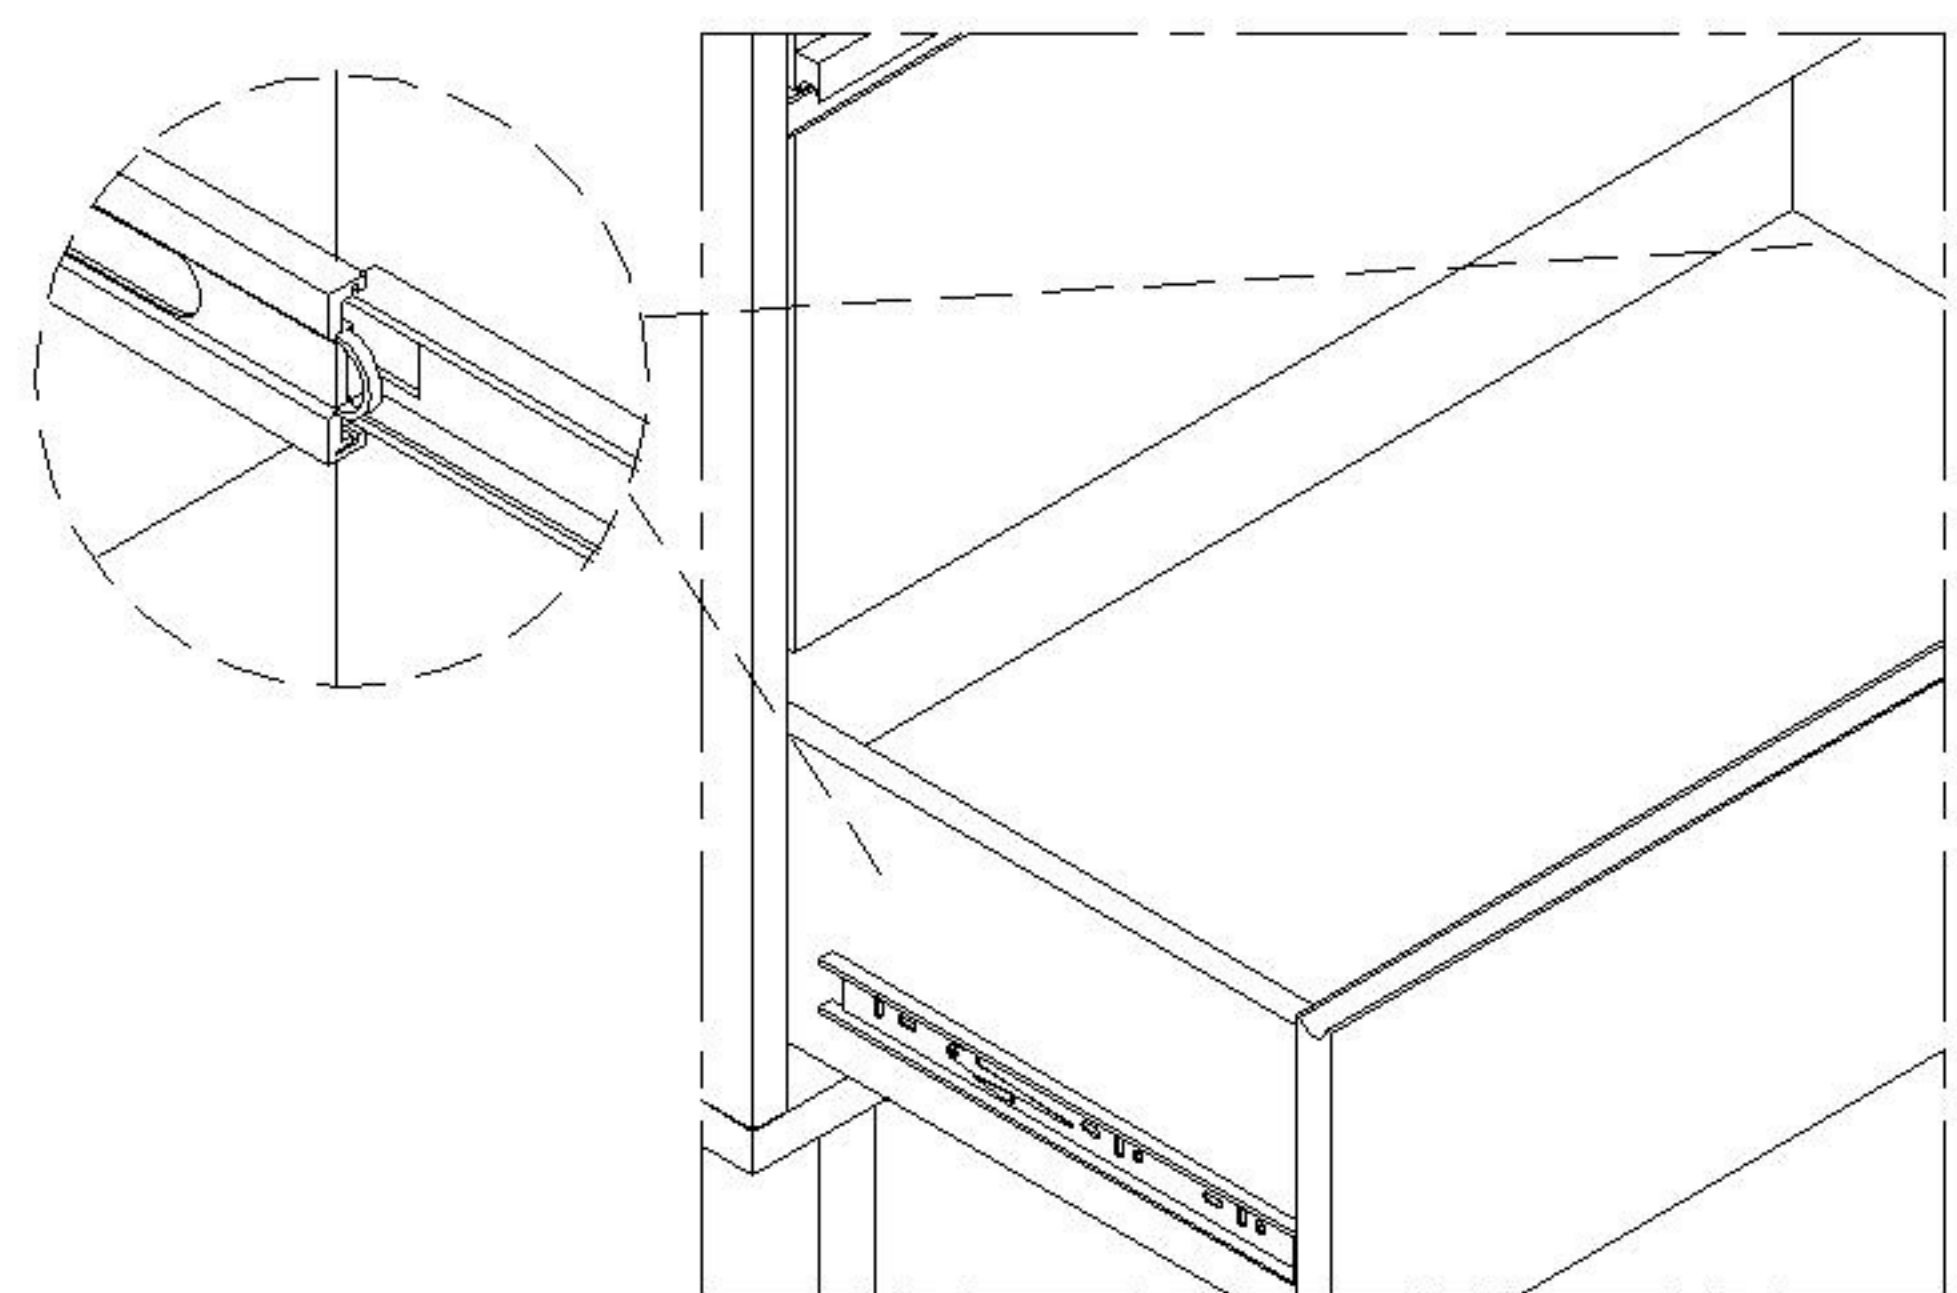 

NOTE : Align and pull/push the triggers on both sides of drawer box into the metal track on interior side of side panel.

 - 21** Attach Anti-Tipping Kit (AB) to wall. Attach Bracket (vertically) to wall using the Long Screw provided. Attach Bracket (vertically) to furniture back (directly below top) with Short Screw. Place Bracket as close to center of furniture back as possible in relation to wall stud and the desired position in the room. Move furniture to its final position. Thread the strap through Bracket, and pull it tight.

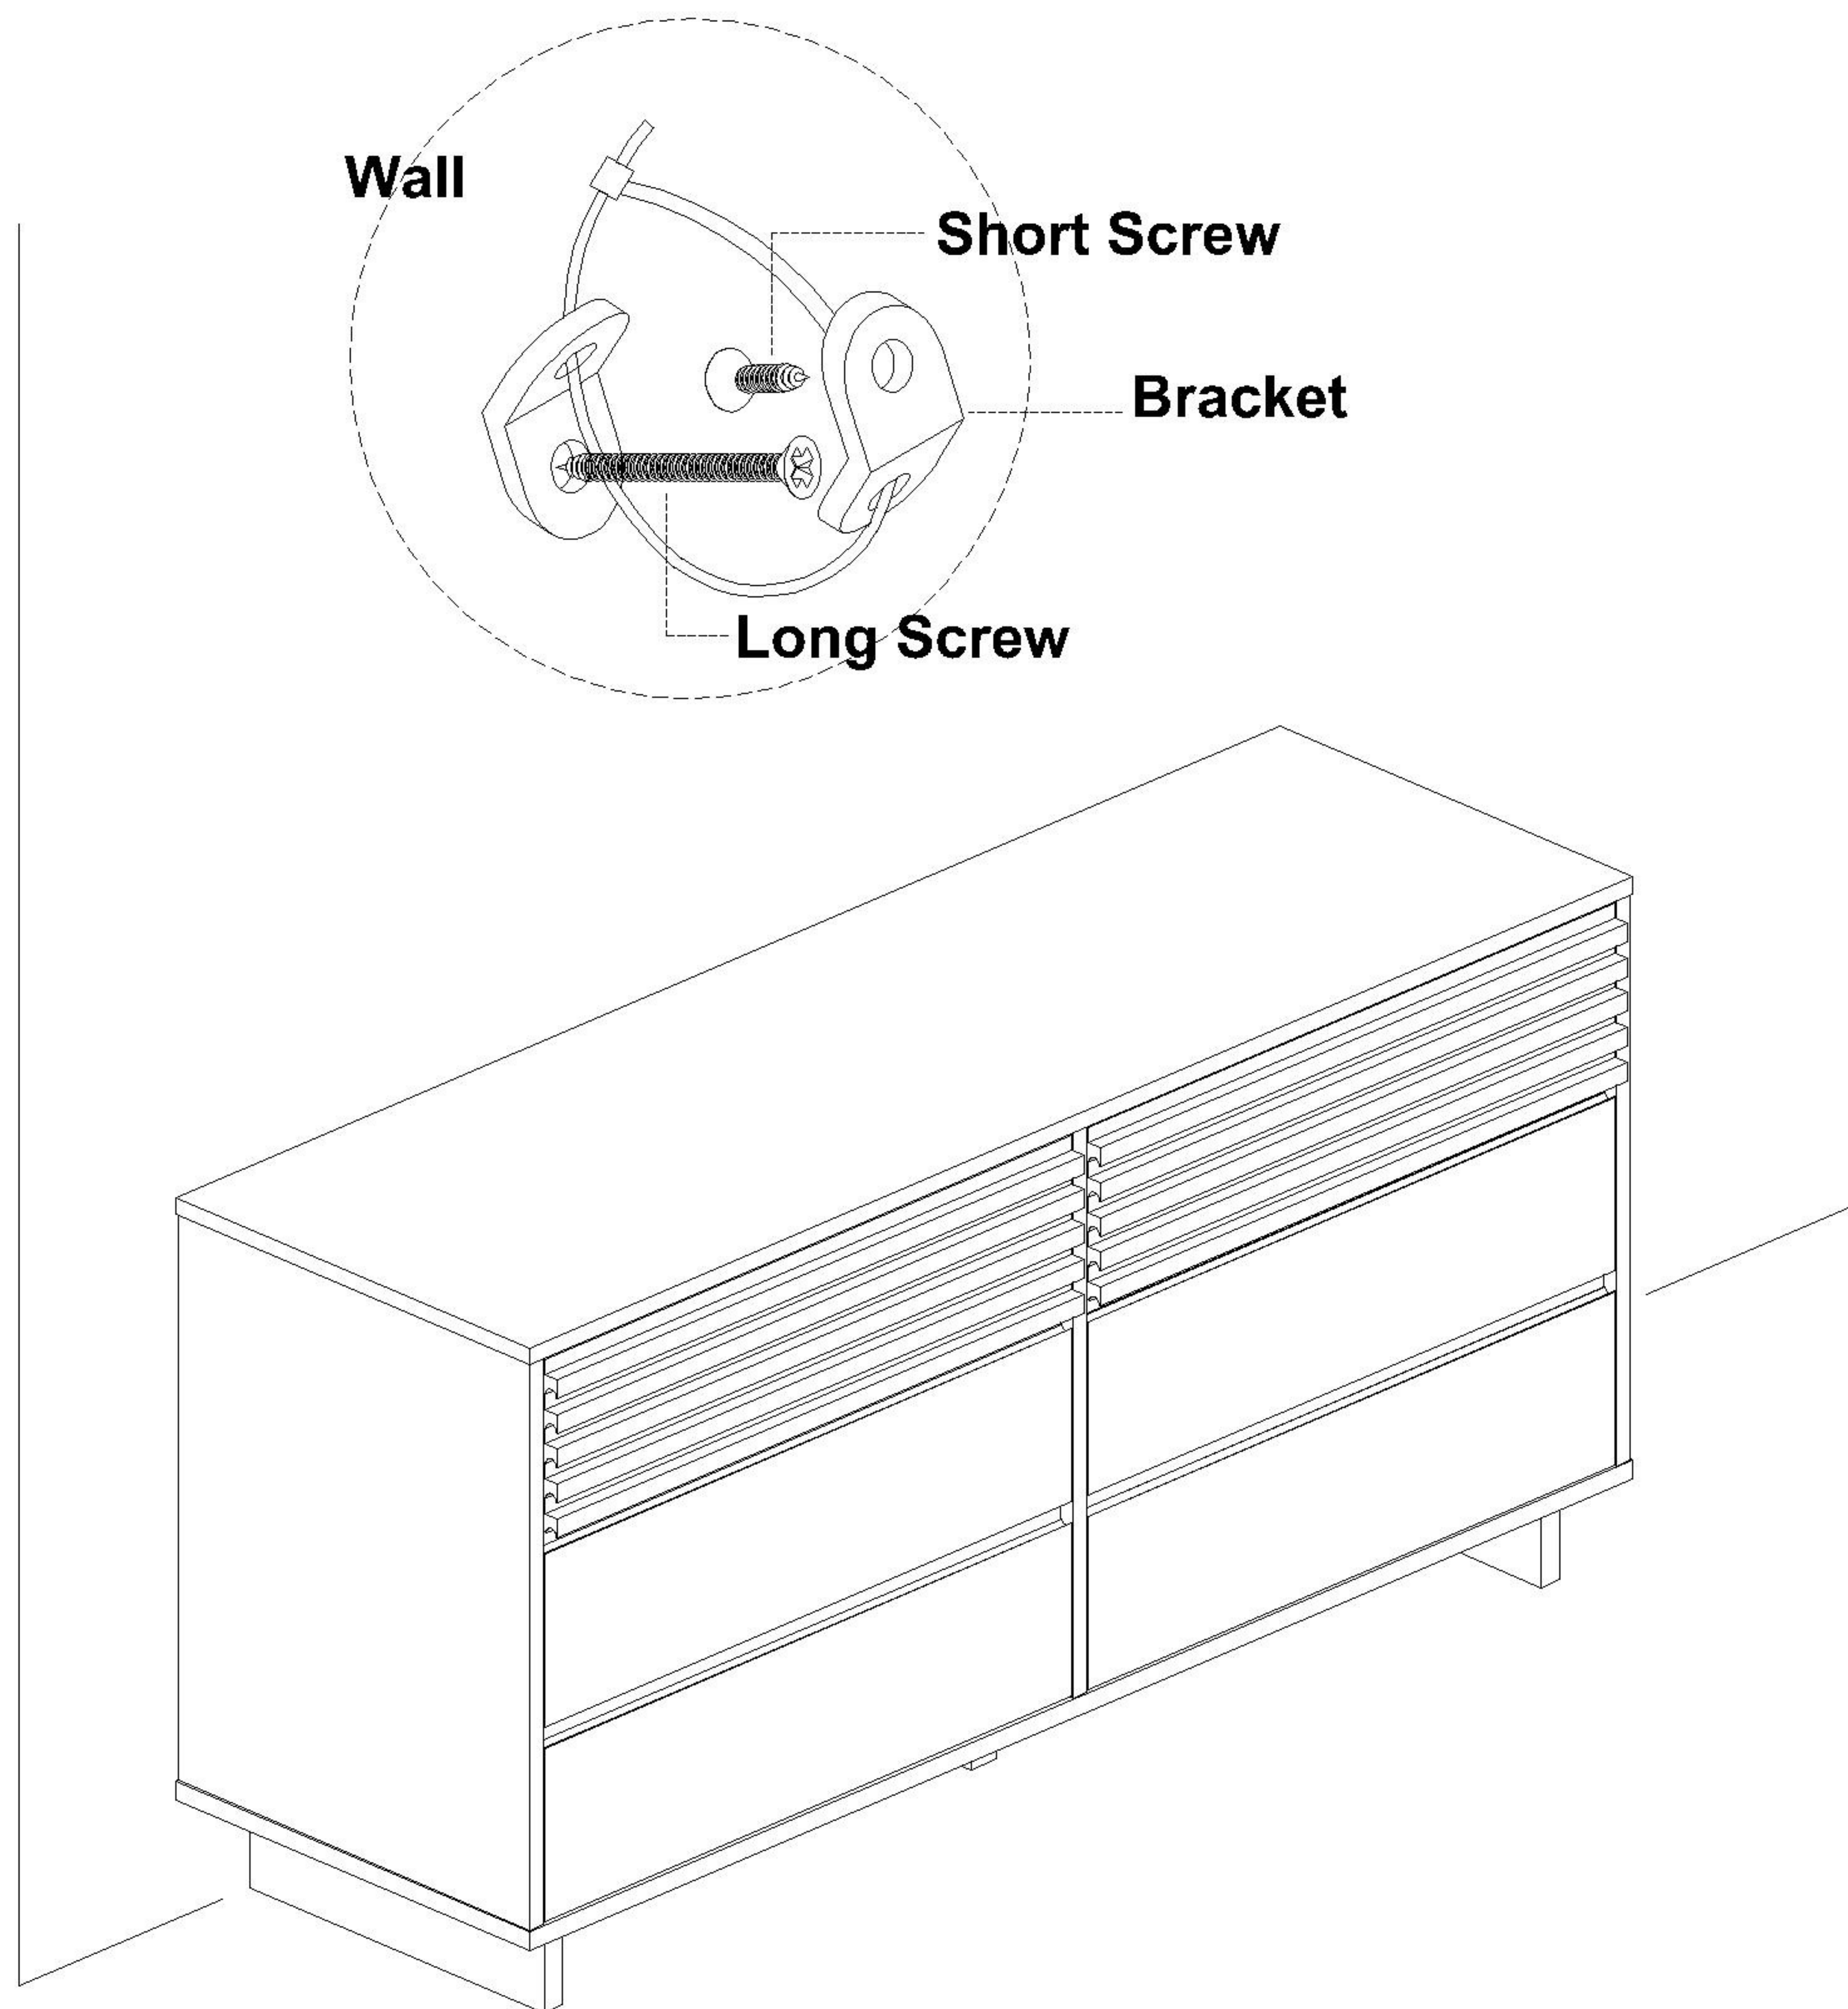

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.