# Please read these instructions carefully before assembling.

# INSTRUCTION MANUAL

# PULSE REC CORNER DINING SET


# **REC Rising Table**

### Assembly Requirements:

Number of people required to assemble – 2 Approximate assembly time – 5 minutes


#### **Dimensions:**

160\*90\*44/67cm

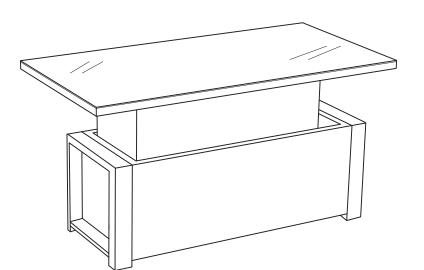

## **COMPONENT PARTS**


Please check if you have all the parts as listed below. Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

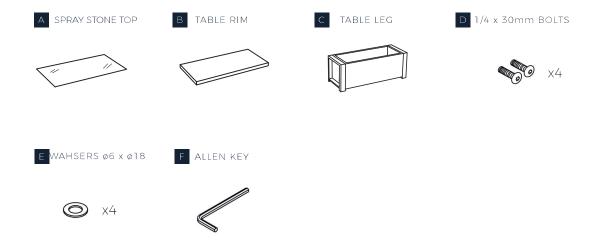

## **ASSEMBLY INSTRUCTIONS**


#### STEP 1

Ensure all the parts are at the correct positions, using the allen key (Part H) to tighten up all the bolts.

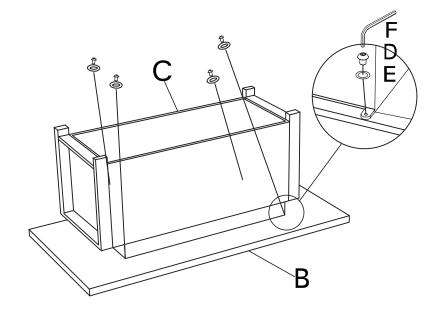

#### STEP 2

Carefully turn the assembled Sofas, and double check all the bolts are fully tightened. And put the glass top onto the table top.

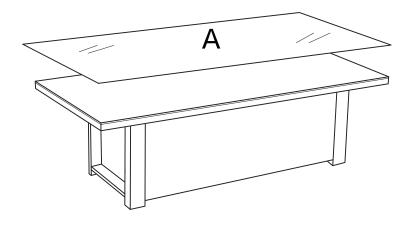


#### STEP 3

Two people required.

Each person place a foot into the edge of the table, carefully lift the table top (Part A) so it separates from the table base (Part B).

Gently move the table top up and move to a upper position, then clip into place in the lower plastic buckle.

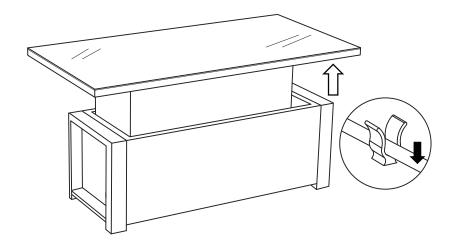

#### STEP 4

# Safety and Care Advice

#### KEEPING OOUTDOOR FABRIC LOOKING ITS BEST IS SIMPLE AND EASY.

- Use a sponge or soft brush to apply mild soap and warm water to the fabric.
- · Rinse thoroughly.
- Air dry.

#### FOR STUBBORN STAINS OR MILDEW:

- · Add one cup of bleach per gallon of soap and water.
- · Apply directly to the stain.
- Use a sponge or soft brush to clean.
- · Rinse thoroughly.
- Air dry.
- If necessary, repeat with additional bleach.

Always rinse thoroughly. Bleach won't harm the fabric, but it could damage clothing if not rinsed away.

All-Weather fabric air dries very quickly. Machine drying is unnecessary and high heat may damage the fabric.