

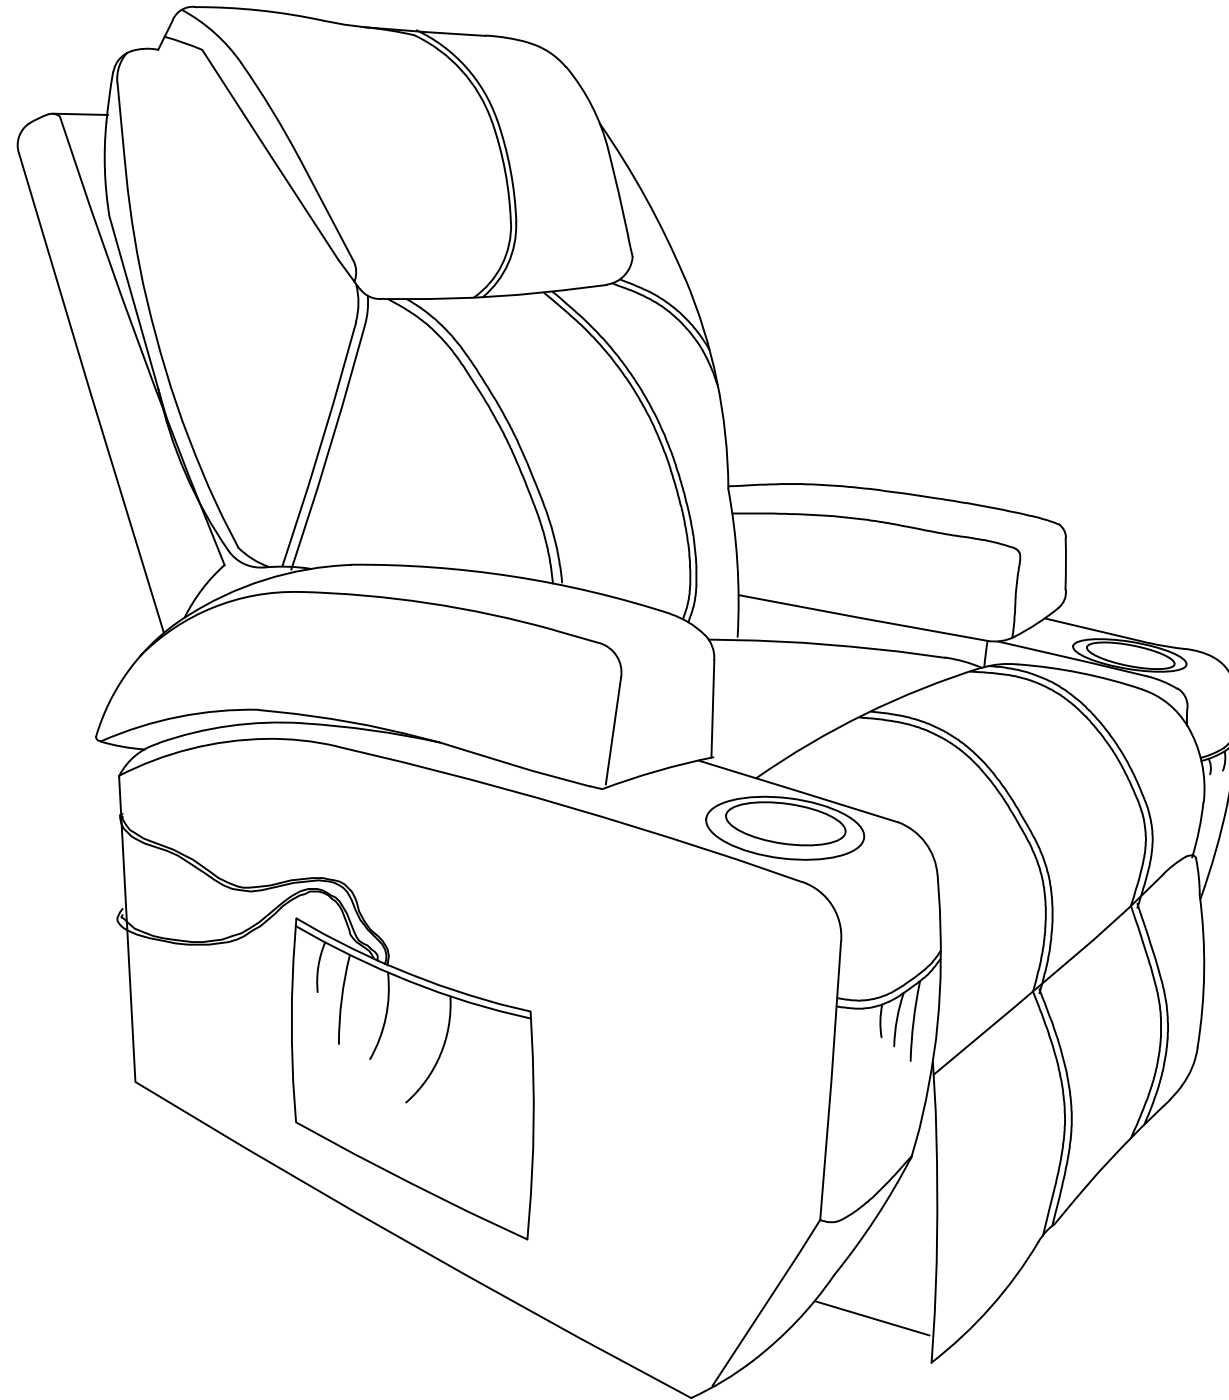


User Manual

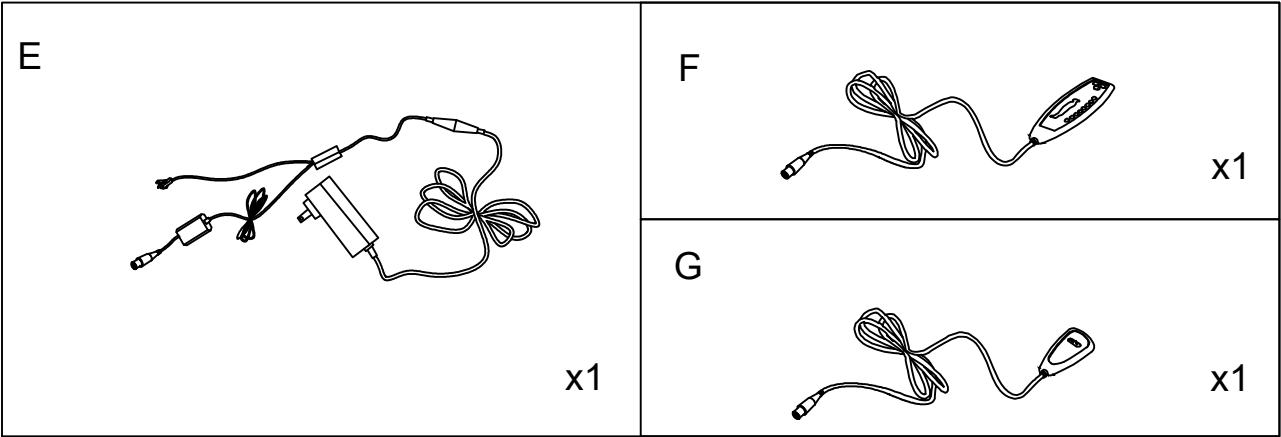


Component List

NOTICE:
The wings are placed in the under the chair bottom. Please take the wings with care.

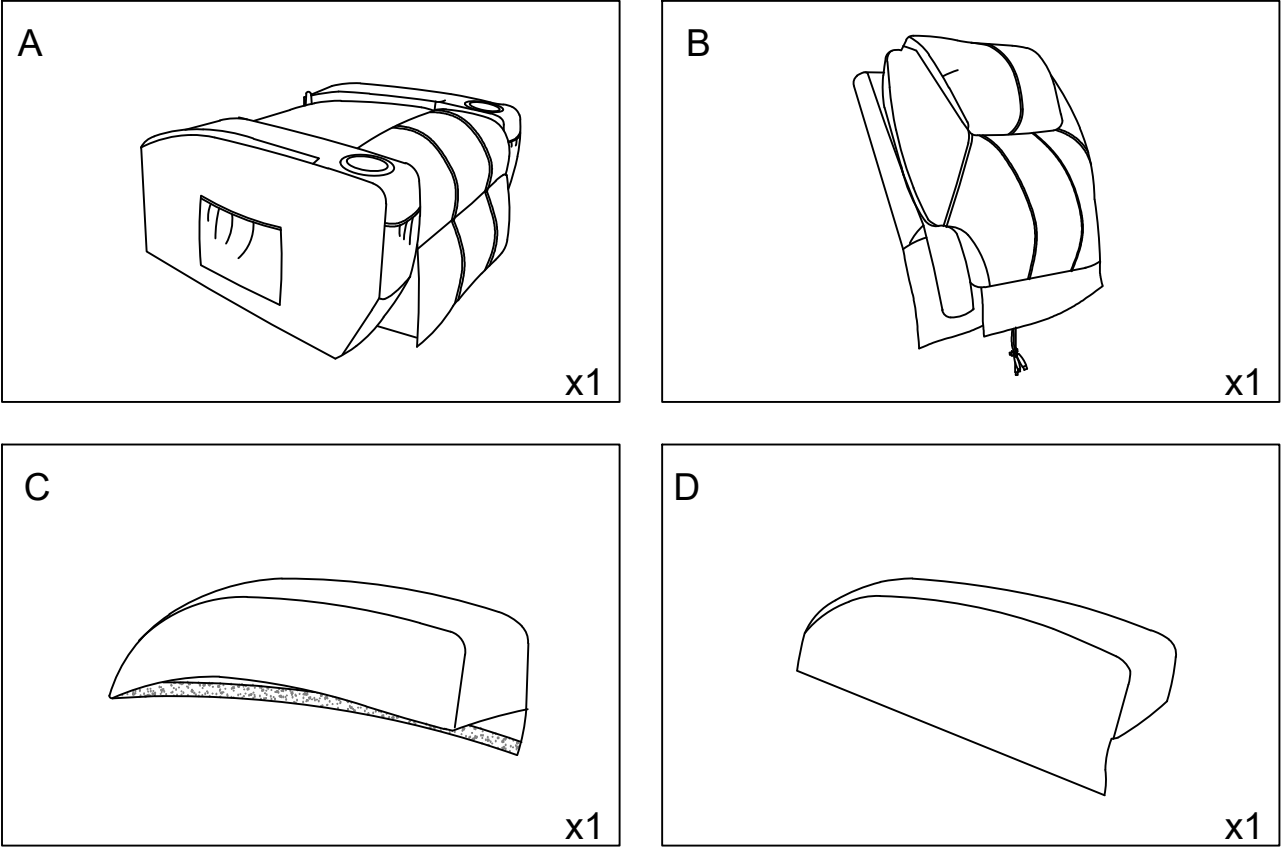


Assembly Instructions

1
Open the Bottom box, remove Cardboard Paper (see sketch as shown below) before assembly.

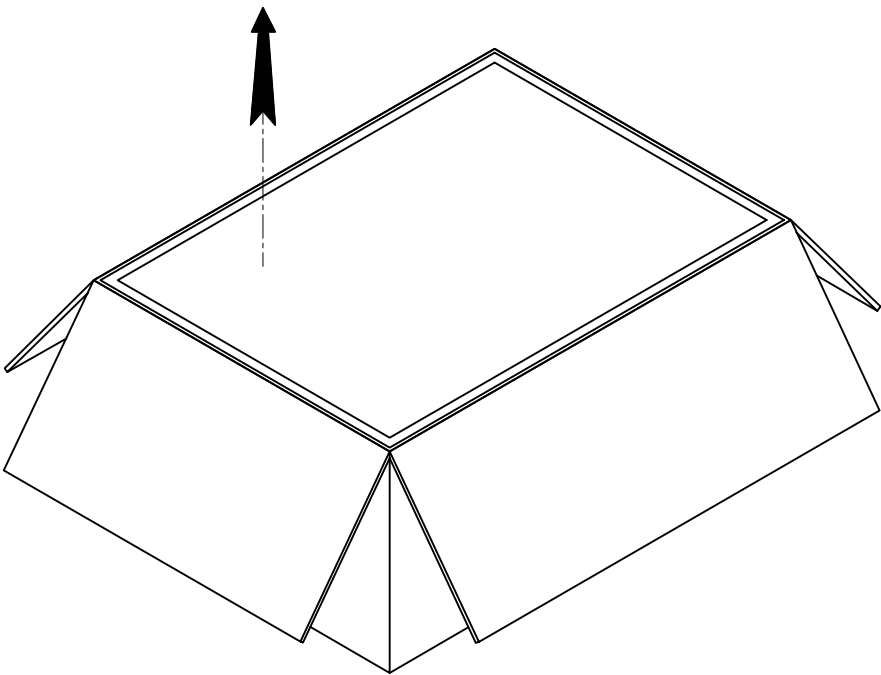


2
Take the Arm top (C + D), small box in the chair bottom

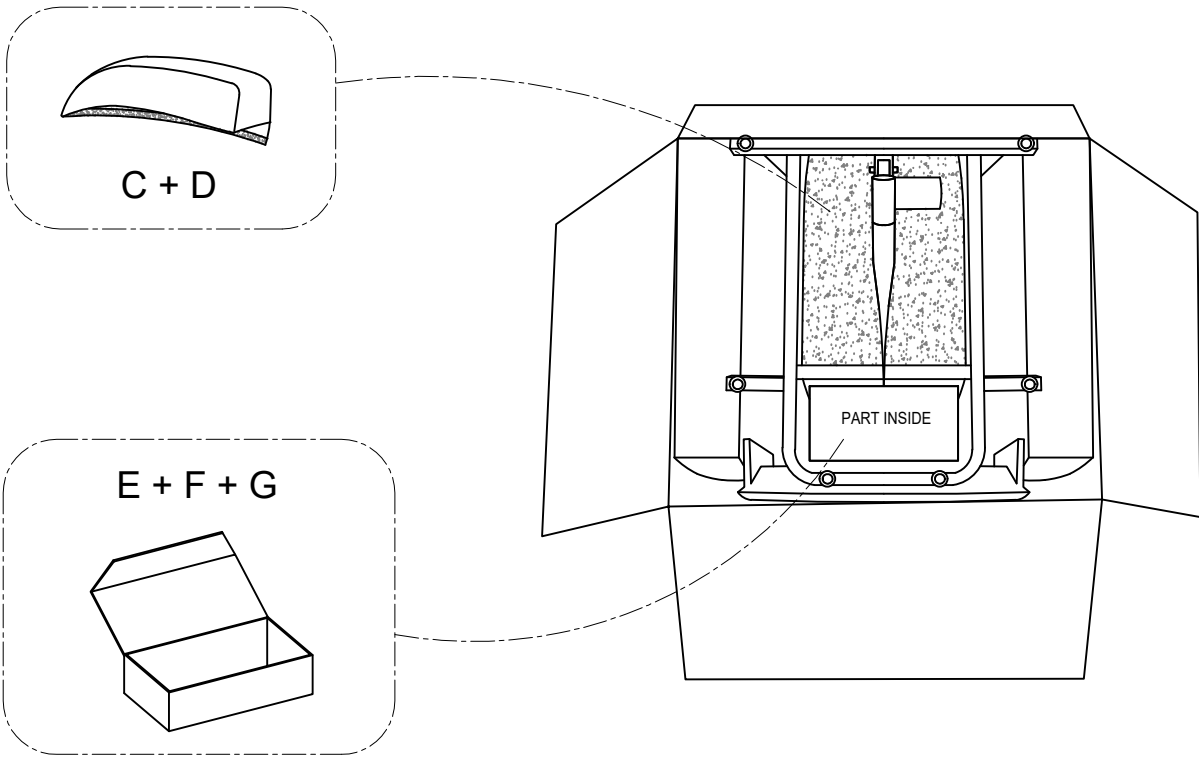


3

Turn over 180° the box and remove the box

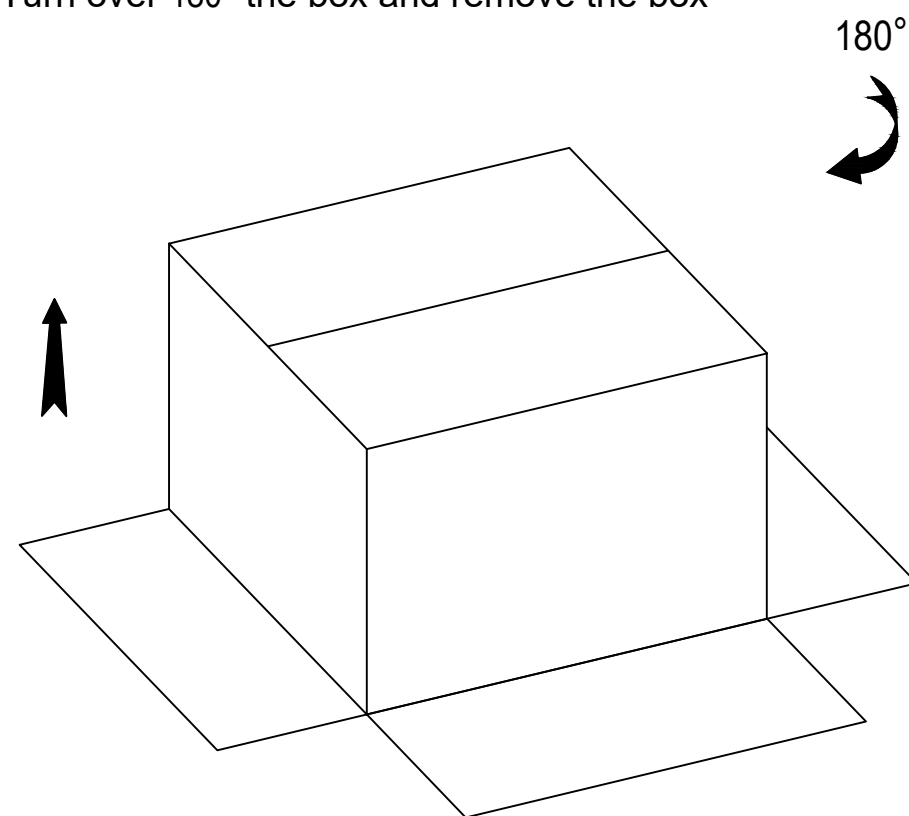


4

Take the Backrest (B) from the chair

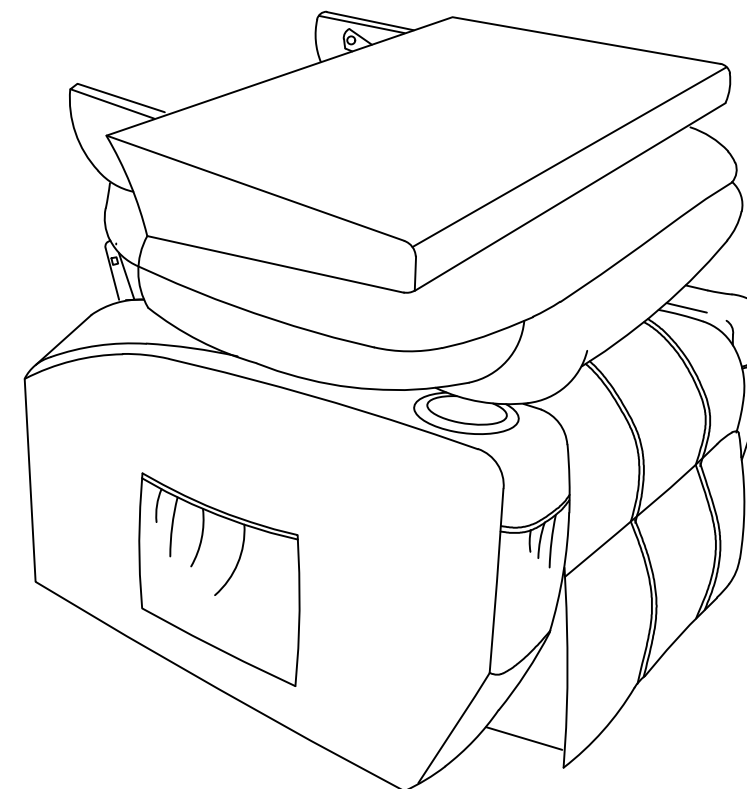


5

Insert the small Armrest (C / D) into the seat
Attach the Velcro

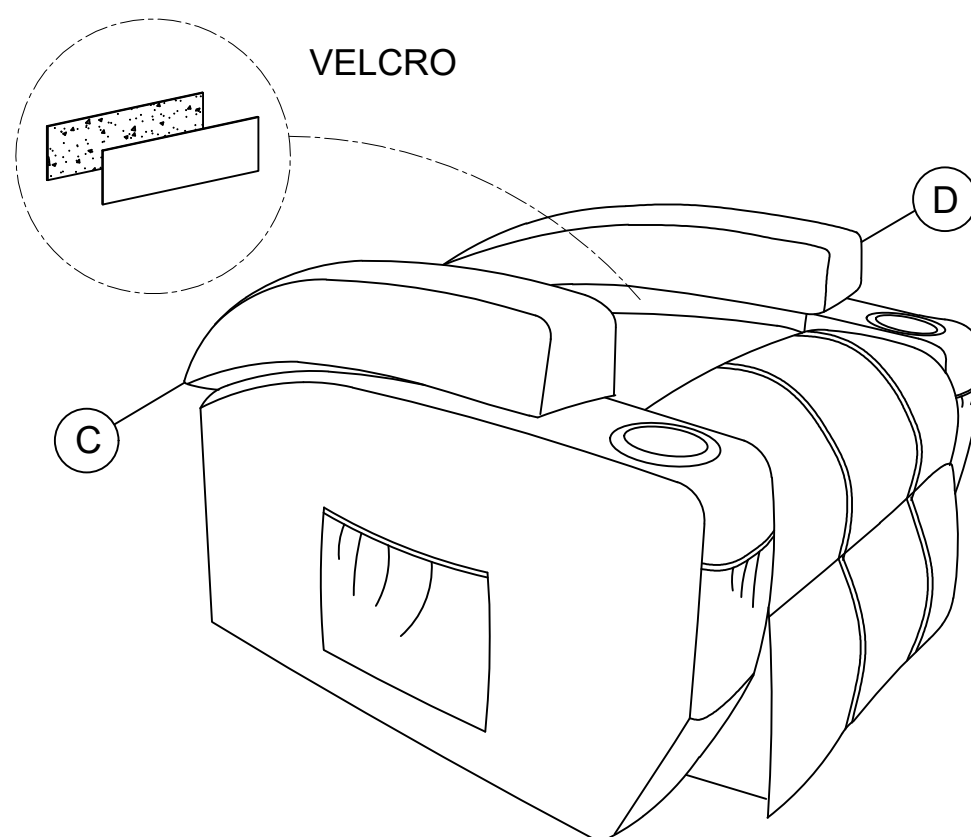


6

Get the Backrest (B) into the Seat (A). Gently push down until the back locks into position.

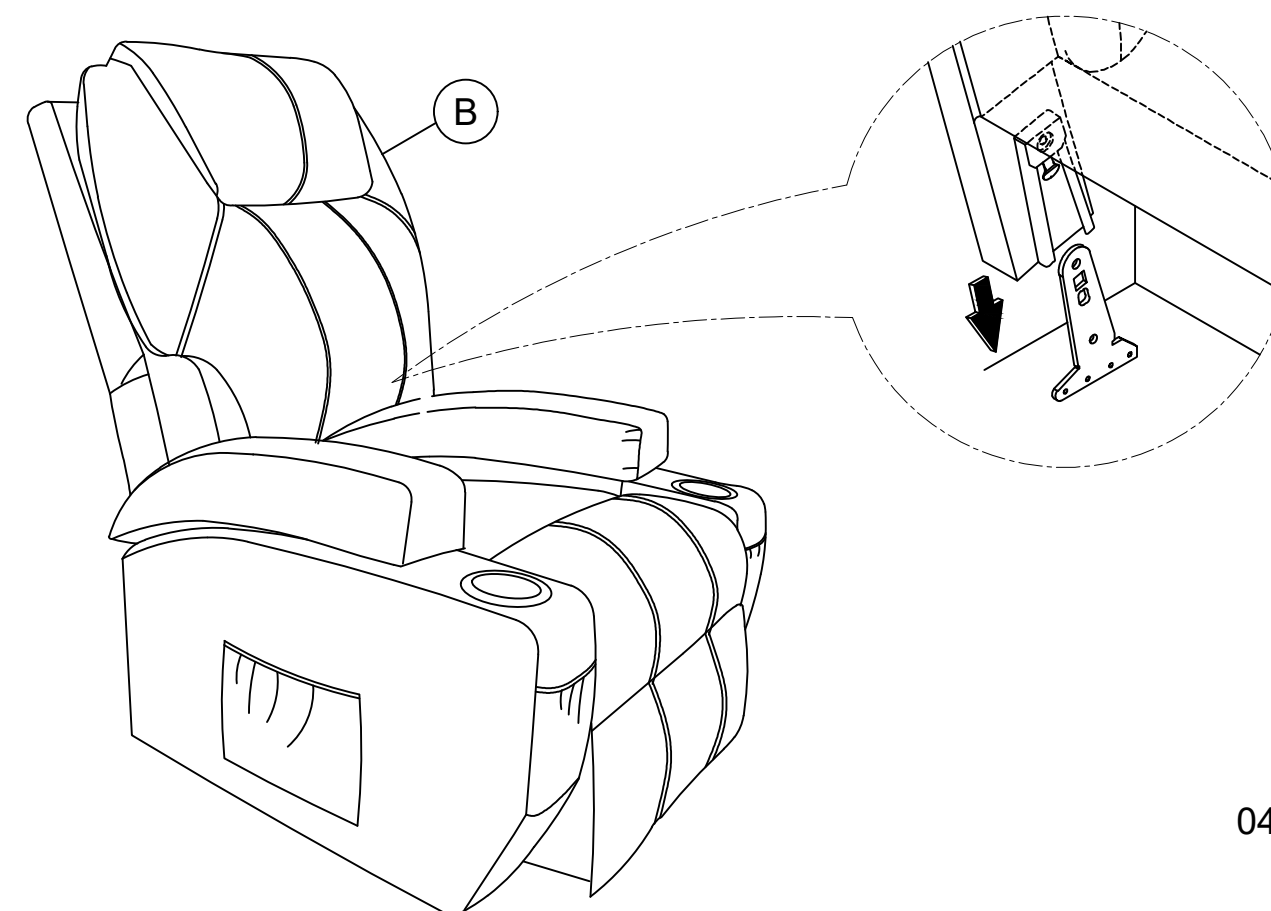


7

Attach the Velcro from behind Chair

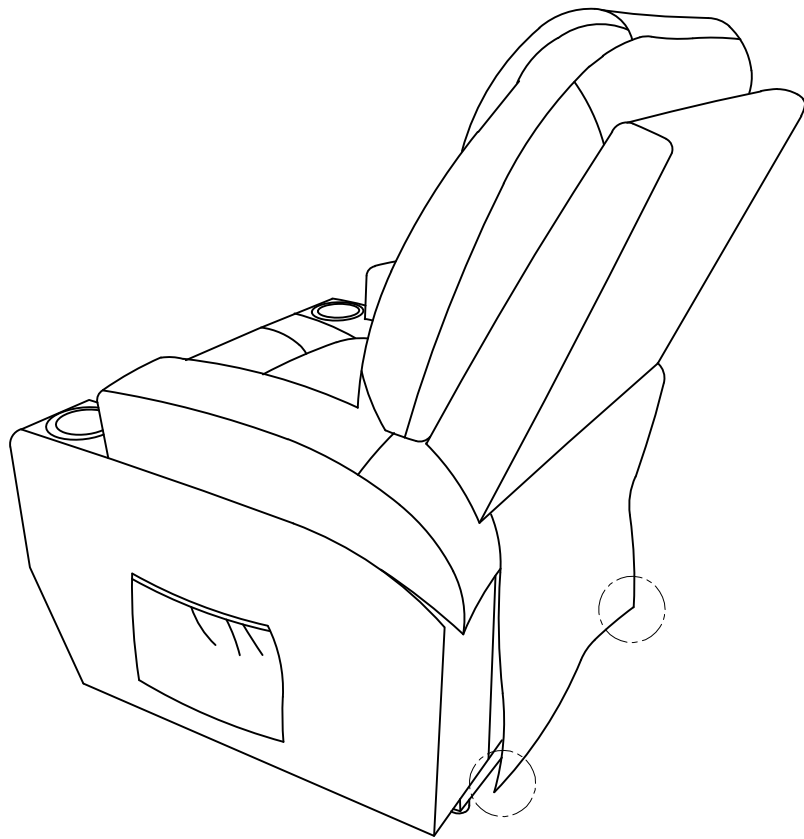


8

Connect the plug line with the switching power line white to white, red to red.

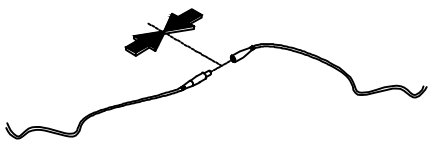


Red to Red

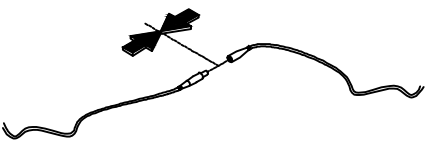


White to White


Connect the plug line with the switching power line.

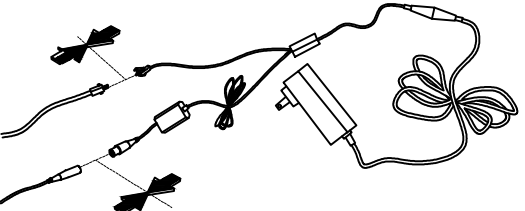


E

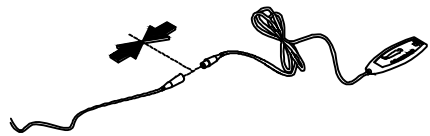


F

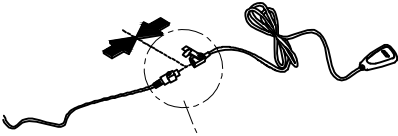


G

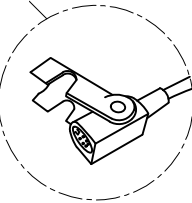

The G connector has one corner that is square

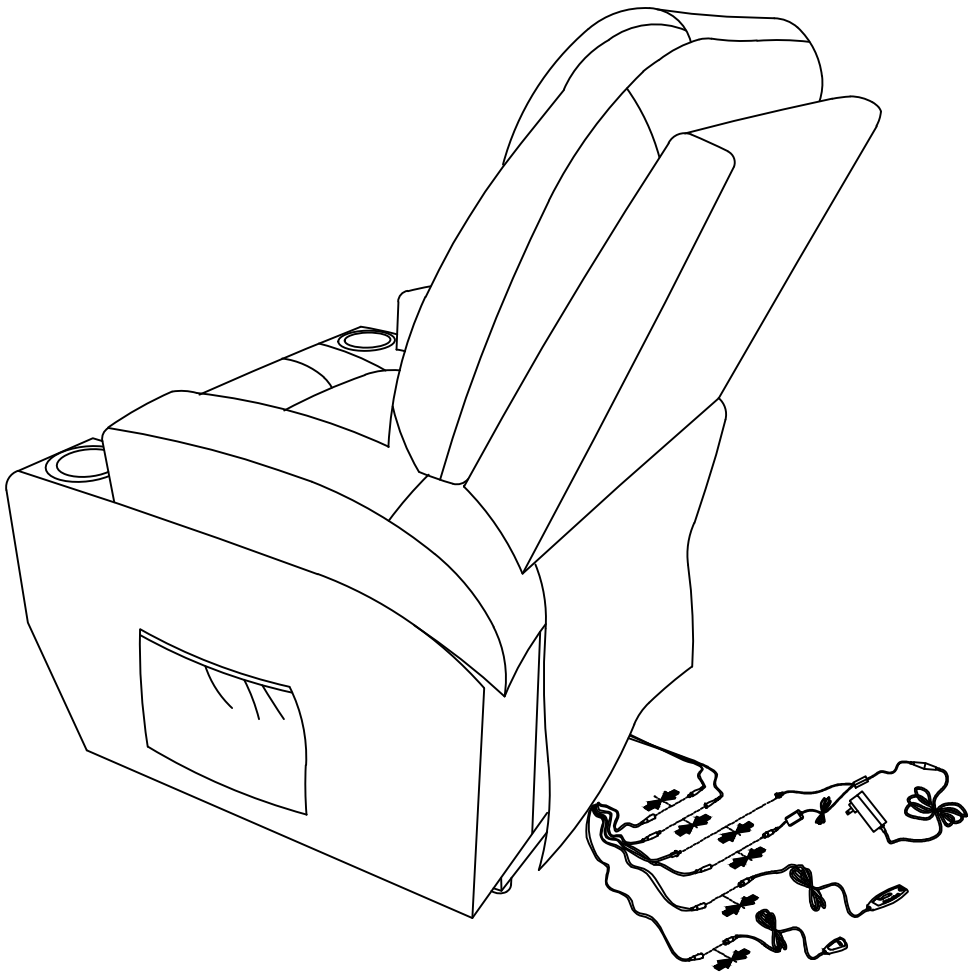

Use the controller to adjust the reclining angle

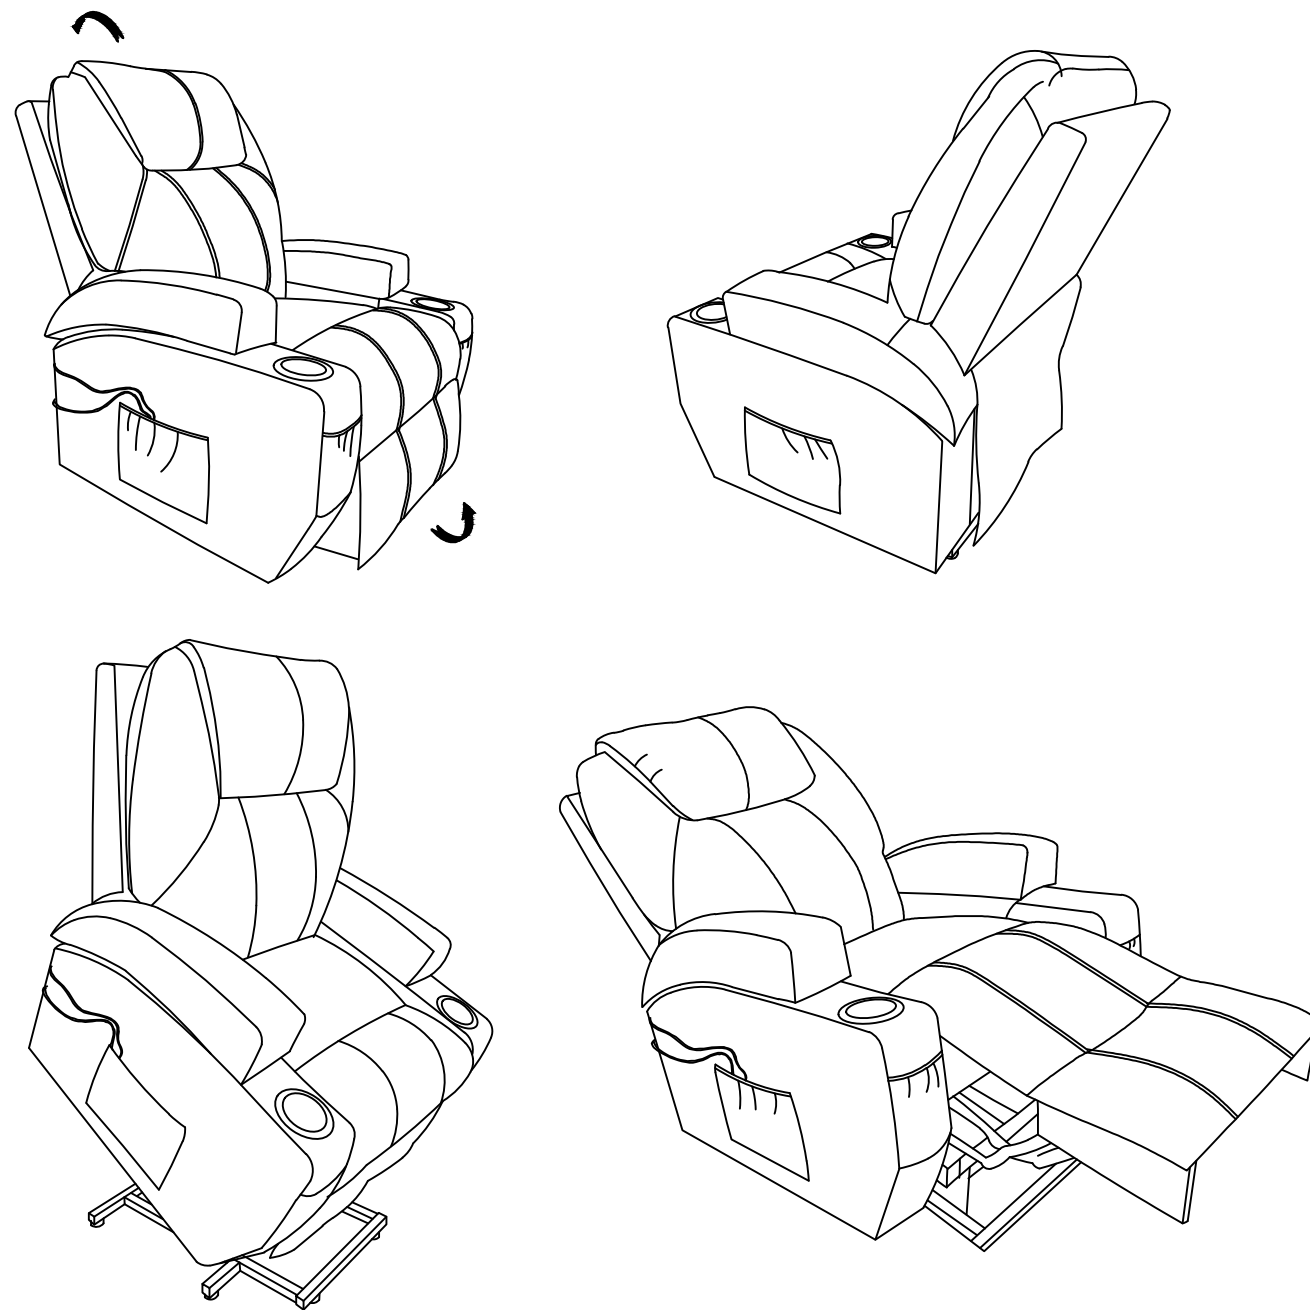

Warning

1. Do not stand on this chair. Do not use this chair as a step ladder.
2. Use this chair only for seating one person at a time.
3. Do not use this chair unless all bolts, screws and knobs are firmly secured.
4. Check all bolts, screws and knobs on a regular basis.
5. This chair should not be use with damaged or missing parts. Contact an authorized service provider to repair or replace parts damaged or missing.
6. Failure to follow these warnings could result in serious injury.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Make sure the product is connected to an outlet having the same configuration as the plug.
2. Always unplug the function sofa from the power source after use, and before cleaning.
3. Do not reach for function sofa if it has fallen into water. Unplug immediately.
4. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
5. Do not use outdoors.
6. Do not carry this appliance by supplied cord as a handle.
7. Keep the cord away from heated surfaces.
8. Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
9. This unit is not a toy. Children should not use it or play with it.
10. Make sure all functions stopped, then remove plug from outlet.
11. Make sure the footrest is retracted when function sofa is not in use.
12. When moving the footrest, please ensure that there are no people, pets, or obstacles nearby, otherwise accidents such as collisions or crushing may occur.
13. Do not jump on the footrest or on the sofa as it may cause damage or injury.
14. Do not stand or sit on the footrest when it is extended, as this may cause the frame to break or flip over.
15. The product has been tested and approved for users weighting up to 300lbs per seat.
16. Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

Health Caution

1. If you have any concerns regarding your health, consult your doctor before using this product.
2. Individuals with pacemakers should not use this product.
3. If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

Maintenance Instructions

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN

1. Ensure the unit is unplugged from the power source, and allow to cool before cleaning.
 2. Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
 3. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120° to clean the unit.
- To clean the unit, make sure the function sofa is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.