

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

710978
COFFEE TABLE

ITEM:710978

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

















1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

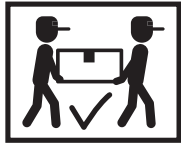

ASSEMBLY TIME

30 MINUTES

                PARTS IDENTIFICATION

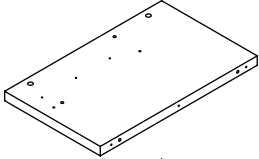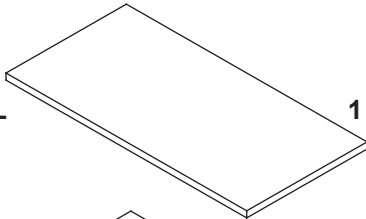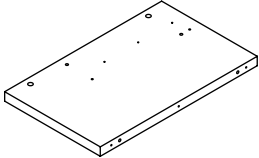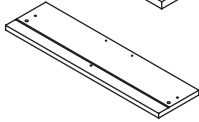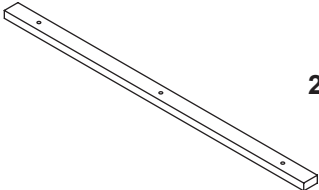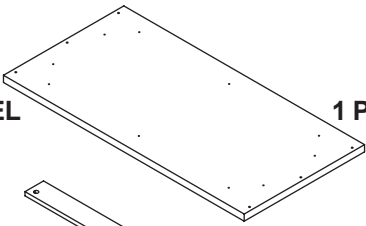
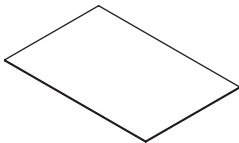
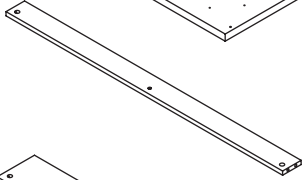

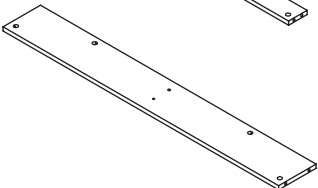
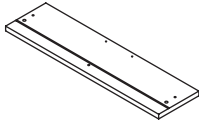
A	LEFT SIDE PANEL		1 PC	I	TOP PANEL		1 PC
B	RIGHT SIDE PANEL		1 PC	J	LEFT DRAWER FRONT PANEL		1 PC
C	MIDDLE DIVIDER PANEL		1 PC	K	DRAWER BACK PANEL		2 PCS
D	LONG DECORATIVE STRIP		2 PCS	L	LEFT DRAWER SIDE PANEL		2 PCS
E	SHORT DECORATIVE STRIP		2 PCS	M	RIGHT DRAWER SIDE PANEL		2 PCS
F	BOTTOM PANEL		1 PC	N	DRAWER BOTTOM PANEL		2 PCS
G	CROSS PANEL		1 PC	O	DRAWER BOTTOM SUPPORT		2 PCS
H	BACK PARTITION PANEL		1 PC	P	RIGHT DRAWER FRONT PANEL		1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:710978

      HARDWARE IDENTIFICATION

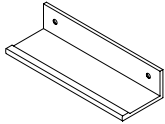
Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	HANDLE L= 120mm SR		2 PCS
2	WOODEN DOWEL Ø8x30mm		25 PCS	8	HINGE SCREW Ø4x15mm SR		4 PCS
3	CAM BOLT Ø7x35.5mm SR		18 PCS	9	RAIL L = 350mm BLK		4 PCS
4	CAM LOCK Ø15x12mm SR		18 PCS	10	RAIL SCREW Ø3.5x15mm BLK		20 PCS
5	SCREW Ø4.5x42mm SR		18 PCS	11	STICKER Ø20mm		3 PCS
6	SCREW Ø 4.3x35mm SR		10 PCS				

Z7, Z9 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 710978

 
STEP 1




1

 


2
x 5

 




3
x 2

 


9
x 1

 


10
x 3

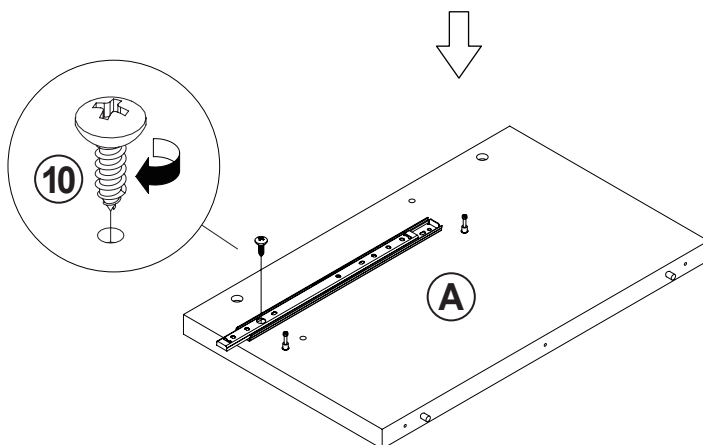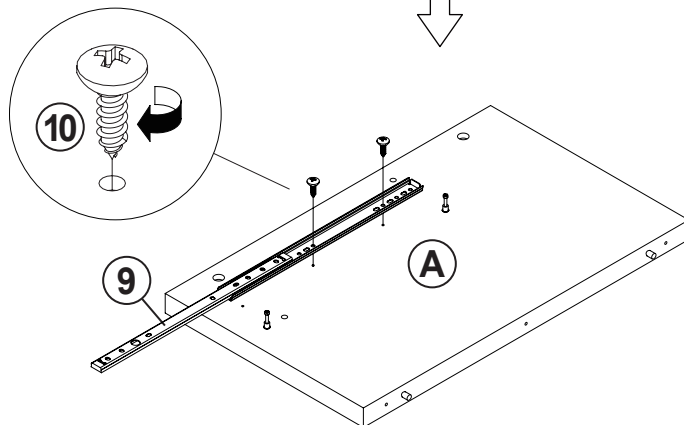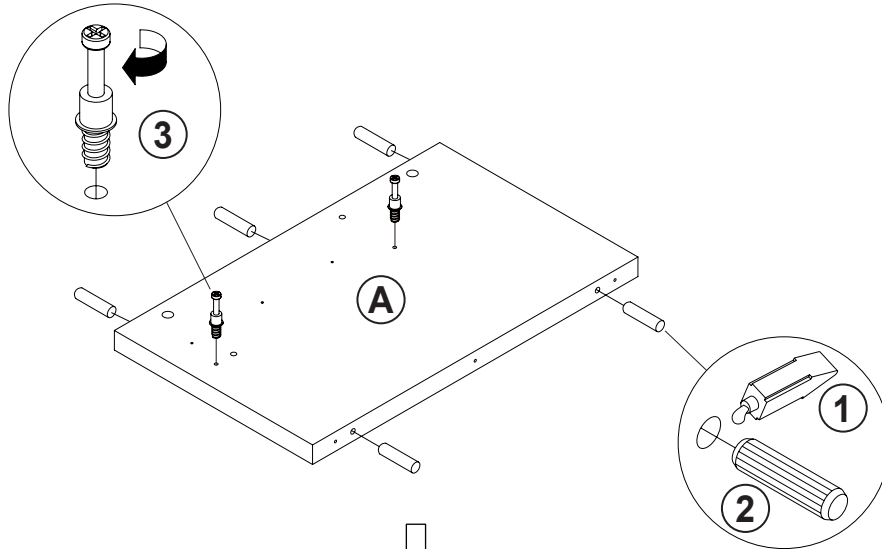   

INCORRECT
CORRECT

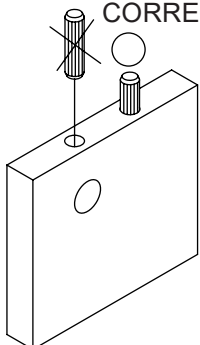 








 
Apply glue on all wooden dowels to ensure integrity of the structure.

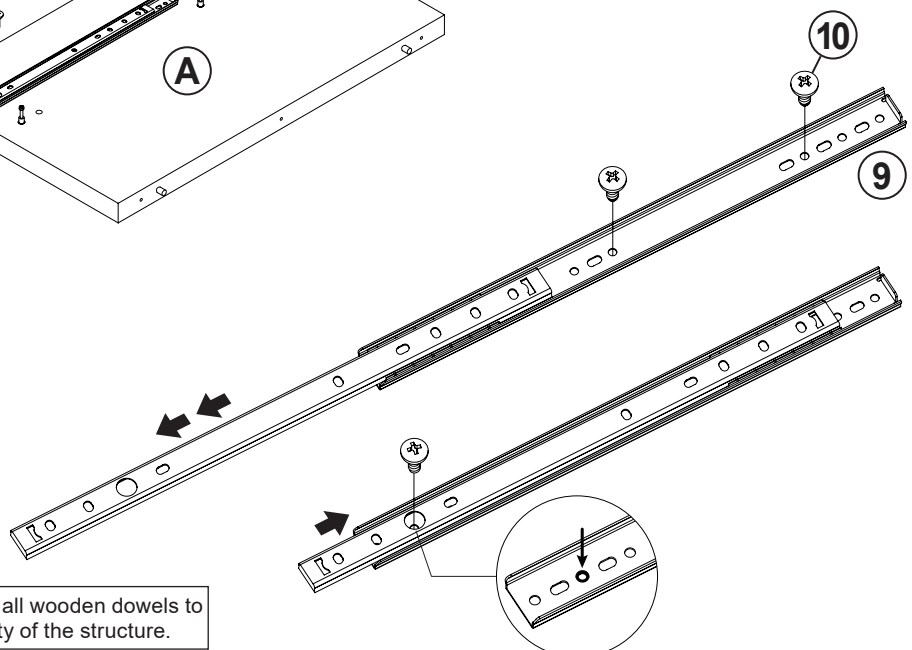



ITEM: 710978

STEP 2

        COASTER
FINE FURNITURE

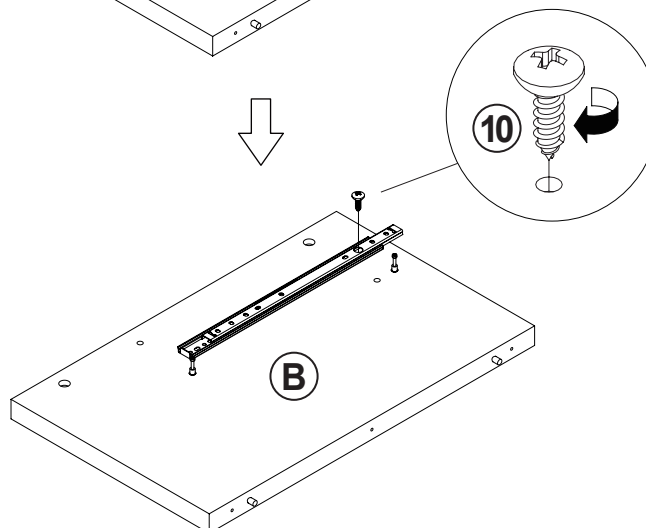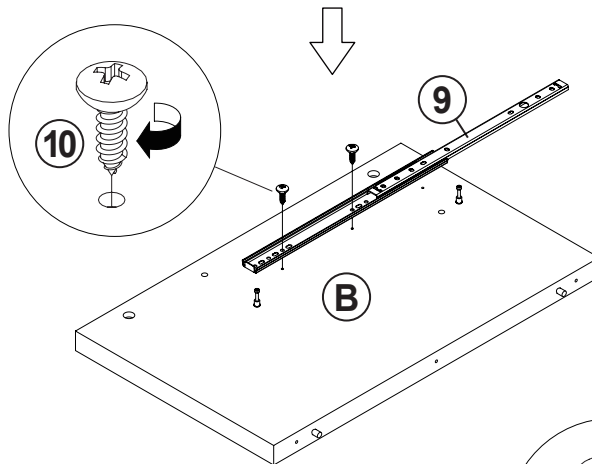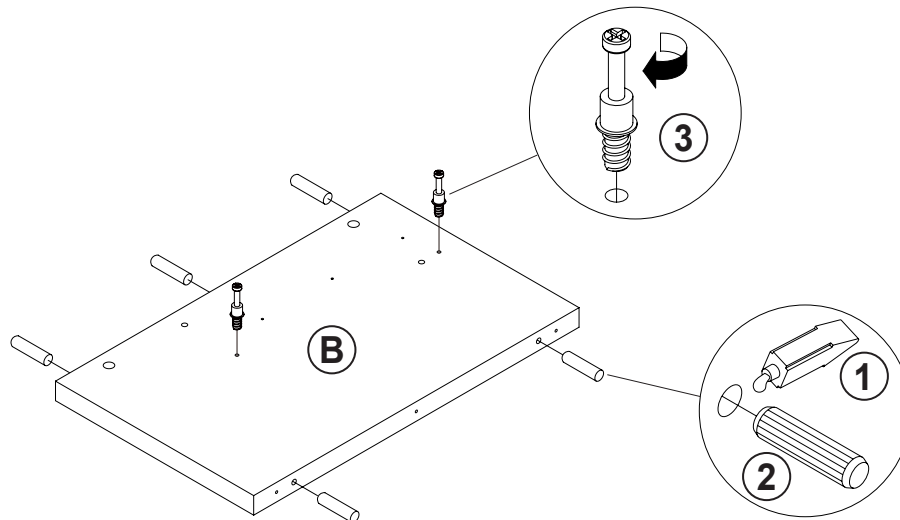

INCORRECT
CORRECT








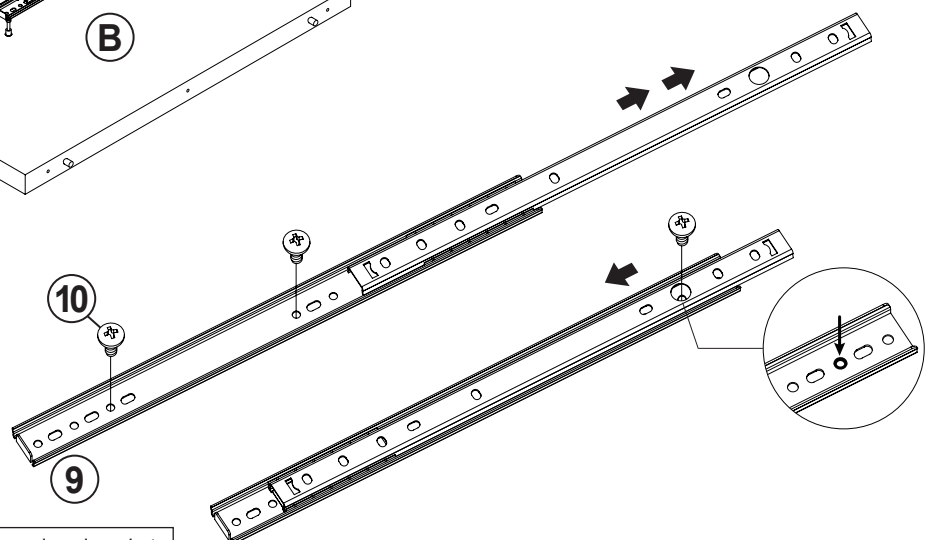 
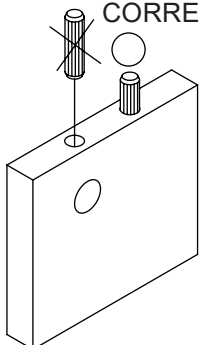 


Apply glue on all wooden dowels to ensure integrity of the structure.






ITEM: 710978

COASTER
FINE FURNITURE

         
STEP 3

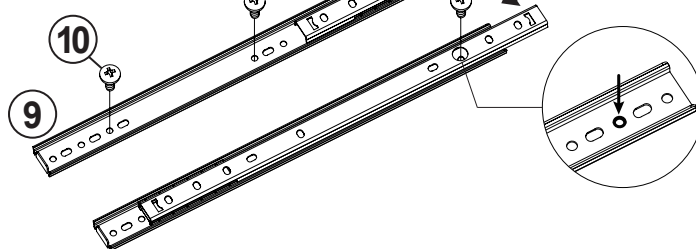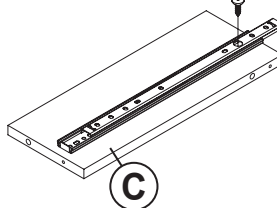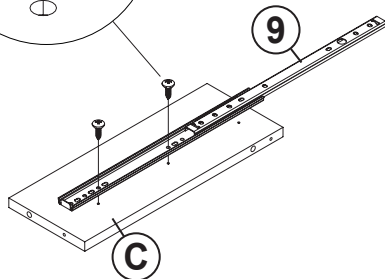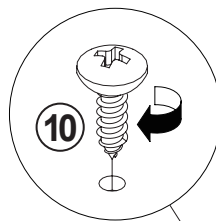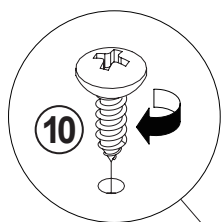

the reverse side ↓

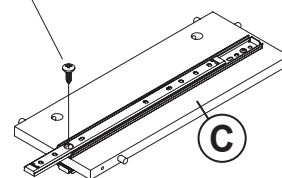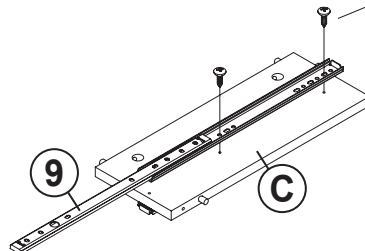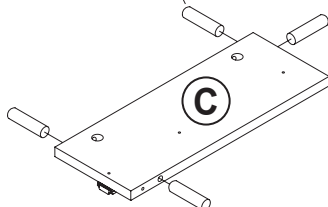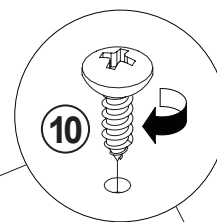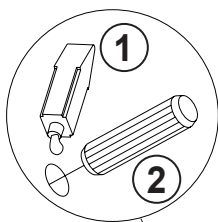     


INCORRECT
CORRECT

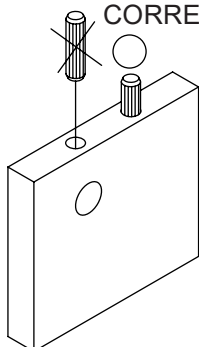 

Apply glue on all wooden dowels to ensure integrity of the structure.


 
IMPORTANT
HOLES ARE OFFSET

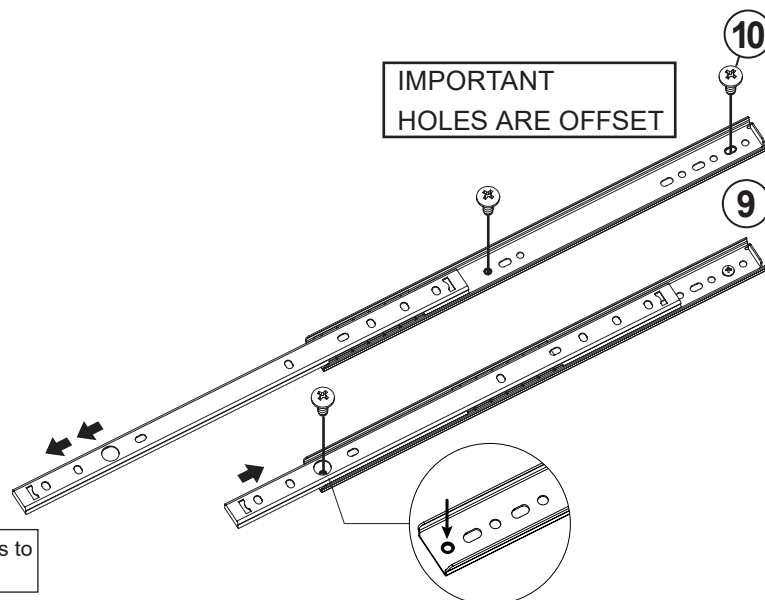




ITEM: **710978**

STEP 4

  
COASTER
FINE FURNITURE

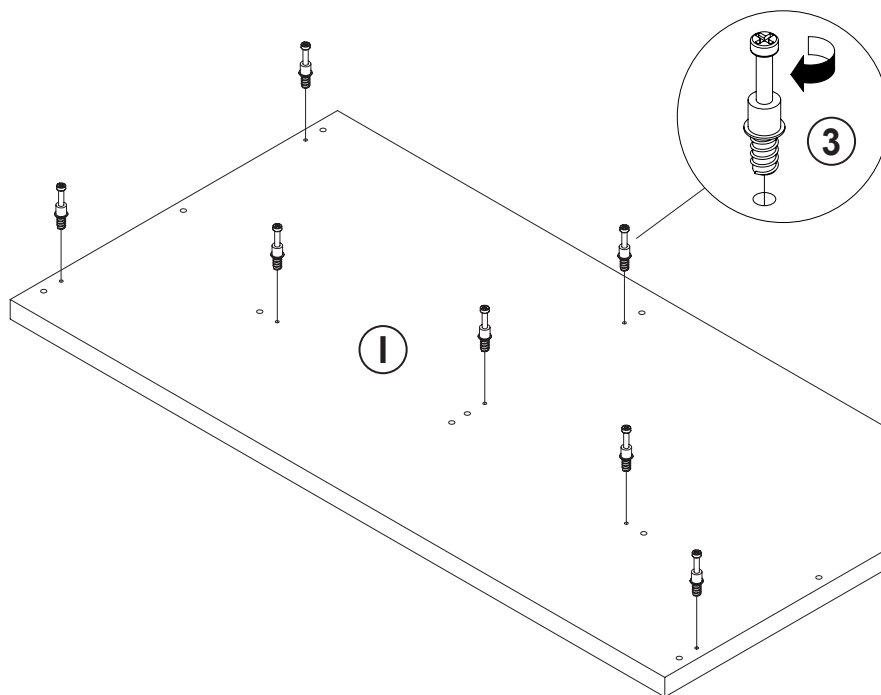

   STEP 5

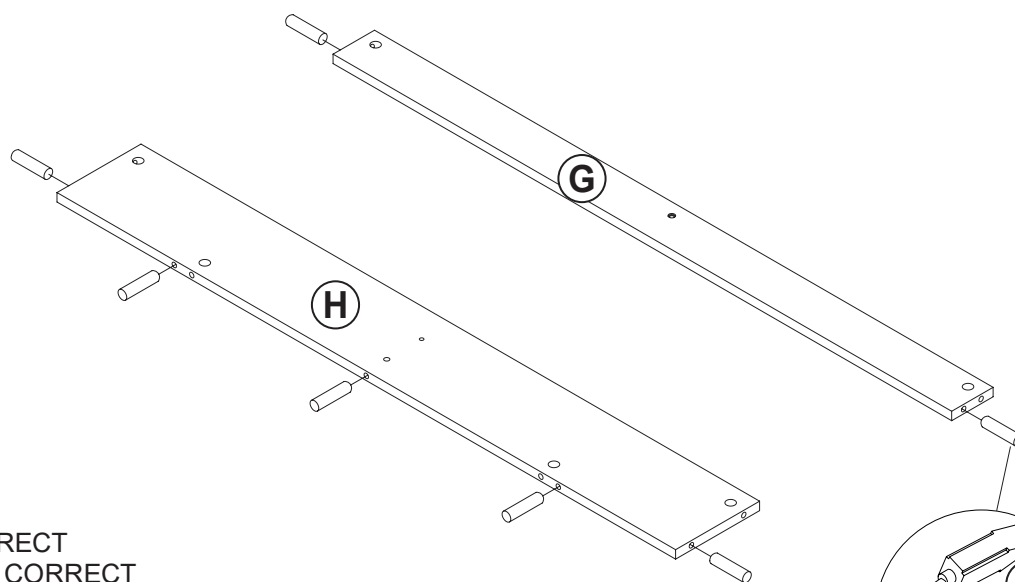

INCORRECT
CORRECT


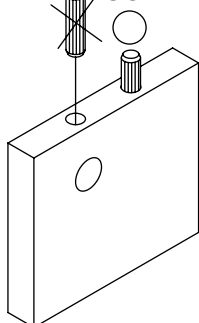 


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **710978**

STEP 6

  COASTER
FINE FURNITURE

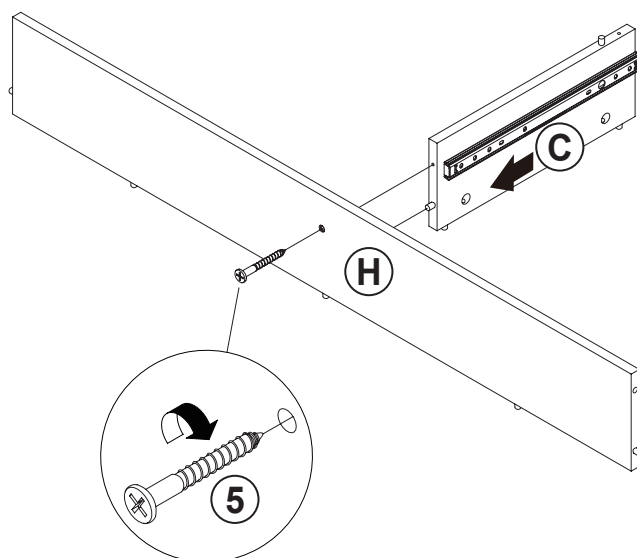


 STEP 7

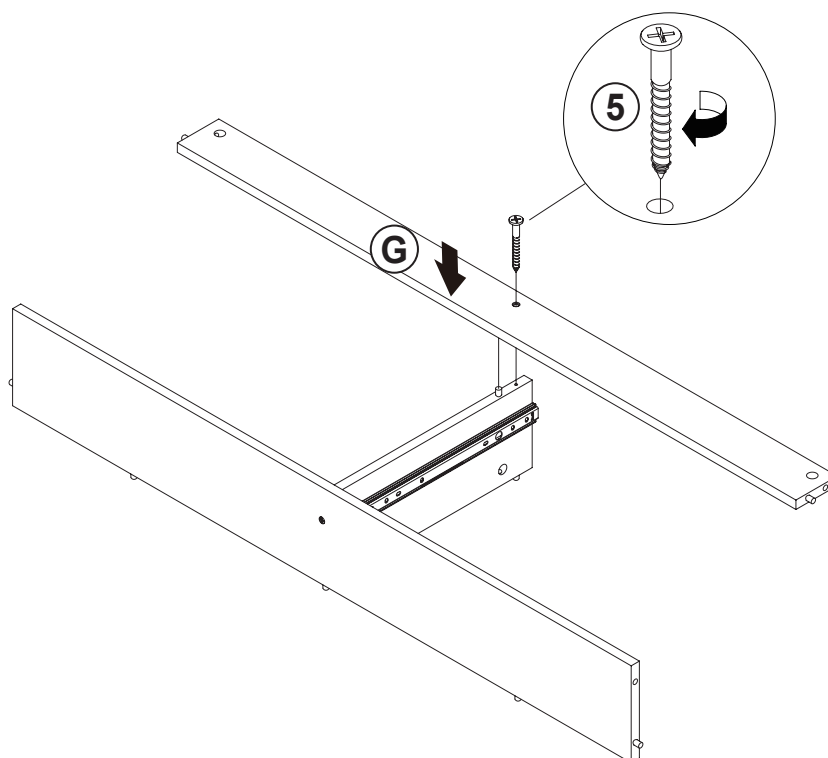


ITEM: **710978**

 STEP 8

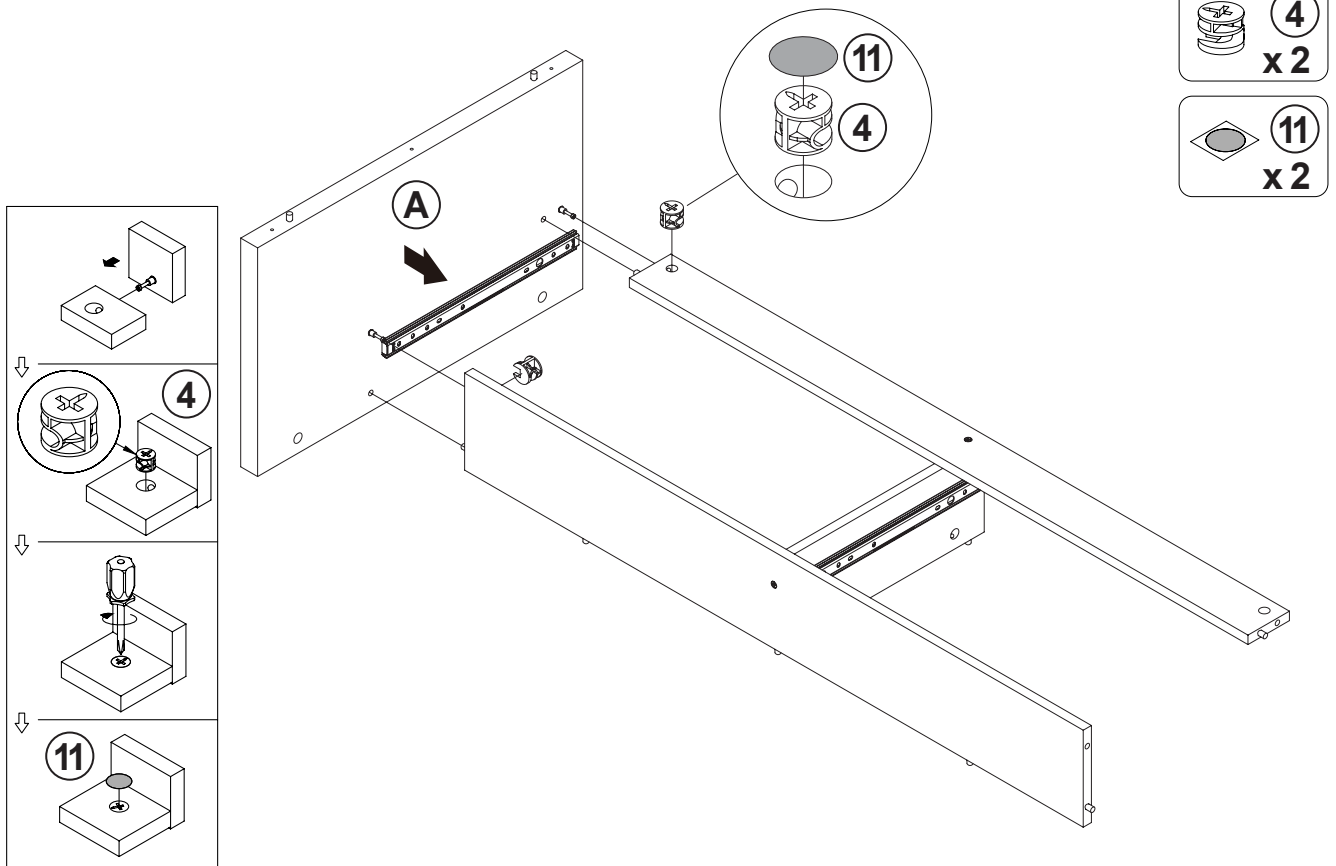

 
STEP 9

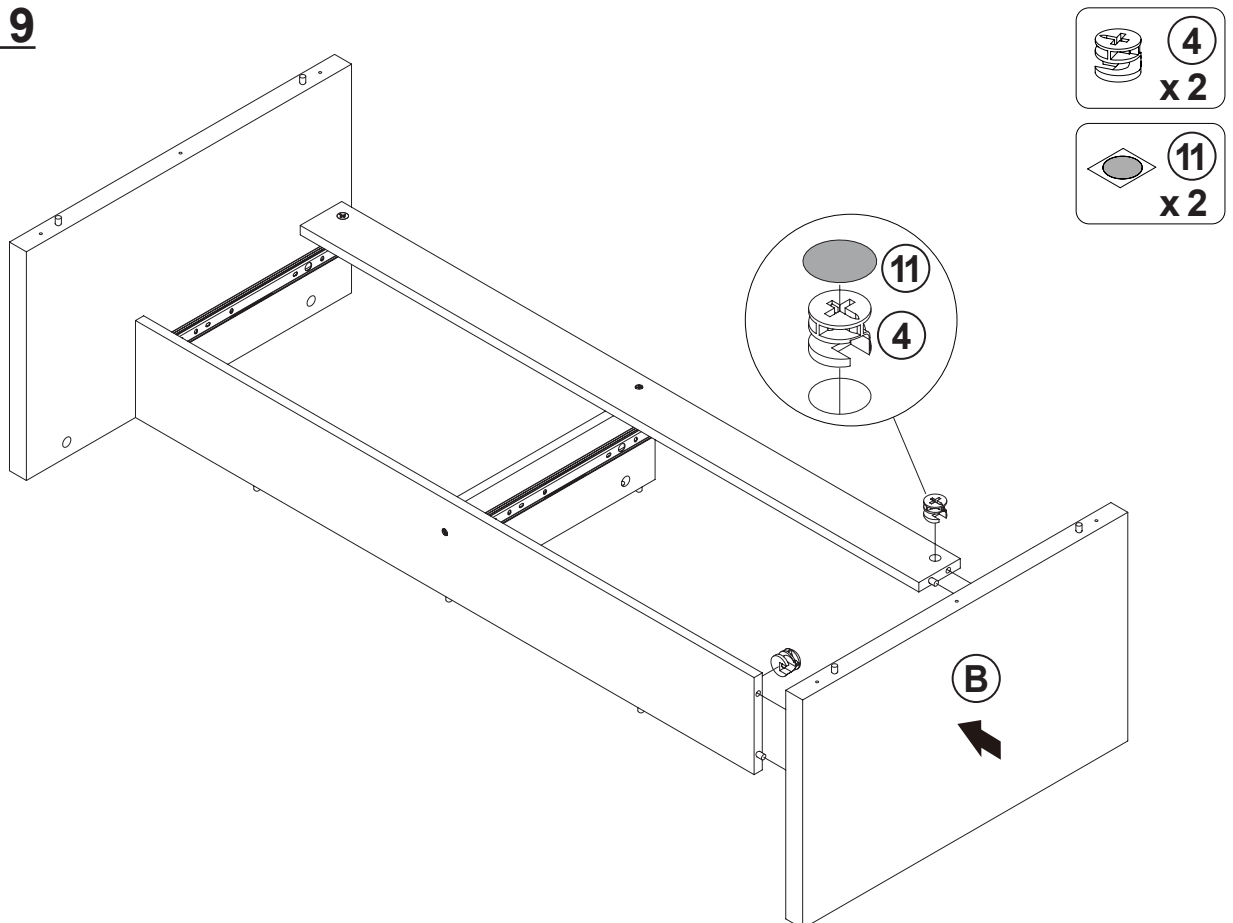


ITEM: **710978**

COASTER
FINE FURNITURE

 STEP 10

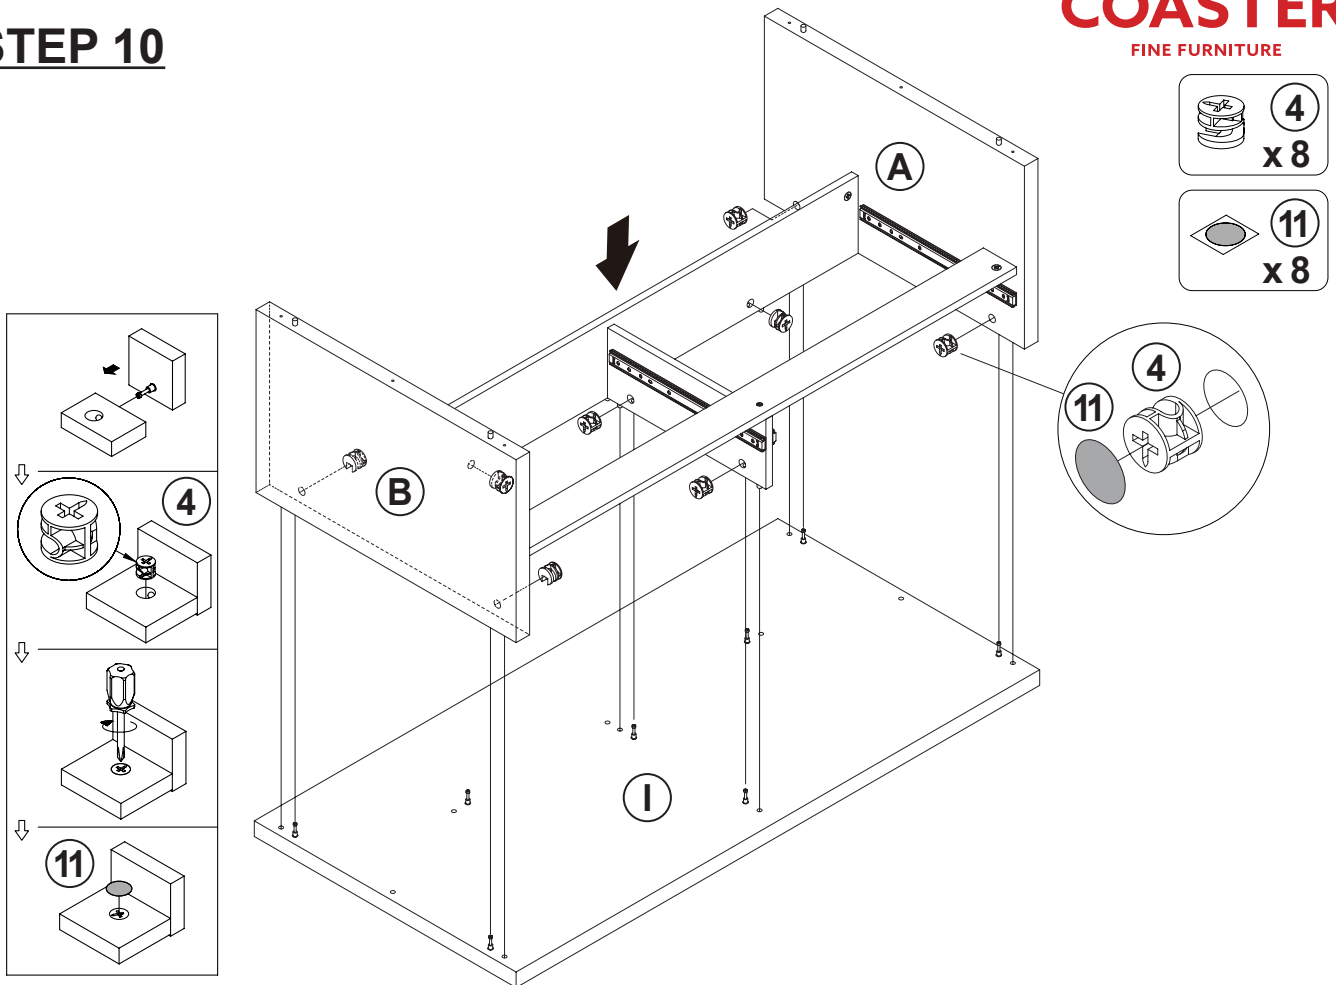


 
STEP 11

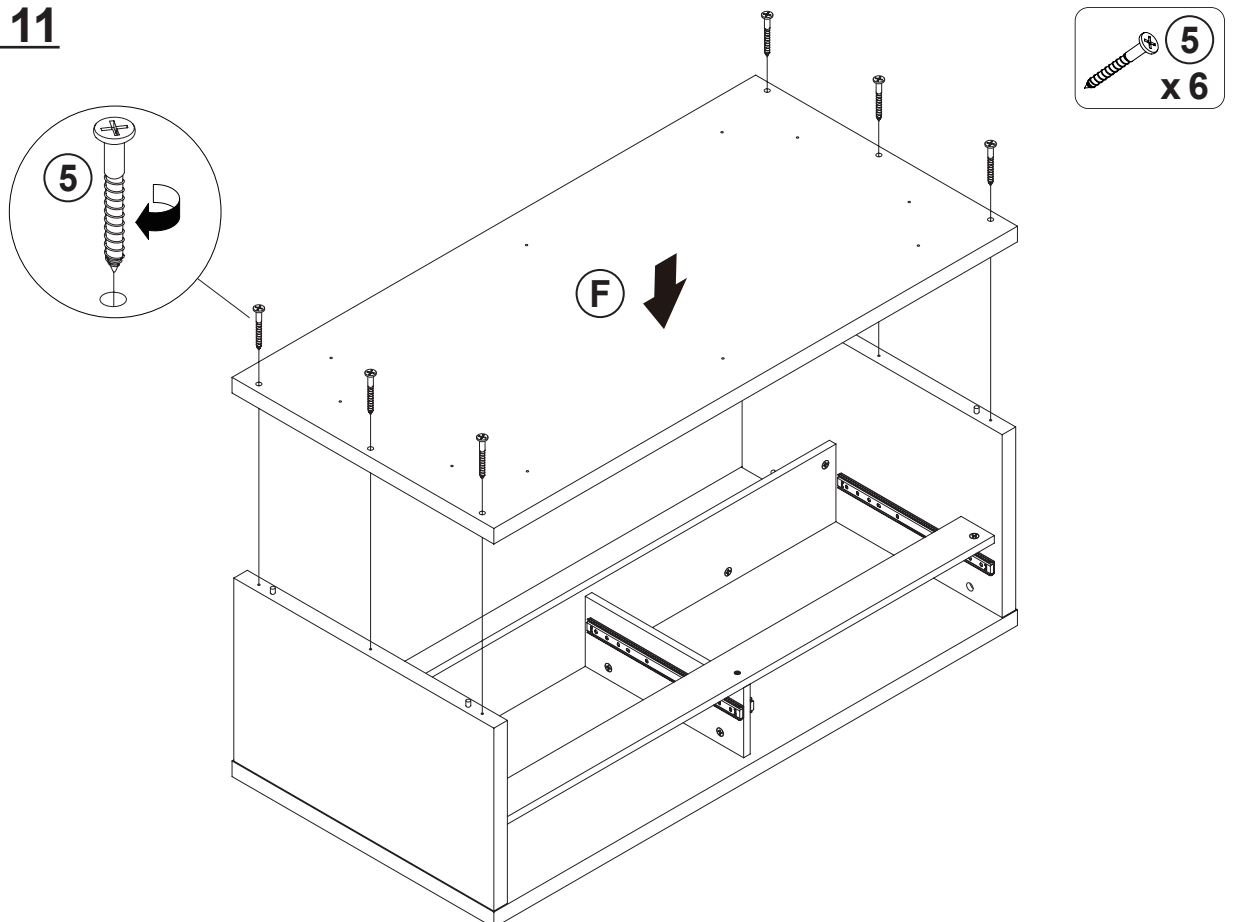


ITEM: **710978**

STEP 12

  COASTER
FINE FURNITURE

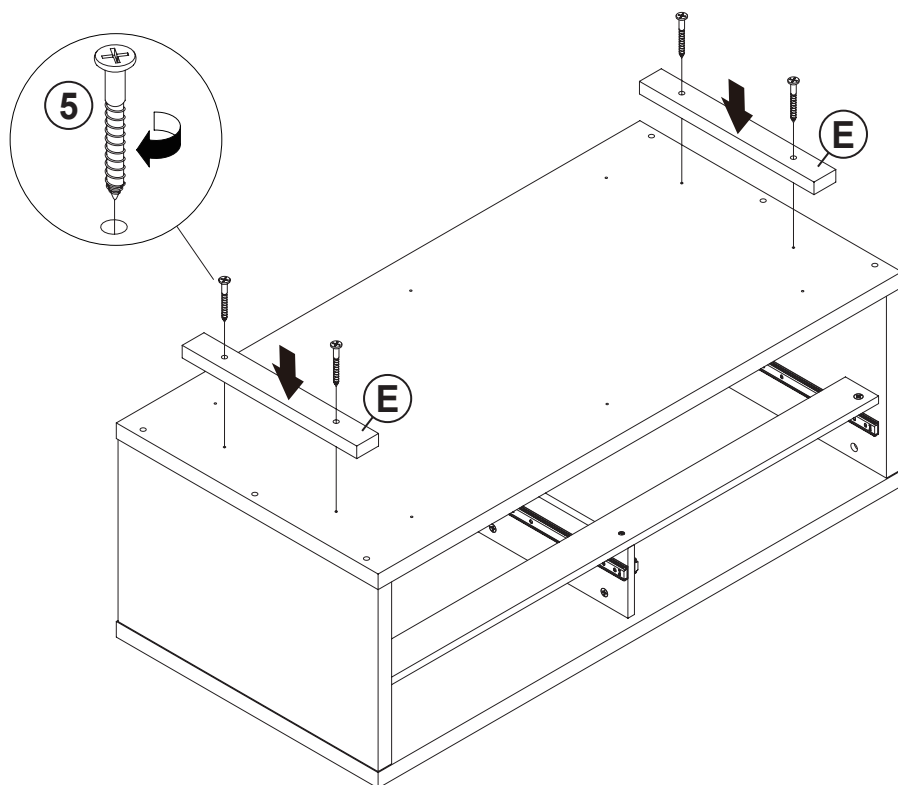


 STEP 13

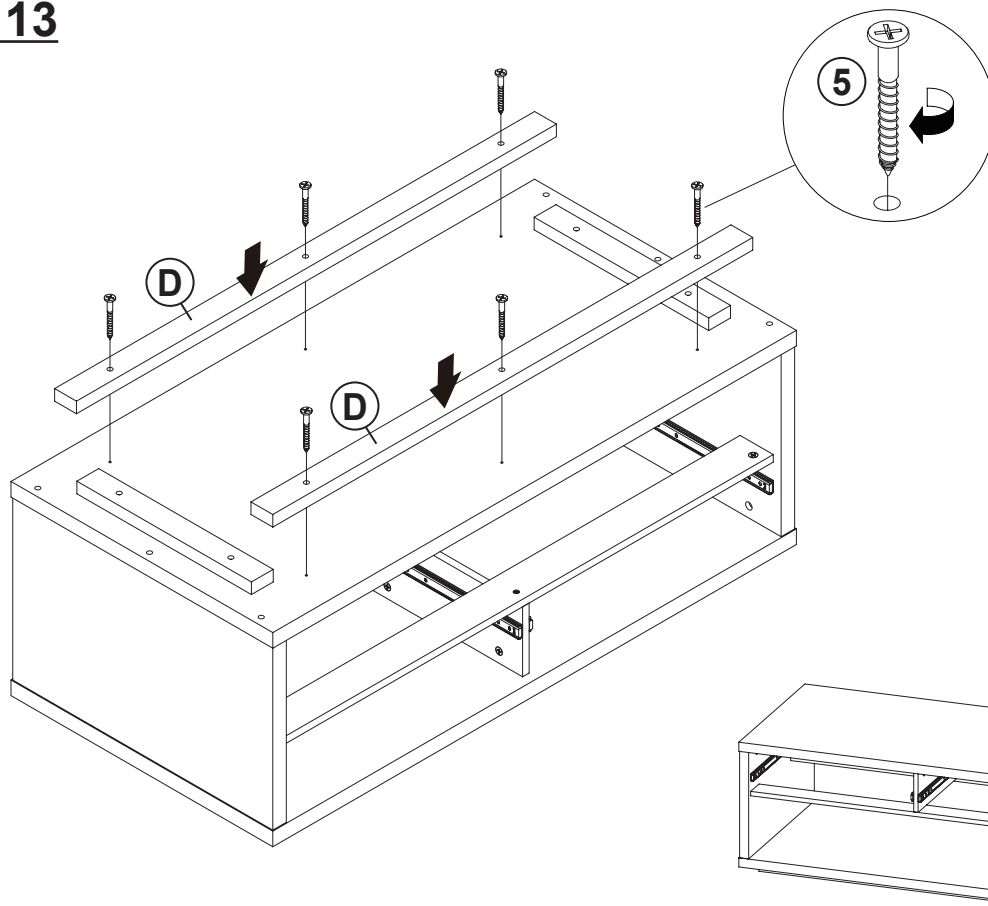

ITEM: 710978

 
STEP 14

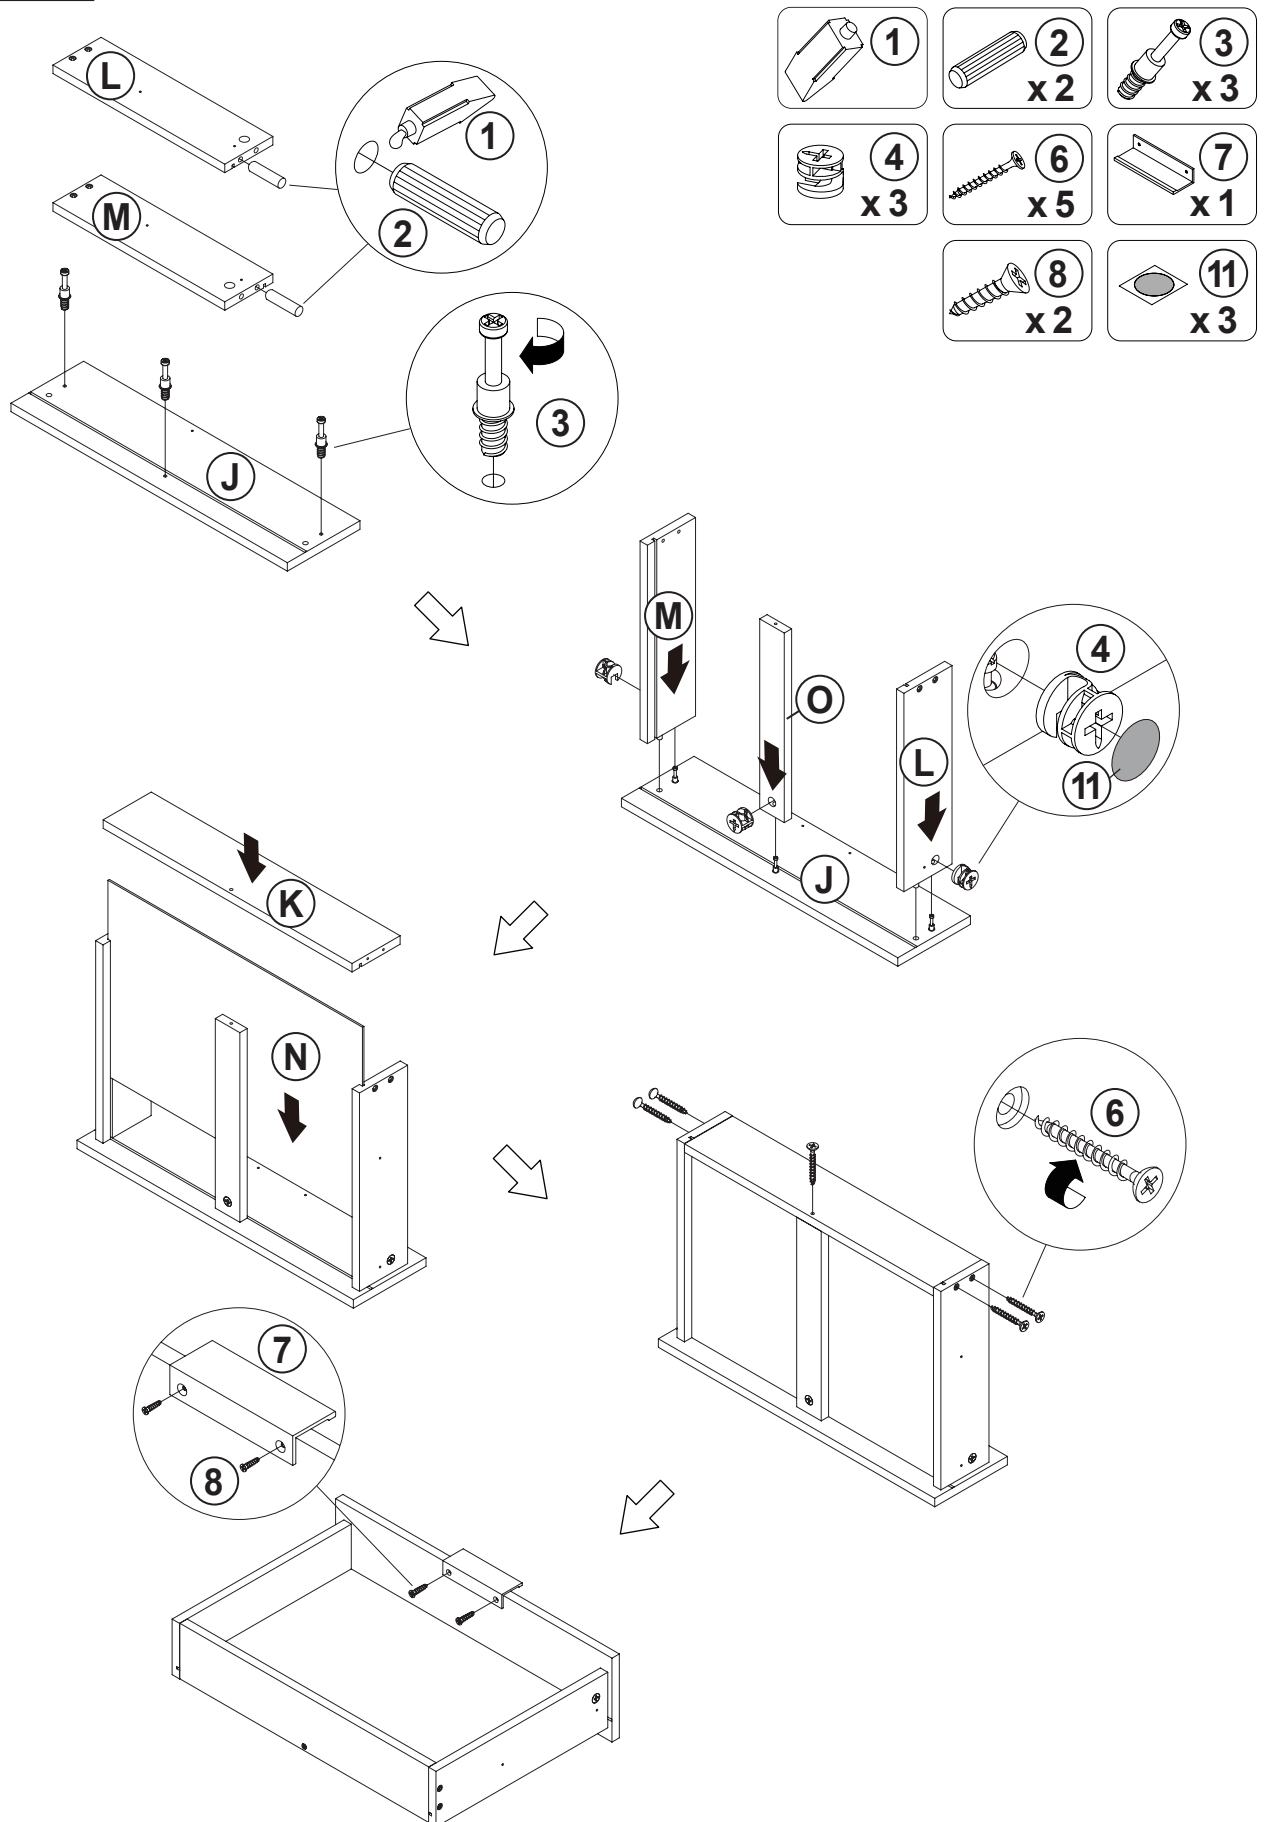

ITEM: 710978


STEP 15

 COASTER
FINE FURNITURE


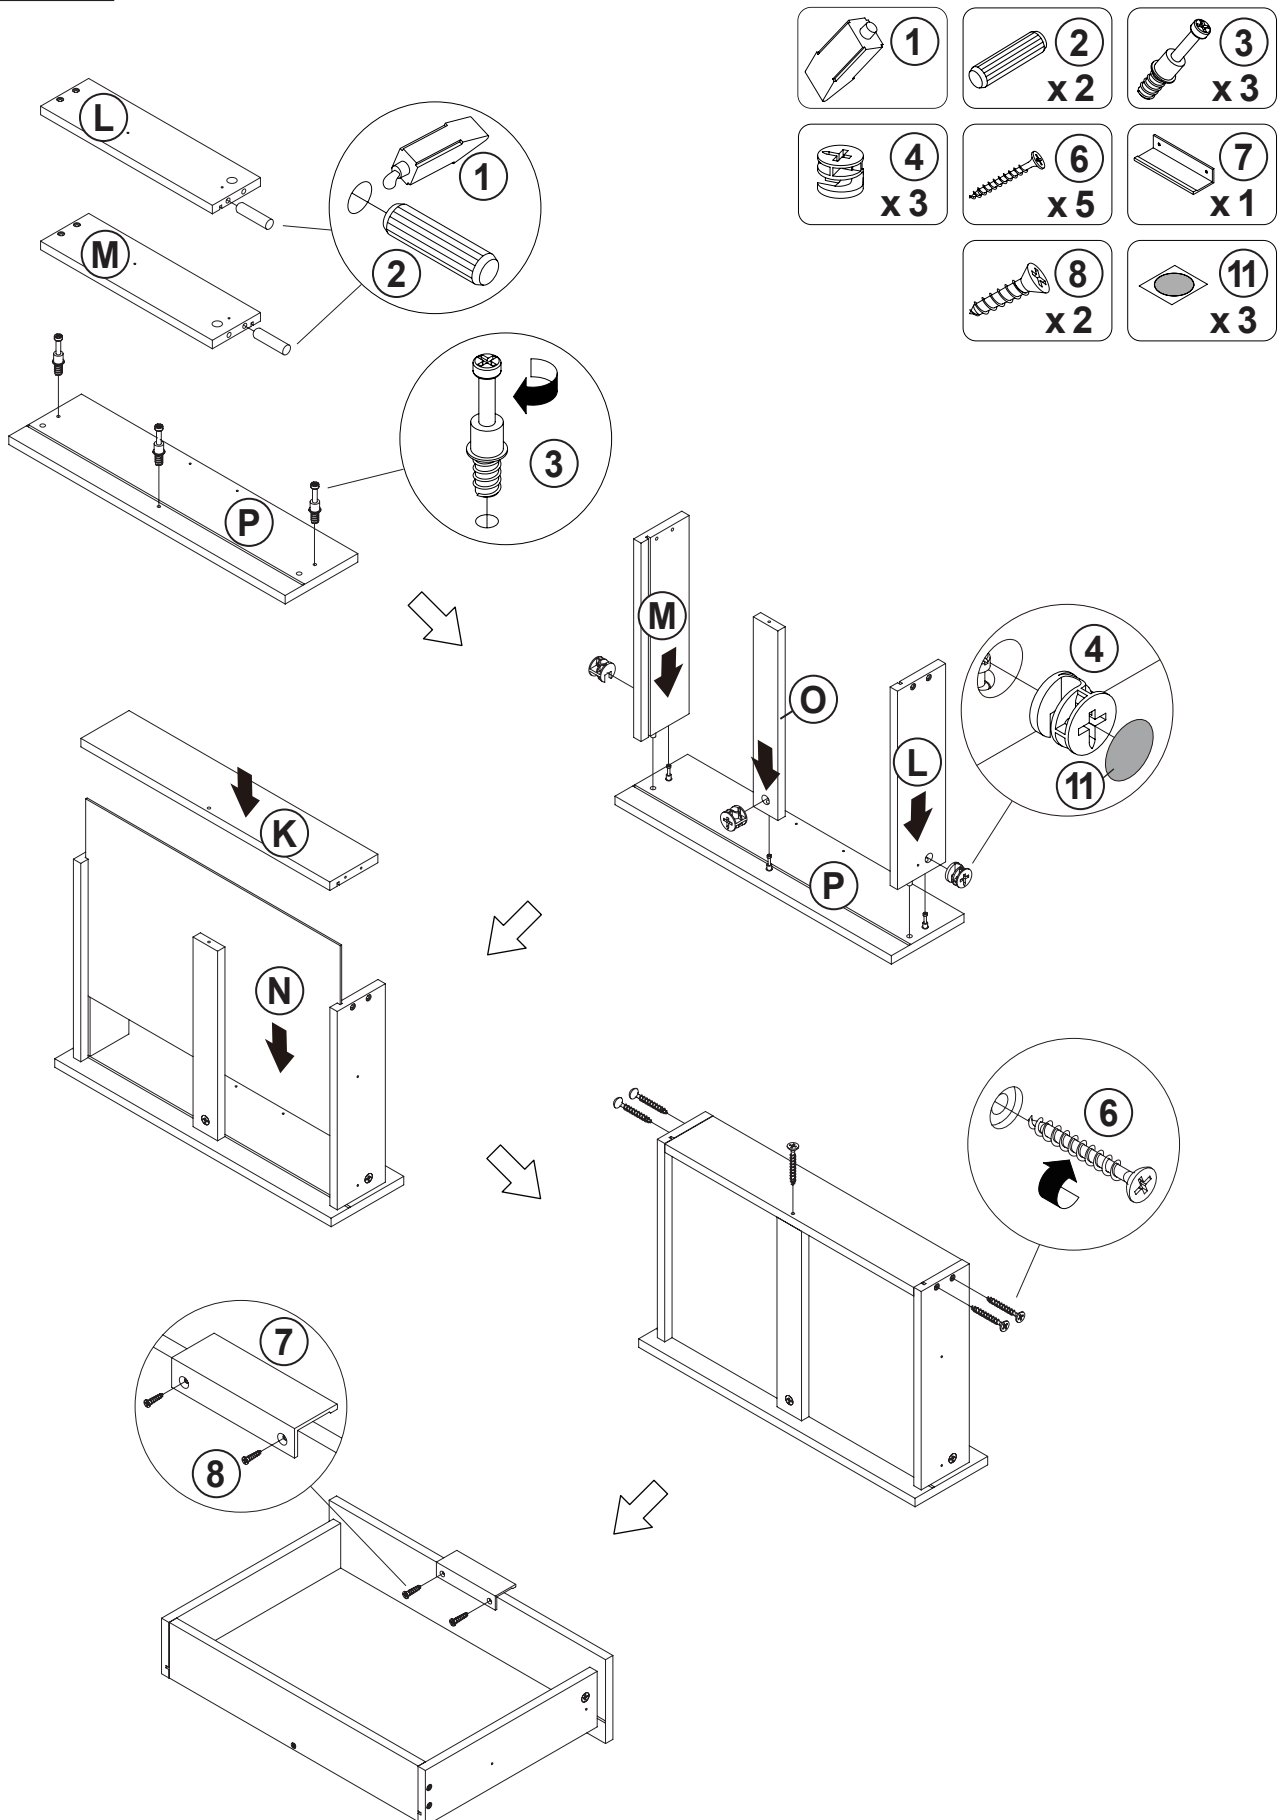


ITEM: **710978**

 STEP 16

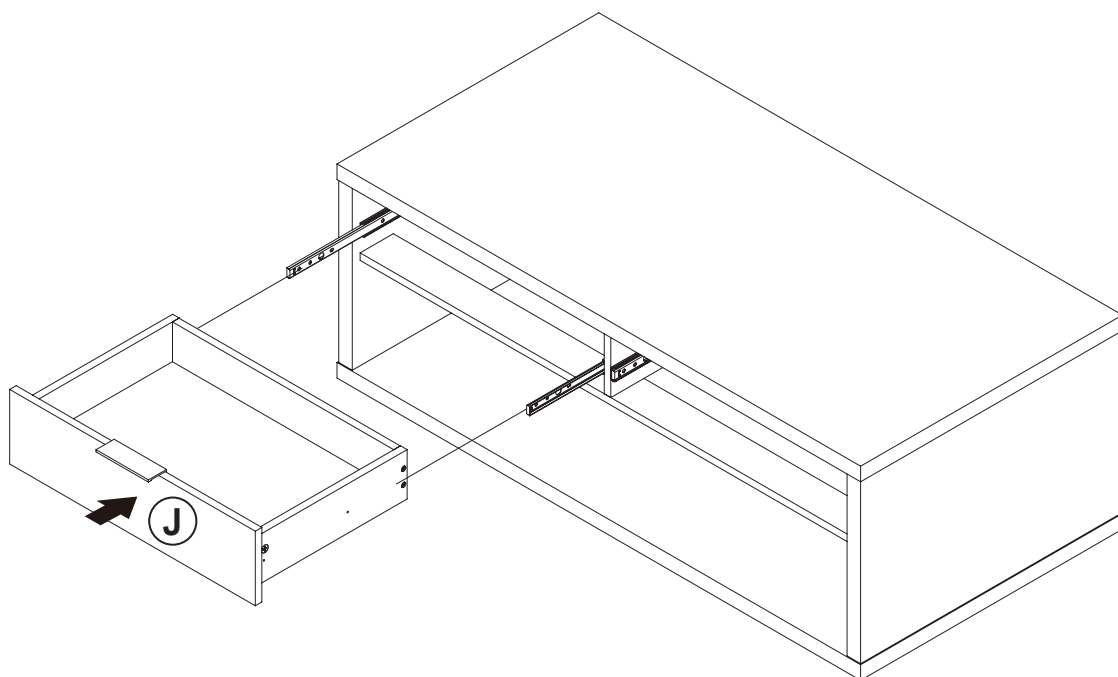

 
 
STEP 17

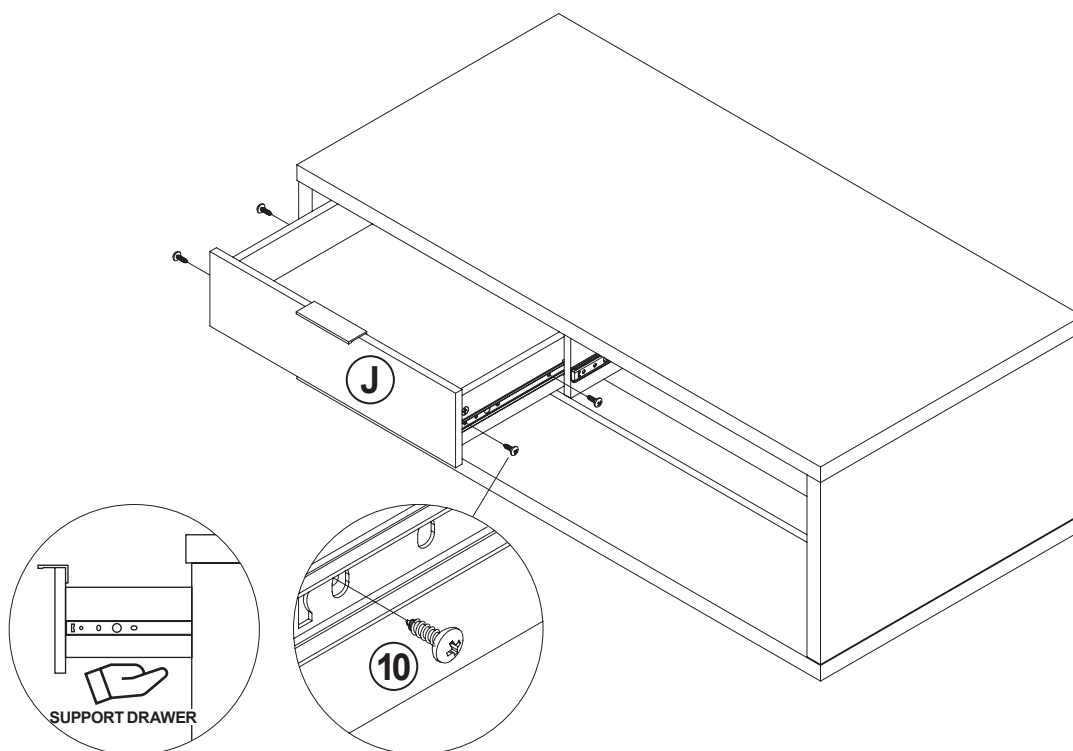




ITEM: **710978**

STEP 18


 
 
COASTER
FINE FURNITURE

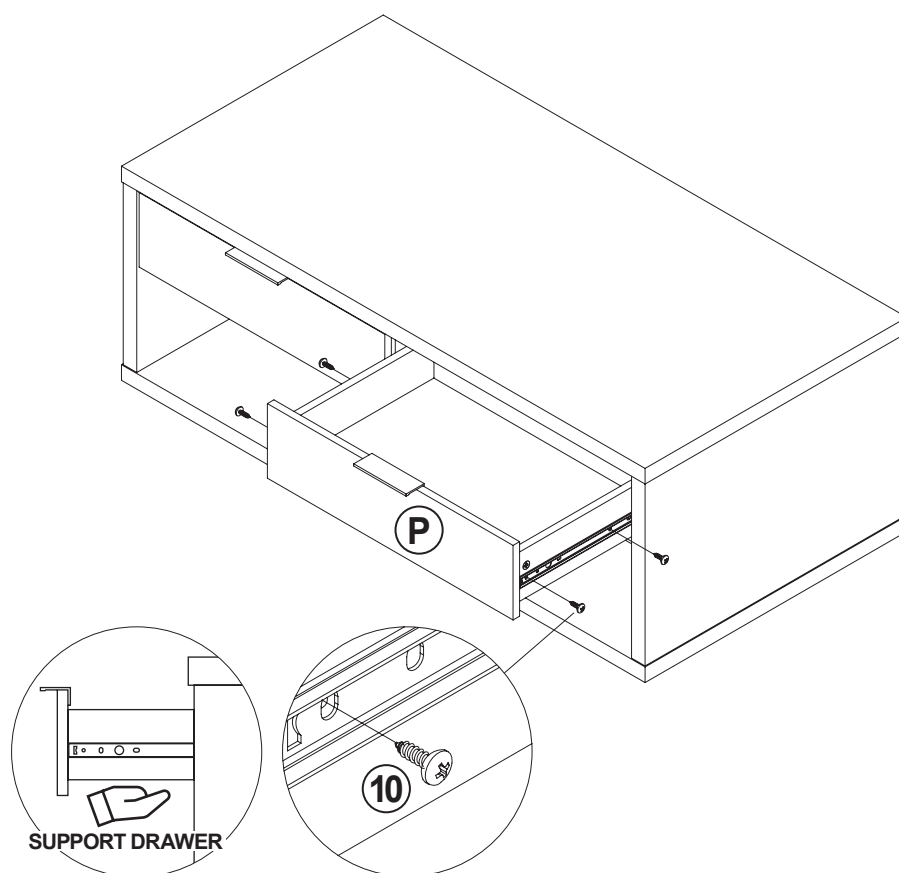

   STEP 19
COMPLETE

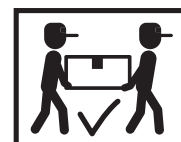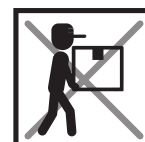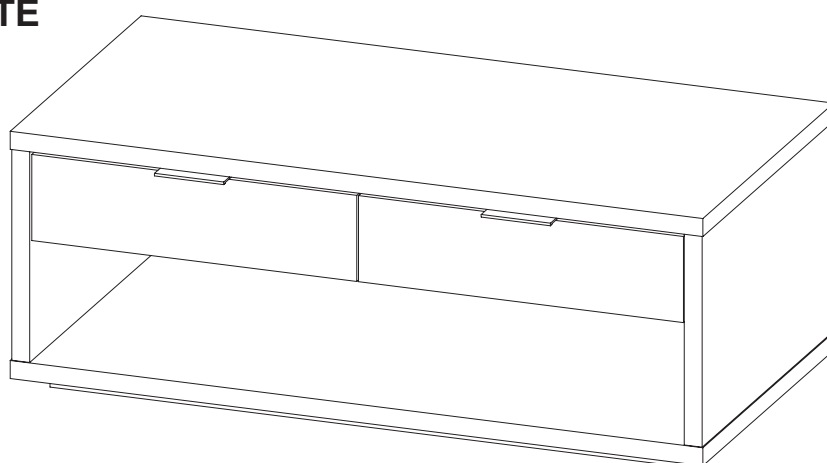

ITEM: 710978

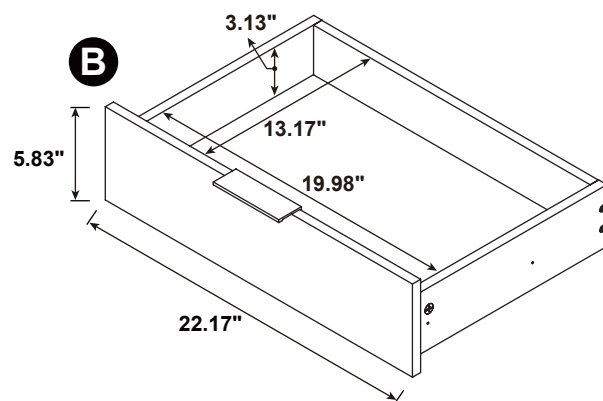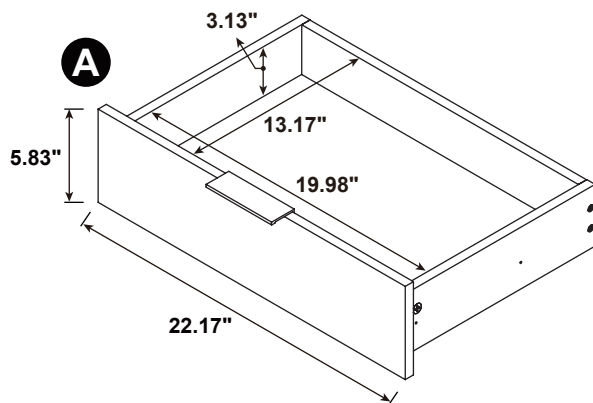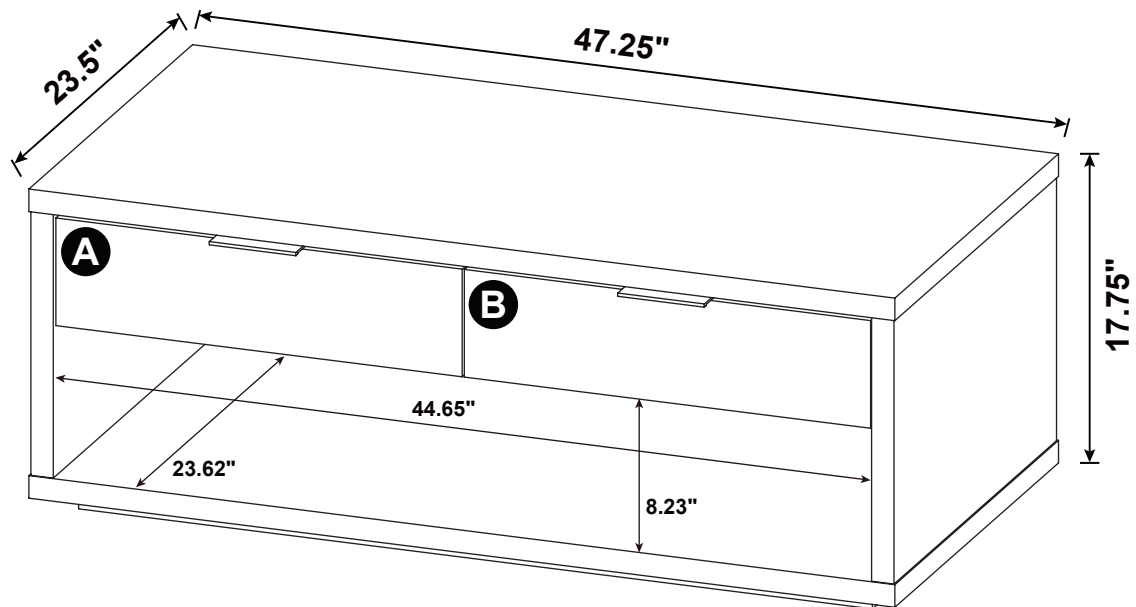   

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

710977
END TABLE

ITEM:710977

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

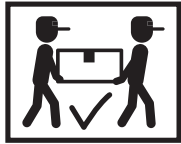


ASSEMBLY TIME

30 MINUTES


PARTS IDENTIFICATION

 A LEFT SIDE
PANEL

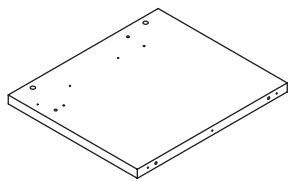


1 PC

 B RIGHT SIDE
PANEL

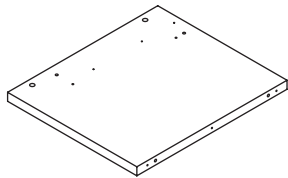


1 PC

 C LONG
DECORATIVE
STRIP




2 PCS

 D SHORT
DECORATIVE
STRIP




2 PCS

 E BOTTOM PANEL

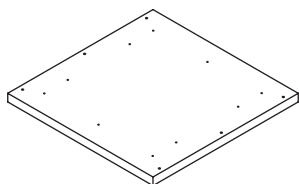


1 PC

 F CROSS PANEL




1 PC

 G BACK
PARTITION
PANEL




1 PC

 H TOP PANEL

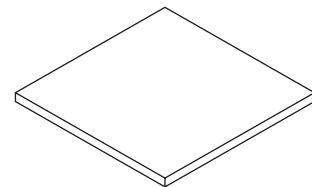


1 PC

 I DRAWER
FRONT PANEL




1 PC

 J DRAWER BACK
PANEL




1 PC

 K LEFT DRAWER
SIDE PANEL




1 PC

 L RIGHT DRAWER
SIDE PANEL



1 PC

 M DRAWER
BOTTOM PANEL

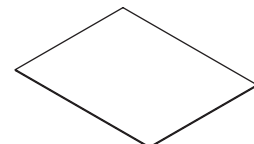







1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:710977

      HARDWARE IDENTIFICATION

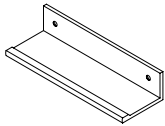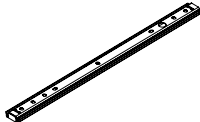Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	7	HANDLE L= 120mm SR		1 PC
2	WOODEN DOWEL Ø8x30mm		16 PCS	8	HINGE SCREW Ø4x15mm SR		2 PCS
3	CAM BOLT Ø7x35.5mm SR		10 PCS	9	RAIL L = 400mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		10 PCS	10	RAIL SCREW Ø3.5x15mm BLK		10 PCS
5	SCREW Ø4.5x42mm SR		16 PCS	11	STICKER Ø20mm		2 PCS
6	SCREW Ø 4.3x35mm SR		4 PCS				

 
 
 
 
 
 
 
Z7, Z9 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 710977

STEP 1


COASTER
FINE FURNITURE

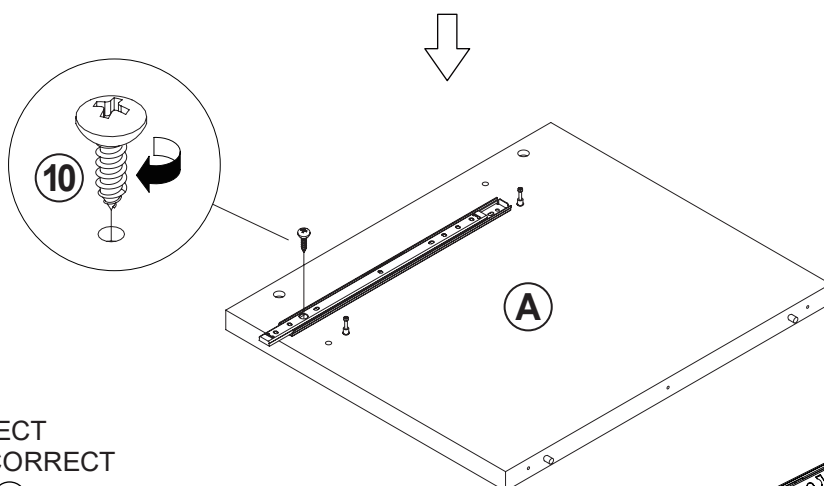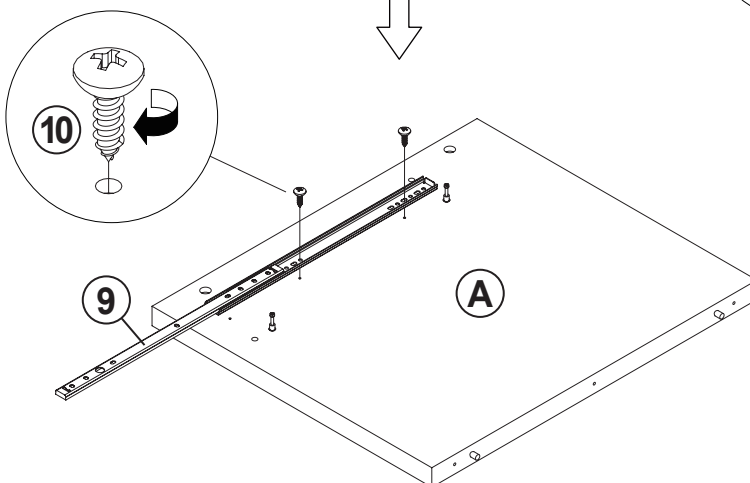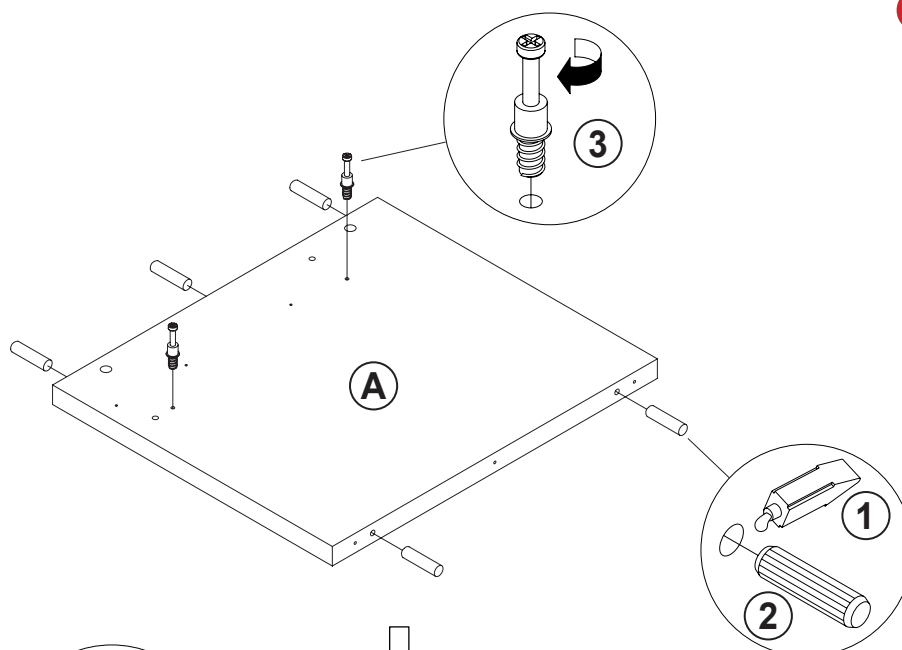

INCORRECT
CORRECT

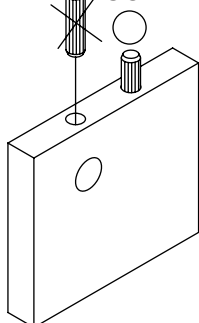 








 
Apply glue on all wooden dowels to ensure integrity of the structure.

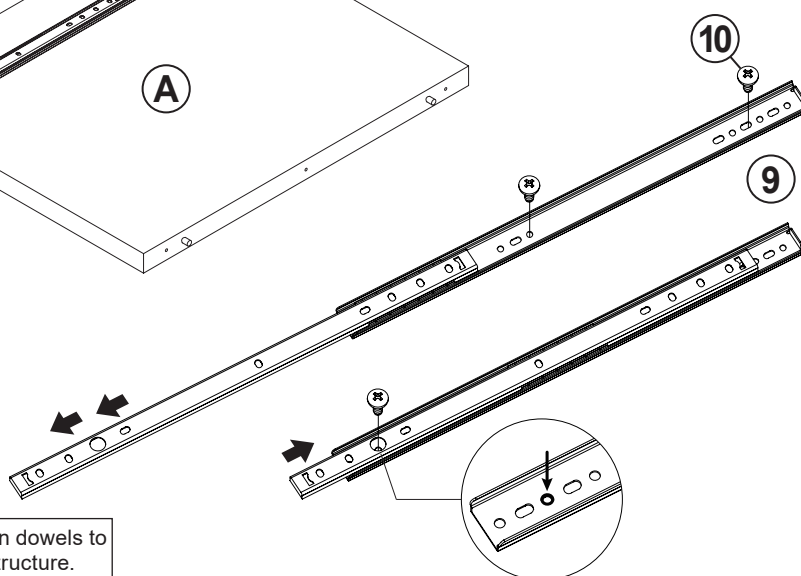


ITEM: 710977

STEP 2

        
COASTER
FINE FURNITURE

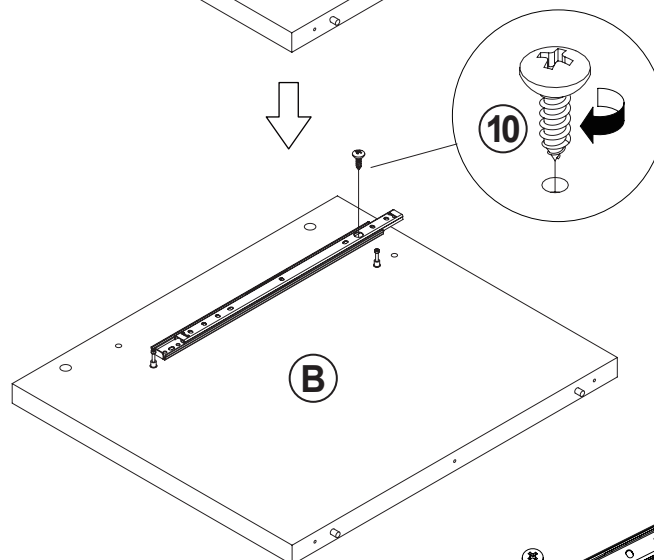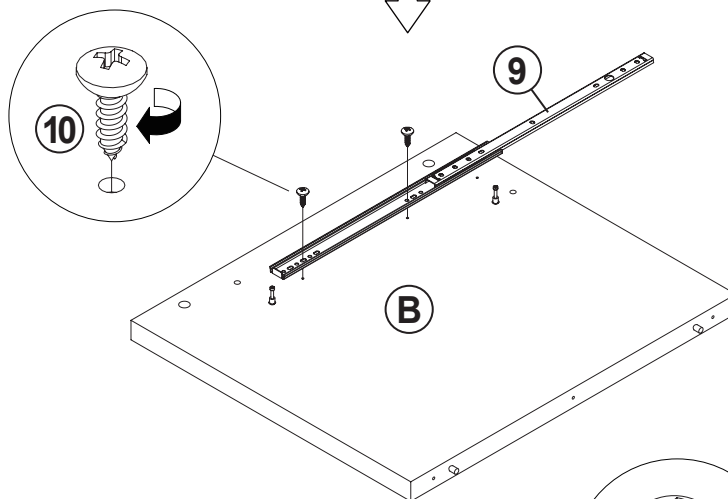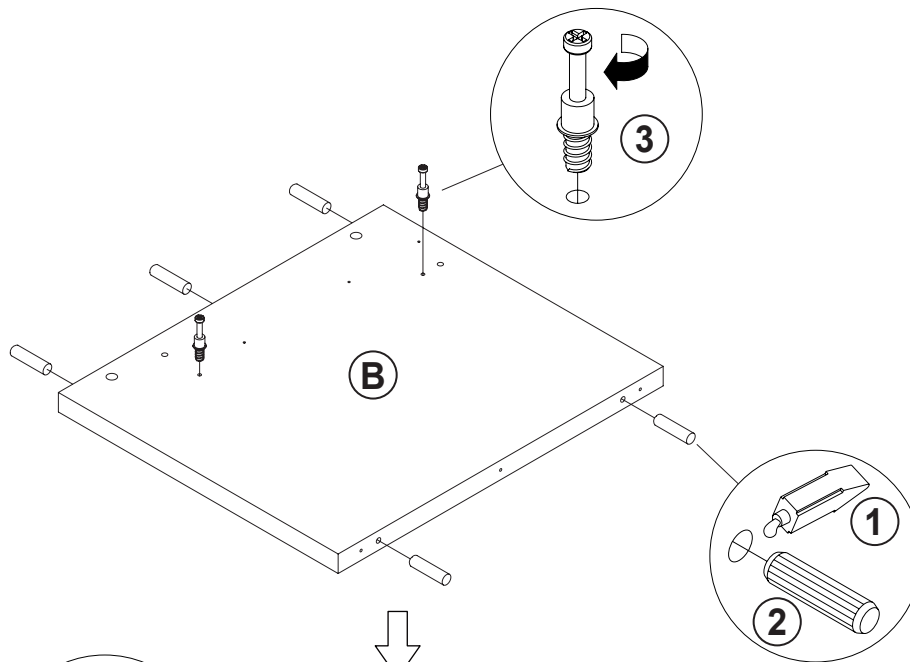

INCORRECT
CORRECT

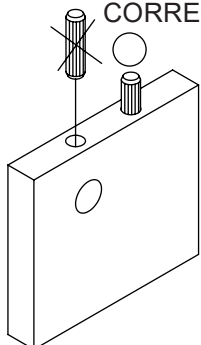 


 Apply glue on all wooden dowels to ensure integrity of the structure.

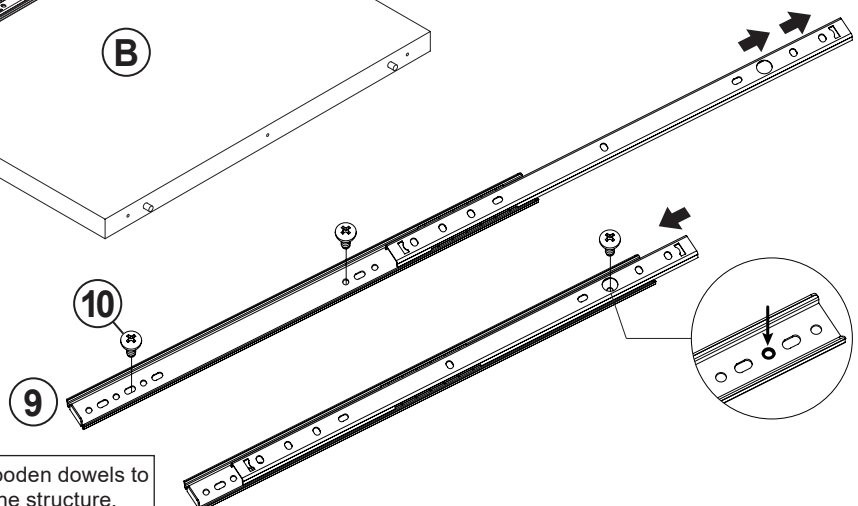


ITEM: **710977**

 STEP 3

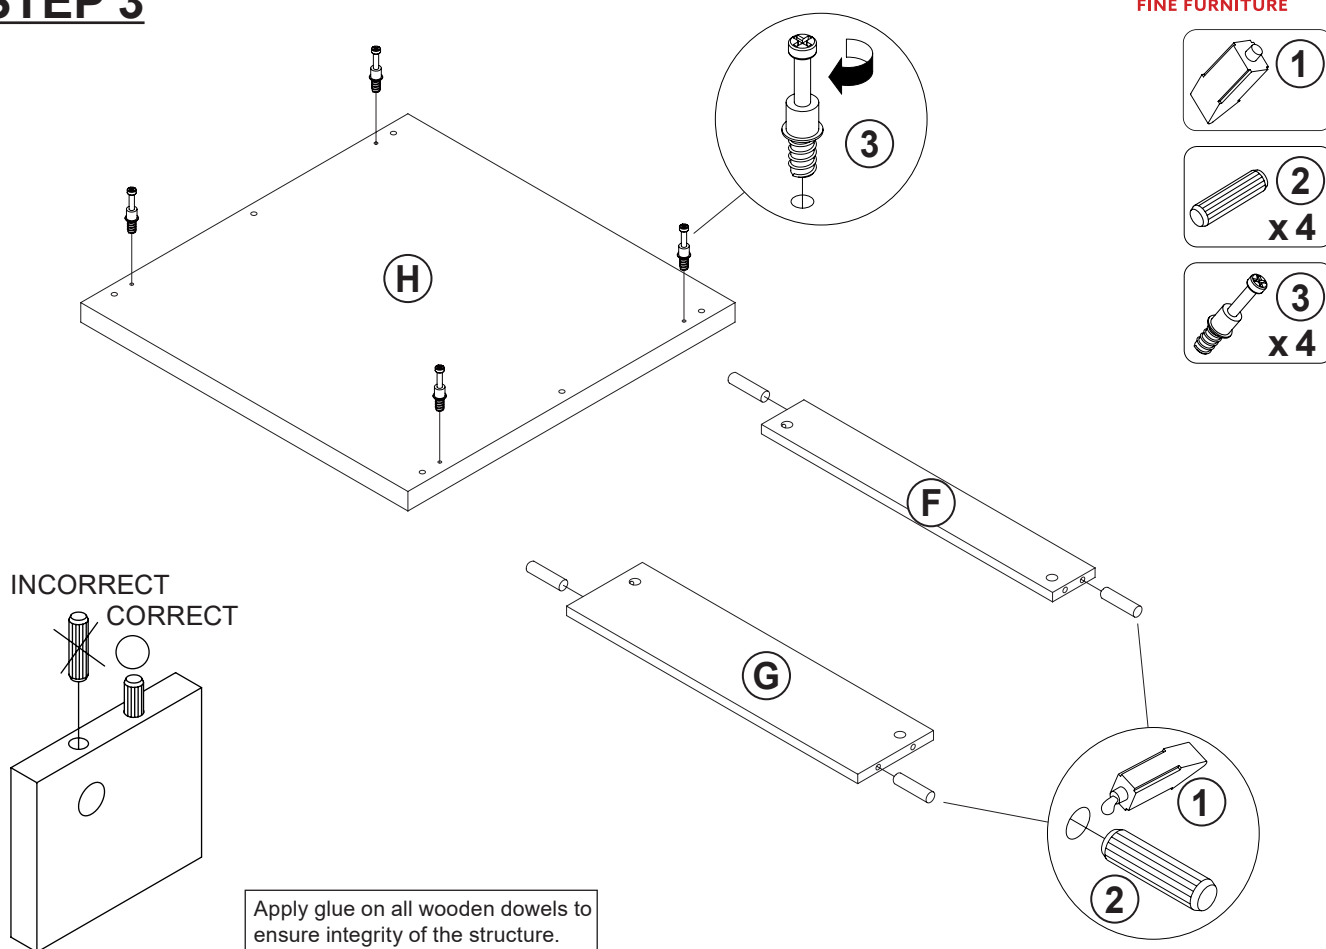



 
STEP 4

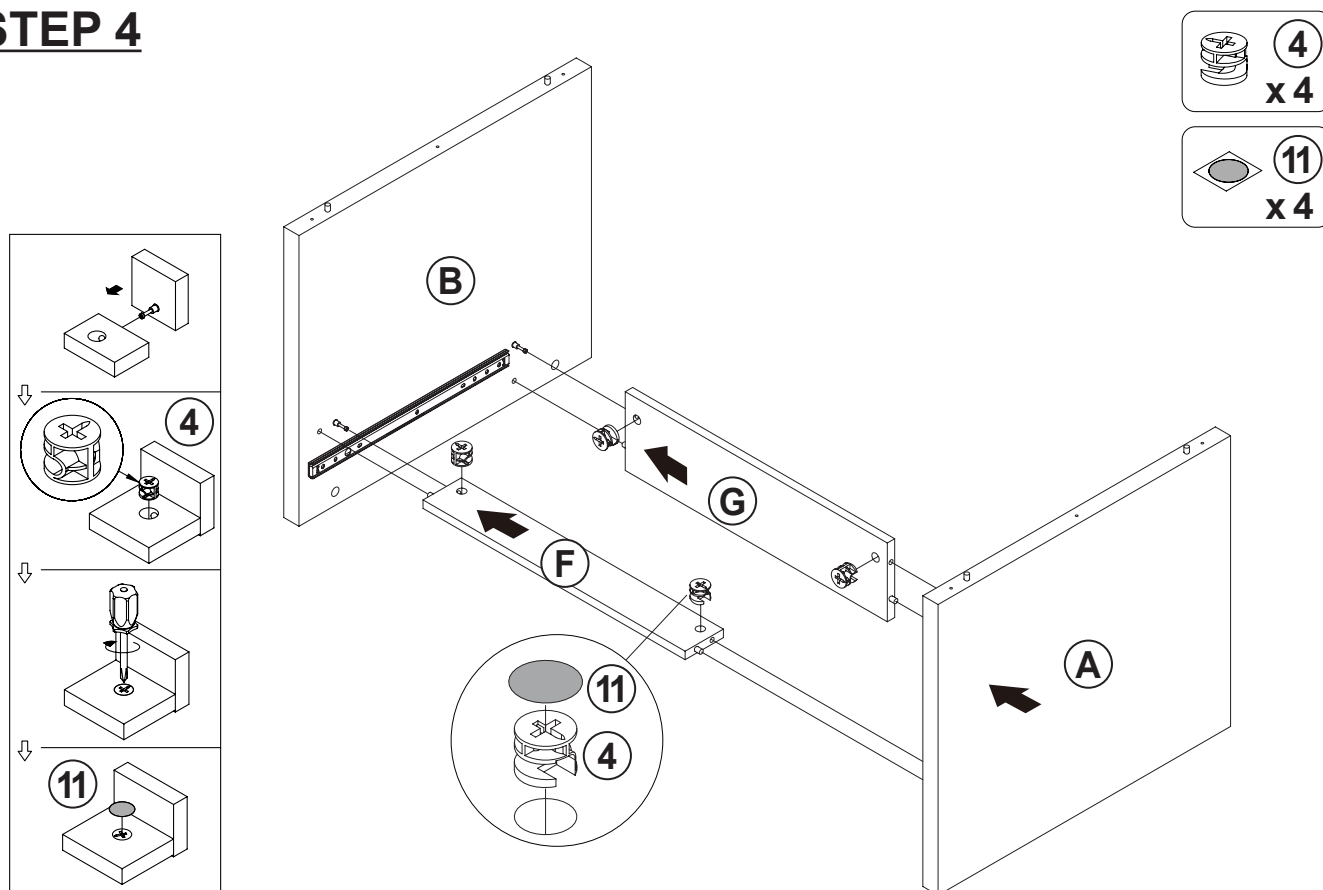



ITEM: **710977**

COASTER
FINE FURNITURE

   STEP 5

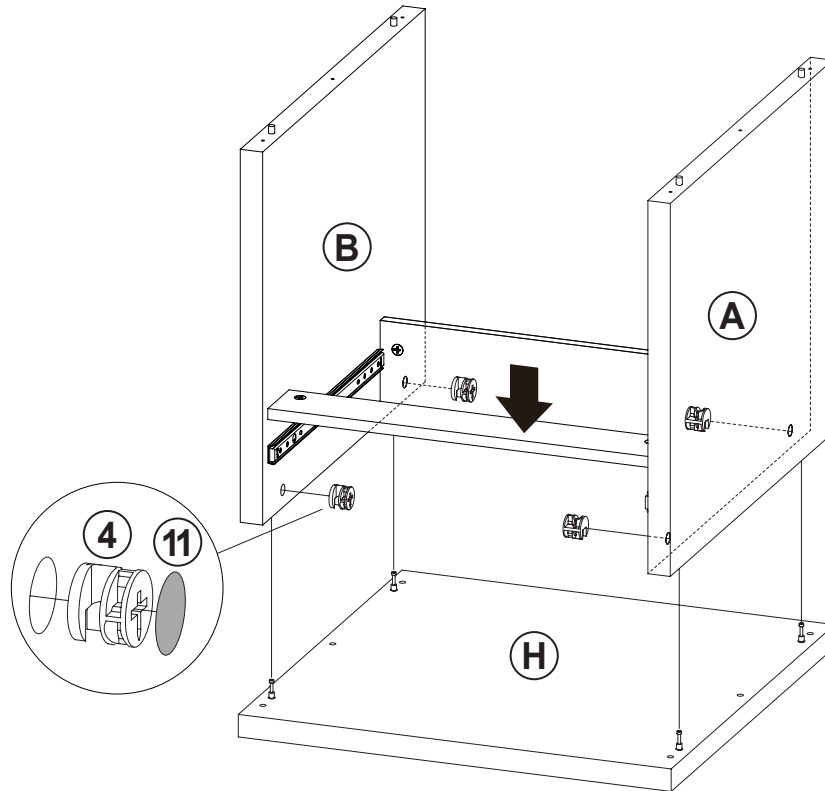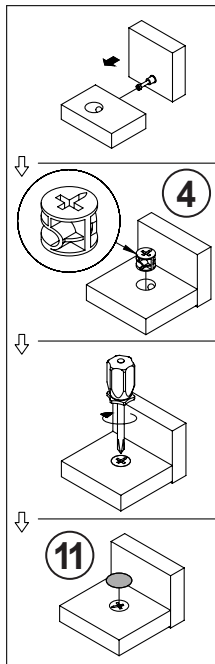

 
 
STEP 6

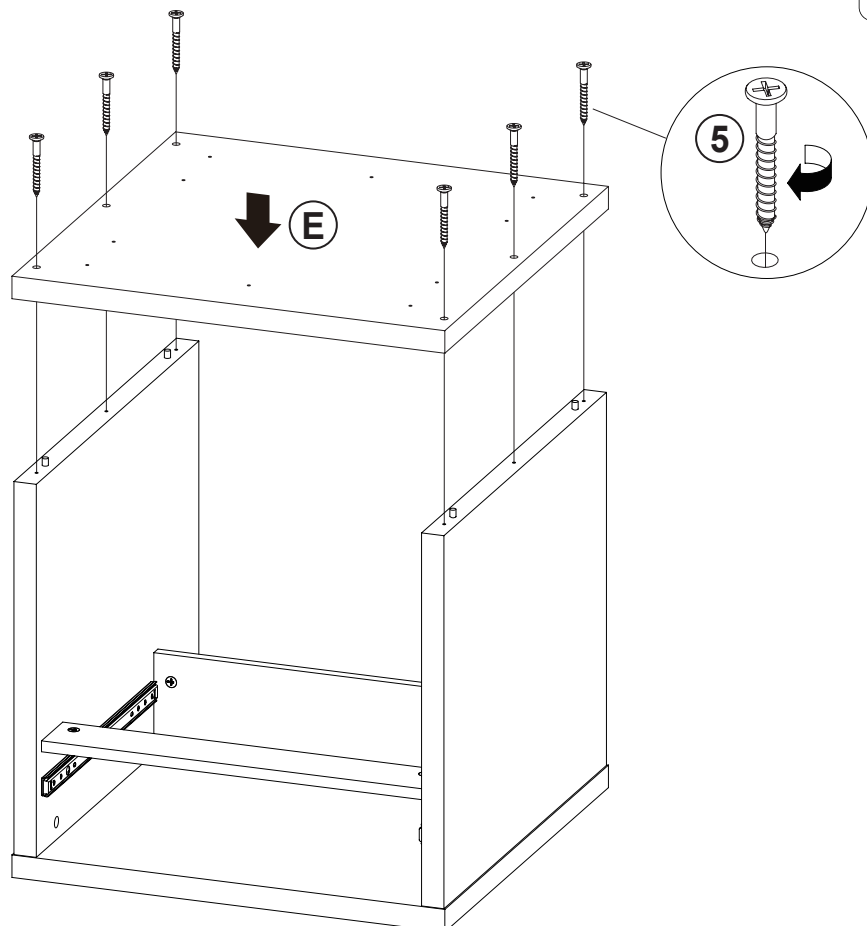




ITEM: 710977

STEP 7

  COASTER
FINE FURNITURE

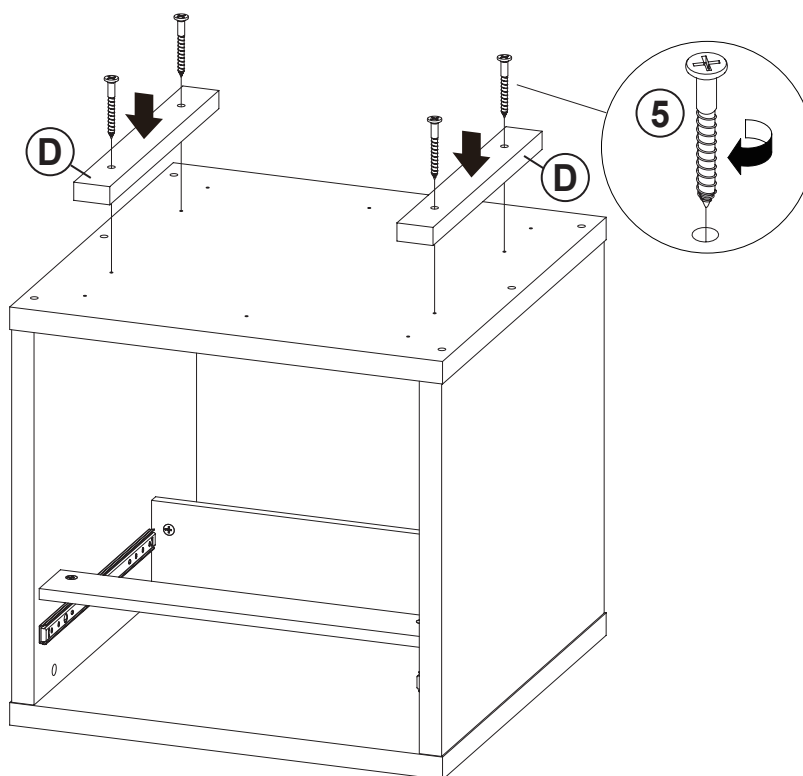

   STEP 8

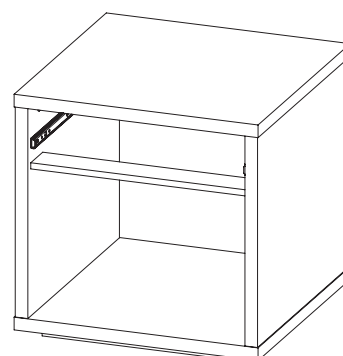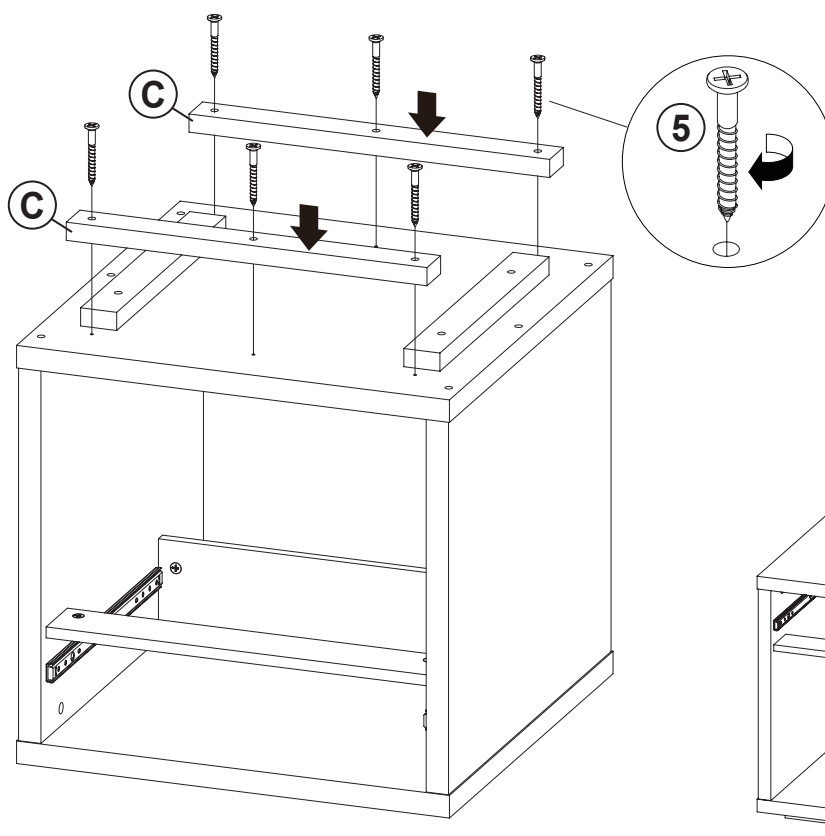


ITEM: **710977**

STEP 9



 
COASTER®
FINE FURNITURE

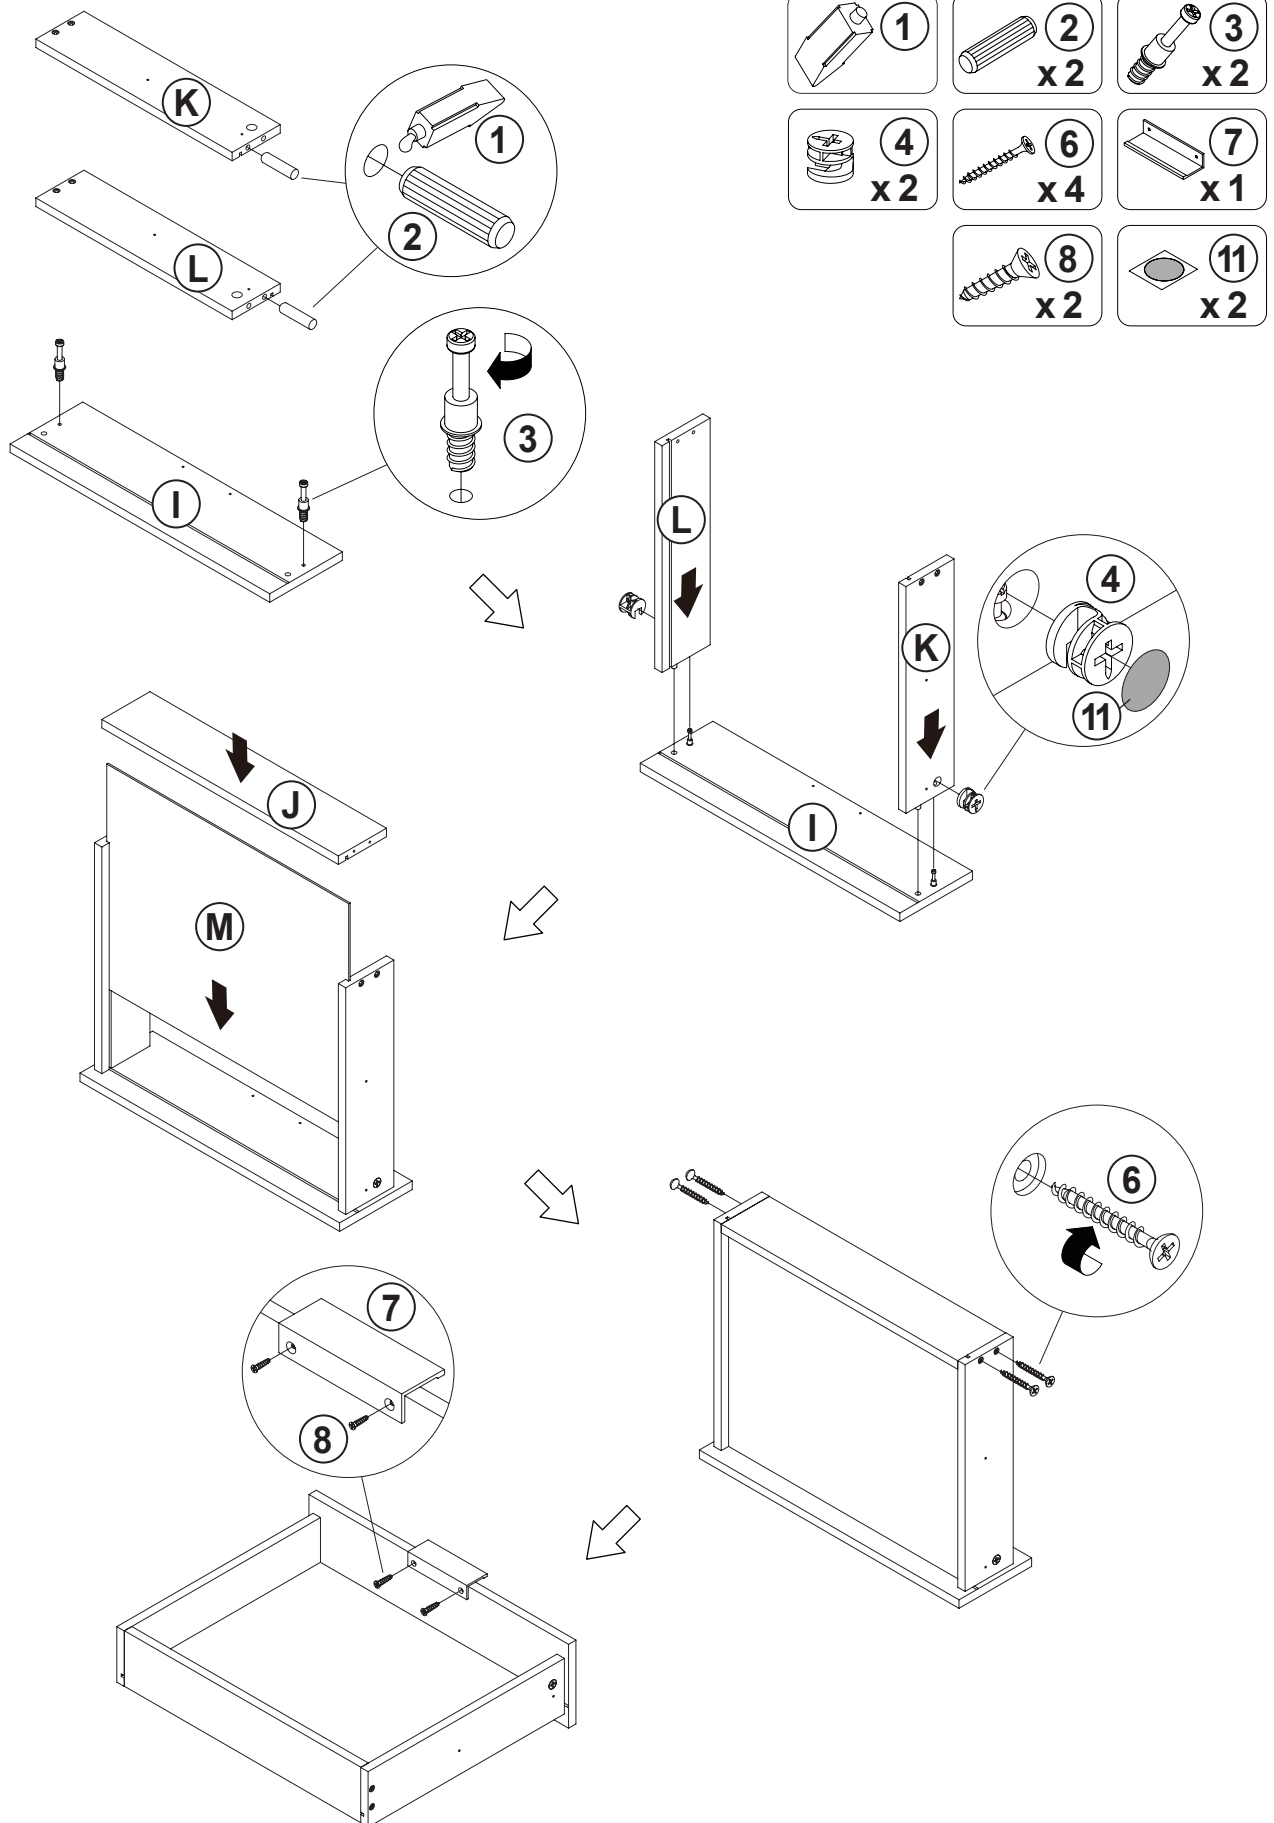





ITEM: **710977**

STEP 10

 COASTER
FINE FURNITURE

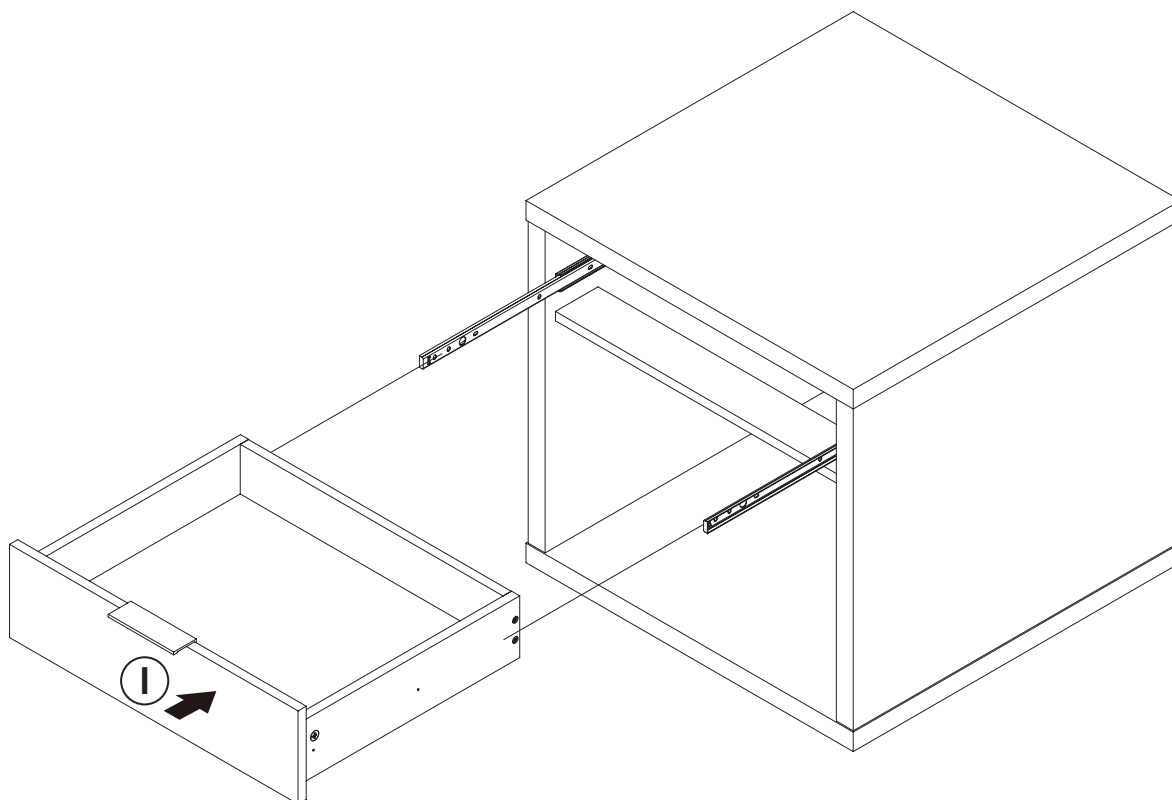

  
 
 
STEP 11

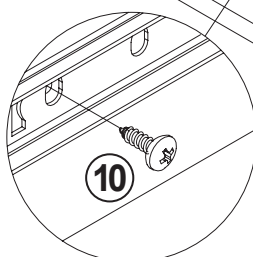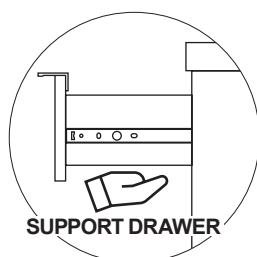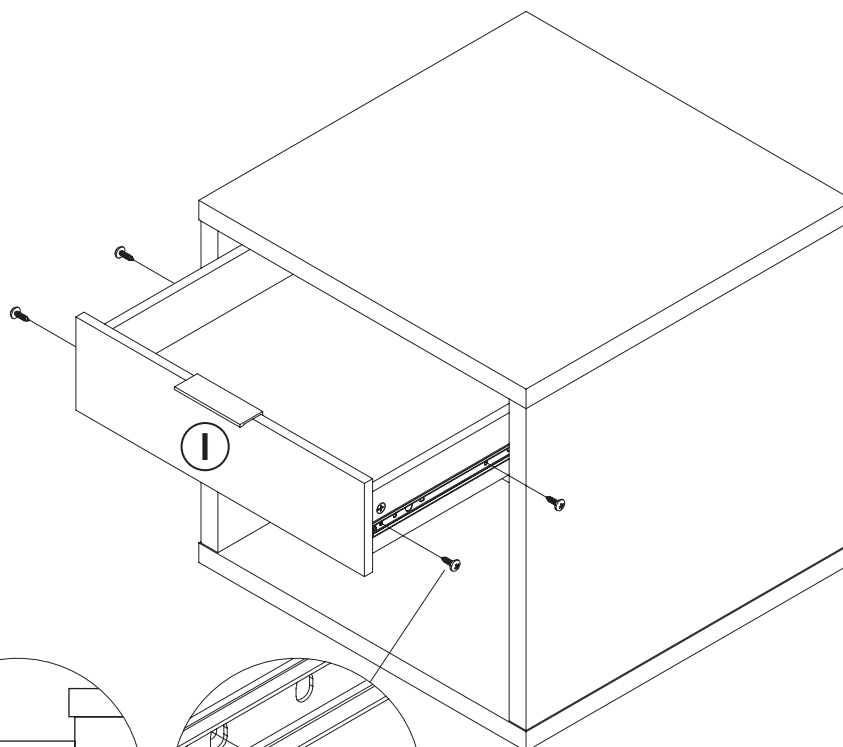


ITEM: **710977**

STEP 12

   COMPLETE

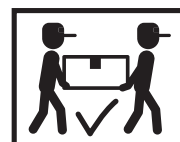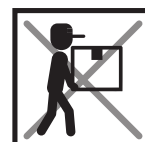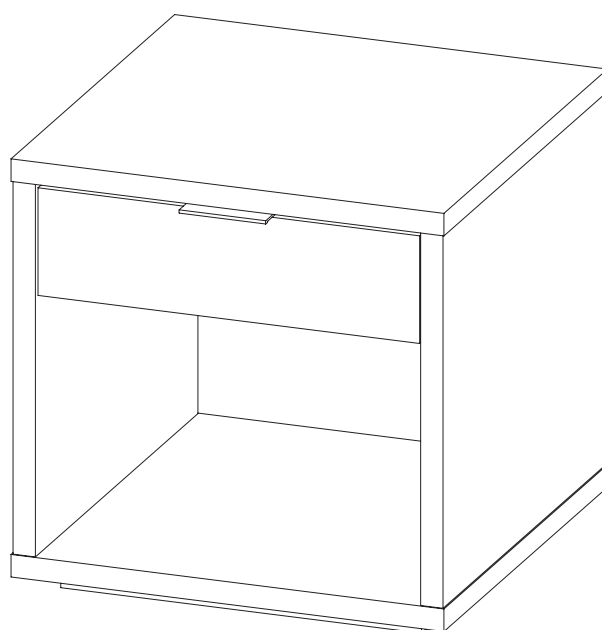

ITEM: 710977

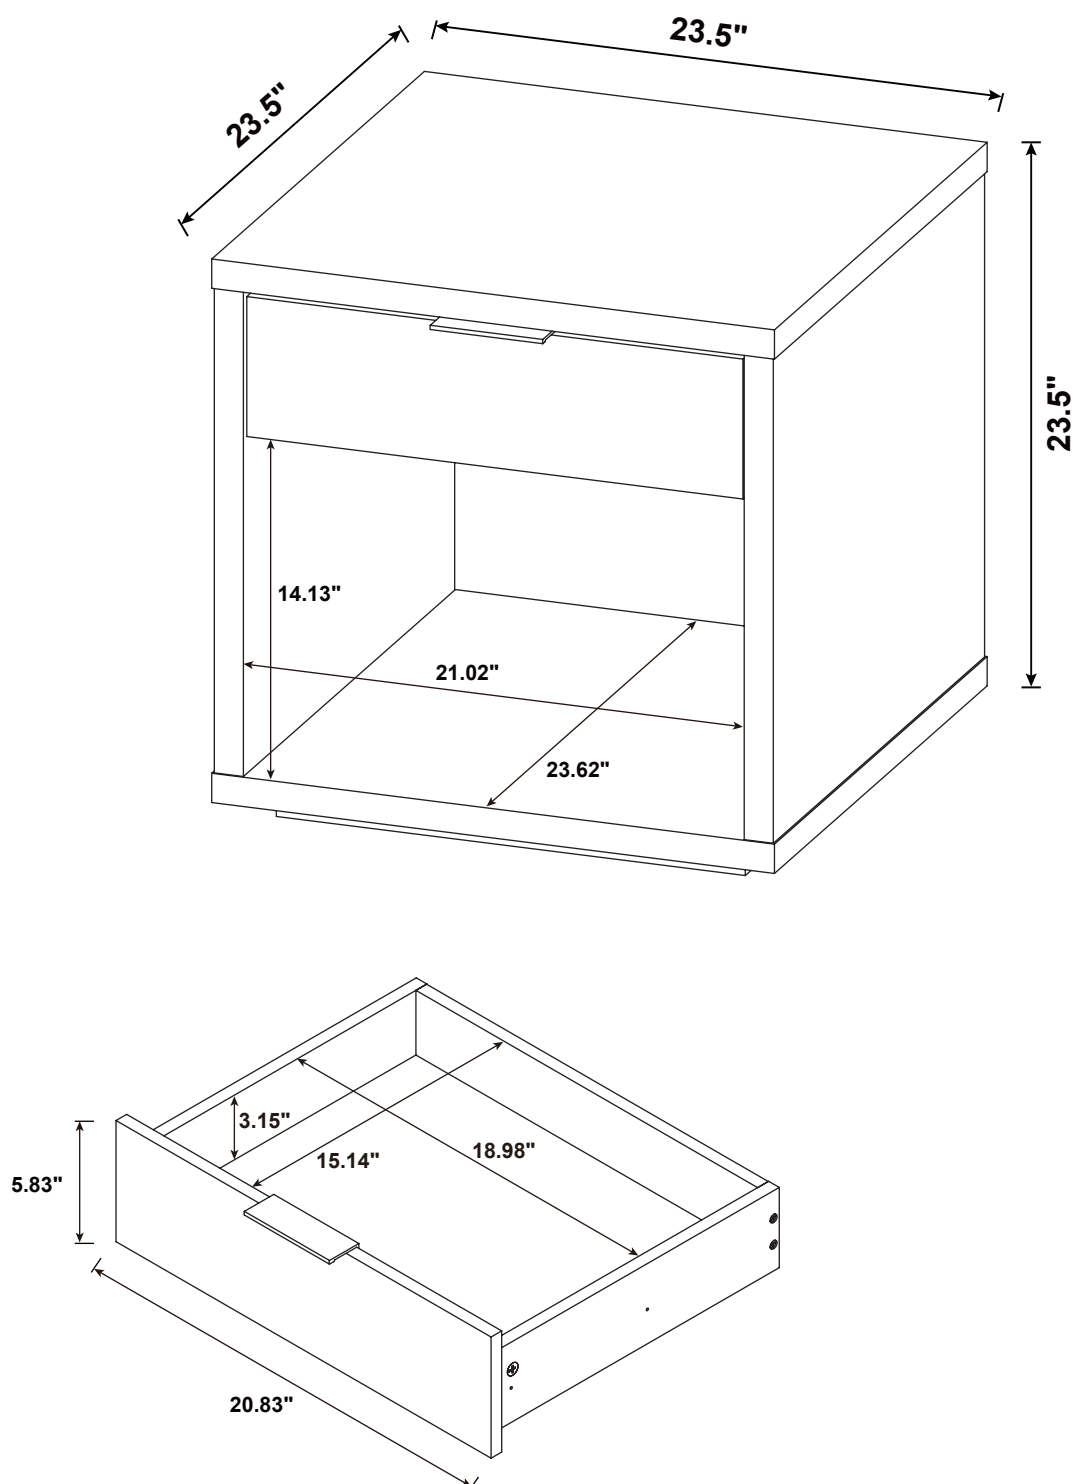 

Note : Dimension tolerance $\pm 5\%$