


Our statement:

This device complies with part 15 of our Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of our Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

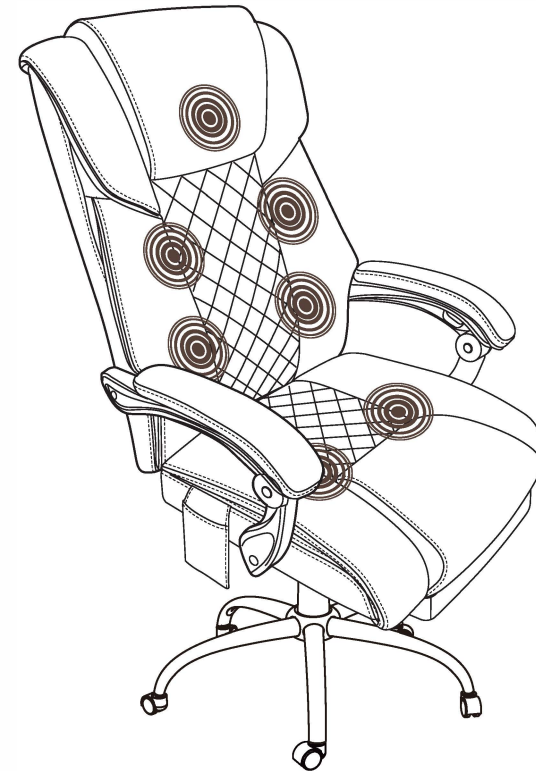

Office Chair

User Manual

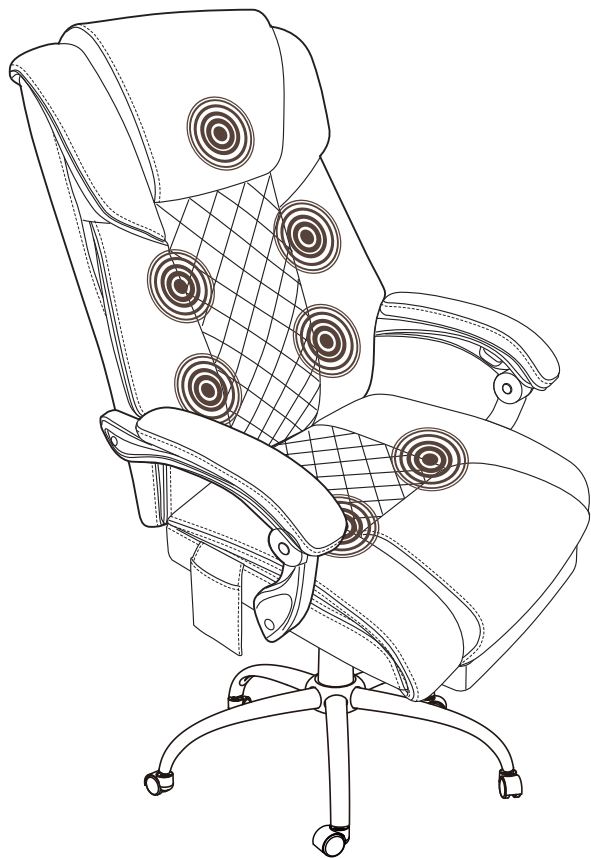

Product specification

 
 

 


 


 


 
 
 
 
 







Product Name: Massage Office Chair
Size: 74*53*33.5 cm/ 29.1*20.9*13.2 inches

Net Weight: 18 kg/ 39.7 lbs
Gross Weight: 19.6 kg/ 43.2 lbs


ATTENTION

The four screws marked as "J" in the screw pack are an additional set of special anti loosening screws that can prevent the armrest from loosening, but the screws are not easy to unscrew after installation.

PACKING LIST


Ax1 	Bx1 	Cx1 	C1x5 	Dx1 
Gx1 	Hx5 	Jx1 	Kx1 	Lx1 
M-Lx1 	M-Rx1 	Nx1 	Ox1 	Px2 
Qx1 	Rx1 	Sx4  M6*25	Tx4  M8*35	Ux4 
Vx10  6x14mm	Ux4  M6*20	Vx5  M6*35	Yx1  M5*15	

INSTALLATION

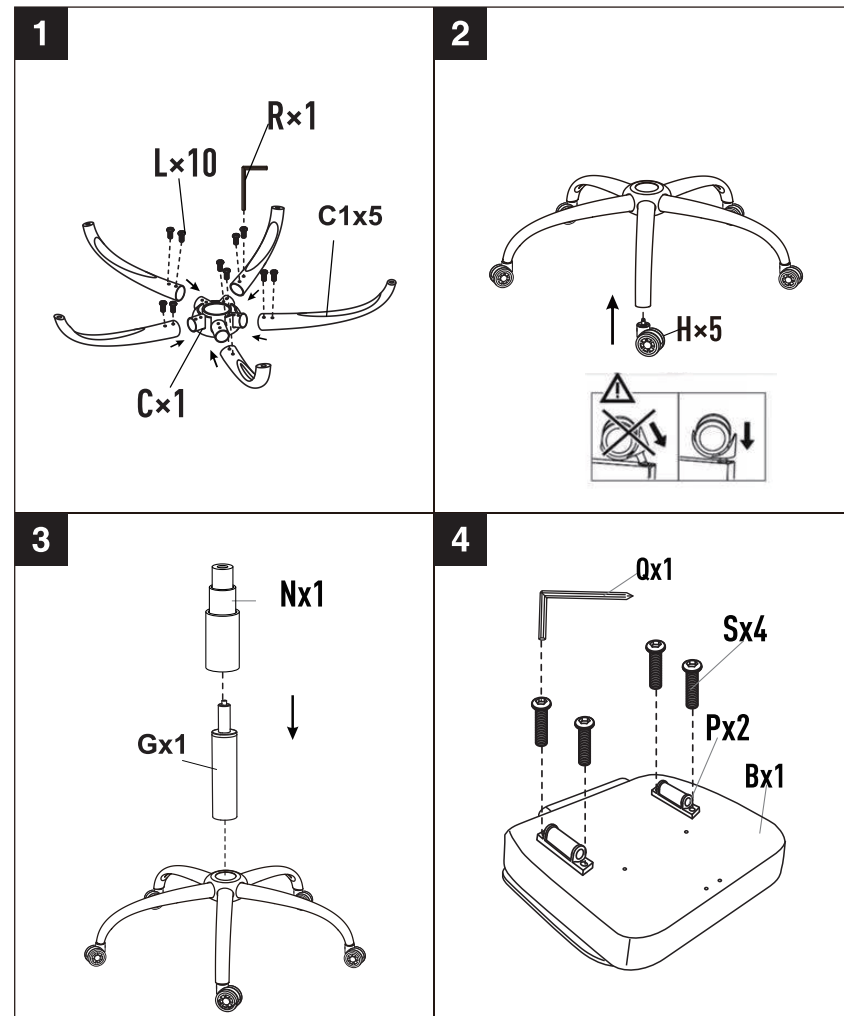


Note: All screws have been preassembled to the accessories. Please remove them from the accessories before assembling.

INSTALLATION

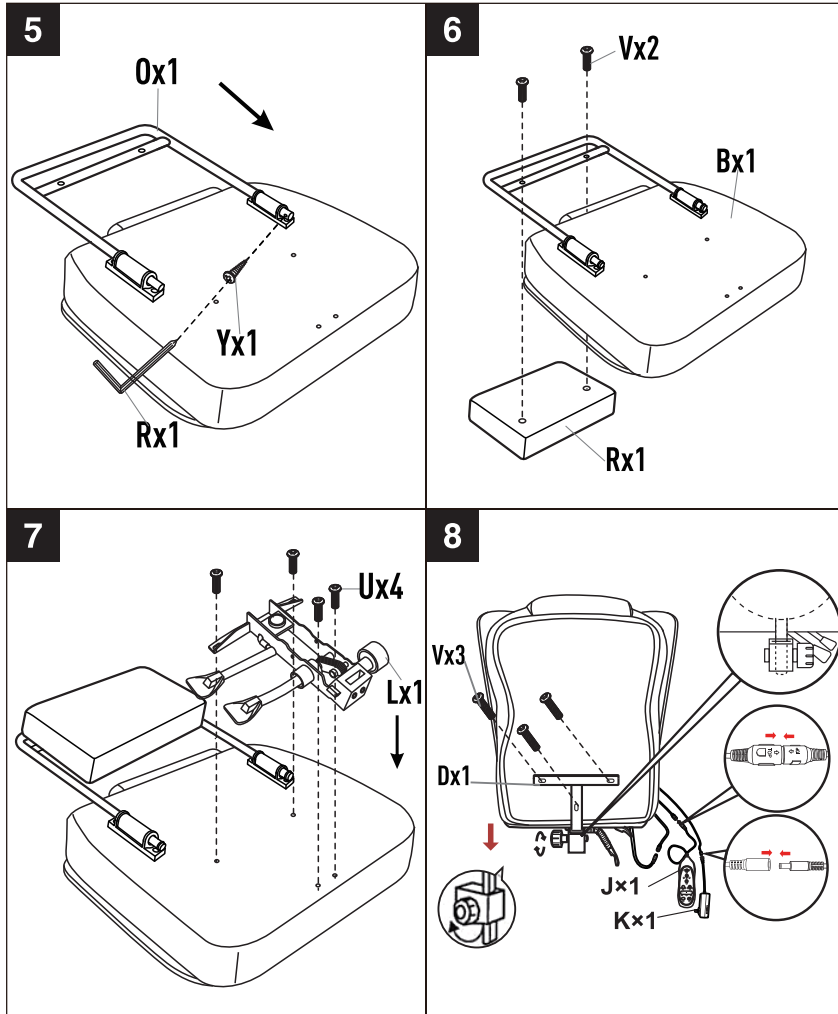

Note: All screws have been preassembled to the accessories. Please remove them from the accessories before assembling.

INSTALLATION

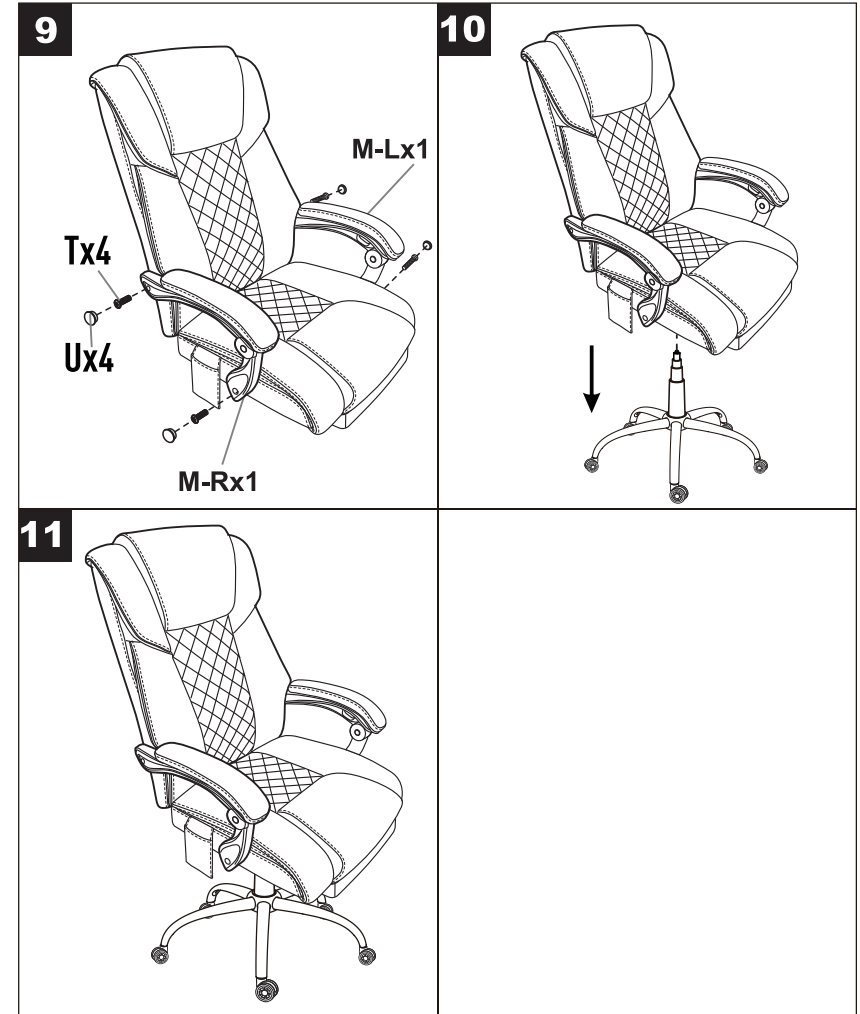

Note: All screws have been preassembled to the accessories. Please remove them from the accessories before assembling.

TROUBLESHOOTING

Fault conditions	Possible causes	Exclusion method
The product is shaking and unstable	1. Wrong screw installation 2. The screw is broken 3. Check that the screws are not tightened in place	1. According to the instruction manual, install the correct screw in the correct position 2. To replace, use the included spare screws 3. Tighten the loose screws

REMOTE CONTROL FUNCTION OF REMOTE

READ ALL INSTRUCTIONS
BEFORE USING THE ITEM



VOLTAGE PARAMETERS:

1. Voltage: AC110-240V DC12V
2. Current: 1A
3. Power: 12W
4. Voltage Grade: Class III
5. Frequency: 50-60Hz

 
PRODUCT FEATURE

- Heating massage
- 7 Vibration Motors
- 3 Massaging modes
- 3 Massaging intensity
- Four massage zones, each zone can be operated individually
- The default timing is 15-30-60 min selection


HOW TO USE


1. Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet(see Figure A)



2.  Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on, To turn off a massage, press the button again.

3. NECK、BACK、LUMBAR、LEG Turn on the massage in each zone by pressing the NECK、BACK、LUMBAR or LEG buttons. LEDs will illuminate when each zone is activated. To turn off a zone, press the button again.

4.  To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates
PULSE---for deep tapping massage
PRESS---provides rapid tapping massage
WAVE----for a gradual, side-to-side vibrating massage

5.  5. To change the massage intensity press the INTENSITY button. The LED for HIGH or Mid or LOW intensities will illuminate when chosen.

NOTE: Discontinue use immediately if you feel any discomfort or pain.

6. NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that .

7. DO NOT use for more than 60 minutes of continuous use

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1、 This product is for use on a 12V circuit Make sure that the product is connected to an outlet having the same configuration as the plug.
- 2、 Always unplug the massager from the power source after use, and before cleaning.
- 3、 Do not reach for massager if it has fallen into water. Unplug immediately.
- 4、 An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
- 5、 Do not use outdoors.
- 6、 Do not carry this appliance by supplied cord as a handle.
- 7、 Keep the cord away from heated surfaces.
- 8、 Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
- 9、 This unit is not a toy. Children should not use it or play with it.
- 10、 Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11、 Do not use near eyes or other highly sensitive areas.
- 12、 To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
- 13、 Keep cord away from heated surfaces.
- 14、 Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

HEALTH CAUTION

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN:

- Insure the unit is unplugged from the power source, and allow to cool before cleaning.
- Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120°Cto clean the unit.
- To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.