

Cuisinart® INSTRUCTION BOOKLET



Cordless Wine Opener & Vacuum Sealer

CWO-50

For your safety and continued enjoyment of this product, always read the Instruction Book carefully before using.

CONTENTS

IMPORTANT SAFEGUARDS	2
PARTS	3
OPERATING INSTRUCTIONS	4-5
Connection and Use	
Charging Your Cordless Wine Opener	
Foil Cutter	
To Operate Your Wine Opener	
To Operate Your Vacuum Pump	
CLEANING AND MAINTENANCE	5
WARRANTY	5

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS**
2. Do not operate an appliance with a damaged cord or plug, after the appliance malfunctions or if it has been dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center or phone Cuisinart Customer Service at 800-726-0190.
3. Extreme care should be taken when any product is used near children and individuals with certain disabilities. Keep out of reach of children when not in use.
4. DO NOT allow children access to the plastic packaging bags.
5. To protect against risk of electrical shock, do not put this appliance in water or other liquids. This may cause personal injury and/or damage to the product.
6. Never force the cordless wine opener onto a bottle or attempt to speed up the mechanism. The cordless wine opener will work best when it is operated at its intended speed.
7. Do not attempt to open bottles if the switch is not working correctly.
8. Check the household voltage to ensure that it matches the appliance's rated specification.

9. Always unplug the charger if you do not intend to use your wine opener and wine preserver for a long period. To disconnect from the power supply, grip the adapter and pull from the power supply. Never pull by the cord.
10. For indoor use only. Do not expose the appliance to rain or other extreme conditions.
11. Never put the unit or charger where it may fall into a sink or other water container. When not in use, always store in a dry area.
12. Do not place the unit in a dishwasher.
13. Do not attempt to open the charging base. It has no serviceable parts. Charge appliance only by using the base and power cord supplied.
14. This product is intended for domestic use and not for commercial, industrial or outdoor use.
15. Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from an area where it may be tripped over.
16. Use of attachments not recommended or sold by Cuisinart® may cause fire, electrical shock, injury or damage to the product. Only use the power adapter supplied with this product.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. Do not place appliance on or near hot gas or electric burner or in a heated oven.
19. Do not put the appliance in or near fire.

CAUTION: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

PARTS

1. Wine Opener
 - A. Down Arrow – Press to remove cork from bottle
 - B. Up Arrow – Press to release cork from opener
2. Power indicator light
3. Charge indicator light
4. Charging base
5. Foil cutter
6. Power adapter
7. Vacuum Sealer



OPERATING INSTRUCTIONS

Connection and Use

This appliance is for 120 volts only and should not be used with a converter.

We recommend that you charge your electric wine opener for at least eight hours before using for the first time. Please follow the instructions for charging as stated below:

Charging Your Cordless Wine Opener

Plug one end of the power adapter into the back of the charging base and the other end into an electrical outlet. The red power indicator light will illuminate. Place the wine opener into the charging base, making sure that it is firmly in position and that it is fully engaged. The green charge indicator light will flash, indicating that the unit is charging. It will take approximately 6–8 hours to recharge your cordless wine opener. When your cordless wine opener is fully charged, the green light will stop flashing and become a solid green light.

Your wine opener can open approximately 80 bottles of wine on a full charge.

Foil Cutter

For your convenience, this unit has a foil cutter, which is stored in the base of the unit. Before removing the cork, you must remove any foil from the bottle (see fig 1). Attach foil cutter to the top of the wine bottle. Keep hand on lower part of bottle and turn foil cutter in twisting motion to remove foil. Remove foil to expose top part of cork surface.

CAUTION: Blade on foil cutter is sharp. Please keep fingers away from cutter's sharp edges.



To Operate Your Wine Opener

Press the lower part of the switch (indicated by a down arrow) to remove a cork from the bottle. Press the upper part of the switch (indicated by an up arrow) to release a cork from the mechanism after you have removed the cork from the bottle (see fig. 2).



1. Place the wine opener on top of the wine bottle making sure that it remains as straight/upright as possible at all times. If you hold the wine opener at an angle to the bottle, it will not remove the cork properly (see fig. 3).



2. Hold the wine opener firmly and depress the lower part of the switch indicated by the down arrow. The corkscrew spiral will turn in a counterclockwise direction and enter the cork, then gradually remove it from the bottle. When the mechanism has stopped, the cork has been fully removed from the bottle.

3. Lift the wine opener up and away from the bottle. To remove the cork, depress the upper part of the switch indicated by the up arrow. The spiral will turn in a clockwise direction and release the cork (see fig. 4).



4. Always return the wine opener to the charging base when done. This will protect the unit while not in use.

TO OPERATE YOUR VACUUM PUMP

1. Place vacuum pump on top of the opened wine bottle.
2. Press down on the top of the pump approximately 20 times or until you feel resistance.
3. Twist the top of the vacuum pump to mark the seal date.
4. Store wine bottle in an upright position.
5. To remove vacuum pump from wine bottle, simply pull straight up.



CLEANING AND MAINTENANCE

Always unplug the appliance from the electrical outlet before cleaning.

To clean housing, wipe with a clean, damp cloth.

Never immerse power adapter, charging base or housing in water or any other liquids.

Never place in a dishwasher. Make sure all the parts are clean and dry before storing.

Any other servicing should be performed by an authorized service representative.

AFTER USE

We recommend that you return your appliance to the charging base so that it is fully charged and available for use at any time.

LIMITED THREE-YEAR WARRANTY

(U.S. and Canada only)

This warranty is available to consumers only. You are a consumer if you own a Cordless Wine Opener that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cordless Wine Opener will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cordless Wine Opener should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Consumer Service Representatives, or send the defective product to Consumer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose \$10.00 made out to Cuisinart for shipping and handling of the product.

Please pay by check or money order made payable to Cuisinart (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of

purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Cuisinart Service Center at 1-800-726-0190 before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cordless Wine Opener has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse,

shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

©2016 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

16CE018295

IB-14108-ESP